Electrolux

electrolux.com/register



EW8W7117GCQ

EN User Manual | **Washer Dryer**

Welcome to Electrolux! Thank you for choosing our appliance.



In our drive to be sustainable, we are reducing paper assets and provide full user manuals online. Access your full user manual at **electrolux.com/manuals**



Get usage advice, brochures, troubleshooting, service and repair information at **electrolux.com/support**



Buy accessories, consumables, and original spare parts for your appliance at **electrolux.com/shop**

Subject to change without notice.

CONTENTS

1. SAFETY INFORMATION..... 2
2. SAFETY INSTRUCTIONS..... 6
3. PRODUCT DESCRIPTION 7
4. TECHNICAL DATA..... 9
5. INSTALLATION 9
6. CONTROL PANEL AND SMARTSELECT..... 13
7. DIAL AND BUTTONS 15
8. FIRST TIME START-UP..... 18
9. BEFORE FIRST USE..... 18
10. PROGRAMMES 19
11. WI-FI - CONNECTIVITY SETUP..... 31
12. THE AUTODOSE TECHNOLOGY (AUTODOSING)..... 33
13. OPTIONS 41
14. SETTINGS 45
15. DAILY USE - WASHING ONLY 47
16. DAILY USE - WASHING & DRYING 51
17. DAILY USE - DRYING ONLY 53
18. HINTS AND TIPS 54
19. CARE AND CLEANING 57
20. TROUBLESHOOTING 64
21. CONSUMPTION VALUES..... 69
22. QUICK GUIDE 71
23. ENVIRONMENTAL CONCERNS..... 78

1. ⚠ SAFETY INFORMATION



Before beginning the installation and use of this appliance, carefully read the supplied instructions.
The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage.

Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

⚠ **WARNING!**

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- This appliance is for washing and drying domestic-type machine-washable and dryable laundry only.
- Do not use the dryer function if laundry has been soiled with industrial chemicals.

- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- Do not change the specification of this appliance.
- The appliance shall be installed as a freestanding product or below the kitchen worktop if space margins permit.
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- WARNING: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Ensure good air ventilation in the room where the appliance is installed to avoid the backflow of unwanted gases into the room from appliances burning gas or other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from any appliances burning gas or other fuels.
- The operating water pressure at the water entry point from the outlet connection must be between 0.5 bar (0.05 MPa) and 10 bar (1.0 MPa).
- The appliance maximum load is 11.0 kg. Do not exceed the maximum load of each programme (refer to the "Programmes" chapter).
- The appliance must be connected to the water mains using the new supplied hose sets, or other new hose sets supplied by the Authorised Service Centre.

- Old hose sets must not be reused.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Items that have been soiled with substances such as vegetable or mineral oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed separately with an extra amount of detergent before being dried in the washer dryer.
- Do not use the appliance if items have been soiled with industrial chemicals.
- Do not dry unwashed items in the wash dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, and rubber backed articles and clothes, or pillows fitted with foam rubber pads should not be dried in the washer dryer.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- WARNING: Never stop the washer dryer before the end of the drying cycle unless all items are quickly removed and separated so that residual heat can dissipate.
- The final part of the washer dryer cycle takes place without heat (cool down cycle) to ensure that items reach a temperature that will not cause damage to them.
- Do not use high pressure water sprays and/or steam to clean the appliance.
- Clean the appliance with a moist cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

2. SAFETY INSTRUCTIONS

2.1 Installation

ⓘ

The installation must comply with relevant national regulations.

- Follow the installation instructions supplied with the appliance.
- Do not install or use the appliance where the temperature can be less than 0°C or where it is exposed to the weather.
- Always keep the appliance vertical when it is being moved.
- Make sure that there is air circulation between the appliance and the floor.
- Remove all the packaging and the transit bolts.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Keep the transit bolts in a safe place. If the appliance is to be moved in the future they must be reattached to lock the drum to prevent an internal damage.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use a damaged appliance.
- Do not install the appliance where the appliance door cannot be fully opened.
- Adjust the feet to have the necessary space between the appliance and the flooring.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.

2.2 Electrical Connection

⚠ **WARNING!**

Risk of fire and electric shock.

- WARNING: This appliance is designed to be installed / connected to a grounding connection in the building.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.

2.3 Water Connection

- The inlet water shall not exceed 25 °C.
- Do not cause damage to the water hoses.
- Before connection to new pipes, pipes not used for a long time, where repair work has been carried out or new devices fitted (water meters, etc.), let the water flow until it is clean and clear.
- Ensure that there are no visible water leaks during and after the first use of the appliance.
- Do not use an extension hose if the inlet hose is too short. Contact the Authorised Service Centre for the replacement of the inlet hose.
- When unpacking the appliance, It is possible to see water flowing from the drain hose. This is due to the testing of the appliance with the use of water in the factory.
- You can extend the drain hose to maximum 400 cm. Contact the Authorised Service Centre for the other drain hose and the extension.
- Make sure that there is access to the tap after the installation.

2.4 Use

⚠ **WARNING!**

Risk of injury, electric shock, fire, burns or damage to the appliance.

- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the glass door while a programme operates. The glass can get hot.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.

- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Make sure that all metal objects are removed from the laundry.
- Dry only fabrics that are suitable to dry in the appliance. Follow the cleaning instruction on the item label.
- Do not sit or stand on the open door of the appliance.
- Do not dry dripping wet clothes in the appliance.
- Do not let hot items to touch the plastic parts of the appliance.
- Remove a detergent ball (if used) before starting a drying programme.
- Do not use a detergent ball if setting a non-stop programme.

2.5 Service

- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.
- Please note that self-repair or non-professional repair can have safety consequences and might void the guarantee.
- The following spare parts are available for at least 10 years after the model has been discontinued: motor and motor brushes, transmission between motor and drum, pumps, shock absorbers and springs, washing drum, drum spider and related ball bearings, heaters and heating elements, including heat pumps, piping and related equipment including hoses, valves, filters and aquastops, printed circuit boards, electronic displays, pressure switches, thermostats and sensors, software and firmware including reset software, door, door hinge and seals, other seals, door locking assembly, plastic peripherals such as detergent dispensers. The duration may be longer in your country. For further information, please visit our website.
- Please note that some of these spare parts are only available to professional repairers, and that not all spare parts are relevant for all models.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

2.6 Disposal

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

3. PRODUCT DESCRIPTION

3.1 Special features


Your new washer-dryer meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption and proper care of fabric.

- The **interactive dynamic display** makes the setting and the use of the appliance more immediate and agreeable.
- The **AutoDose technology** automatically dispenses the right amount of detergent according to the load; the drawer has two integrated tanks (detergent + softener) and two additional compartments for detergent and additives manual load. It gives the highest use flexibility.
- The **Wi-Fi connection** and **Remote Start** enable you to start a cycle, to interact with your washing machine and to check the washing cycle status in remote control.
- **SteamCare system**, thanks to **Steam Refresh** steam programme, offers the perfect solution for refreshing even the most delicate garments without washing.


Use the delicate fragrance exclusively developed by **Electrolux** to add a pleasant feeling of "just-washed" garment to the removing odours and wrinkles action.

- The **UltraCare technology** has been designed to protect the fabric fibres thanks to different pre-mixing phases that dissolves first the detergent and then fabric softener in the water before they are distributed in the laundry. So every fibre is reached and cared for.
- Thanks to the **Weight Sensors** the appliance can detect the weight of your load.
- The **SensiCare System** adjusts automatically the programme duration to the laundry in the drum to achieve perfect washing results in the minimum possible time.

3.2 Appliance overview

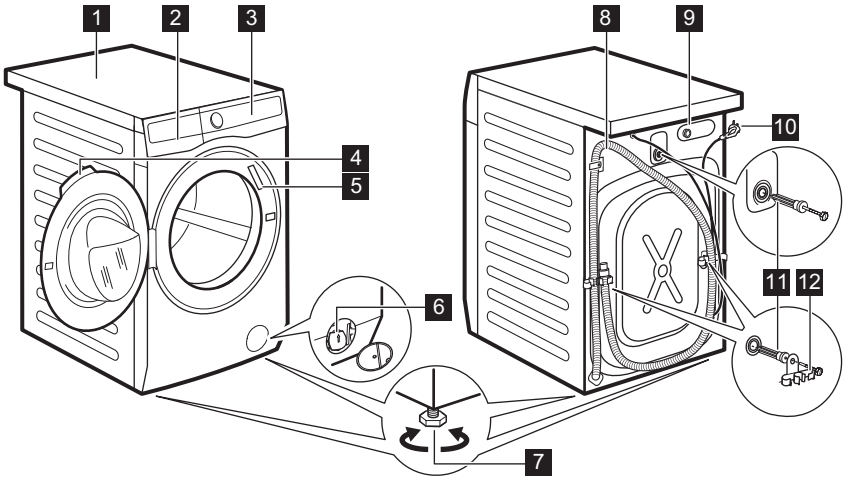

1 Worktop
2 Detergent dispenser
3 Control panel
4 Door handle
5 Rating plate
6 Drain pump filter
7 Feet for levelling the appliance
8 Drain hose
9 Inlet hose connection
10 Mains cable
11 Transit bolts
12 Hose support

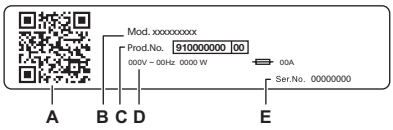

The rating plate reports:

A. QR code
B. Model name
C. Product number
D. Electrical ratings
E. Serial number

Scan the **QR code** with the camera to download our App from the app store on your smart device and follow the required steps. Register your product and get the most out of it.

- Access your appliance details, documentation and articles on how to use the best features (User Manual also available at **electrolux.com/manuals**)
- Get usage advice, troubleshooting, service and repair information (also available at **electrolux.com/support**)
- Buy accessories, Consumable and Original Spare parts for your appliance (also available at **electrolux.com/shop**)

4. TECHNICAL DATA

Dimension	Width/ Height/ Total depth	59.7 cm /84.7 cm /63.6 cm
Electrical connection	Voltage Overall power Fuse Frequency	230 V 2100 W 10 A 50 Hz
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture		IPX4
Water supply **1)**		Cold water
Water supply pressure	Minimum Maximum	0.5 bar (0.05 MPa) 10 bar (1.0 MPa)
Maximum wash load	Cotton	11.0 kg
Maximum dry load	Cotton Synthetics	7 kg 5 kg


1) Connect the water inlet hose to a water tap with a 3/4" thread.

5. INSTALLATION

WARNING!
Refer to Safety chapters.


5.1 Unpacking

1. Open the door. Remove all the items from the drum.

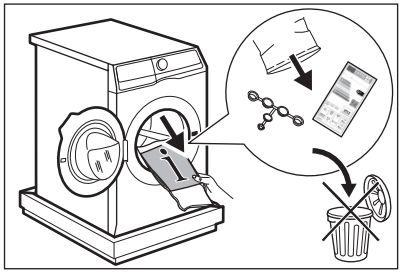

Accessories delivered with the appliance may vary depending on the model.


2. Put the packaging element on the floor behind the appliance and carefully put it down onto its rear side. Remove the protection from the bottom.

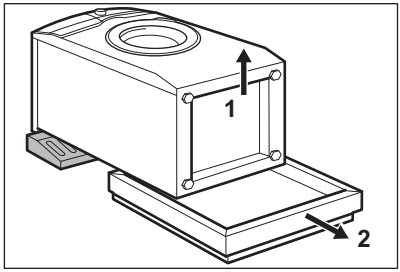

⚠ CAUTION!

Do not lay washing machine on its front.


3. Put the appliance back into an upright position. Remove the power supply cable and the drain hose from the hose holders.

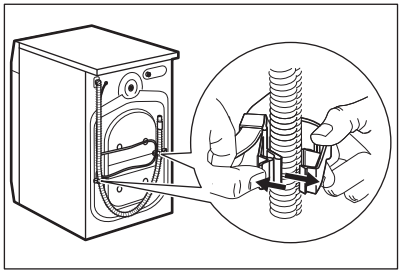

ⓘ

It is possible to see water flowing from the drain hose. This is because the washing machine has been tested at the factory.


4. Remove the three transit bolts and pull out the plastic spacers.

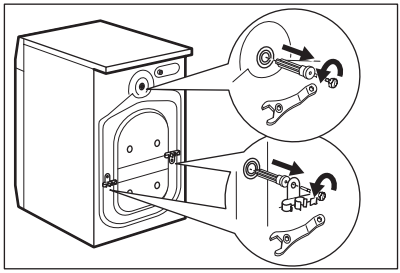

ⓘ

We recommend that you keep the packaging and the transit bolts for any transport of the appliance.

5. Put the plastic caps, that you find in the user manual bag, in the holes.

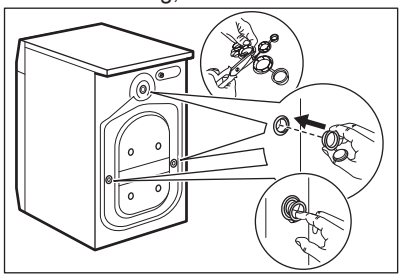

5.2 Information for installation

Positioning and levelling

Adjust the appliance correctly to prevent vibration, noise and movement of the appliance when it operates.

1. Install the appliance on a flat hard floor. The appliance must be levelled and stable. Make sure that the appliance does not touch the wall or other units and there is air circulation below the appliance.

2. Loosen or tighten the feet to adjust the level. All feet must rest firmly on the floor.

⚠ WARNING!

Do not put cardboard, wood or equivalent materials below the appliance feet to adjust the level.


The inlet hose

⚠ CAUTION!


Make sure there is no damage to hoses and there are no leaks from the couplings. Do not use an extension hose if the inlet hose is too short. Contact the service centre for information on inlet hose replacement.

1. Connect the water inlet hose to the back of the appliance if needs. Usually, it is

already installed at the factory.

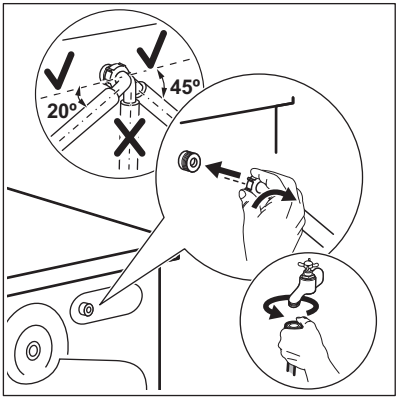

2. Position it toward left or right depending on the positon of the water tap. Make sure that the inlet hose is not in vertical position.
3. If necessary, loosen the ring nut to set it in the correct position.
4. Some model can contain inlet hose with water stop device. It prevents any leaks in the hose because of its natural ageing. The sector in the window shows this fault A. If this occurs, close the water tap and contact the authorized service center for information to replace the hose.

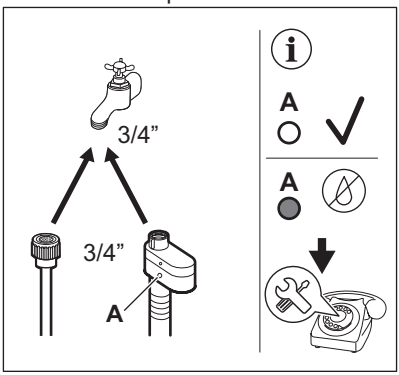

5. Connect the other end of the COLD water inlet hose to the cold water tap with 3/4" thread.

⚠ WARNING!

The inlet water shall not exceed 25 °C.


Water drainage

The drain hose should stay at a height of no less than 60 cm and not more than 100 cm.

ⓘ

You can extend the drain hose to maximum 400 cm. Contact the authorised service centre to buy the other drain hose and the extension.

It is possible to connect the drain hose in different ways:

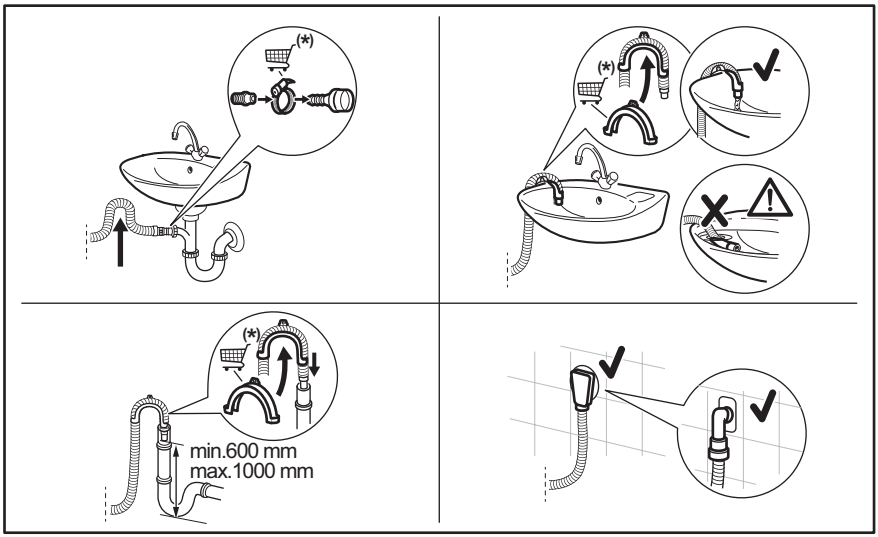

* Subject to change spare parts without notice.

Make sure that the drain hose makes a loop to prevent particles going into the appliance from the sink.

Connect the drain hose to the spigot and tighten it with a clamp. Make sure that the drain hose makes a loop to prevent particles going into the appliance from the sink.

Position the hose directly to a built-in drain pipe in the room wall and tighten it with a clamp.

Without the plastic hose guide, to a sink spigot- Put the drain hose in the spigot and tighten it with a clamp.

The drain hose can be bent into U shape and put around the plastic guide. On the edge of a sink - Fasten the guide to the water tap or to the wall.

ⓘ

Make sure that the plastic guide cannot move when the appliance drains and the drain hose end is not immersed in the water. There may be a return of dirty water into the appliance.
Buy accessories from authorised supplier.

To a stand pipe with vent hole - Insert the drain hose directly into a drain pipe or stand pipe

ⓘ

The end of the drain hose must always be ventilated , i.e. the inner diameter of the drain pipe (min. 38 mm - min. 1.5") must be larger than the external diameter of the drain hose.

5.3 Wooden Floor installation

If you install the appliance in a wooden floor please make sure to use fixing plates to secure appliance feet.

Read carefully the instructions supplied with the accessory.


5.4 Electrical connection

At the end of installation you can connect the mains plug to the mains socket.

The rating plate and the 'Technical Data' chapter indicate the necessary electrical ratings. Make sure that they are compatible with the mains power supply.

Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances may also be in use.

Connect the appliance to an earthed socket.

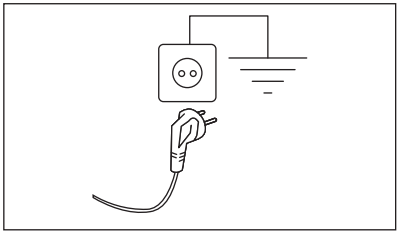


The power supply cable must be easily accessible after installing the appliance.

For any electrical work required to install this appliance, contact our Authorised Service Centre.

The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution.

6. CONTROL PANEL AND SMARTSELECT

6.1 Control panel description

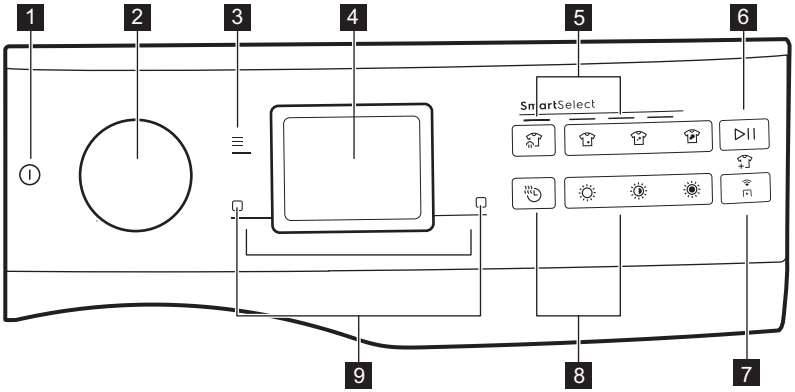

1. On/Off touch key ⏻
2. Programme dial
3. Menu ☰ touch key
4. Display
5. SmartSelect washing touch key:
   - Steam Refresh touch key
   - Extra Light touch key soil level
   - Light touch key soil level
   - Normal touch key soil level
6. Start/Pause touch key ▷II and add garments symbol
7. Remote Start Mode touch key
8. SmartSelect drying touch key:
   - Time Dry touch key
   - Iron Dry touch key
   - Cupboard Dry touch key
   - Extra Dry touch key
9.
   - Right soft key
   - Left soft key

6.2 SmartSelect

SmartSelect is a new and unique feature that allows the user to select the correct washing settings based on the soil level of the fabrics, taking care of the garments and enhancing the user experience.

The washing temperature adapts to each SmartSelect level according to the selected cycle to ensure the best performance, without the need to change the temperature manually.

ⓘ

For more details refer to SmartSelect section in "Dials and button" chapter.

6.3 SmartLeaf feedback

SmartLeaf feedback shows how energy-efficient a programme is, based on energy consumption.

There are three different level of SmartLeaf feedback indicated by the leaf icon:


1. No leaf lit indicates an average consumption level.
2. One leaf icon indicates a good consumption level.
3. Two leaves icon indicates the best consumption level.

6.4 Dual timer interface


A new way to visualize and manage washing and drying cycles, giving precise feedback about cycle time and helping you to plan and decide which setting to apply.

Independent presentation of washing (in white) and drying (in amber) only for few seconds, landing to total washing+drying cycle time. When the drying cycle is added, the estimated washing time can differ from the initial displayed time. This is due to the washing cycle being automatically optimized to prepare the laundry for the drying phase


1. Only Wash

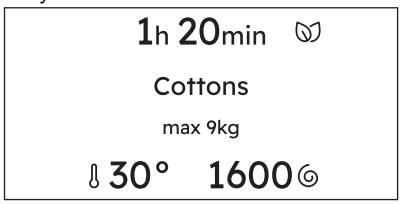

2. Wash&Dry

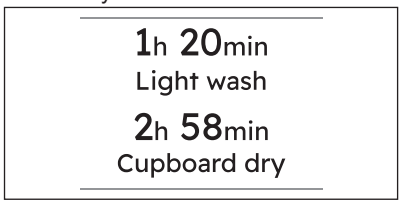

3. Total cycle information

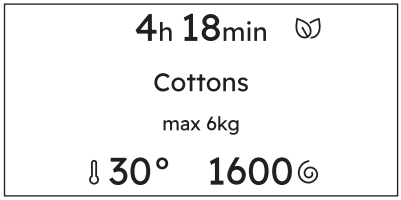

6.5 Main symbols legend

Symbol	Description	Symbol	Description
	Prewash indicator.		Rinse Hold indicator.
	Extra Rinse indicator.		Favourite indicator.
	Steam indicator.		Anti-crease indicator.
	Wi-Fi connection indicator.		SmartLeaf indicator.

Symbol	Description	Symbol	Description
	Finish in indicator.		Silent indicator.
	Detergent indicator.		Softener indicator.
	Child Lock indicator.		Door locked indicator.
	Notification indicator.		Drum clean indicator.

7. DIAL AND BUTTONS

7.1 On/Off ⏻

Press and hold briefly this button for a few seconds to activate or deactivate the appliance. A dedicated jingle sound while switching the appliance on or off, lights and display switches on and Start/Pause button led pulse.

ⓘ

The default selected programme, at machine switch on, is always the Eco 40-60 programme, also after wake up from standby.


7.2 Programme dial

By rotating the programme dial it is possible to select the desired programme.


Navigate through the programmes

In the display, by turning the dial, several dots representing the available programmes are visible.


- By turning to the right or to the left it is possible to reach the saved programmes or scroll through the entire list.

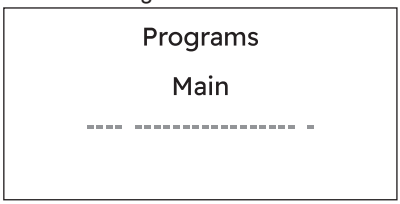


- Turn the dial to the left until the fourth point relating to the last used programme is shown.

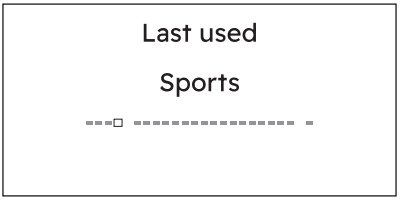

- Turn the dial further to the left to view, from point one to three, the Favorites programmes to be saved or already saved.

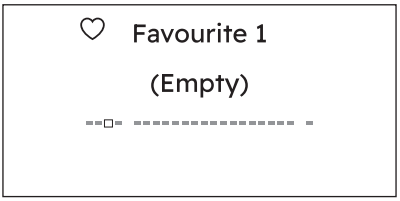

- Turn the dial to the right to scroll through the entire programme list until the last separate point is reached, which represents access to the additional programme list.

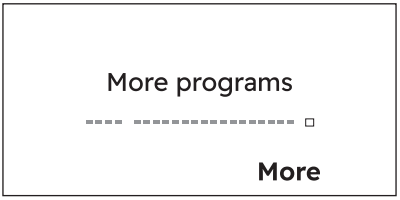

Tap the right soft key ▢ next to More indication to enter the extra programmes list. Navigating this list works just like navigating the main list.

- To go back to the main list, turn the dial to the left to reach Back to main list position


and press the left soft key ☐ next to <Back indication.



In this view, the last dot represent the reset list position.

7.3 Menu ☰

Tap the ☰ button to enter inside the option Menu.

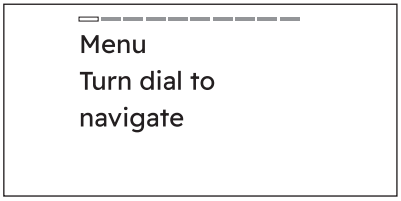

Turn the dial to navigate. To activate/ deactivate an option tap the right soft key touch button.


To exit the Menu ☰ user shall:

- press the menu button again;
- press the SmartSelect button;
- press the remote button;
- wait a timeout of 10 seconds.


7.4 Right/Left soft keys ☐

The two soft keys ☐ buttons are located on the right and the left of the display.

Tap the right soft key ☐ to prompt the action that appears on the right bottom of the display (ex. adjust spin speed, activate or deactivate autodose tank, go back in the menu,..).

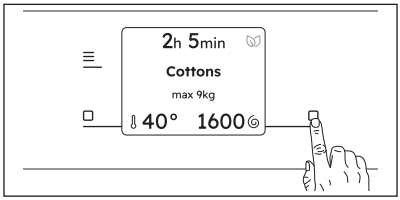

Tap the left soft key ☐ to prompt the action that appears on the left bottom of the display (ex. adjust temperature, activate or deactivate an option,...)

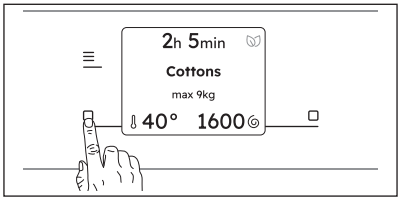

7.5 Start/Pause ▷||

Tap the Start/Pause ▷|| button to start, pause the appliance or interrupt a running programme.

ⓘ

A message in the display inform you that the cycle can pause to add or remove garments. Read the 'Opening the door - Adding garments' section for more details.

7.6 Remote Start Mode

A quick touch of this button activates the Remote Start function that allows you to start, pause and stop the appliance remotely.

Activating the Remote Start Mode function will lock the door and the machine goes in a stand-by status.

To exit this state, tap again the button and turn it off.

7.7 SmartSelect

Washing
This new feature has been created to guide the user to save energy, time and water

improving the care of fabrics and consumer experience.

For each washing cycle it is possible to have different durations and consumption, based on the level of soiling of the laundry.

ⓘ

For each programme the appliance suggest a default soil level with a specific temperature. If you change the temperature manually, the soil level could change.

There are four possible options:

1. **Steam Refresh**
   With this SmartSelect level the user selects Steam Refresh programme. It can reduce wrinkles and light odours and will refresh clothes that does not need a wash.
   Multiple tapping on the icon allows to manage three different cycle durations.
2. **Extra Light**
   This option is recommended for very lightly soiled clothing, without visible stains. The suggested temperature is 20°C.
3. **Light**
   This option is ideal for everyday light soiled clothes, with small stains for example sweat. The suggested temperature is 30°C.
   The light soil level is the one being used most in the default setting.
4. **Normal**
   This option is recommended for normal/ heavy soiled clothes, with for example food spills or mud.

To activate one of this options turn the dial to select the desired programme. The default soil level icon light on.

To change it tap on the related icon.

ⓘ

To activate one of this options turn the dial to select the desired programme. The default soil level icon light on. To change it tap on the related icon. Every SmartSelect level can modify temperature, spin speed and programme duration of the selected cycle.

ⓘ

If a certain soil level is not available, pressing it will generate an error, a double beep and symbol blinks twice.

Drying

Time Dry
In the programme where it is selectable, tap this button to set the time that suits the fabrics you have to dry (refer to "Timed drying" table). The display shows the set value.

This option is used to select desired drying time in programmes where time drying is available. With each tap on the key button the time value increases by 10 minutes steps up to the maximum time allowed for selected programme (refer to selector configuration).

Automatic Drying
There are three possible levels:

1. **Iron Dry**
   This option is recommended to dry garments suitable for ironing.
2. **Cupboard Dry**
   It is the default drying level selected for most programme, and it is indicated for items to be stored.
3. **Extra Dry**
   This option is recommended for towelling materials.

If Time Dry or dryness level are selected, tapping on desired smart washing level, deactivate wash cycle and remains only the drying phase. AfterTime Dry have reached the maximum time, the appliance shift automatically to the default dryness level (Cupboard Dry); If a dryness level is selected, tapping on it, the drying cycle will be deactivate and sets only the default washing programme.

8. FIRST TIME START-UP

Each time you turn the appliance on, the Start-up Screen appears on the touch screen.

The first time you turn the appliance on, after the Start-up Screen you are guided through the initial setup procedure.

8.1 Discover your appliance

The first time you turn the appliance on, the display guided through some information related to the appliance.

If user skipped it during first power on, it will show again on the next power up after start up. If user has press skipped for the second time, do not show anymore.

8.2 Language setup


Scroll through the list of languages by rotating the knob to find the desired language and select it by pressing the right soft key.



8.3 Water Hardness

The display suggests to set the proper water hardness level to improve the washing results.

The following window pops up:

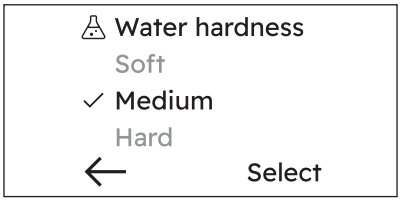

Rotate the knob to select the right level and tap on the right soft key to confirm the default setting.

Tap on the left soft key to return to the previous view.

9. BEFORE FIRST USE

During installation or before first use you may observe some water in the appliance. This is a residual water left in the appliance after a full functional test in the factory to ensure the appliance is delivered to customers in perfect working order and is no cause for concern.

1. Make sure that all transit bolts have been removed from the appliance.
2. Make sure that the electrical power is available and the water tap is open.
3. Make sure to fill the AutoDose tanks with liquid detergent and fabric softener . Refer to "AutoDose basic setting " paragraph in "The AutoDose technology" chapter.
4. Pour 2 litres of water inside the drum. This action activates the drain system.
5. Set and start a programme for cotton at the highest temperature without any laundry in the drum.
   This removes all possible dirt from the drum and the tub.

10. PROGRAMMES

10.1 Programme Chart

Washing programmes

Programme	Programme description
Washing programmes	
Eco 40-60	**Low energy cycle for cotton items washable at 40 or 60°C.** No option can be activated. Decreases temperature and extends time to reach good washing results.**1)**
UltraQuick 49min	Cotton and mixed synthetic fabrics. Ideal to wash your daily load in a short time, for a better clothes care and good cleaning already at 30°C. ⓘ The standard program duration has been developed on a laundry load of 5 kg. If you wash a smaller or a bigger load, the washing time automatically decreases or increases ensuring perfect results.
Cottons	**White cotton and coloured cotton**. Normally, heavily and lightly soiled items.
Synthetics	**Synthetic items or mixed fabric items**. Normally soiled items.
Delicates	**Delicate fabrics such as acrylics, viscose and mixed fabrics requiring gentler washing**. Normally and lightly soiled items.
Wool	Machine washable wool, hand washable wool and other fabrics with «hand washing» care symbol**2)**.
Jeans	**Denim clothing and jersey items**. Normal soiled. This programme performs a gentle rinsing phase, designed for denim, that reduces fading and does not cause washing powder residues on the fibres.

Programme	Programme description
Outdoor	ⓘ Do not use fabric softener and make sure that there is no softener residue in the detergent dispenser. Outdoor clothing, technical, sport fabrics, waterproof and breathable jackets, shell jackets with a removable fleece or inner insulation. The recommended laundry load is 2.0 kg. This programme can also be used as water repellent restoring phase, specifically tailored for treating clothes with a hydrophobic coating. To perform the water repellent restoring phase, proceed as follows: • Pour the washing detergent in the compartment . • Pour a special water repellency restorer for fabric in the drawer compartment for fabric softener Manual . • Reduce the laundry load to 1.0 kg. ⓘ To further improve the water repellent restoring action, dry the laundry in a tumble dryer by setting the Outdoor drying programme (if available and if the garment care label permits tumble drying).
Hygiene	White cotton items. This high-performance wash programme combined with steam vapour, removes more than 99,99% of bacteria and viruses **3)** keeping the temperature above 60°C throughout the washing phase; with an additional action on the fibers thanks to a vapour phase, an enhanced rinsing phase ensures a proper removal of detergent and micro-organism residues. This programme ensures also a proper reduction of pollens/allergenic items.
OneGo 20/60min	Programme to wash up to 1 kg of **mixed synthetic shirts** load in 20 minutes only. Add a drying phase to have a complete OneGo (wash&dry) cycle in 60 minutes. **4)**
Sportswear	**Sport outfit, synthetic fibres** like polyester, polyester/elastane blends, polyamide. Suitable to remove sweat and body soil from technical sport garments.
Training Gear	Suggested for small load made up of sport and fitness clothes.
BedLinen XL	Washing cycle for three bedlinen sets, one of which can be double size.
Business Shirts	Cotton and mixed cotton shirts, normally soiled with steam finish to facilitate ironing. When the programme is finished immediately remove the garment on a hanger for air drying for the best results.
Spin/Drain	To spin the laundry and to drain the water in the drum. All fabrics, except woollens and delicate fabrics.
Rinse	**All fabrics, except woollens and very delicate fabrics.** Programme for rinsing and spinning the laundry. The default spin speed is the one used for cotton programmes. Reduce the spin speed accordingly to the type of laundry. If necessary, set the Extra Rinse option to add rinses. With a low spin speed the appliance performs delicate rinses and a short spin.

Programme	Programme description
Machine Clean	Maintenance cycle with hot water to clean and freshen the drum and to remove residue that may cause odour. For the best result use this cycle once a month. Before running this cycle, remove all items from the drum. Pour a cup of chlorine bleach or a washing machine cleaner in the washing phase compartment. **DO NOT** use both together. ⓘ After the drum cleaning, run a further rinse cycle with empty drum and no detergent to remove any residue of bleach. ⓘ Run this programme especially when the message **Cleaning cycle recommended** pops up. If the cleaning programme is postponed, the message keeps on popping up during next uses until it is run.

1) According to EU Regulation 2019/2023 this programme at 40°C is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. For the reached temperature in the laundry, the programme duration and other data, please refer to "Consumption Values" chapter.

2) During this cycle the drum rotates slowly to ensure a gentle wash. It can seem that the drum doesn't rotate or doesn't rotate properly, but this is normal for this programme.

3) Tested for Staphylococcus aureus, Enterococcus faecium, Candida albicans, Pseudomonas aeruginosa and MS2 Bacteriophage in external test performed by Swissatest Testmaterialien AG in 2021 (Test Report No. 202120117).

4) When the drying cycle is added, the estimated washing time can differ from the initial displayed time. This is due to the washing cycle being automatically optimized to prepare the laundry for the drying phase.

Programme temperature, maximum spin speed and maximum load

Programme	Default temperature Temperature range	Reference spin speed Spin speed range	Maximum load
Eco 40-60	**1)**	1600 rpm 1600 rpm - 400 rpm	11.0 kg
UltraQuick 49min	30 °C 60 °C - Cold	1600 rpm 1600 rpm - 400 rpm	8.0 kg
Cottons	40 °C 90 °C - Cold	1600 rpm 1600 rpm - 400 rpm	11.0 kg
Synthetics	30 °C 60 °C - Cold	1200 rpm 1200 rpm - 400 rpm	5.0 kg
Delicates	30 °C 40 °C - Cold	1200 rpm 1200 rpm - 400 rpm	2.0 kg
Wool	40 °C 40 °C - Cold	1200 rpm 1200 rpm - 400 rpm	3.0 kg
Jeans	30 °C 40 °C - Cold	1200 rpm 1200 rpm - 400 rpm	4.0 kg
Outdoor	30 °C 40 °C - Cold	1200 rpm 1200 rpm - 400 rpm	2.0 kg**2)** 1.0 kg**3)**

Programme	Default temperature Temperature range	Reference spin speed Spin speed range	Maximum load
Hygiene	60 °C	1600 rpm 1600 rpm - 400 rpm	11.0 kg
OneGo 20/60min	30 °C 40 °C - 30 °C	1200rpm	1.0 kg
Sportswear	30 °C 60 °C - Cold	1200 rpm 1200- 400 rpm	5.0 kg
Training Gear	30 °C 40 °C - Cold	1200 rpm 1200 rpm - 400 rpm	1.0 kg
BedLinen XL	30 °C 60 °C - Cold	1200 rpm 1200 rpm - 400 rpm	4.5 kg
Business Shirts	30 °C 60 °C - Cold	1600 rpm 1600 rpm - 400 rpm	2.0 kg
Spin/Drain	-	1600 rpm 1600 rpm - 400 rpm	11.0 kg
Rinse	-	1600 rpm 1600 rpm - 400 rpm	11.0 kg
Machine Clean	60 °C	1200 rpm 1200 rpm - 400 rpm	-

1) The temperature of this programme is not visible on the display and it is automatically set.

2) Washing programme.

3) Washing programme and water repellent phase.

Programme options compatibility

The options are not selectable with all washing programmes, an option can exclude another one. In this case the appliance doesn't allow you to set the incompatible preference together.
Make sure the screen and the soft keys are always clean and dry.

When you set a washing programme and enter the Menu, the display shows the available options.
Child Lock and **Finish in** are selectable with all programmes.

AutoDose	Eco 40-60	UltraQuick 49min	Cottons	Synthetics	Delicates	Wool	Jeans	Outdoor	Hygiene	OneGo 20/60min	Sportswear	Training Gear	BedLinen XL	Business Shirts	Spin/Drain	Rinse	Machine Clean
AutoDose Detergent	■	■	■	■	■		■	■	■		■	■	■	■			
AutoDose Fabric Softener	■	■	■	■	■	■	■		■		■	■	■	■		■	
Others																	
Spin Speed	■	■	■	■	■	■	■	■	■		■	■	■	■	■	■	■
Rinse Hold	■	■	■	■	■	■	■	■	■		■	■		■		■	
Silent			■	■	■		■				■	■					
No Spin															■1)	■	
Prewash			■	■							■	■					
Extra Rinse		■	■	■	■		■	■	■		■	■	■	■		■	
Steam Anti-crease		■	■	■	■		■		■	■	■	■	■				
Finish in	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■

1) If you set the No Spin option, the appliance performs draining only.

Suitable detergents for washing programmes

Programme	Universal powder[1)]	Liquid Universal	Liquid for coloureds	Delicates woollens	Special
Eco 40-60	▲	▲	▲	--	--
Cottons	▲	▲	▲	--	--
Synthetics	▲	▲	▲	--	--
Delicates	--	--	--	▲	▲
Wool/Silk	--	--	--	▲	▲
Sportswear	--	▲	▲	--	▲
Outdoor	--	--	--	▲	▲
Hygiene	▲	▲	--	--	▲

1) At temperature higher than 60 °C the use of powder detergent is recommended.

▲ = Recommended

-- = Not recommended

10.2 More Programmes

ⓘ

In the App programme names are subject to change depending on market requirements without notice.

Washing programmes

Programme	Programme description
Washing programmes	
Down Jackets	Special programme for **a single feather/down jacket or duvet**, also with synthetic filling. If the garment care label allows it, run a complete wash and dry cycle to preserve appearance and thermal functionality.
Soccer/Rugby	Soccer and rugby outfit with polyester, polyester/elastane blends, polyamide and microfiber materials. Special cycle designed for fresh stains with integrated prewash phase.
Skiing Gear	Perfect for heavy garments such as sking jackets and mountains clothes.
Running Shoes	Designed for running shoes, gently wash programme.
Duvet	**Single synthetic blanket, padded clothes, duvets, down jackets** and similar items.
Towels	Cotton towels and bathrobes. Ideal for normal and heavy soil.
Pet Hair	Washing programme tailored for removing pet hair from items
Easy Iron	Cotton, synthetic and mixed fabrics items requiring a gentle wash. Normal and light soil[1)].

Programme	Programme description
AntiAllergy Vapour	White cotton items. This high-performance wash programme combined with steam vapour, removes more than 99,99% of bacteria and viruses **2)** keeping the temperature above 60°C throughout the washing phase; with an additional action on the fibers thanks to a vapour phase, an enhanced rinsing phase ensures a proper removal of detergent and micro-organism residues. This programme ensures also a proper reduction of pollens/allergenic items.
Baby	Special quick cycle for baby items with good washing and rinsing performance.
Linen	Special delicate cycle tailored for white or coloured linen/flax fibre items.
1 Item Fast	Cotton and synthetic item lightly soiled.
Steam Cashmere	Wool and cashmere. Short programme to refresh hand washable woolen and cashmere garments without washing. When treating smaller loads, the programme duration can be further reduced by means of the Finish in option.
Steam Refresh	**Cotton, synthetic and mixed items**. Special steam cycle without washing that can be used to prepare your dried laundry for ironing or refresh garments worn once. This programme reduces creases, odours and relaxes the fibres. Do not use any detergent.

1) To reduce creasing, this cycle regulates the water temperature and performs a soft wash and spin phase. The appliance adds some rinses.

2) Tested for Staphylococcus aureus, Enterococcus faecium, Candida albicans, Pseudomonas aeruginosa and MS2 Bacteriophage in external test performed by Swissatest Testmaterialien AG in 2021 (Test Report No. 202120117).

Programme temperature, maximum spin speed and maximum load

Programme	Default temperature Temperature range	Reference spin speed Spin speed range	Maximum load
Down Jackets	30 °C 40 °C - Cold	1200 rpm (1200 - 400 rpm)	2.0 kg
Soccer/Rugby	40 °C 60 °C - Cold	1200 rpm 1200 rpm - 400 rpm	11.0 kg
Skiing Gear	30 °C 40 °C - Cold	1200 rpm 1200 rpm - 400 rpm	5.0 kg
Running Shoes	30 °C 40 °C - Cold	1000 rpm 1000 rpm - 400 rpm	2.0 kg
Duvet	30 °C 40 °C - Cold	800 rpm 800 - 400 rpm	3.0 kg
Towels	40 °C 90 °C - Cold	1600 rpm 1600 rpm - 400 rpm	11.0 kg
Pet Hair	30 °C 60 °C - Cold	1200 rpm 1200 rpm - 400 rpm	3.0 kg
Easy Iron	40 °C 60 °C - Cold	800 rpm 800 rpm - 400 rpm	0.5 kg
AntiAllergy Vapour	60 °C	1600 rpm 1600 rpm - 400 rpm	3.0 kg

Programme	Default temperature Temperature range	Reference spin speed Spin speed range	Maximum load
Baby	30 °C 60 °C - Cold	1600 rpm 1600 rpm - 400 rpm	4.0 kg
Linen	30 °C 40 °C - Cold	1200 rpm 1200 rpm - 400 rpm	2.0 kg **1)** 1.0 kg **2)**
1 Item Fast	20 °C 20 °C - Cold	1200 rpm 1600 - 400 rpm	3.0 kg
Steam Cashmere	-	-	11.0 kg
Steam Refresh	-	-	-

1) Washing programme.

2) Washing programme and water repellent phase.

Programme options compatibility

ⓘ

The options are not selectable with all washing programmes, an option can exclude another one. In this case the appliance doesn't allow you to set the incompatible preference together.
Make sure the screen and the soft keys are always clean and dry.

ⓘ

When you set a washing programme and enter the Menu ☰, the display shows the available options.
🔒 **Child Lock** and 🕒 **Finish in** are selectable with all programmes.

	Down Jackets	Soccer/Rugby	Skiing Gear	Running Shoes	Duvet	Towels	Pet Hair	Easy Iron	AntiAllergy Vapour	Baby	Linen	1 Item Fast	Steam Cashmere	Steam Refresh
AutoDose														
AutoDose Detergent	■	■	■	■		■	■	■	■	■	■	■		■
AutoDose Fabric Softener		■			■	■	■	■	■	■		■		■
Others														
Spin Speed	■	■	■	■	■	■	■	■	■	■	■	■		■
Rinse Hold	■		■	■		■	■	■	■	■	■			■
Silent				■		■	■				■			
No Spin														
Prewash				■		■	■	■	■					
Extra Rinse	■	■	■	■		■	■	■	■	■	■			■
Steam Anticrease						■	■	■	■	■	■		■	
Finish in	■	■	■	■	■	■	■	■	■	■	■	■	■	■

Suitable detergents for washing programmes

Programme	Universal powder[1)]	Liquid Universal	Liquid for coloureds	Delicates woollens	Special
Down Jackets	--	▲	▲	--	▲
Soccer/Rugby	--	▲	▲	--	▲
Skiing Gear	--	▲	▲	--	▲
Running Shoes	--	--	--	▲	▲
Duvet	--	--	--	▲	▲
Towels	▲	▲	▲	--	--
Pet Hair	--	--	--	▲	▲
Easy Iron	--	▲	▲	--	▲
AntiAllergy Vapour	▲	▲	--	--	▲
Baby	--	--	--	▲	▲
Linen	--	--	--	▲	▲
1 Item Fast	--	▲	▲	--	▲

1) At temperature higher than 60 °C the use of powder detergent is recommended.

10.3 Steam programmes

The Steam programmes can be used for reducing wrinkles and odours on garments (such as cottons, synthetics, mixed fabrics, including delicates) that just need to be refreshed, in a short time, avoiding washing.

The fabric fibres are relaxed and afterwards ironing becomes effortless. When the cycle is completed, quickly remove the laundry from the drum.

DO NOT set this mode with the following type of items:
- Items that are not suitable for tumble drying.
- Items with label "Dry clean only".

ⓘ

Do not use any detergent!
The Steam programmes do not remove particularly intense odour and do not perform any hygienic cycle.
After the steam treatment the laundry can be humid. Hang items out for a few minutes.

The fragrance (Electrolux Steam Fragrance)

The ElectroluxSteam Fragrance allows you to refresh even your delicate clothes, removing wrinkles and adding freshness with a gentle fragrance developed exclusively by **Electrolux**. By refreshing your garments with steam, rather than running full wash cycles, you will keep your clothes looking and feeling new longer. You can even safely use the fragrance with Cashmere and Steam programmes - if they are available - for delicate fabrics like cashmere and wool. When treating smaller load reduce the fragrance dosage and the cycle duration: in only fifteen minutes, your clothes will regain that "just washed" feeling.

Read carefully the instructions supplied with the fragrance.

DO NOT:
- Tumble dry the garments treated with fragrance. Its benefit would evaporate.
- Use the fragrance with different purposes than those here described.
- Use the fragrance on new garments. New garments may contain residual finishing

compounds which are not compatible with it.

The fragrance is available on **Electrolux** web shop or by authorised dealer.

10.4 Woolmark Premium Wool Care - Blue



- The wool wash cycle of this machine has been tested and approved by The Woolmark Company for the washing of wool garments labelled as “hand wash” provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. M2304.
- The wool drying cycle of this machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled “hand wash” provided that the garments are washed in a Woolmark endorsed hand washing cycle and dried according to the instructions issued by the manufacturer of this washing machine. M2412.

10.5 Automatic drying

Initial cycle times for programmes with Dryness Level option are only estimates, the actual drying time may slightly differ from the time displayed.

Dryness Level	Type of fabric	Load
Extra Dry For towelling materials	**Cottons and Linen** (bathrobes, bath towels, etc)	up to 7 kg
	Denim garments	up to 4 kg
Cupboard Dry For items to be stored	**Cottons and Linen** (bathrobes, bath towels, etc)	up to 7 kg
	Synthetics and mixed fabrics (jumpers, blouses, underwear, household and bed linen)	up to 5 kg
	Delicate fabrics (acrylics, viscose and delicate mixed fabrics)	up to 2 kg
	Wool items (woollen jumpers)	up to 1 kg

Dryness Level	Type of fabric	Load
	Outdoor sporting garments (outdoor clothing, technical, sport fabrics, waterproof and breathable jackets, shell jackets)	up to 2 kg
	Denim garments	up to 4 kg
Iron Dry Suitable for ironing	**Cottons and Linen** (sheets, tablecloths, shirts, etc)	up to 7 kg

10.6 Time Dry suggested settings

Dryness Level	Type of fabric	Load (kg)	Spin speed (rpm)	Suggested duration (mins)
Extra Dry For towelling materials	**Cottons and Linen** (bathrobes, bath towels, etc)	7	1600	230-250
		5	1600	170-180
		3	1600	90-100
	Denim garments	4	1200	160-170
		2	1200	70-110
Cupboard Dry For items to be stored	**Cottons and Linen** (bathrobes, bath towels, etc)	7	1600	220-240
		5	1600	160-170
		3	1600	80-90
	Synthetics and mixed fabrics (jumpers, blouses, underwear, household and bed linen)	5	1200	160-180
		3	1200	100-110
	Delicates (acrylics, viscose and delicate mixed fabrics)	2	1200	120-130
		1	1200	70 - 80
	Wool (woollen jumpers)	1	1200	130-140
	Outdoor sporting garments (outdoor clothing, technical, sport fabrics, waterproof and breathable jackets, shell jackets)	2	1200	90-100
		1	1200	50-60
	Denim garments	4	1200	150-170
		2	1200	80-100

Dryness Level	Type of fabric	Load (kg)	Spin speed (rpm)	Suggested duration (mins)
Iron Dry Suitable for ironing	**Cottons and Linen** (sheets, tablecloths, shirts, etc)	7	1600	130-150
		5	1600	100-110
		3	1600	60-70

11. WI-FI - CONNECTIVITY SETUP

This chapter describes how to connect the smart appliance to the Wi-Fi network and to link it to mobile devices.

By this functionality you can receive notifications, control and monitor your appliance from your mobile devices.


The Wi-Fi functionality is off as factory default setting.

To connect the appliance to enjoy the full range of features and services you need:

- Wireless network at home with internet connection enabled.
- Mobile device connected to wireless network.

Wi-Fi module parameters	
Frequency	2.412 - 2.472 GHz for European market
Protocol	IEEE 802.11b/g/n
Max Power	<20 dBm
Encryption	WPA, WPA2, WPA3

11.1 QR code on rating plate

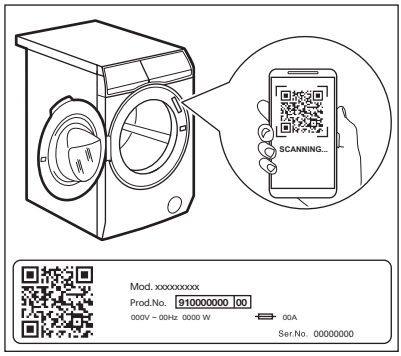

QR code can be used in two ways:

- Scan the QR code with the built-in camera app to download our app from the App store on your smart device and follow the required steps.
- Pairing your smart device with appliance to simplify the process. Scan the QR code with QR code scanner built-in our app.

11.2 Installing and configuring the App

The App allows you to control your laundry through a mobile device.
It contains a large number of programmes, useful features and product information tailored perfectly to the appliance.
Through the app you can select the programmes already available from the appliance control panel, plus unlock additional programmes available only from a mobile device.
Additional programmes can change over the time along with new versions of the app.
It's personalized laundry care - all from your mobile device.

When connecting the appliance to the application, stand near it with your mobile device.

Make sure that your mobile device is connected to the wireless network.

1. Go to the App Store on your smart device or scan QR code (*see 'QR code on rating plate' paragraph*).
2. Download and install our app.
3. Start the application. Select the country and language and login with Your email and password. If you do not have an account, create a new one following the instructions in the App.
4. Follow the instructions on the App for the appliance registration and configuration.

11.3 Wi-Fi appliance connection

Turning On Wi-Fi

As factory default, the Wi-Fi feature is Off.

Tap the On/Off button for a few seconds to activate the appliance.

To connect the appliance to a Wi-Fi network, tap and hold the Remote Start Mode key button for 5 seconds. It is also possible to enable Wi-Fi from the settings menu.

During this phase, the display shows Wi-Fi icon and "**Starting up...**" message. After a while **Ready to connect**" message and icon appear.

Connecting your appliance

Before proceeding with next steps, be sure that the App has been downloaded and configured and you smart device connected to your home network. Refer to "Installing and configuring the App" paragraph.

Open the App from your smart device and follow the instruction displayed to add your appliance.

During association phase, the App could redirects to the smart device Wi-Fi settings to select the home network and requires to enter the Wi-Fi password to connect the appliance.

After **Connecting...** phase, if successfully concluded, "**Connection successful**" message is shown. Otherwise, the message "**Can't connect**" is displayed.

Once connected, tapping on the Remote Start Mode key button on will enable users to be able to start cycles remotely on the App.

Auto connection to registered network
Once the appliance has been successfully set-up and registered to the home network, every time it is powered on, it will try to connect to the network automatically. There will not be any sound when Wi-Fi connection is successful.

Connecting to a different network (Reopening Access Point)
Every time user tap and hold Remote Start Mode key button for 5 seconds, the access point will be open and broadcasted. New network credentials received at this point will overwrite previously saved credentials, and the appliance then connects to the new Wi-Fi network.

Refer to "Connection your appliance" section to perform the connection.

Turning Off Wi-Fi
If the user decides to no longer connect the appliance to Wi-Fi, he can tap and hold Remote Start Mode key button for 10 seconds and the appliance will reset and turn off. It is also possible to disable Wi-Fi from the settings menu.

After confirming the reset the display shows the message "**Network is reset**" and the Wi-Fi is set off.

11.4 Over-the-air update

The App may propose an update for your appliance.

If a programme is running, the App notifies that the update will start at the end of the programme.

During the update, the appliance shows a message in the display.

Do not switch off or unplug the appliance during update.

The appliance will be usable again at the end of the update, without any notification about successful update.

If an error occurs, the appliance shows a message in the display: just press any buttons or turn the knob to return to normal use.

11.5 Wi-Fi Always On

The Wi-Fi Always On function is available in the App.

This function keeps the appliance connected to the network even when the appliance is turned off.

The indicator goes on and off intermittently.

It is possible to turn the appliance on by pressing the On/Off button or through the App.

The Wi-Fi Always On function may affect your energy consumption.

12. THE AUTODOSE TECHNOLOGY (AUTODOSING)


Read this chapter carefully.

12.1 Introduction

Right detergent and fabric softener dosage takes better care of the laundry and ensures good wash performances.

Too much detergent damages your clothes and too little doesn't ensure good wash performances.

This appliance is equipped with an auto dosing system able to automatically provide the right detergent and fabric softener dosage to preserve the fabric integrity and colour brightness.

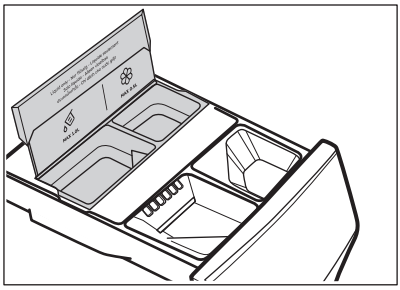

AutoDose liquid detergent tank.

AutoDose fabric softener tank.

The appliance is pre-set by the factory to suit most users habits.

Once started the programme, the appliance will automatically release the right amount of detergent and softener according to the real fabric load, if AutoDose is activated and the indicators and/or are visible on the

display (detergent and softener indicators are showed only under menu ☰ view or just after start key press via a specific confirmation popup view).

ⓘ

In some programmes, AutoDose is deactivated (the indicators and/or ❀ are not displayed and the display shows **OFF**) because there are garments requiring special detergents or treatments. If this is the case, pour the detergent and other treatments in the proper manual filling compartment. Please refer to "AutoDose and options compatibility with programmes" in "Programmes" chapter.

ⓘ

Further explanations on AutoDose and activation of advanced settings are available downloading the APP.


12.2 Detergent dispenser with AutoDose tanks and manual compartments

ⓘ

When using detergent and any other treatments, always follow the instructions that you find on the packaging of the detergent products. Anyway, we recommend not to exceed the maximum indicated level in each compartment (**MAX**).

If both AutoDose tanks are enabled in the set programme , liquid detergent and fabric softener are automatically loaded.

If one of the AutoDose tank or both are disabled (OFF) in the set programme, proceed by manually filling in the proper manual compartment.

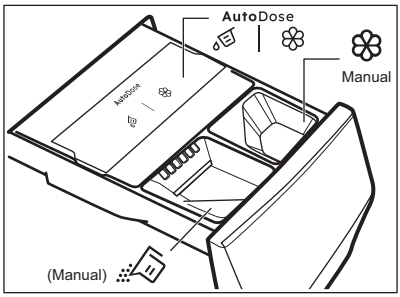

- | ❀ AutoDose tanks for **liquid detergent** and **fabric softener** ❀.


⚠ **WARNING!**

Do not put powder detergent in the AutoDose compartment.

- Manual compartment for washing phase: **powder or liquid detergent**.

ⓘ

When using liquid detergent, make sure that the **special container for liquid detergent** is inserted. Refer to the "Manual filling the detergent and additives" paragraph in this chapter. The liquid detergent container is supplied inside the drum.

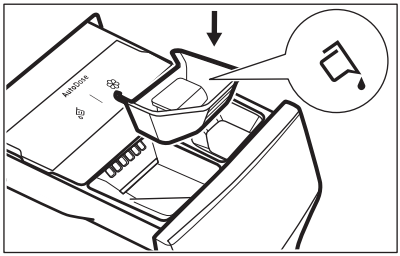

- ❀ Manual compartment for **liquid** additives (fabric softener, fabric conditioner, starch).
- **MAX** Maximum level for detergent/ additives quantity.

12.3 AutoDose basic setting

The factory pre-set doses for a large load are 90 ml for detergent tank and 25 ml for


fabric softener tank: the optimal configuration to meet majority of use condition. The appliance will use these settings to calculate the precise dosage for each wash based on load size.

However, under extreme conditions (very soft or very hard water) and particular type of detergent (such as super compact), we recommend to adjust the pre-set dosage by following the indication given on detergent and fabric softener container: e.g when using super compact detergent you may need to reduce the pre-set dosage considerably.

If the washing results are not satisfying or there is too much foam during washing, you may need to change the factory setting. Read in the paragraph 'AutoDose configuration mode' how to change the basic setting, but before:

1. **Identify the water hardness level.**
   Check the water hardness level in your area. The levels are generally indicated as: soft, medium and hard.
   If necessary, please contact your local water authority to check the water hardness in your area.
2. **Identify the customized detergent dosage.**
   Check the label in the detergent/fabric softener container and identify the quantity to use. For the detergent the suggested quantity of detergent is the combination of three different factors:
   - Water hardness level (see the following table);
   - Normal soil level;
   - Rated capacity of the appliance (e.g. maximum load capacity 11.0 kg). If the rated capacity on the detergent container label refers to lower capacity appliances, the customized dosage should be increased by 20% referring to the proposed dosage.

As example for a machine with rated capacity 8 kg, medium water, normal soil level the dosage is recognised by the crossing in the detergent label dosages.

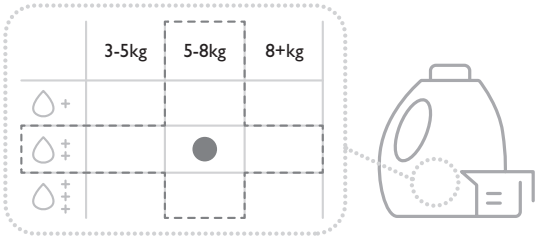

Water hardness levels

Levels	Water hardness range				
	°f[1]	°d[2]	°e[3]	mmol/l	ppm
Soft	<15	<8	<10	<1.4	<140
Medium[4]	15 - 25	8 - 14	0 - 17	1.5 - 2.5	150 - 250

Levels	Water hardness range				
	°f[1)]	°d[2)]	°e[3)]	mmol/l	ppm
Hard	>25	>14	>17	>2.5	>250

1) French degrees
2) German degrees
3) English degrees
4) Factory setting, able to satisfy most of the use conditions.


12.4 AutoDose mode types.

There are three possible type of AutoDose functionality to be configured in the appliance:

1. Standard mode
2. Linked mode
3. Dual mode


To set the desired one:

- Tap on the Menu button and turn the dial until Settings.
- Navigate until AutoDose and tap the right soft key to edit.

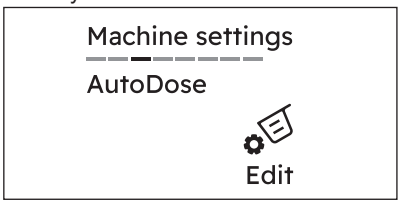

In the next phase, there are four possible actions to do:

- Manage the detergent dosage of the primary tank.
- Select the way to manage the secondary tank:
  - **a.** Softener: AutoDose standard mode
  - **b.** Same detergent: AutoDose linked mode
  - **c.** Other detergent: AutoDose dual mode

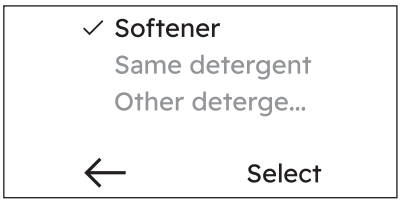


- Manage the detergent dosage of the secondary tank.
- Turn off the AutoDose.


12.5 AutoDose - Setup standard mode


AutoDose standard mode is the one set by default in the appliance.

1. Tap the Menu key and turn the dial to navigate until AutoDose view to manage the options. The detergent tank and softener icons are shown as ON.

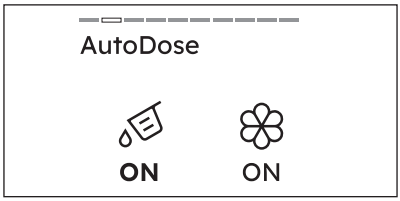


2. Tapping the left soft key detergent tank could be enable/disable and set in ON or OFF mode. Tapping the right soft key softener tank could be enable/disable and set in ON or OFF mode

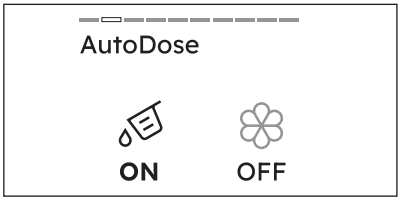

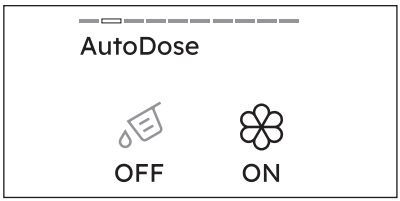

After the first configuration, when starting a programme, the AutoDose popup will appear. It can be dismissed by tapping the right soft key ☐.
If no action is taken, the popup will disappear after 7 seconds. The machine will start and the running screen is shown.

Tap left soft key ☐ to Change the AutoDose option in order to turn it on/off. Tap Start/ Pause ▷II button to start the programme.

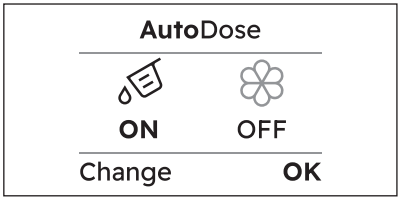

ⓘ
If AutoDose is turned OFF in the settings, this popup will not appear.


12.6 AutoDose - Setup Linked mode

Before proceeding, activate AutoDose linked mode in Settings.


In Linked mode the two compartments can be filled with the same detergent to increase capacity to run more cycles, from which compartment the detergent is dispensed is automatically handled by the appliance.

ⓘ
If activated, this option will be remembered for each programme until it is changed by the user. This also applies if the appliance is turned off or if a power failure occurs.

1. Tap the Menu ☰ key and turn the dial to navigate until AutoDose view to manage the options.
2. The detergent tank icon is shown as ON.

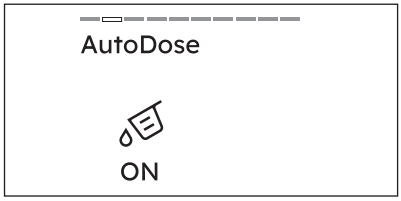

3. Tapping the left soft key ☐ detergent tank could be disable and set in OFF mode.

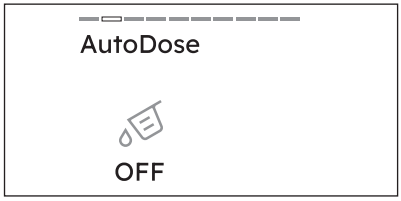

ⓘ
If Linked Detergent is not available for a certain programme, the display will show “AutoDose OFF” and tapping the AutoDose button will generate an error sound and the “AutoDose OFF” blinks three times.


12.7 AutoDose - Dual mode

Before proceeding, activate AutoDose dual mode in Settings .


In Dual mode the two compartments can be filled with two different detergents.

If activated, this option will be remembered for each programme until it is changed by the user. This also applies if the appliance is turned off or if a power failure occurs.

1. Tap the Menu key and turn the dial to navigate through AutoDose view to manage the options.
2. Tap on the soft keys to activate/ deactivate primary or secondary tank.

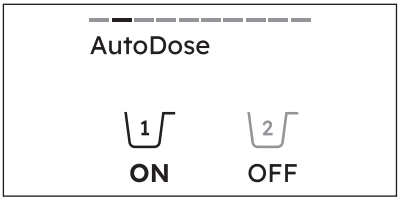

3. If both tanks are turned OFF **AutoDose is deactivated.**

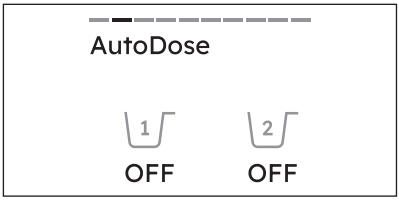


12.8 Filling the detergent and additives on AutoDose system


Please read "Detergents and other treatments" in "Hints and tips" chapter.

We recommend that you do not exceed the maximum indicated level (**MAX**).


1. Open the detergent dispenser.

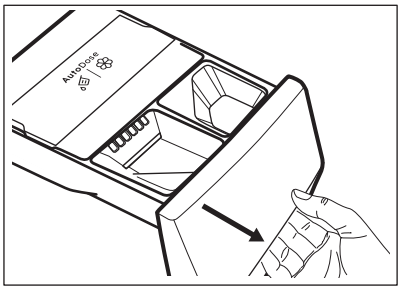


2. Lift up the AutoDose cover lid.

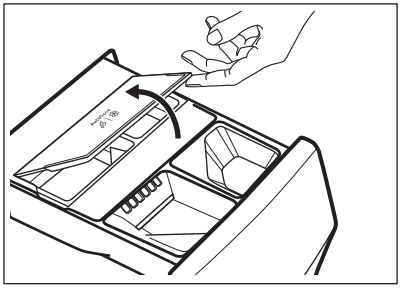


3. Gently pour only liquid detergent in the AutoDose detergent tank. Fill up to the maximum indicated level **MAX**.

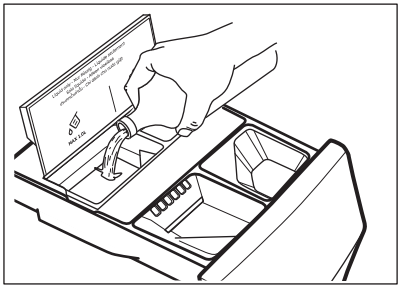


4. Gently pour only liquid softener in the AutoDose fabric softener tank. Fill up to the maximum indicated level **MAX**.

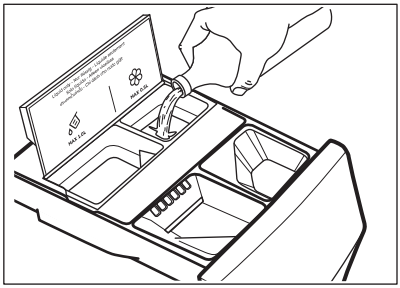

5. Lift down the AutoDose cover lid.

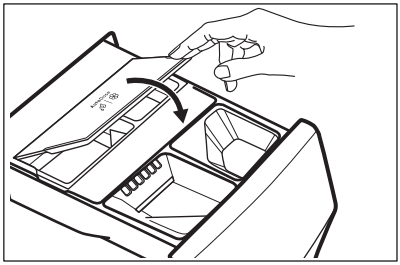


6. Gently close the detergent dispenser, till click engagement.

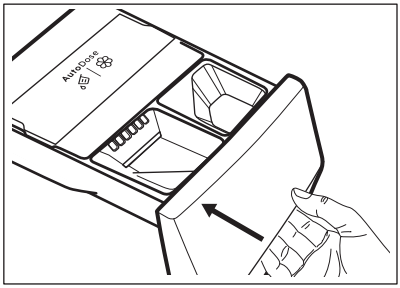


12.9 AutoDose low level indication

Do not refill the AutoDose tanks unless appliances indicates that one or both tanks are empty.

When the activated tank reaches a low level of detergent, related indicator appears on the display.

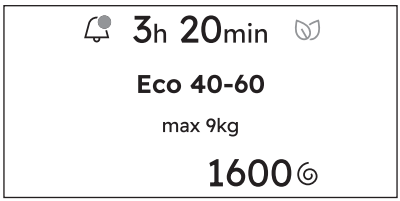


Notifications are often displayed at the end of cycle, but some messages also need to be displayed after the machine goes to standby and is powered on again.

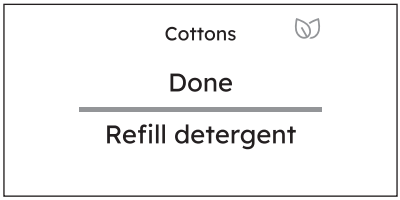

Some notifications have actionable choices, like the tank refill that takes you to the AutoDose guide.

The display show clearly if is required the refill for detergent or softener.

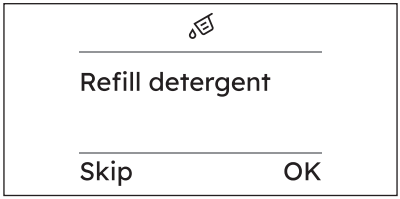



CAUTION!

The tanks refill must be carried out with the same brand and type of detergent/ fabric softener/additive used before, otherwise clean the tanks before refilling.


Notifications are dismissed once they are viewed, or if the user changes programme or turns the machine off.

12.10 Switching from AutoDose to manual dosing


It is possible to disable AutoDose function for one or both tanks by pressing related button symbol.

Example:

- To switch fabric softener tank off, press the right soft key button, until the display showsOFF under softener icon ,

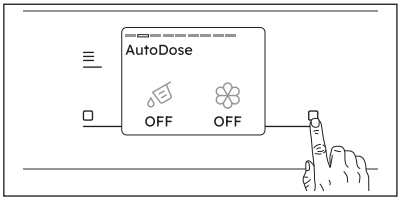

- If you need to use different detergent than ones present in AutoDose tanks, you could switch detergent tank off by pressing the left soft key button until the display showsOFF under detergent icon .

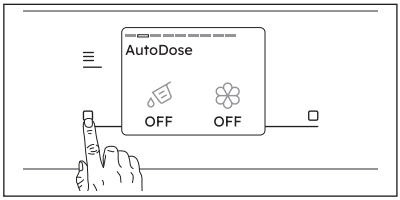


12.11 Manual filling the detergent and additives


You may need to use a different detergent or fabric softener than the ones used in the AutoDose tanks. First, make sure that the AutoDose tanks are disabled and then pour the detergent and/or other treatments in the manual compartments.

Do not exceed the maximum indicated level (**MAX**).


1. Open the detergent dispenser.

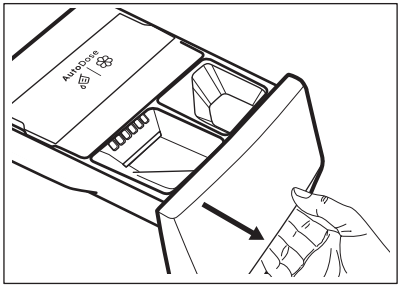


2. Put the powder detergent in the compartment . When using liquid detergent, refer to "Manual filling the liquid detergent".

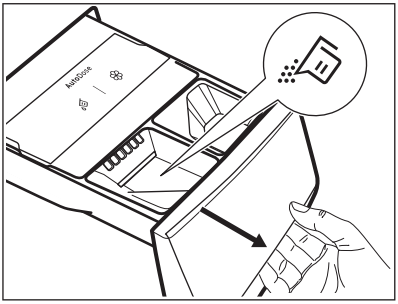

3. If desired, pour the fabric softener in the compartment Manual .

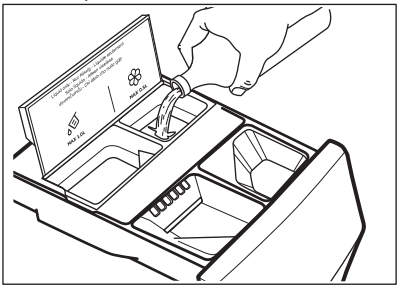


4. Gently close the detergent dispenser, till click engagement.

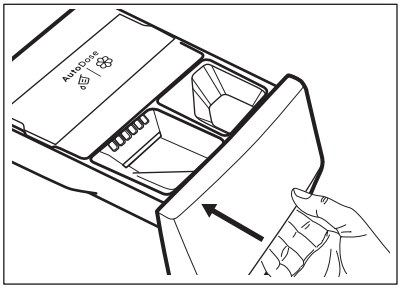


Manual filling the liquid detergent


1. Insert the container for liquid detergent.

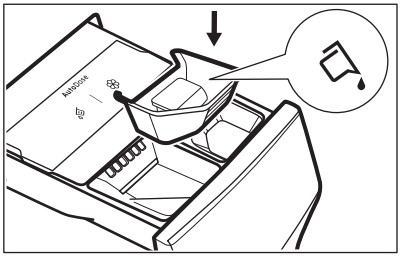

2. Pour the liquid detergent in the compartment .

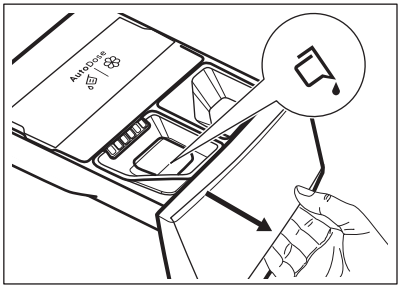

3. Gently close the detergent dispenser, till click engagement.

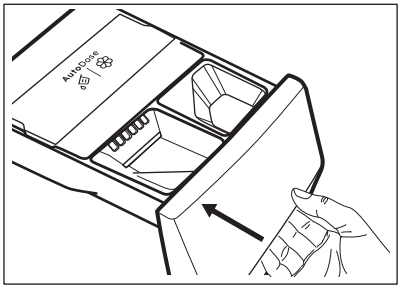

If the machine has not been used for more than 4 weeks with filled tanks, detergent/softener can become viscous or dry out. It is needed to clean the drawer as indicated in 'Care and Cleaning' chapter.

12.12 Drawer open indication

When a programme is running, the detergent drawer must always be closed.

A sensor in the drawer detects if the drawer is open (or not properly closed) while the programme is running. In such case, the appliance will immediately be paused.

If you press the Start/Pause button a specific popup view is showed indicating to close the drawer. Then the display returns to the previous paused state.

This will happen even if the user turned AutoDose off.

To restart the programme, ensure the drawer is properly closed and press Start/Pause button.

13. OPTIONS

13.1 Soft Key options

After selecting a programme, it is possible to change the default Temperature and Spin set.

To modify the **Temperature** tap the left soft key :

- The default temperature shown will decrease to the minimum expected for the selected cycle.
- Continue pressing and the sequence will proceed from the maximum expected temperature.

If Temperature setting is not available, left soft key led will be off.

To modify the **Spin** tap the right soft key :

- The default spin shown will decrease to the minimum expected for the selected cycle.
- Continue pressing and the sequence will proceed from the maximum expected spin.

If only one option is available, right soft key led will be off.

13.2 Additional options

Several additional options are available for each programme. Check compatibility in the programme table section.

Tap on the On/Off button to turn the appliance on and turn the programme dial to set the desired programme.

Tap on the **Menu** soft key to access the options.

After 10 seconds of inactivity the displays shows the home screen with selected programme.

13.3 Permanent Prewash

Use this option to add a pre-wash phase at 30 °C before the washing phase.

This option is recommended for heavily soiled laundry, especially if containing sand, dust, mud and other solid particles.

Tap on the **Menu** soft key, rotate the dial until the display shows the Prewash option.

To **activate/deactivate** this option:

- Tap the right soft key and the relevant indicator will turn On/Off.

Prewash remain active also after machine switch off and on and set by default in programme where available. The option can increase the programme duration.

13.4 Permanent Extra Rinse

With this option you can add a few rinses to the selected washing programmes and optimise the fabric softener distribution and improve the fabric softness. It is suggested when you use the fabric softener.

Useful for people allergic to detergents and in areas where the water is soft..

Tap on the **Menu** soft key, rotate the dial until the display shows the Extra Rinse option.

To **activate/deactivate** this option:

- Tap the right soft key and the relevant indicator will turn On/Off.

Extra Rinse remain active also after machine switch off and on and set by default in programme where available. The option can increase the programme duration.

13.5 Permanent Anti-crease

It gently rotates the drum back and forth after the drying cycle is complete to minimise wrinkles on your dried clothes while they remain unloaded. You can interrupt the programme whenever you are ready to remove your clothes.

Tap on the **Menu** soft key, rotate the dial until the display shows the Anti-crease option.

To **activate/deactivate** this option:

- Tap the right soft key and the relevant indicator will turn On/Off.

Anti-crease remain active also after machine switch off and on and set by default in programme where available.

By touching any button the anti-crease movements stop and the door unlocks. To interrupt the anti-crease phase, you can also:

- Tap the On/Off button for a few seconds to deactivate the appliance.
- Turn the programme dial in another position.

13.6 Silent

With this option the intermediate and the final spinning phases are suppressed and the programme ends with water in the drum. This helps to reduce creasing.

The door stays locked and the drum turns regularly to reduce creasing. You must drain the water to unlock the door.

As the programme is very quiet, it is suitable for use at night time when cheaper electricity tariffs are available. In some programmes the rinses are performed with more water.

Tap on the **Menu** soft key, rotate the dial until the display shows the Silent option.

To **activate/deactivate** this option:

- Tap the right soft key and the relevant indicator will turn On/Off.

If you touch the Start/Pause button, the appliance performs the only draining phase.

The appliance empties the water out automatically after 18 hours approximately.

13.7 Finish in

With this option you can set the time to end of the selected cycle.


The proposed time to finish in is always higher than the programme duration.

To **activate** this option:


- Tap on the **Menu** soft key, rotate the dial until the display shows the Finish in option.




- You can activate this option by pressing the right soft key. The display shows the hours of the time to end starting from 3 hours.

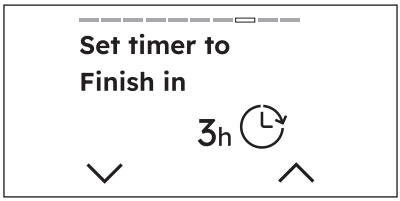

- Pressing the right soft key next to ^, it is possible to increase the time by one hour with each tap, up to 24 hours.

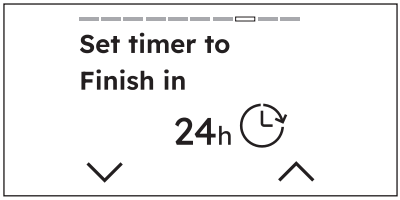

- If you want to decrease time tap the left soft key next to v, the duration will be reduced by one hour with each tap.
- Once you have selected the desired timer wait 3 seconds and you will be redirected to the home screen where at the top of the display you will be able to see the countdown.

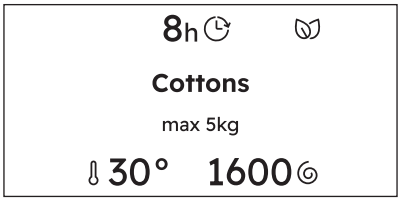

The appliance keeps the selection of this option after you switch it off.

To **remove** the Finish in option.:


- Navigate through the Menu to the Finish in option.
- Reduce the time by pressing the left soft key until the display shows OFF

13.8 Child Lock

With this option you can prevent the children from accidentally operating the appliance.


To **activate** this option:

- Tap on the **Menu** soft key, rotate the dial until the display shows the Child Lock option.

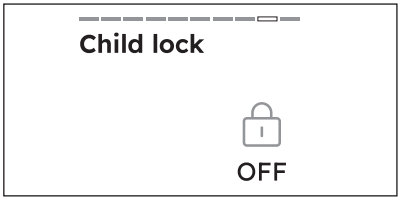

- You can activate this option by tapping the right soft key.
- After you have activated the options soft keys and the touch screen are deactivated. It is possible to turn the appliance off by means of the On/Off button.
- Before pressing the Start/Pause button the appliance cannot start.


The display shows the icon Child Lock in the middle of the display.

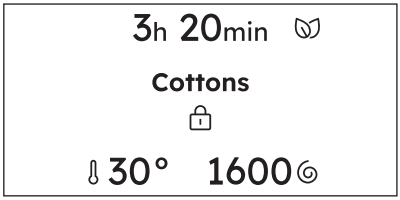


The appliance keeps the selection of this option after you switch it off.

To **deactivate** this option:

- Hold the right soft key for 3 seconds. A countdown is played.

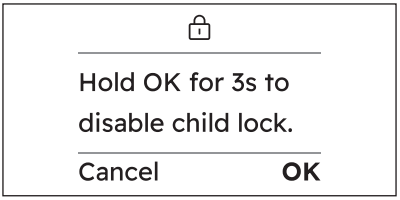

Once the option is deactivated the display will show the information as before activation,

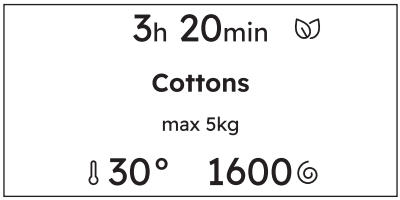

13.9 Favorites

How to set a favourite cycle
Up to three favourite cycles can be saved.

There are no favourite cycles saved by default.

Tap on the **Menu** soft key, rotate the dial until the display shows the Favorites option.

To **save** you favourite cycle:

- Select one of the three empty fields by tapping the right soft key.
- After two seconds, the display will show the selected cycle as a favourite recognizable by a heart at the top of the screen.

When you want to save the next favourite the first empty slot will be indicated automatically.

How to replace a favourite cycle
It is possible to **replace** favourites:

- Turn dial to select one of the three fields to be overwritten.
- Confirm the chioise by tapping the right soft key.
- After two seconds, the display will show the selected cycle as a favorite recognizable by a heart at the top of the screen.

It is not possible to **delete** you favourite cycle on the appliace.

ⓘ

In order to delete favourites it is necessary to perform a factory reset of the appliance or by the app.

How to access the favourites cycle
To access the favourites from programmes list rotate the dial to the left.

ⓘ

If the fields are occupied the first favourite cycle will be displayed, then the second and eventually the third.


ⓘ

If the fields are empty, a suggestion on how to save new favourites will be displayed.

14. SETTINGS

14.1 Settings

In this paragraph are explained the main settings of the appliance.

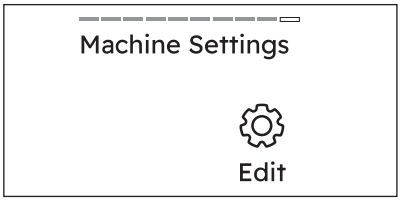

Tap on the right soft key, Edit , to access the settings.

ⓘ

After 10 seconds of inactivity the displays shows the home screen with selected programme.

AutoDose
For AutoDose functionality refer to the specific paragraph.

14.2 Language setup

It is possible to **change the display language** by scrolling through the list rotating the knob to find the desired language.

- Select it by tapping the right soft key ▢
- Go back ← to the previous view by tapping the left soft key ▢. Tap on the Menu ☰ soft key to go to the main menu view.

ⓘ

By turning the knob the selected language will be highlighted in the display.

14.3 Wi-Fi

With this option you edit Wi-Fi settings.

Tap on the right soft key ▢ to access the settings. You can:

- Enable Wi-Fi network.
- Connecting to a different Wi-Fi network
- Disable Wi-Fi network.

ⓘ

For more details refer to "Wi-Fi - Connectivity setup" chapter

14.4 AutoDose

With this option is possible to edit the AutoDose settings.

Tap on the right soft key ▢ to access the setup.

ⓘ

For more details refer to "AutoDose Technology (Autodosing)" chapter.

14.5 Water Hardness

With this setting you can change the Water Hardness level.

To **modify** the level:

- Tap the right soft key to edit the option.
- Rotate the dial to visualize the levels:
  - **a.** Hard
  - **b.** Medium
  - **c.** Soft
- Select the desired level by tapping the right soft key .

Go back to the previous view by tapping the left soft key . Tap on the Menu soft key to go to the main menu view.

14.6 Detergent Dose

With this setting you can set the average quantity of detergent suggested on the detergent packaging.

To **modify** the level:

- Tap the left soft key next to indicator to adjusts dosage down.
- Tap the right soft key next to indicator to adjusts dosage up.

Rotate the dial to move to the next setting.

14.7 Button sounds

With this setting you can turn off the sound of the buttons.

To **activate/deactivate** the sounds:

- Tap the right soft key and the relevant indicator will turn On /Off .

Rotate the dial to move to the next setting.

The sound of the On/Off button cannot be disabled

14.8 End alert

With this setting you can change the End alert .

To **activate/deactivate or modify** the sound:

- Tap the right soft key to edit the option.
- Rotate the dial to visualize the levels:
  - **a.** Long
  - **b.** Medium
  - **c.** Short
  - **d.** Off
- Tap the right soft key to select the desired sound.

Go back to the previous view by tapping the left soft key . Tap on the Menu soft key to go to the main menu view.

14.9 Display Brightness

With this setting you can change the Display Brightness.

To **modify** the level:

- Tap the left soft key next to indicator to decrease brightness.
- Tap the right soft key next to indicator to increase brightness.

Rotate the dial to move to the next setting.

There are five brightness levels available.

14.10 Guides

With this option you can see brief explanations of some features.

Rotate the programme dial and select by tapping the right soft key one of the following option:

- **Introduction** : information about the control panel, the SmartSelect , Steam programmes, Menu an soft keys, Remote Start Mode.
  For drying phase also Time Dry and Auto Dry.

- **AutoDose** : information about functionality and tanks.
- **WiFi** : information about the onboarding.

ⓘ

Go back ← to the previous view by tapping the left soft key ▢.

14.11 Hours worked

With this setting you can view the Hours worked of your appliance.

ⓘ

Hours counted are not deleted by the Settings reset to factory default

14.12 Settings reset to factory default

With this setting you can reset your appliance to the factory settings.

1. Tap on the right soft key ▢ to enter the option.
2. Tap on the left soft key ▢ to undo.
3. Tap on the right soft key ▢ to confirm the reset.
   Performing the reset will take a few seconds

ⓘ

Settings reset to factory default deletes permanents options and favourites saved.

15. DAILY USE - WASHING ONLY

⚠ **WARNING!**

Refer to Safety chapters.

15.1 Activating the appliance

1. Connect the mains plug to the mains socket.
2. Open the water tap.
3. Press the On/Off ⏻ button for a few seconds to activate the appliance.


A short tune sounds.

15.2 Using weight sensors


ⓘ

For a correct use of the weight sensor, the drum must be empty when activating the appliance.
Set the programme BEFORE you put the laundry in the drum.


When the door is open:
Weight sensor popup appears when the machine is turned on.

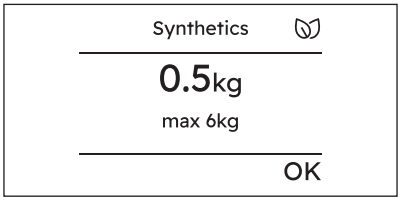

Adding laundry, the display shows the load weight increasing.

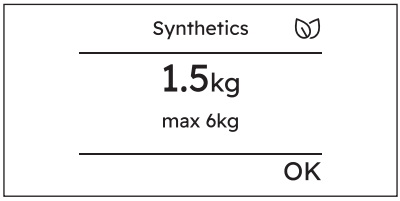

In case of overloading, the display will show the following view:

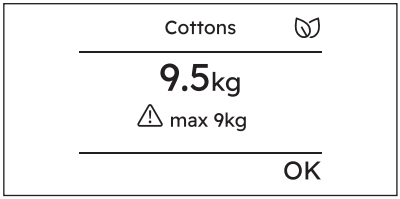

Weight sensor popup can be dismissed by tapping on the right soft key ☐, or by Start/Pause ▷II key button.

ⓘ

Changing programme with the rotary will temporarily dismiss the weight sensor popup, but it will re-appear after 3 seconds once a programme is selected, even if it was dismissed for the previous programme.

ⓘ

If the laundry amount will not be reduced, the washing programme starts anyway, despite the overload. In this case, it will be not possible to guarantee the best washing results.

15.3 Before activating the appliance

1. Make sure that the mains plug is connected to the mains socket.
2. Make sure that the water tap is open.

15.4 Activating the appliance

Press the On/Off ⏻ button to turn the appliance on. A short tune sounds.

The default selected programme, at machine switch on, is always the Eco 40-60 programme, also after wake up from standby.


The information of the selected programme are visible in the display.

The led of the Start/Pause ▷II key button flashes.

15.5 Setting a programme

The Eco 40-60 is the default proposed programme when the appliance is turned on, the one to which the information of the energy label relates.

1. Turn the programme dial to set the desired programme.
   After a few seconds the display shows programme summary view with the following information:

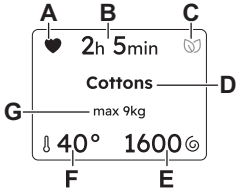

A. Favorites, if already saved.
B. Programme duration
C. SmartLeaf
D. Selected programme
E. Spin speed
F. Temperature
G. Maximum programme load.

ⓘ

Also additional options, if activated, will be visible in the display.

Tap on the different soil level of the **SmartSelect** to the right in the control panel.

Steam Refresh programme can be selected in the SmartSelect area.

ⓘ

Every time a different SmartSelect level is chosen it will be visible for 2 seconds in position 7.

You can also:

1. Tap on the left soft key ☐ to change the **Temperature** 🌡.
2. Tap on the right soft key ☐ to change the **Spin** speed.
3. Tap on **Menu** ☰ to enter the additional available options and set one or more of them.


15.6 Loading the laundry

- Open the appliance door.
- Shake the items before you put them in the appliance.

- Put the laundry in the drum, one item at a time.

Make sure not to put too much laundry in the drum.

- Close the door firmly.

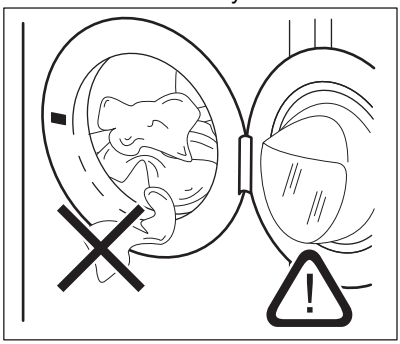

⚠ CAUTION!

- Make sure that no laundry stays between the seal and the door. There is a risk of water leakage or damage to the laundry.
- Washing heavily oiled, greasy stains or using fragrances perfume could cause damage rubber parts of the appliance.

15.7 Using detergent and other treatments

If both AutoDose tanks are enabled in the set programme, detergent and fabric softener are automatically loaded.

If one of the AutoDose tank or both are disabled (OFF) in the set programme, proceed by manually filling the product in the proper compartment.

15.8 Bleach

Alternatively the softener, it is also possible to use a bleach agent in the compartment ❀ with the programmes for white cottons. Proceed as follows:

1. Put the bleach in the compartment ❀. Do not exceed the **«MAX»** mark in the detergent dispenser drawer.
2. Run a programme for white cottons.
3. At the end of the programme, run the rinse programme or a programme with the rinse option. Use softener, if desired.

This helps to eliminate any bleach residues.

ⓘ

Never pour bleach and softener into the compartment at the same time.

15.9 Starting a programme

⚠ WARNING!

Make sure that the detergent dispenser is firmly closed, otherwise programme won't start.

Touch the Start/Pause ▷❙❙ key button to start the programme.
The related indicator stops flashing and stays on.
The programme starts, the door is locked.

The display shows the indicator ⊸ .

ⓘ

The drain pump can operate shortly before the appliance fills water.

15.10 The SensiCare system load detection

After touching the Start/Pause ▷❙❙ button:

1. The appliance starts the laundry load detection to calculate the real programme duration.
2. After about 10 minutes the display shows the new programme duration.
   The appliance adjusts automatically the programme duration to the load to achieve perfect washing results in the minimum possible time. The programme duration could increase or decrease.

15.11 Interrupting a programme and changing the options

When the programme is running, you can change **only some** options:

1. Touch the Start/Pause ▷❙❙ key button.

The related indicator flashes.

2. Change the options. The given information in the display changes accordingly.
3. Touch the Start/Pause ▷❙❙ key button again.

The washing programme continues.

15.12 Cancelling a running programme

1. Press the On/Off button to cancel the programme and to deactivate the appliance.
2. Press the On/Off button again to activate the appliance.

Now, you can set a new washing programme.

If the SensiCare phase is already carried out and the water filling is already started, the new programme starts **without repeating the SensiCare phase**. The water and the detergent are not drained out in order to avoid waste. The display shows the maximum duration of the programme, updating it about 20 minutes after the starting of the new programme.

15.13 Opening the door - Adding garments

If a message in the display that inform you that you can add or remove garments, you can always open the door.

While a programme or the delay start operates, the appliance door is locked. The display shows the indicator .

If the temperature and level of the water in the drum are too high and/or the drum is still rotating you should not open the door.

To add or to remove garments:

1. Touch the Start/Pause key button.

In the display the related door lock indicator goes off.

2. Open the appliance door. If necessary, add or remove the garments. Close the door and touch the Start/Pause key button.

The programme or the delay start continues.

15.14 End of the programme

When the programme has finished, the appliance stops automatically. The acoustic signals operate (if they are active). The display shows Done, the completed line of progress and Remove Garments message.

The indicator of the Start/Pause key button goes off.

The door unlocks and the indicator goes off.

1. Press the On/Off button to deactivate the appliance.

After five minutes from the end of the programme, the energy saving function automatically deactivates the appliance.

When you activate the appliance again, the appliance proposes Eco 40-60 as default programme. Turn the programme dial to set a new cycle.

2. Remove the laundry from the appliance.
3. Make sure that the drum is empty.
4. Keep the door and the detergent dispenser slightly open to prevent mildew and odours.

15.15 Draining water out after end of cycle

If you have chosen a programme or an option that does not empty out the water of the last rinse, the programme is completed, but:

- Draning phase is shown in the display and the door is locked .
- The indicator of the Start/Pause key button starts flashing.
- The drum still turns at regular intervals to prevent creases in the laundry.
- The door stays locked.
- You must drain the water to open the door.

15.16 Stand-by function

The Stand-by function automatically deactivates the appliance to reduce the energy consumption when:

- You do not use the appliance for 5 minutes when no programme is running.

  Press the button On/Off ⏻ to activate the appliance again.
- 5 minutes after the end of the washing programme.

  Press the On/Off ⏻ button to activate the appliance again.
  The default selected programme, after reactivating appliance from stand-by function is always Eco 40-60.
  Turn the programme dial to set a new cycle.

ⓘ

If you set a programme or an option that ends with water in the drum, the Stand-by function **doesn't deactivate** the appliance to remind you to drain the water.

ⓘ

If the Wi-Fi Always On function is active, only the indicator ᯤ goes on and off intermittently.

16. DAILY USE - WASHING & DRYING

⚠ **WARNING!**

Refer to Safety chapters.

ⓘ

This appliance is an automatic washer dryer.

16.1 Complete wash&dry programme

Wash&dry programmes

In most washing programmes, you can combine the washing cycle and the drying phase selecting one of the dryness level shown in the panel.

Proceed as follows:

1. Load laundry and detergent.
2. Turn the programme dial to select the desired washing programme. The appliance defaults to the washing only mode and the indicator of the default soil level button is on. The display shows the default temperature and spin. If necessary, change them according to your laundry. The display also shows the maximum recommended load for washing phase.
3. The appliance suggests the available dryness level for the selected programme (icon starts blinking). Tap on it to add the drying phase.

ⓘ

When the drying cycle is added, the estimated washing time can differ from the initial displayed time. This is due to the washing cycle being automatically optimized to prepare the laundry for the drying phase.

4. Set the desired options, if there are available.
5. Touch button Start/Pause ▷❙❙ to start the programme. The SensiCare estimation starts.

In the display the door locked ⊶ indicator comes on.
The display also shows the remaining programme time.

16.2 Washing and Drying - Automatic levels

1. Tap on the Dryness Level button repeatedly until the display shows the required dryness level. The indicators in the display illuminate accordingly:
   a. ☼ **Iron dry**: for cotton items;
   b. ☼ **Cupboard dry**: for cotton and synthetic items;
   c. ☼ **Extra dry**: for cotton items.

The time value on the display is the duration of both cycles washing and drying, calculated on a default load size.

To have a good drying by using less energy and in a shorter time, the appliance does not let you set a too low spin speed for the items to be washed and dried.

2. Touch button Start/Pause ▷|| to start the programme. The SensiCare estimation starts.

In the display the door locked indicator comes on.
The display also shows the remaining programme time.

16.3 Washing and Timed Drying

1. Tap on the Time Dry button repeatedly to set the desired time value (see the "Timed drying" table in the "Programmes" chapter). The drying level buttons indicator goes off and the key button indicator comes on.

Each time you tap left soft key, the time value increases by 5 minutes. The display shows the set new time value.


2. Touch the Start/Pause ▷|| button to start the programme. The SensiCare estimation starts.

In the display the door locked indicator comes on.
The display also shows the remaining programme time.


16.4 At the end of the drying programme

- The appliance stops automatically.
- The acoustic signals operate (if they are active).
- You can remove the laundry and not performing the anti-crease phase. We recommend, for better results, that you remove the laundry when the phase is almost completed . In the display appears the indicator of the Start/Pause ▷|| to finish the drying phase and remove items.

The door locked goes off and the door unlocks.

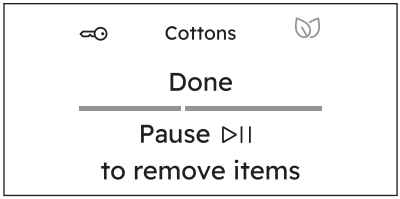

If Start/Pause ▷|| will not tapped, the appliance continues automatically to operate with the anti-crease phase for approximately 30 minutes.

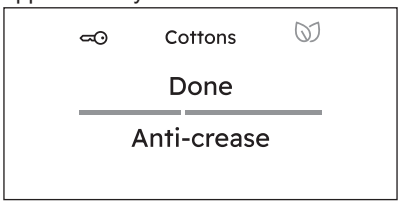

The anti-crease phase is recommended to reduces creasing.

- The display indicates that the anti-crease phase is done and items could be removed.
- Press the On/Off button for some seconds to deactivate the appliance.

After some minutes from the end of the programme, the energy saving function deactivates the appliance automatically.

1. Remove the laundry from the appliance.
2. Make sure that the drum is empty.

After drying phase, clean the drum, the seal and the inside of the door with a wet cloth.

17. DAILY USE - DRYING ONLY

⚠ WARNING!
Refer to Safety chapters.

ⓘ
This appliance is an automatic washer dryer.

17.1 Preparation to drying

1. Press the On/Off touch button for some seconds to activate the appliance.
2. Load the laundry one item at a time.
3. Turn the programme dial to the programme suitable for the items to dry.
4. To activate drying mode only, deactivate the wash mode first by pressing on the illuminated washing level in the SmartSelect.

ⓘ
If a certain dryness level is not available, pressing it will generate an error (double beep and symbol blinks twice).

ⓘ
When drying a big amount of laundry, to have good drying performances, make sure that the laundry itself is not rolled up and that is uniformly distributed in the drum.

17.2 Drying - Automatic levels

1. Tapping on one of the Dryness Level area touch button, the display shows the required dryness level for the programme selected.



The indicators illuminate accordingly:


a. **Iron dry**: for cotton items;
b. **Cupboard dry**: for cotton and synthetic items;
c. **Extra dry**: for cotton items.

The display shows the drying programme duration.

2. Touch the Start/Pause button to start the programme.

In the display the door locked indicator comes on and the door is locked.
The display also shows the remaining programme time.

3. To deactivate the chosen dryness level, tap the related touch button. The icon light off and the display shows only the washing programme selected.

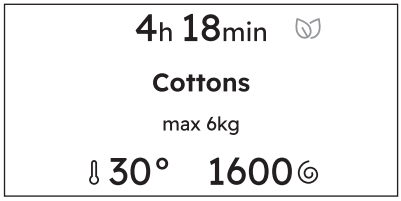

17.3 Timed Drying

1. Tap on the Time Dry key button and then, tap on left soft key repeatedly to set the desired time value (see the "Timed drying" table in the "Programmes" chapter).

Each time you tap on this button the time value increases by 5 minutes. The display shows the set new time value.
Some programmes has a restricted and fixed set of Time Dry times and recommended load is displayed.



The first time selected is the middle one, allowing the user to increase or decrease it one step.

The user tapping the left soft key, can select one of the three available levels:

a. ▪▫▫
b. ▪▪▫
c. ▪▪▪


2. Touch the Start/Pause ▷|| to start the programme.

In the display the door locked indicator comes on and the door is locked.
The display also shows the remaining programme time.


17.4 At the end of the drying programme

- The appliance stops automatically.
- The acoustic signals operate (if they are active).
- You can remove the laundry and not performing the anti-crease phase. We recommend, for better results, that you remove the laundry when the phase is almost completed . In the display appears the indicator of the Start/Pause ▷|| to finish the drying phase and remove items.

  The door locked goes off and the door unlocks.

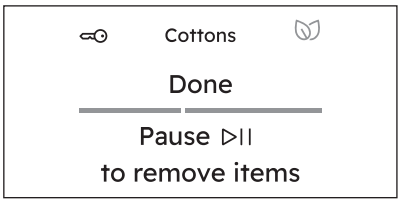

If Start/Pause ▷|| will not tapped, the appliance continues automatically to operate with the anti-crease phase for approximately 30 minutes.

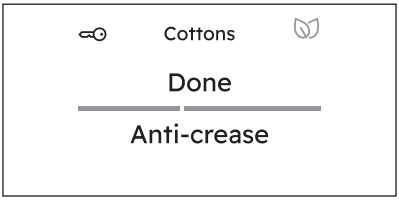

The anti-crease phase is recommended to reduces creasing.

- The display indicates that the anti-crease phase is done and items could be removed.
- Press the On/Off ⏻ button for some seconds to deactivate the appliance.

ⓘ

After some minutes from the end of the programme, the energy saving function deactivates the appliance automatically.

1. Remove the laundry from the appliance.
2. Make sure that the drum is empty.

ⓘ

After drying phase, clean the drum, the seal and the inside of the door with a wet cloth.

18. HINTS AND TIPS


⚠ **WARNING!**

Refer to Safety chapters.


18.1 The laundry load

- Divide the laundry into: white, coloured, synthetics, delicates and wool.
- Follow the washing instructions on the laundry care labels.
- Do not wash white and coloured items together.
- Remember that the temperature on the care label is referring to max temperature and is not recommended temperature.
- Check the level of need for wash, the garments may only need a refresh and Steam Refresh can be used instead
- Some coloured items can discolour with the first wash. We recommend that you wash them separately for the first couple of times.
- Turn multilayered fabrics, wool and items with printed illustrations inside out.

- Pre-treat stubborn stains.
- Wash stubborn stains with a special detergent.
- Be careful with curtains. Remove the hooks and put the curtains in a washing bag or pillowcase.
- A very small load can cause balance problems with the spin phase leading to excessive vibration. If this occurs:
  a. interrupt the programme and open the door (refer to "Daily Use" chapter);
  b. manually redistribute the load so that the items are spaced evenly around the tub;
  c. press the Start/Pause button. The spin phase continues.
- Button up pillowcases, close zippers, hooks and poppers. Tie up belts, cords, shoelaces, ribbons and any other loose elements.
- Do not wash laundry without hems or with cuts. Use a washing bag to wash small and/or delicate items (e.g. underwired bras, belts, tights, shoelaces, ribbons, etc.).

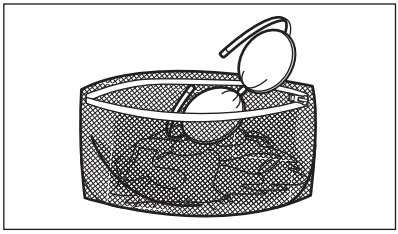

- Empty pockets and unfold the items.

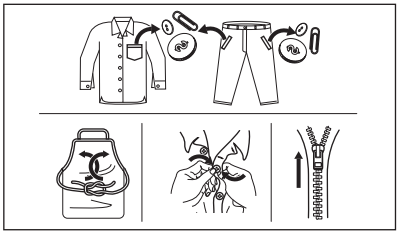


18.2 Stubborn stains

For some stains, water and detergent is not sufficient.

We recommend that you pre-treat these stains before you put the items in the appliance.

Special stain removers are available. Use the special stain remover that is applicable to the type of stain and fabric.

Do not spray stain remover on garments near the appliance as it is corrosive to the plastic parts.

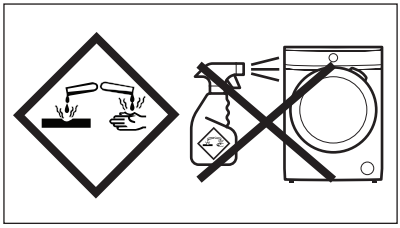

18.3 Detergent type and quantity

The choice of detergent and use of correct quantities not only affects your wash performance, but also helps to avoid waste and protect the environment:

- Use only detergents and other treatments specially made for washing machines. First, follow these generic rules:
  – powder detergents (also tablets and single-dose detergents) for all types of fabric, excluding delicate. Prefer powder detergents containing bleach for whites and laundry sanitization,
  – liquid detergents (also single-dose detergents) , preferably for low temperature wash programmes (60 °C max) for all types of fabric, or special ones for woollens only.
- The choice and quantity of detergent will depend on: type of fabric (delicates, woollens, cottons, etc), the colour of clothes, size of the load, degree of soiling, wash temperature, time and hardness of the water used.
- Follow the instructions that you find on packaging of the detergents or other treatments without exceeding the indicated maximum level (**MAX**).
- Do not mix different types of detergents.
- Use less detergent if:
  – you are washing a small load,
  – the programme duration has been reduced by the Time Manager button.
  – the laundry is lightly soiled,

– there is large amounts of foam during washing.
- When using detergent tabs or pods, always put them inside the drum, not in the detergent dispenser and follow the manufacturer's recommendations .

Insufficient detergent may cause:
- unsatisfactory washing results,
- the wash load to turn grey,
- greasy clothes,
- mould in the appliance.

Excessive detergent may cause:
- sudsing,
- reduced washing effect,
- inadequate rinsing,
- a greater impact for the environment.

18.4 Savings tips

ⓘ

Let the SmartSelect function guide you to save energy, time and water. Extra Light and Light options can be used the most of the time. Use Steam Refresh , to avoid washing and refresh your clothes with only steam.

For better result we recommend that you follow these tips:

- **Normally soiled laundry** may be washed **without prewash** in order to save detergent, water and time.
- Loading the appliance to the **maximum capacity indicated for each programmes helps to reduce energy and water consumption**.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- To use the correct quantity of detergent, refer to the quantity suggested by the detergent producer and check the water hardness of your domestic system. Refer to 'Water hardness'.
- Set the **maximum possible spin speed** for the selected programme in order to save energy during drying.
- Preferably, use short cycles at lower temperatures.

18.5 Water hardness

If the water in your area is hard or medium hard, we recommend that you use a water softener additive for washing machines.

In areas where the water is soft it is not necessary to use a water softener.

To find out the water hardness in your area, contact your local water authority.

Use the correct quantity of water softener. Follow the instructions that you find on the packaging of the product.

18.6 Prepare the drying cycle

- Open the water tap.
- Check if the drain hose is connected properly. Refer to installation chapter for more information.
- For the maximum laundry load of the drying programmes, refer to the drying programmes table.

18.7 Items not suitable for drying

Do not set a drying programme for this laundry:
- Synthetic curtains.
- Pieces of clothing with metal inserts.
- Nylon stockings.
- Quilts.
- Bed covers.
- Duvets.
- Anoraks.
- Sleeping bags.
- Fabrics with residue of hair sprays, nail solvents or similar.
- Garments with foam-rubber or materials similar to foam-rubber.

18.8 Garment labels

When you dry the laundry, obey the indications on the labels of the manufacturers:

- = The item can be tumble dried
- = The drying cycle is at high temperature
- = The drying cycle is at reduced temperature
- = The item can not be tumble dried.

18.9 Drying cycle duration

The drying time can change depending on:
- speed of the last spin
- dryness level
- type of laundry
- weight of the load

18.10 Additional drying

If, at the end of the drying programme, the laundry is still damp, set a short drying cycle again.

> ⚠ **WARNING!**
>
> **To avoid creasing and shrinkage do not overdry the laundry.**

18.11 General Tips

Refer to the «Timed drying» table to find the **average** drying times.

Experience will help you to dry the laundry better. Take note of the duration of the cycles done before.

To avoid the static charge at the end of the drying cycle:

1. Use fabric conditioner in the washing cycle.
2. Use special fabric conditioner for tumble dryers.
3. Do not pour any detergent or softener before a drying cycle.
4. Do not dry rough and smooth textiles together, to avoid scorching on smooth garments.
5. Remove all objects from garment pockets, especially melting objects.

When the drying programme is completed remove the laundry in a short time.

19. CARE AND CLEANING

> ⚠ **WARNING!**
>
> Refer to Safety chapters.

19.1 Periodic cleaning schedule

Periodic cleaning helps to extend the life of your appliance.

After each cycle, keep the door and the detergent dispenser slightly open to get air circulation and dry the humidity inside the appliance.

If the appliance is not used for a long time: close the water tap and unplug the appliance.

Indicative periodic cleaning schedule:

Descaling	Twice a year
Maintenance wash	Once a month
Clean door seal	Every two months
Clean drum	Every two months
Remove fluff inside the drum	Twice a month[1)]
Clean detergent dispenser and AutoDose tanks	Twice a year
Clean drain pump filter	Twice a year
Clean the inlet hose and the valve filter	Twice a year

1) Refer to "Fluff in the fabrics" chapter.

19.2 Removing foreign objects

> ⓘ
>
> Make sure that pockets are empty and all loose elements are tied up before running your cycle. Refer to "The laundry load" in "Hints and tips".

Remove any foreign objects (such as metal clip, buttons, coins, etc) that you may find in the door seal, the filters and the drum. Refer to "Door seal with double lip trap", "Cleaning the drum", "Cleaning the drain pump" and "Cleaning the inlet hose and the valve filter" paragraphs. If necessary, please contact the Authorised Service Centre.

19.3 External cleaning

Clean the appliance with mild soap and warm water only. Fully dry all the surfaces.

Do not use a scouring pads or any scratching material.

⚠ CAUTION!

Do not use alcohol, solvents or chemical products.

⚠ CAUTION!

Do not clean the metal surfaces with chlorine-based detergent.

19.4 Descaling

ⓘ

If the water in your area is hard or medium hard, we recommend that you use a water softener for washing machines (descaling occasionally).

Regularly examine the drum to check for limescale.

ⓘ

Always follow the instructions that you find on the packaging of the product.

19.5 Maintenance wash


The repeated and prolonged use of low temperature and short programmes can cause detergent deposits, fluff residues, bacterial growth and biofilm formation inside the drum and the tub. This could generate bad odours and mildew.

To eliminate these deposits and hygienize the inner part of the appliance, run a maintenance wash at least once a month:

1. Remove all laundry from the drum.
2. Deactivate AutoDose function for detergent and softener.
3. Run a cotton programme with the highest temperature with a small quantity of powder detergent or, if available, run the Machine Clean programme.

19.6 Door seal

This appliance is designed with a **self cleaning draining system**, allowing light fluff fibers that fall off the clothes to be drained out with the water. Regularly examine the seal and if necessary clean as described in the following diagram. Coins, buttons, other small items can be recovered at the end of the cycle.

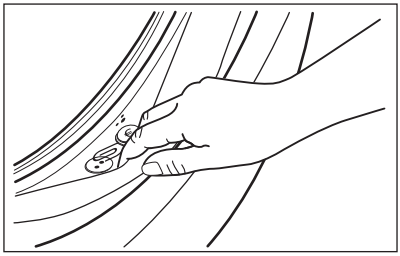

Clean it when needed, using ammonia cream cleanser agent without scratching the seal surface.

ⓘ

Always obey the instructions that you find on the packaging of the product.

19.7 Cleaning the drum

Regularly examine the drum to prevent unwanted deposits.

Rust deposits in the drum may occur due to rusting foreign body in the washing or tap water containing iron

Clean the drum with special products for stainless steel.

ⓘ

Always follow the instructions that you find on the packaging of the product.
Do not clean the drum with acidic descaling products, scouring products containing chlorine or iron or steel wool.

For a thorough clean:

1. Clean the drum with special products for stainless steel.

ⓘ

Always follow the instructions that you find on the packaging of the product.

2. Remove all laundry from the drum.
3. Deactivate AutoDose function for detergent and softener.
4. Add a manually small quantity of powder detergent or a specific product into the

empty drum, in order to rinse out any left residues.

ⓘ

Occasionally, at the end of a cycle the display may show the icon ✧: this is a recommendation to perform the “drum cleaning”. Once the drum cleaning has been performed, the icon disappears.

19.8 Cleaning the detergent dispenser and the AutoDose tanks

⚠ **CAUTION!**


If you change detergent type as brand, concentration, and thickness, then it is suggested to clean the detergent drawer.

ⓘ


Before cleaning, make sure that the all compartments are empty.


To prevent possible deposits of dried detergent, clotted fabric softener, formation of mould in the detergent dispenser and/or clotted liquid additives in the AutoDose tanks, **every two months carry out the following cleaning procedure how explained in the following diagrams:**

1. Open the detergent dispenser. Press the catch as indicated in the picture and pull the detergent dispenser out.

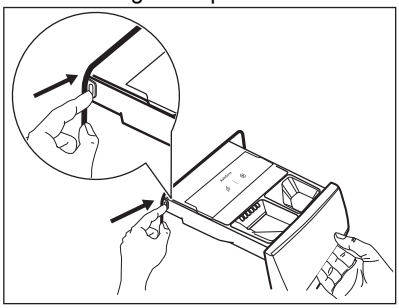



2. Remove the insert for the softener and, if inserted, the container for liquid detergent.

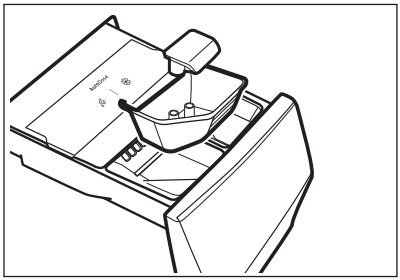

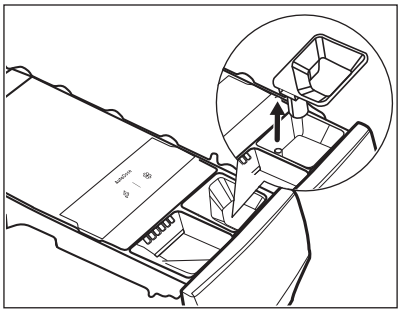


3. Press the catch on the back as indicated in the picture and lift up the top cover to remove it.

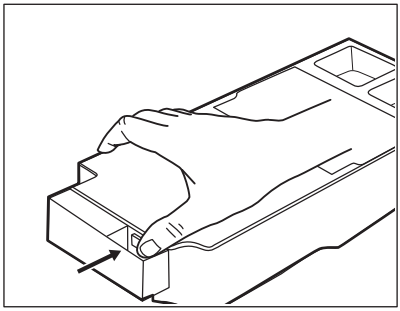

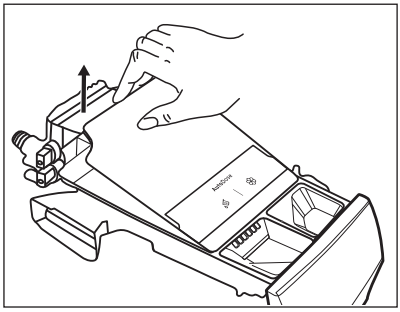


4. To remove any detergent residue or if you place a wrong additives in the tanks,

empty the drawer in a basin or in suitable containers to collect the liquid.

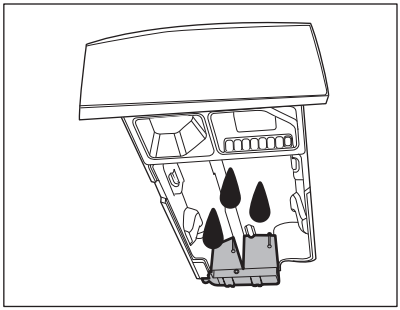


5. Wash the drawer and all inserts under running water or clean it with a damp cloth.

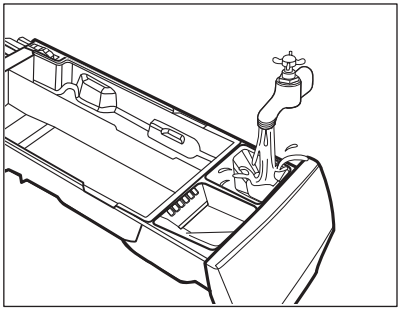

⚠ CAUTION!


Do not use sharp or metal brushes and sponges. Do not wash drawer in a dish washer.

6. Turn the dispenser up side down and open the bottom cover as indicated in the picture.

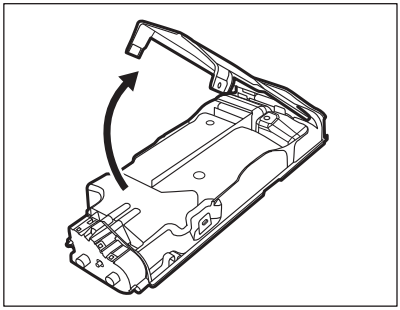


7. Make sure that all detergent residue is removed from the conveyor. Use only soft damp clothes.

8. Put bottom cover back to its position by aligning its holes on drawer hooks as indicated in the picture. Close it till "click" sound.

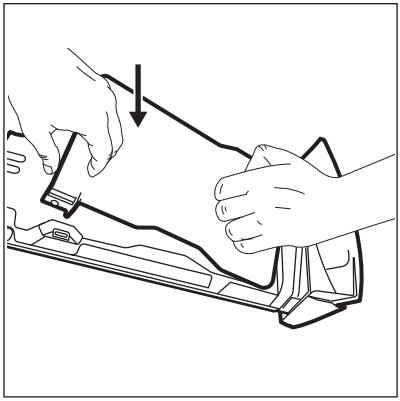


⚠ CAUTION!

Press the bottom cover as indicated in the picture. Make sure that it is closed properly.

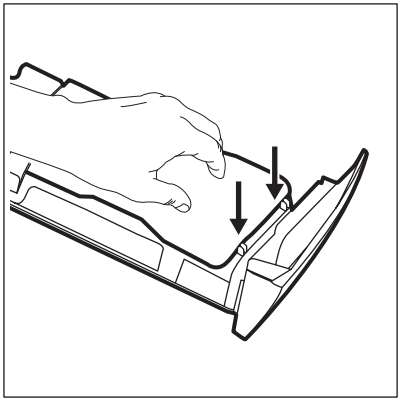


⚠ WARNING!

Do not clean with any sharp and metal brushes or any tools, pumps or sensors allocated on the back of the detergent drawer. If necessary, use only soft damp clothes.

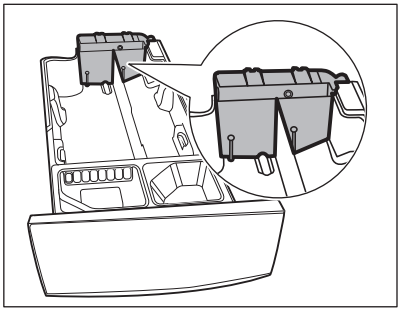


⚠ WARNING!

If some residues remain on the back area of tanks, soak detergent drawer in a warm water. Do not use tools to clean it. Before soaking, remove the handle by pressing red button and slide the handle as indicated in the picture.

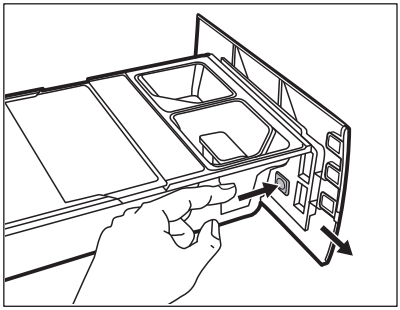


9. Make sure that all detergent residue is removed from the upper and lower part of the recess. Use a small brush to clean the recess.

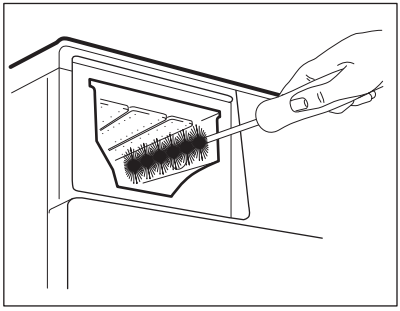

10. Reassembly the drawer as follows:
   a. Place the handle if was disassembled.
   b. Place the bottom cover and press till "click" sound.
   c. Place the top cover on the tanks compartment and press till "click" sound.
   d. Replace components on manual compartment.

11. Insert the detergent dispenser into the guide rails and gently close it till "click" sound. Run the rinsing programme without any clothes in the drum.

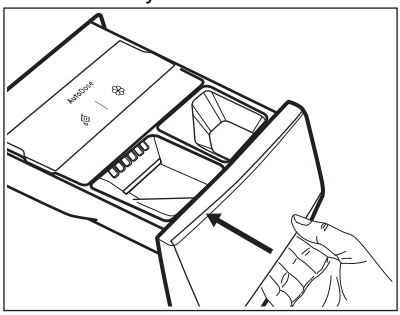

To restore the functionality, refill tanks with detergent and softener.

19.9 Cleaning the drain pump filter

⚠ WARNING!

Disconnect the mains plug from the mains socket.

Regularly check the drain pump filter and make sure that it is clean.


Clean the drain pump filter if:
- The appliance does not drain the water.
- The drum does not turn.
- The appliance makes an unusual noise because of the blockage of the drain pump.
- The message Check that the drain filter is not clogged pops up.

⚠ WARNING!

- Do not remove the filter while the appliance operates.
- Do not clean the pump if the water in the appliance is hot. Wait until the water cools down


Proceed as described in following diagrams to clean the pump filter:

1. Open the pump cover.

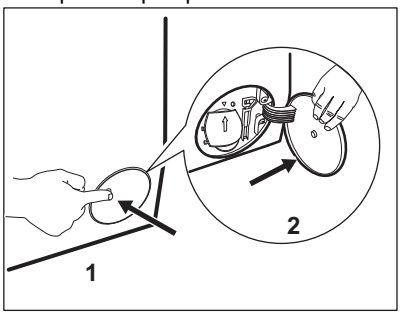


2. Place a suitable bowl below the drain pump access to collect the water that flows out.

3. Open the chute downwards. Always keep a rag nearby to dry up any water spillages when removing the filter.

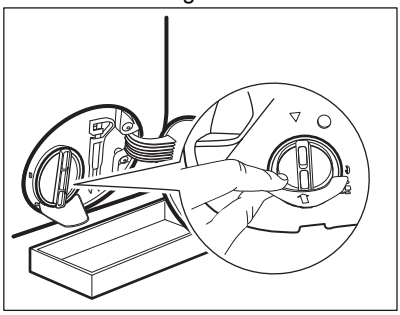


4. Turn the filter 180 degrees in anti-clockwise direction to open it, without removing. Let the water flow out.

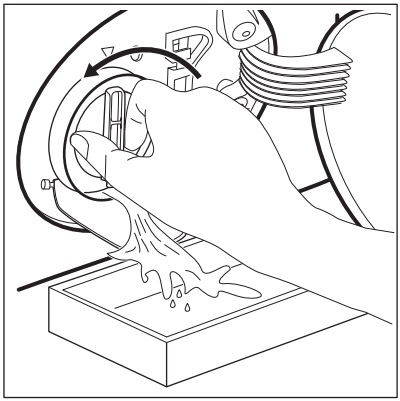

5. When the bowl is full of water, turn the filter back and empty the container.


6. Repeat the steps 4 and 5 until the water stops to flow out.

7. Turn the filter anti-clockwise to remove it.

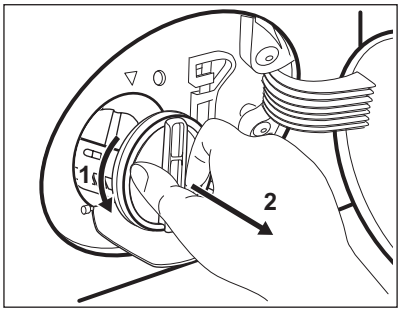


8. If it is necessary, remove fluff and objects from the filter recess.


9. Make sure that the impeller of the pump can rotate. If it does not rotate, contact the Authorised Service Centre.

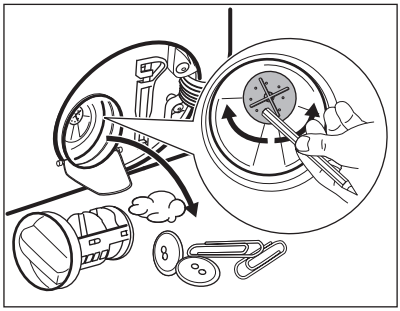


10. Clean the filter under the water tap.

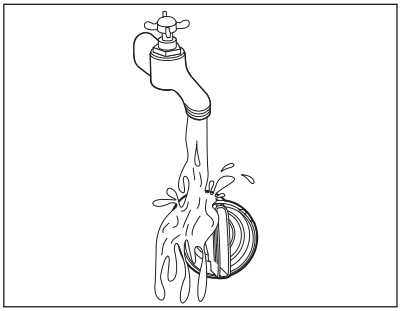

11. Put the filter back into the special guides by turning it clockwise. Make sure that you tighten the filter correctly to prevent leakages.

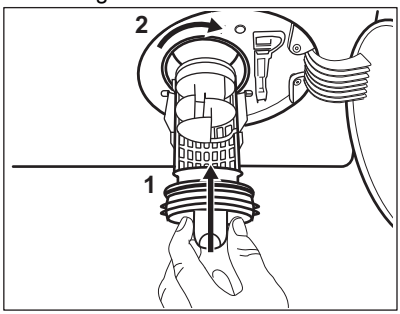

12. Close the pump cover.

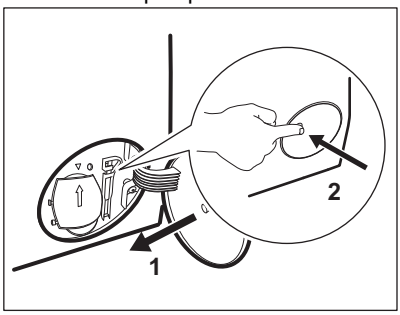


When you drain the water with the emergency drain procedure, you must activate the drain system again:

- **a.** Put 2 litres of water in the main wash compartment of the detergent dispenser.
- **b.** Start the programme to drain the water.


19.10 Cleaning the inlet hose and the valve filter

It is recommended to clean both the filters of the inlet hose and valve twice a year to remove any deposit, collected over the time. Proceed as described in following diagrams to clean filters:


1. Remove the inlet hose from the tap and clean the filter.

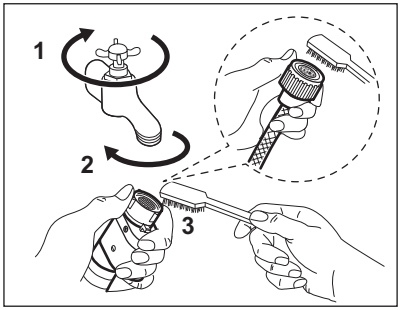

2. Remove the inlet hose from the appliance by loosening the ring nut.

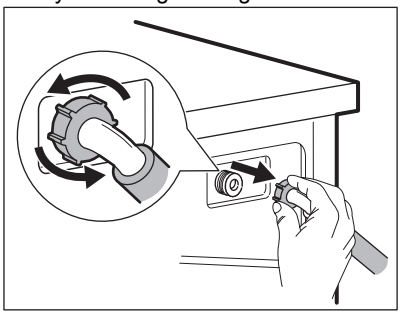


3. Clean the valve filter on the back of the appliance with a toothbrush.

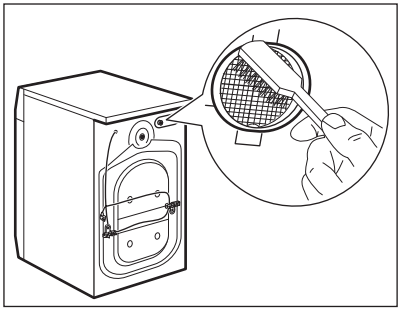

4. When you reconnect the hose to the back of the appliance, turn it left or right (not in

vertical position) depending on the position of your water tap.

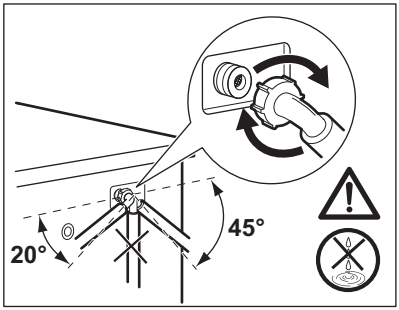

19.11 Emergency drain

If the appliance cannot drain the water, carry out the same procedure, described in 'Cleaning the drain pump' paragraph. If necessary, clean the pump.

When you drain the water with the emergency drain procedure, you must activate the drain system again:

1. Put 2 litres of water in the main wash compartment of the detergent dispenser.
2. Start the programme to drain the water.

19.12 Frost precautions

If the appliance is installed in an area where the temperature can reach the values around 0° C or drop below, remove the remaining water from the inlet hose and the drain pump.

1. Disconnect the mains plug from the mains socket.
2. Close the water tap.
3. Put the two ends of the inlet hose in a container and let the water flow out of the hose.
4. Empty the drain pump. Refer to the emergency drain procedure.
5. When the drain pump is empty, install the inlet hose again.

> ⚠ **WARNING!**
>
> Make sure that the temperature is higher than 0 °C before you use the appliance again.
> The manufacturer is not responsible for damages caused by low temperatures.

20. TROUBLESHOOTING

> ⚠ **WARNING!**
>
> Refer to Safety chapters.

20.1 Alarm Codes and Possible failures


The appliance does not start or it stops during operation. First try to find a solution to the problem (refer to the tables).

> ⚠ **WARNING!**
>
> Deactivate the appliance before carrying out any check.

With some problems, the display shows an alarm message and the Start/Pause ▷II **button may flash continuously:**

ⓘ

If the appliance is overloaded, remove some items from the drum and/or keep pressed the door while touching the Start/Pause button until the indicator ⊣□ stops flashing (see the picture below).

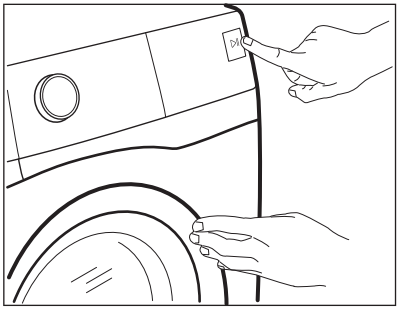

Problem	Possible solution
Check that the water inlet tap is open: The appliance does not fill with water properly.	• Make sure that the water tap is open. • Make sure that the pressure of the water supply is not too low. For this information, contact your local water authority. • Make sure that the water tap is not clogged. • Make sure that the inlet hose has no kinks, damages or bends. • Make sure that the connection of the water inlet hose is correct. • Make sure that the filter of the inlet hose and the filter of the valve are not clogged. Refer to 'Care and cleaning'.
Check that the drain filter is not clogged: The appliance does not drain the water.	• Make sure that the sink spigot is not clogged. • Make sure that the drain hose has no kinks or bends. • Make sure that the drain filter is not clogged. Clean the filter, if necessary. Refer to "Care and cleaning". • Make sure that the connection of the drain hose is correct. • Set the drain programme if you set a programme without drain phase. If the drain programme is not available in the programme dial, it can be set via App. • Set the drain programme if you set an option which ends with water in the tub.
Check that the door is properly closed: The appliance door is open or not closed correctly.	• Make sure that the door is properly closed.
Programme will continue when electricity supply is stable: The mains supply is unstable.	• Wait until mains supply is stable.

A water leak has been detected: The anti-flood device is on.	• Disconnect the appliance and close the water tap. Contact the Authorised Service Centre.

If the display shows other alarm codes, deactivate and activate the appliance. If the problem continues, contact the Authorised Service Centre. In case of different problem with the appliance check the table below for possible solutions.

Problem	Possible solution
The programme does not start.	• Make sure that the mains plug is connected to the mains socket. • Make sure that the appliance door is closed. • Make sure that there is no damaged fuse in the fuse box. • Make sure that the Start/Pause ▷‖ has been touched. • If the delay start is set, cancel the setting or wait for the end of countdown. • Make sure that the detergent dispenser is firmly closed. • Deactivate the Child Lock function if it is on. • Check the position of the knob on the selected programme.
The appliance fills with water and drains immediately.	• Make sure that the drain hose is in the correct position. The hose may be positioned too low. Refer to "Installation instruction".
The spin phase does not operate or the washing cycle lasts longer than usual.	• Set the spin programme. If the drain programme is not available in the programme dial, it can be set via App'. • Make sure that the drain filter is not clogged. Clean the filter, if necessary. Refer to "Care and cleaning". • Adjust manually the items in the tub and start the spin phase again. This problem may be caused by balance problems.
There is water on the floor.	• Make sure that the couplings of the water hoses are tight and there is not water leakages. • Make sure that the water inlet hose and the drain hose have no damages. • Make sure you use the correct detergent and the correct quantity of it.
You cannot open the appliance door.	• Make sure that a washing programme that ends with water in tub, has not been selected. • Make sure that the washing programme is finished. • Set the drain or the spin programme if there is water in the drum. If the spin and drain programmes are not available in the programme dial, they can be set via App. • Make sure that the appliance receives electrical power. • This problem may be caused by a failure of the appliance. Contact the Authorised Service Centre. If you need to open the door, please read carefully "Emergency door opening". • Make sure that the Remote Start Mode is not activated. Deactivate it.
The message "Failed to connect to your WiFi" appears on the screen.	• Check the wireless signal. • Check your home network and router. • Restart the router. • Contact your wireless service provider if there are further problems with the wireless network.

Problem	Possible solution
The App cannot connect to the appliance.	• Check the wireless signal. • Check if your smart device is connected to the wireless network. • Check your home network and router. • Restart the router. • Contact your wireless service provider if there are problems with the wireless network. • The appliance, the smart device, or both, need to be configured again because a new router has been installed or the router configuration has been changed.
The App cannot frequently connect to the appliance.	• Make sure that the wireless signal reaches the appliance. Try to move the home router as near the appliance as possible or consider purchasing a wireless range extender. • Make sure the wireless signal is not disrupted by microwave. Turn the microwave off. Avoid using the microwave and the remote control at the same time.
The display shows UPd. All buttons are inactive, except the the On/Off ⏻.	• The appliance is downloading any available updates. Wait until the update process is complete. If you deactivate the appliance during update, it resumes when you activate the appliance again.
The appliance makes an unusual noise and vibrates.	• Make sure the levelling of the appliance is correct. Refer to "Installation instruction". • Make sure that the packaging and/or the transit bolts are removed. Refer to "Installation instruction". • Add more laundry in the drum. The load may be too small.
The programme duration increases or decreases during programme execution.	• The SensiCare System is able to adjust the programme duration according to the type and the laundry load size. Refer to "The SensiCare System load detection" in "Daily Use" chapter.
The washing results are not satisfactory.	• Increase the detergent quantity or use a different detergent. • Use special products to remove the stubborn stains before you wash the laundry. • Make sure that you set the correct temperature. • Decrease the laundry load. • When using AutoDose tanks, make sure that they are not empty. • When using AutoDose tanks, verify the pre-set detergent/fabric softener dosage. Refer to "Basic setting" paragraph in "The AutoDose Technology" chapter. • Make sure that you have cleaned the AutoDose tanks before using different brand and type of detergent, fabric softener or other additives.
Too much foam in the drum during the washing cycle.	• Reduce the quantity of detergent or the number of tablets or single-dose detergents. • When using AutoDose tanks, verify the pre-set detergent/fabric softener dosage. Refer to "Basic setting" paragraph in "The AutoDose Technology" chapter.
The detergent/fabric softener level does not decrease in the AutoDose tanks after washing.	• This is normal: tanks are quite large and detergent consumption may be not so evident.

Problem	Possible solution
The drum is empty and the display shows there is some weight in.	• Press the On/Off ⏻ button to deactivate the appliance and activate it again to set a tare.
The drum is full but the display shows 0.0 kg.	• You loaded the laundry before activating the appliance. Press the On/Off ⏻ button to deactivate the appliance. • Empty the drum and follow the necessary steps. (Refer to "Loading the laundry")
The appliance does not dry or does not dry correctly.	• Turn the water tap on. • Make sure the drain filter is not clogged. • Reduce the laundry load. • Make sure you have set the correct cycle. if necessary, set again a short drying time.
The laundry is full of different colours fluff.	The fabrics washed in the previous cycle released fluff of a different colour: • The drying phase helps to eliminate some fluff. • Clean the clothes with a fluff remover. In case of an excessive amount of fluff in the drum refer to “Fluff in the fabrics" paragraph for more details.

After the check, activate the appliance. The programme continues from the point of interruption.
If the problem occurs again, contact the Authorised Service Centre.
The necessary data for the service centre are on the rating plate.

20.2 Emergency door opening

In case of power failure or functioning failure the appliance door remains locked. The washing programme continues when the power is restored. If the door remains locked in case of failure, it is possible to open it using the emergency unlock function.

Before opening the door:

⚠ CAUTION!

Risk of burns! Make sure that the water temperature is not too high and the laundry is not hot. If necessary, wait until they cool down.

⚠ CAUTION!


Risk of injury! Make sure that the drum is not rotating. If necessary, wait until the drum stops rotating.

ⓘ

Make sure that the water level inside the drum is not too high. If necessary, proceed with an emergency drain (refer to «Emergency drain» in «Care and cleaning» chapter).

To open the door, proceed as follows:

1. Press the On/Off ⏻ button to switch the appliance off.
2. Disconnect the mains plug from the mains socket.
3. Open the filter flap.
4. Pull the emergency unlock trigger downward once. Pull it downward once again, keep it tensed and, in the meanwhile, open the appliance door.

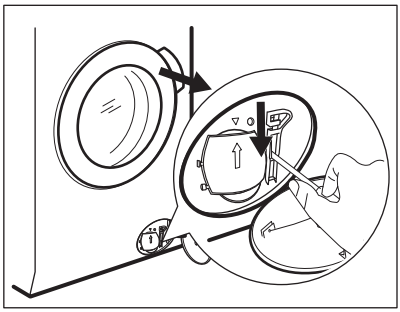

5. Take out the laundry and then close the appliance door.
6. Close the filter flap.

21. CONSUMPTION VALUES

21.1 Introduction

The QR code on the energy label supplied with the appliance provides a web link to the information related to the performance of the appliance in the EU EPREL database. Keep the energy label for reference together with the user manual and all other documents provided with this appliance.
It is also possible to find the same information in EPREL using the link **https://eprel.ec.europa.eu** and the model name and product number that you find on the rating plate of the appliance.

21.2 According to Commission Regulation Eu 2019/2023

Washing only

Eco 40-60 programme	kg	kWh	Litres	hh:mm	% 1)	°C	rpm 2)
Full load	11.0	0.730	76.0	03:59	44.0	29.0	1550
Half load	5.5	0.540	54.0	02:59	44.0	28.0	1550
Quarter load	3.0	0.310	36.0	02:59	45.0	26.0	1550

1) Remaining moisture at the end of the spinning phase. The higher is the spin speed, the higher is the noise and the lower is the remaining moisture.
2) Maximum spin speed.

Wash and dry cycle

Eco 40-60 programme and Cupboard dry level	kg	kWh	Litres	hh:mm	% 1)	°C	rpm 2)
Full load	7	4.270	105.0	07:25	0.00	25.0	1550
Half load	3.5	2.138	56.0	05:00	0.00	24.0	1550

1) Remaining moisture at the end of the spinning phase. The higher is the spin speed, the higher is the noise and the lower is the remaining moisture.

2) Maximum spin speed.

Power consumption in different modes

Off (W)	Stand-by (W)	Delay start (W)	Networked standby (W)
0.50	0.50	4.00	2.00 **1)**

Time to Off/Standby mode is 15 minutes maximum.

1) The energy consumption of the connected function is approximately 17.5 kWh per year. To disconnect this function, please refer to the chapter 'Wi-fi - Connectivity setup'.

21.3 Common programmes - Washing only

ⓘ

These values are indicative only.

Programme	kg	kWh	Litres	hh:mm	% 1)	°C	rpm 2)
Cottons **3)** 90°C	11.0	3.300	100.0	04:10	44.0	85.0	1600
Cottons 60°C	11.0	2.300	100.0	04:00	44.0	55.0	1600
Cottons **4)** 20°C	11.0	0.450	100.0	03:10	44.0	20.0	1600
Synthetics 40°C	5.0	0.950	65.0	02:45	35.0	40.0	1200
Delicates **5)** 30°C	2.0	0.350	55.0	01:05	35.0	30.0	1200

Programme	kg	kWh	Litres	hh:mm	% 1)	°C	rpm 2)
Wool 30°C	3.0	0.500	80.0	01:15	30.0	30.0	1200

1) Remaining moisture at the end of the spinning phase. The higher is the spin speed, the higher is the noise and the lower is the remaining moisture.

2) Reference indicator of the spin speed.

3) Suitable for washing heavily soiled textiles.

4) Suitable for washing lightly soiled cottons, synthetic and mixed fabrics.

5) It also performs as quick washing cycle for lightly soiled laundry.

21.4 Common programmes - Wash and dry

ⓘ

These values are indicative only.

Programme	kg	kWh	Litres	hh:mm	% 1)	°C	rpm 2)
Synthetics 40°C	5.0	3.000	100.0	05:30	1.00	40.0	1200


1) Remaining moisture at the end of the spinning phase. The higher is the spin speed, the higher is the noise and the lower is the remaining moisture.

2) Reference indicator of the spin speed.

22. QUICK GUIDE

22.1 SmartSelect


SmartSelect guides you to save energy, time and water.
Scan the QR code to learn more.

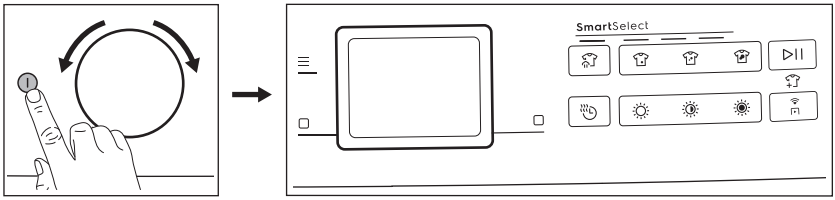

- Connect the mains plug to the mains socket.
- Open the water tap.
- Push the **On/Off** button to turn the appliance on.
- Put the laundry in the drum, one item a time without exceeding the maximum suggested load. Close the door and make sure that no laundry stays between the seal and the door.
- Turn the programme dial to set the desired programme.
- Set the desired options by tapping on the corresponding key buttons.

Let the SmartSelect function guide you to save energy and water. Extra Light and Light options can be used the most of the time. Use Steam Refresh , to avoid washing and refresh your clothes with only steam. In the programme where it is selectable, tap Time Dry button to set the time that suits the fabrics you have to dry. Use automatic drying levels **Iron Dry** for laundry to be ironed, **Cupboard Dry** for laundry to be put in store, **Extra Dry** for laundry to be fully dried.

- **When using AutoDose tanks**, the detergent and fabric softener are uploaded automatically. Make sure that tanks are not empty.
  When using manual compartments, pour the detergent and other treatments in the proper compartment.

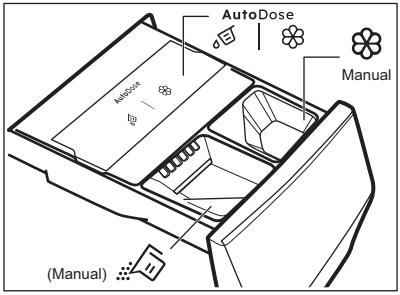

When using a liquid detergent in manual compartment, insert the container for liquid detergent.

- To start the programme, touch the **Start/ Pause** button.
- The appliance starts.
- At the and of the programme, remove the laundry.
- Push the **On/Off** button to turn the appliance off.

22.2 Programme Chart

Washing programmes

Programmes	Load	Product description
Eco 40-60	11.0 kg	**Low energy cycle for cotton items washable at 40 or 60°C.** No option can be activated. Decreases temperature and extends time to reach good washing results.**1)**
UltraQuick 49min	8.0 kg	Cottons and mixed fabrics. Optimal washing results and perfect fabric care in maximum 49 minutes for your everyday laundry. ⓘ The standard programme duration has been developed on a laundry of 5 kg. If you wash a smaller or bigger load the washing time automatically decreases or increases.
Cottons	11.0 kg	White and coloured cotton fabrics. Ideal for normal and heavy soil.
Synthetics	5.0 kg	Synthetic items or mixed fabric items.
Delicates	2.0 kg	Delicate fabrics such as acrylics, viscose, polyester items.
Wool	3.0 kg	Machine washable wool, hand washable wool and delicates.
Jeans	4.0 kg	Denim clothing and jersey items.
Outdoor	2.0 kg**2)** 1.0 kg**3)**	Modern outdoor sporting garments.
Hygiene	11.0 kg	White cotton items. This programme removes more than 99,99% of bacteria and viruses**4)**
OneGo 20/60min	1.0 kg	Programme to wash up to 1 kg of **mixed synthetic shirts** load in 20 minutes only. Add a drying phase to have a complete OneGo (wash&dry) cycle in 60 minutes. **5)**
Sportswear	5.0 kg	Sportswear.
Training Gear	1.0 kg	Suggested for small load made up of sport and fitness clothes.
BedLinen XL	4.5 kg	Washing cycle for three bedlinen sets, one of which can be double size.
Business Shirts	2.0 kg	Cotton and mixed cotton shirts, normally soiled with steam finish to facilitate ironing. When the programme is finished immediately remove the garment on a hanger for air drying for the best results.
Spin/Drain	11.0 kg	All fabrics, except woollens and very delicate fabrics. Programme for spinning and draining the water.
Rinse	11.0 kg	All fabrics, except woollens and very delicate fabrics. Programme for rinsing and spinning.

Programmes	Load	Product description
Machine Clean	-	Maintenance cycle for drum cleaning.

1) According to EU Regulation 2019/2023 this programme at 40°C is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. For the reached temperature in the laundry, the programme duration and other data, please refer to "Consumption Values" chapter.

2) Washing programme.

3) Washing programme and water repellent phase.

4) Tested for Staphylococcus aureus, Enterococcus faecium, Candida albicans, Pseudomonas aeruginosa and MS2 Bacteriophage in external test performed by Swissatest Testmaterialien AG in 2021 (Test Report No. 202120117).

5) When the drying cycle is added, the estimated washing time can differ from the initial displayed time. This is due to the washing cycle being automatically optimized to prepare the laundry for the drying phase.

Loading the appliance **to the maximum capacity indicated** for each programmes | helps to reduce energy and water consumption.

Suitable detergents for washing programmes

Programme	Universal powder[1)]	Liquid Universal	Liquid for coloureds	Delicates woollens	Special
Eco 40-60	▲	▲	▲	--	--
Cottons	▲	▲	▲	--	--
Synthetics	▲	▲	▲	--	--
Delicates	--	--	--	▲	▲
Wool/Silk	--	--	--	▲	▲
Sportswear	--	▲	▲	--	▲
Outdoor	--	--	--	▲	▲
Hygiene	▲	▲	--	--	▲

1) At temperature higher than 60 °C the use of powder detergent is recommended.

▲ = Recommended | -- = Not recommended

22.3 Additional programmes

Washing programmes

Programmes	Load	Product description
Down Jackets	2.0 kg	Single synthetic blanket, padded clothes, duvets, down jackets.
Soccer/Rugby	11.0 kg	Soccer and rugby outfit with polyester, polyester/elastane blends, polyamide and microfiber materials. Special cycle designed for fresh stains with integrated prewash phase.
Skiing Gear	5.0 kg	Perfect for heavy garments such as sking jackets and mountains clothes.
Running Shoes	2.0 kg	Designed for running shoes, gently wash programme.

Programmes	Load	Product description
Duvet	3.0 kg	Synthetic or feather and down filled blankets, padded clothes, duvets.
Towels	11.0 kg	Cotton towels and bathrobes. Ideal for normal and heavy soil.
Pet Hair	3.0 kg	Washing programme tailored for removing pet hair from items
Easy Iron	0.5 kg	Cotton, synthetic and mixed fabrics items requiring a gentle wash. Normal and light soil[1)].
AntiAllergy Vapour	3.0 kg	White cotton items. This program removes more than 99,99% of bacteria and viruses[2)]. It also ensure a proper reduction of allergens.
Baby	4.0 kg	Delicate cycle suitable for baby's articles.
Linen	2.0 kg[3)] 1.0 kg[4)]	Special delicate cycle tailored for white or coloured linen/flax fibre items.
1 Item Fast	3.0 kg	Cotton and synthetic item lightly soiled.
Steam Cashmere	-	Steam programme for wool and cashmere.
Steam Refresh	-	Steam programme for cotton, synthetic and delicate garments.

1) To reduce creasing, this cycle regulates the water temperature and performs a soft wash and spin phase. The appliance adds some rinses.

2) Tested for Staphylococcus aureus, Enterococcus faecium, Candida albicans, Pseudomonas aeruginosa and MS2 Bacteriophage in external test performed by Swissatest Testmaterialien AG in 2021 (Test Report No. 202120117).

3) Washing programme.

4) Washing programme and water repellent phase.

Loading the appliance **to the maximum capacity indicated** for each programmes helps to reduce energy and water consumption.

Suitable detergents for washing programmes

Programme	Universal powder[1)]	Liquid Universal	Liquid for coloureds	Delicates woollens	Special
Down Jackets	--	▲	▲	--	▲
Soccer/Rugby	--	▲	▲	--	▲
Skiing Gear	--	▲	▲	--	▲
Running Shoes	--	--	--	▲	▲
Duvet	--	--	--	▲	▲
Towels	▲	▲	▲	--	--
Pet Hair	--	--	--	▲	▲
Easy Iron	--	▲	▲	--	▲
AntiAllergy Vapour	▲	▲	--	--	▲

Programme	Universal powder[1)]	Liquid Universal	Liquid for coloureds	Delicates woollens	Special
Baby	--	--	--	▲	▲
Linen	--	--	--	▲	▲
1 Item Fast	--	▲	▲	--	▲

1) At temperature higher than 60 °C the use of powder detergent is recommended.

▲ = Recommended

-- = Not recommended

22.4 Detergent type and quantity.

- Use only detergents and other treatments specially made for washing machines. First, follow these generic rules:
  - powder detergents (also tablets and single-dose detergents) for all types of fabric, excluding delicate. Prefer powder detergents containing bleach for whites and laundry sanitization,
  - liquid detergents (also single-dose detergents), preferably for low temperature wash programmes (60 °C max) for all types of fabric, or special ones for woollens only.
- Do not mix different types of detergents.
- Use less detergent if:
  - you are washing a small load,
  - the laundry is lightly soiled,
  - there is large amounts of foam during washing.
- When using detergent tabs or pods, always put them inside the drum, not in the detergent dispenser and follow the manufacturer's recommendations.

Insufficient detergent may cause:
- unsatisfactory washing results,
- the wash load to turn grey,
- greasy clothes,
- mould in the appliance.

Excessive detergent may cause:
- sudsing,
- reduced washing effect,
- inadequate rinsing,
- a greater impact for the environment.

22.5 Periodic cleaning schedule

Periodic cleaning helps to extend the life of your appliance.

After each cycle, keep the door and the detergent dispenser slightly open to get air circulation and dry the humidity inside the appliance.

If the appliance is not used for a long time: close the water tap and unplug the appliance.

Indicative periodic cleaning schedule:

Descaling	Twice a year
Maintenance wash	Once a month
Clean door seal	Every two months
Clean drum	Every two months
Remove fluff inside the drum	Twice a month[1)]
Clean detergent dispenser and AutoDose tanks	Twice a year
Clean drain pump filter	Twice a year
Clean the inlet hose and the valve filter	Twice a year

1) Refer to "Fluff in the fabrics" chapter.

Regularly examine the drum to check for limescale. We recommend to run a cycle with empty drum and a descaling product occasionally.


Removing foreign objects

ⓘ

Make sure that pockets are empty and all loose elements are tied up before running your cycle.

Remove any foreign objects (such as metal clip, buttons, coins, etc) that you may find in the door seal, the filters and the drum. If necessary, please contact the Authorised Service Centre.

Door seal
This appliance is designed with a **self cleaning draining system**, allowing light fluff fibers that fall off the clothes to be drained out with the water. Regularly examine the seal and if necessary clean as described in the following diagram. Coins, buttons, other small items can be recovered at the end of the cycle.

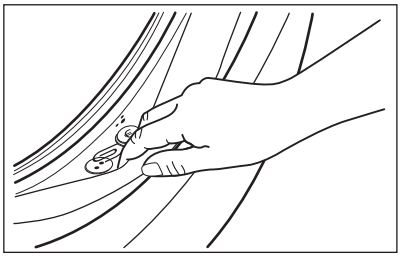

Clean it when needed, using ammonia cream cleanser agent without scratching the seal surface.

If it is necessary, remove fluff and objects from the filter recess.

22.6 Wi-Fi appliance connection

Turning On Wi-Fi

ⓘ

As factory default, the Wi-Fi feature is Off.

Tap the On/Off ⏻ button for a few seconds to activate the appliance.

To connect the appliance to a Wi-Fi network, tap and hold the Remote Start Mode key button for 5 seconds. It is also possible to enable Wi-Fi from the settings menu.

During this phase, the display shows Wi-Fi icon and "**Starting up...**" message. After a while **Ready to connect**" message and icon appear.

Connecting your appliance

ⓘ

Before proceeding with next steps, be sure that the App has been downloaded and configured and you smart device connected to your home network. Refer to "Installing and configuring the App" paragraph.

Open the App from your smart device and follow the instruction displayed to add your appliance.

During association phase, the App could redirects to the smart device Wi-Fi settings to select the home network and requires to enter the Wi-Fi password to connect the appliance.

After **Connecting...** phase, if successfully concluded, "**Connection successful**" message is shown. Otherwise, the message "**Can't connect**" is displayed.

Once connected, tapping on the Remote Start Mode key button on will enable users to be able to start cycles remotely on the App.

Auto connection to registered network
Once the appliance has been successfully set-up and registered to the home network, every time it is powered on, it will try to connect to the network automatically. There will not be any sound when Wi-Fi connection is successful.

Connecting to a different network (Reopening Access Point)
Every time user tap and hold Remote Start Mode key button for 5 seconds, the access point will be open and broadcasted. New network credentials received at this point will overwrite previously saved credentials, and the appliance then connects to the new Wi-Fi network.

Refer to "Connection your appliance" section to perform the connection.

Turning Off Wi-Fi
If the user decides to no longer connect the appliance to Wi-Fi, he can tap and hold Remote Start Mode key button for 10 seconds and the appliance will reset and turn

off. It is also possible to disable Wi-Fi from the settings menu.

After confirming the reset the display shows the message "**Network is reset**" and the Wi-Fi is set off.

23. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

electrolux.com

157083931-A-082025

