KYOCERA

PAGE PRINTER

FS−7000+/FS−9000



PARTS CATALOGUE

22−12−1999

FS−7000+/FS−9000 Parts Catalogue

Table of Contents

Enclosures (Fig.1)....3
Frames (Fig.2)....6
Drive (Fig.3)....10
Controller (Fig.4)....13
Feed Transfer Unit (Fig.5)....15
Fuser (Fig.6)....18
Drum Unit (Fig.8)....21
Developer Unit (Fig.10)....24
Multi−purpose Feeder (Fig.11)....27
Face Down Unit (Fig.12)....30

Introduction

The figures which follow depict the major assemblies of the printer or option, broken down into components. Following each figure are the list giving the following information:

’Ref No.’....Reference number which corresponds to the parts in the figure
’Part code’....Part code which identifies the part
’Part description’....A brief description of the part
’Quantity’....Quantity of the part used in the printer or option

Only the parts highlighted in BOLD should be ordered. All other parts are for reference only and are not stocked.

Consumables and Maintanence Kits

TK−30	Toner Kit
G−3	Grid Cleaner
MK−33	FS−7000+ Maintenance Kit (350K pages)
MK−35	FS−9000 Maintenance Kit (350K pages)

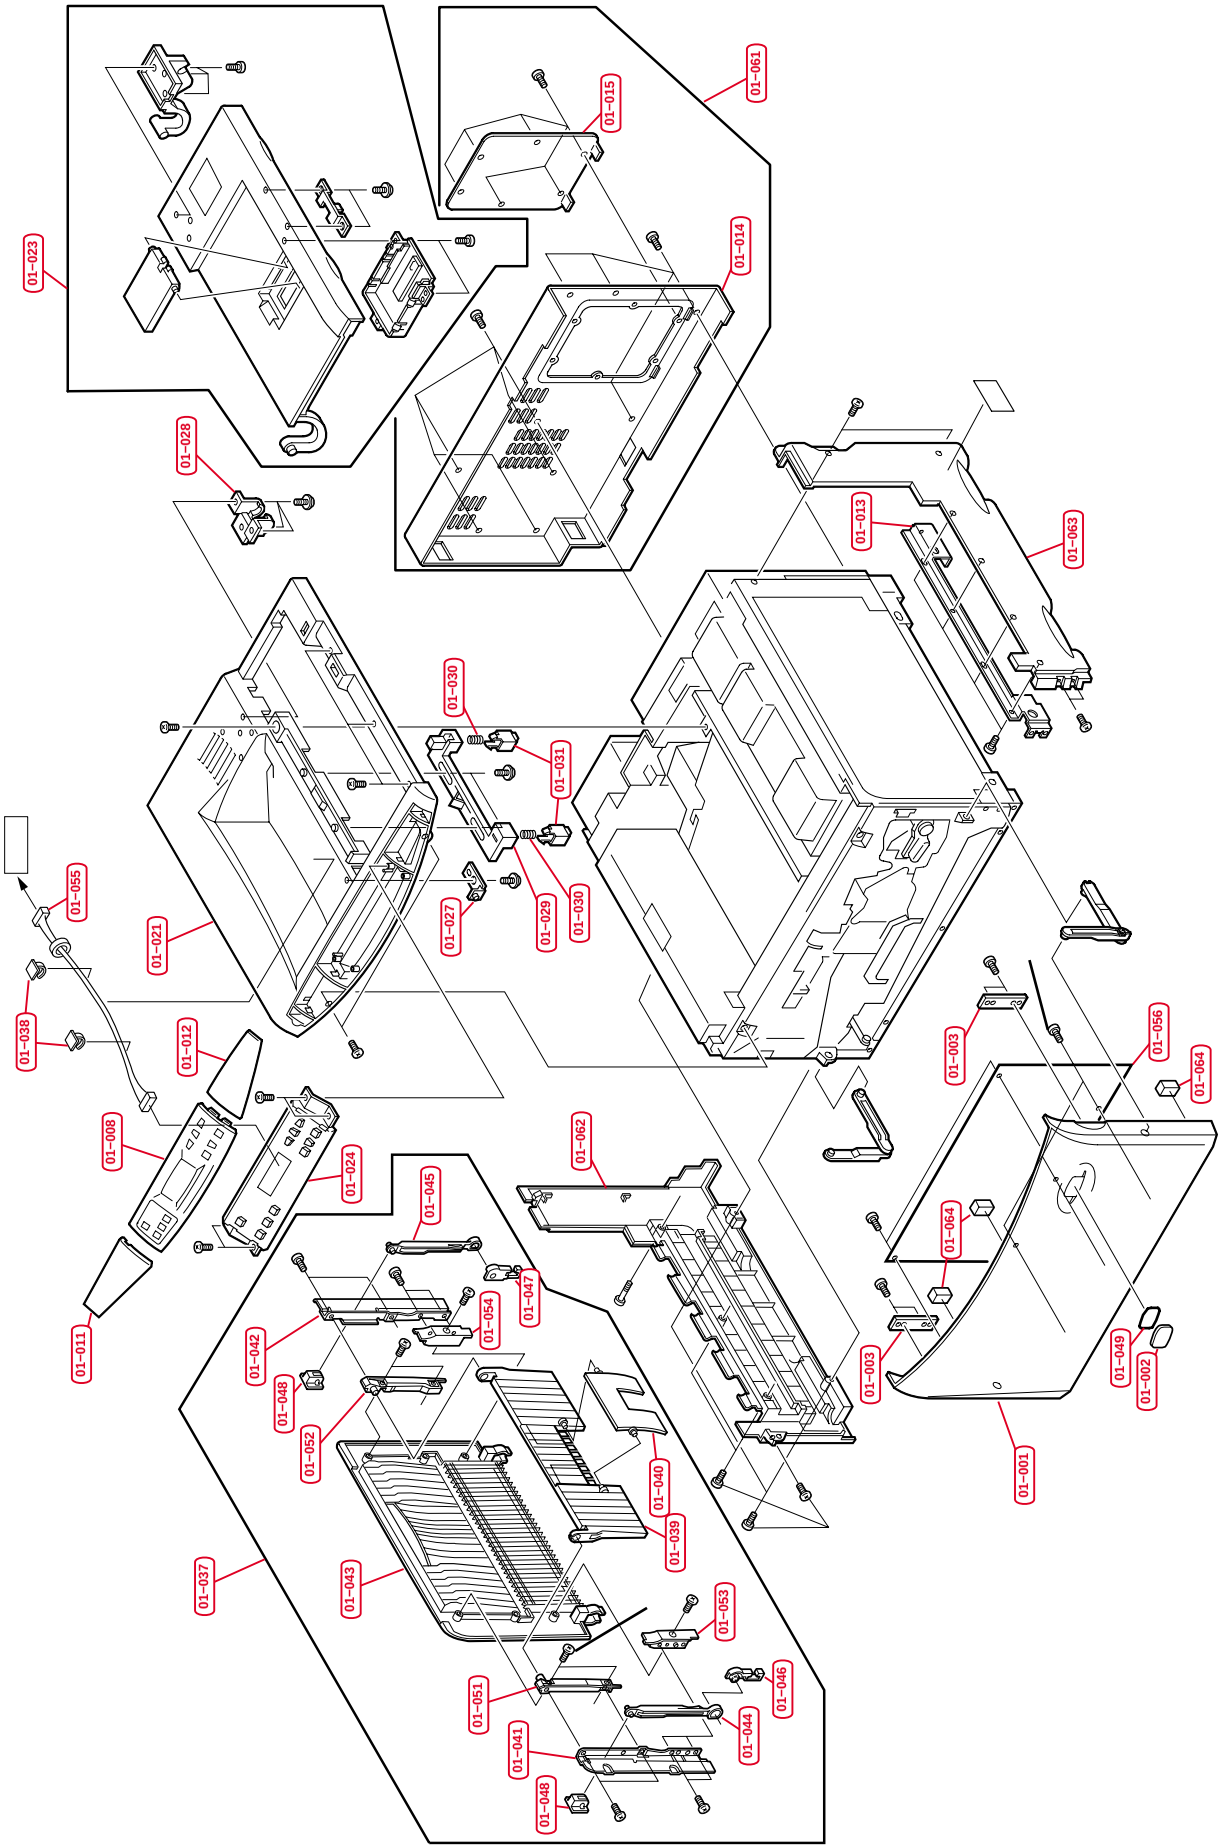


Fig.1 − Enclosures

Ref No.	Part Code	Description	Quantity
01−001	**5MVB996SH005**	**Cover Front**	**1**
01−002	5MVS428AM001	Plate Ecosys (E)	1
01−002	5MVS428AM002	Plate Ecosys (U)	1
01−003	5MMS627SW001	Plate Magnet Catch	2
01−004	**5AAY7000E*54**	**Hinge Front L Assy**	**1**
01−004	**5AAY7000E*55**	**Hinge Front R Assy**	**1**
01−008	5AAY70+E**08	Cover Panel E Assy	1
01−008	5AAY70+E**09	Cover Panel G Assy	1
01−008	5AAY70+E**10	Cover Panel F Assy	1
01−008	5AAY70+E**12	Cover Panel I Assy	1
01−008	5AAY70+E**13	Cover Panel D Assy	1
01−011	5MVX755SH006	Cover Panel L	1
01−012	5MVX755SH002	Cover Panel R	1
01−013	5AAVBRCKT057	BKT Right Assy	1
01−014	5MMB986SM004	Cover Rear	1
01−015	5MML782SM001	Cover Main	1
01−021	**5MVX997SH001**	**Cover Top**	**1**
01−023	5AAVCOVER225	Lid Top Assy	1
01−024	**5AAY9000E*13**	**Key Board Assy**	**1**
01−026	5EZNF2402501*03	Fan Motor	1
01−027	5MVX421DH003	Lock Lid Top F	1
01−028	5MVX643DH001	Lock Lid Top R	1
01−029	5MVX853DG001	Level Top	1
01−030	5MMW465LD001	Spring Cont A	2
01−031	5MVB322DB001	Push Contain	2
01−037	**5AAVTRAY*012**	**Tray FU Assy**	**1**
01−038	5MMX321SM001	Cord Keep	2
01−039	5MVX872SW001	Tray FU B (01−037)	1
01−040	5MVX761SW001	Tray FU C (01−037)	1
01−041	5MMX842SN002	Plate Tray F (01−037)	1
01−042	5MMX842SN003	Plate Tray R (01−037)	1
01−043	5MVX883SW001	Tray FU A (01−037)	1
01−044	5MVX721CW001	Link FU F (01−037)	1
01−045	5MVX721CW002	Link FU R (01−037)	1
01−046	5MVX521SW007	Hinge FU F (01−037)	1
01−047	5MVX521SW008	Hinge FU R (01−037)	1
01−048	5MDX321DN011	Slider FU (01−037)	2
01−049	5MVS422XF002	Seal Ecosys	1
01−051	5MVB722SW001	Bkt Tray FA (01−037)	1
01−052	5MVB722SW002	Bkt Tray RA (01−037)	1
01−053	5MVB622SW002	Bkt Tray FB (01−037)	1
01−054	5MVB622SW003	Bkt Tray RB (01−037)	1
01−055	5AACCNQS8GEA	Conn Cord Assy	1
01−056	5KKT700E*QX	Sheet Ope. Manual	1
01−056	5KKT700J*QX	Sheet Ope. Manual Japan	1

Ref No.	Part Code	Description	Quantity
01−061	5AAVCOVER188	Cover Rear Assy	1
01−062	5MVX985SW001	Cover Left	1
01−063	5MVB984SW005	Cover Right	1
01−064	5MVQ222RB005	Rubber Front	2

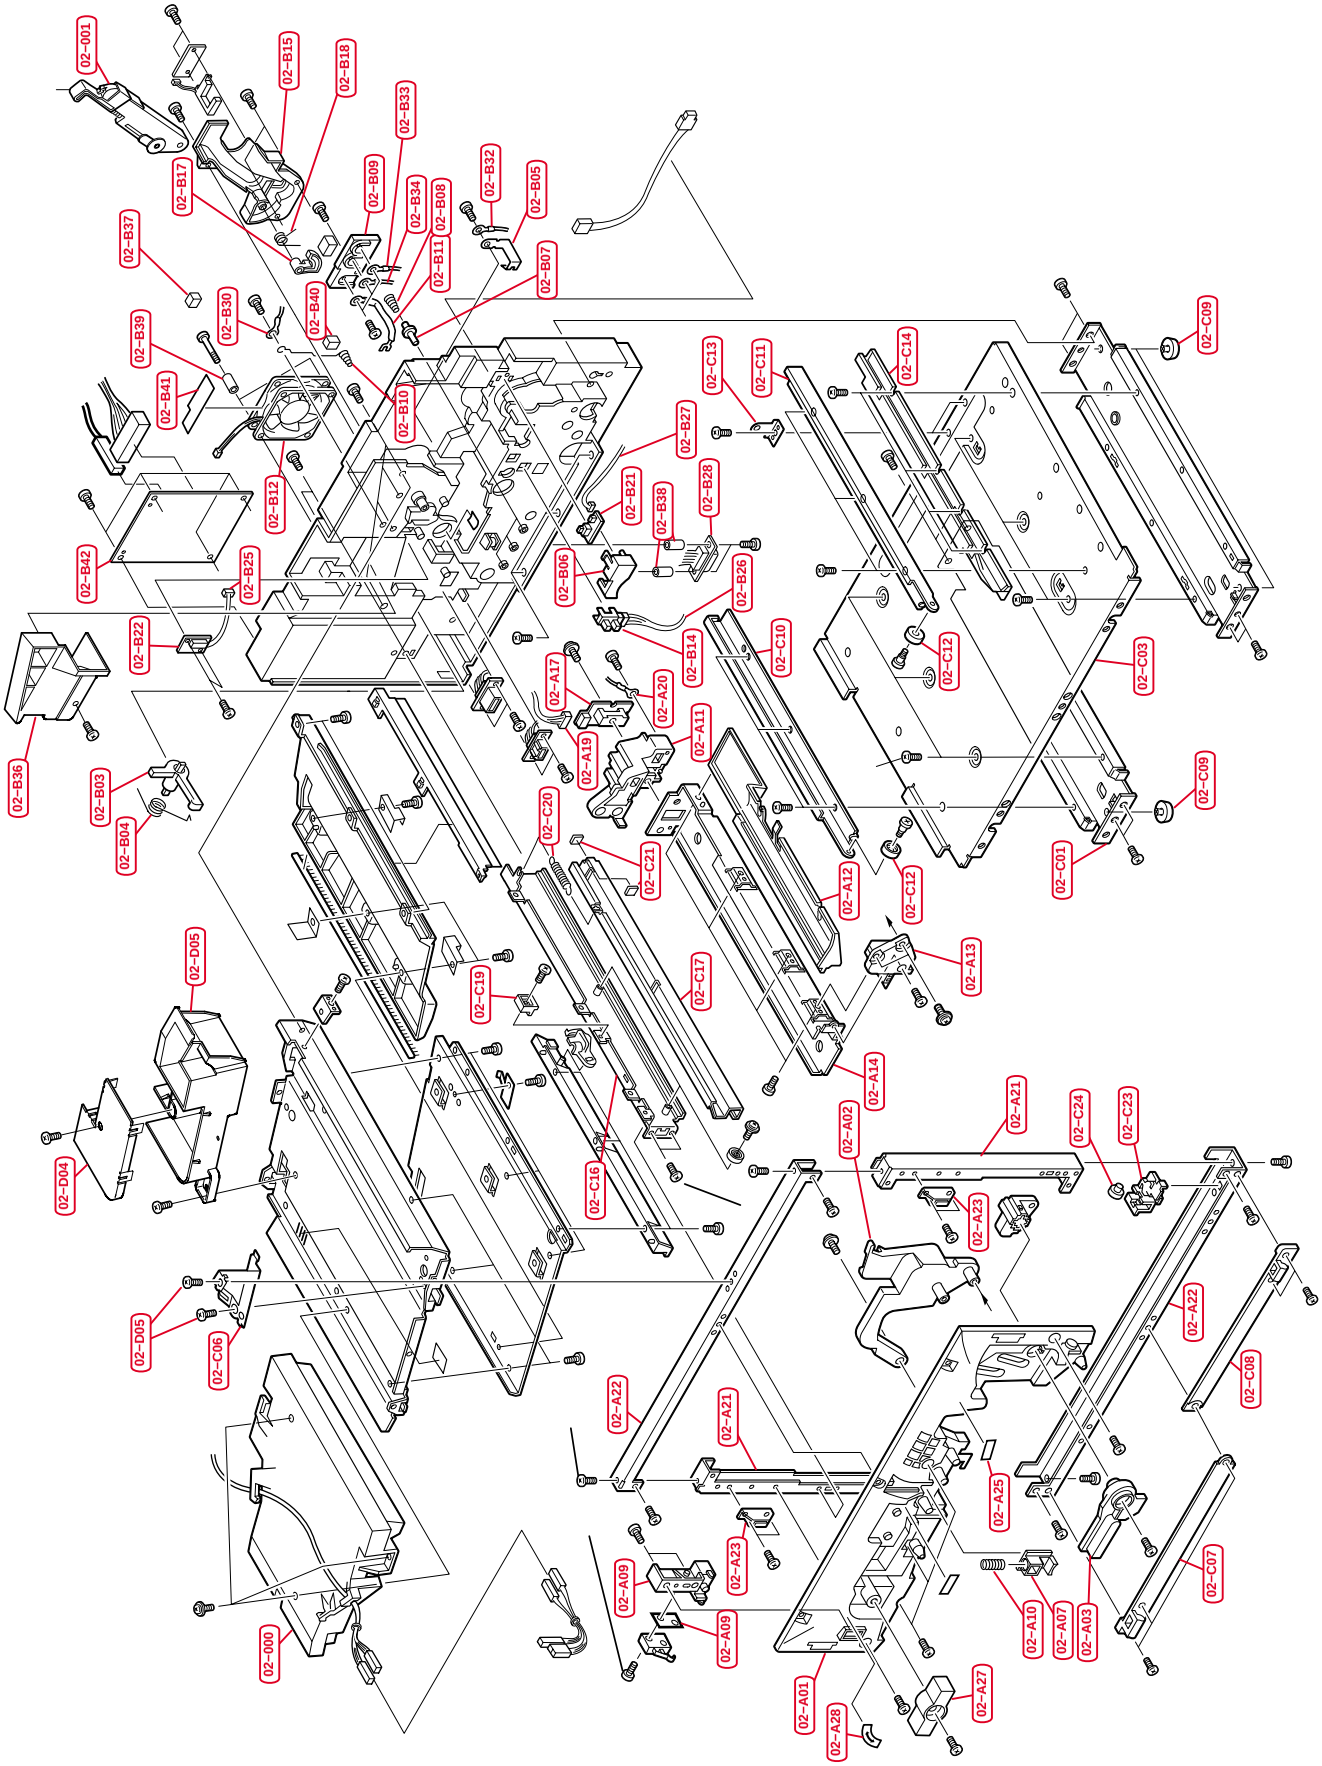

02-001
02-B15
02-B18
02-B33
02-B17
02-B09
02-B34
02-B08
02-B32
02-B05
02-B37
02-B11
02-B07
02-B30
02-B40
02-B39
02-B41
02-B10
02-C09
02-C13
02-C11
02-C14
02-B27
02-B12
02-B21
02-B38
02-B28
02-B42
02-B25
02-B06
02-B26
02-B22
02-C10
02-C12
02-C03
02-B14
02-A17
02-A20
02-B36
02-A19
02-A11
02-B03
02-C09
02-C20
02-B04
02-C21
02-C01
02-A12
02-C12
02-D05
02-C19
02-C17
02-A13
02-A14
02-A21
02-A02
02-C24
02-C23
02-D04
02-C16
02-A23
02-A22
02-D05
02-C06
02-C08
02-A22
02-A21
02-A25
02-A09
02-A23
02-C07
02-A10
02-A07
02-A03
02-000
02-A09
02-A01
02-A27
02-A28

Fig.2 − Frames

Ref No.	Part Code	Description	Quantity
02−000	**LK−30**	**Scanner Unit FS−7000+ (5PLPZYKAPKE)**	**1**
02−000	**LK−35**	**Scanner Unit FS−9000 (5AAY9000E*08)**	**1**
02−001	**5AAY7000E*68**	**Waste Toner Conveyer**	**1**
02−003	5AACCNQA9GEA	Conn Cord Assy	
02−A01	5MVB976CB002	Frame Front	
02−A02	5MVF775SB001	Arm Lever DLP	
02−A03	5MVN754SG001	Lever DLP A	
02−A06	5MVN240DG001	Lever Drum	
02−A07	5MVX432DB008	Lock Drum	
02−A09	5MVX643SB008	Bkt PWB	
02−A10	5MMW466SY001	Spring Lock Drum	
02−A11	5MVX766SB014	Guide DLP rear	
02−A12	5MVL854SB002	Tray Rail	
02−A13	5MVL655SB001	Rail DLP F	
02−A14	5MMB965SD001	Rail DLP	
02−A17	5AAPRIFC1017AH	Dvrly PWB Assy	
02−A19	5AACCNQC9GEA	Conn Cord Assy	
02−A20	5AACCNQE8GEA	Conn Cord Assy	
02−A21	5MMC834SD001	Plate Frame Side	
02−A22	5MMC933SD001	Plate Frame	
02−A23	5AAVMGNET005	Magnet Catcher	
02−A25	5MWL421WN038	Label DV35F	
02−A27	5MVB622DG001	Lever Lock Feed	
02−A28	5MML6220WN02	Label Frame Front	
02−B03	5MVX643DB003	Actuator Joint	
02−B04	5MMW176LD001	Spring Joint	
02−B05	5MMP433LD002	Plate Bias	
02−B06	5MVB533SB005	Cover PWB Cont	
02−B07	5MMM311SZ001	Pin HV Contact	
02−B08	5MMW311LD003	Spring HV Contact	
02−B09	5MVB632SB009	Cover Contact	
02−B10	5MMW605LD002	Spring Main A	
02−B11	5AAXRD016GEA	High Meg R Assy	
02−B12	**5ENZNF2403202*01**	**Fan Motor**	
02−B14	**5ENXGP1A73A**01**	**Photo Sensor**	
02−B15	5MVX874SB003	Case Belt Guide	
02−B16	**5AAY7000E*46**	**Tower Sensor Assy**	
02−B17	5MVX552SB006	Interrupt Sensor	
02−B18	5MMW172SD001	SP Interrupt Sensor	
02−B19		Bracket Sensor Tower	
02−B21	**5AAPRZZC1048BH**	**Tbottle PWB KP−554**	
02−B22	**5AAPRIFC1016AH**	**Drrly PWB KP−558**	
02−B23	5AAPRIFR2004AH	PWB ASSY Con1	

Ref No.	Part Code	Description	Quantity
02−B24	5AACCNQA8GEA	Conn Cord Assy	
02−B25	5AACCNQT1GEA	Conn Cord Assy	
02−B26	5AACCNQC6GEA	Conn Cord Assy	
02−B27	5AACCNQC7GEA	Conn Cord Assy	
02−B28	5AACCNQD0GEA	Conn Cord Assy	
02−B29	5AACCNQD1GEA	Conn Cord Assy	
02−B30	5AACCNQD2GEA	Conn Cord Assy	
02−B31	5AACCNQD3GEA	Conn Cord Assy	
02−B32	5AACCNQD4GEA	Conn Cord Assy	
02−B33	5AACCNQD5GEA	Conn Cord Assy	
02−B34	5AACCNQD6GEA	Conn Cord Assy	
02−B36	5MVU666SB001	Duct Drum	
02−B37	5MVQ432RB003	Cord Press	
02−B38	5MMM140SZ011	Collar Spacer	
02−B39	5MMM340SZ002	Collar Spacer	
02−B40	5MVQ211EF001	Sponge Main	
02−B41	5MVS632KF009	Sheet Fan A	
02−B42	5AAXTR037VDB	Trans Assy FS−7000+	1
02−B42	5AAXTR041VDA	Trans Assy FS−9000	1
02−B44	5AAPRSSC1016AH	Hton PWB Assy	
02−C01	5MMC962SD001	Base Stay L	
02−C02	5MMC962SD002	Base Stay R	
02−C03	5MMB993SD001	Plate Base Lid	
02−C06	5MMX653LD002	Plate Earth Front	
02−C07	5MVX832SH006	Cover Front Low L	
02−C08	5MVX832SH007	Cover Front Low R	
02−C09	**5MVM184NB001**	**Foot**	**4**
02−C10	5MMU932SD003	Rail Bottom L	
02−C11	5MMU932SD004	Rail Bottom R	
02−C12	5MMM165SN002	Roller DU	
02−C13	5MML332LD002	Plate FG Drive	
02−C14	5MVX822CB005	Rail Base R	
02−C16	5MMU963SD001	Rail Base L	
02−C17	5MMX952SD003	Rail Middle	
02−C18	5MVM177DN007	Pulley Rail D	
02−C19	5MVX222DN002	Holder Rail B	
02−C20	5MMW661LD003	Spring Rail L	
02−C21	5MVS111PW001	Pad Fuser	
02−C23	5MVX432SB012	Bracket Pulley B	
02−C24	5MVM176DN020	Pullley Rail B	
02−C25	5MVB666SB009	Duct Top Cover	
02−D04	5MVB762SB010	Duct DLP Up	
02−D05	5MVB876SB006	Duct Fuser Bottom	

Ref No.	Part Code	Description	Quantity
02−D11	5AAPRIFC1019AH	APCRLY PWB KP−570	

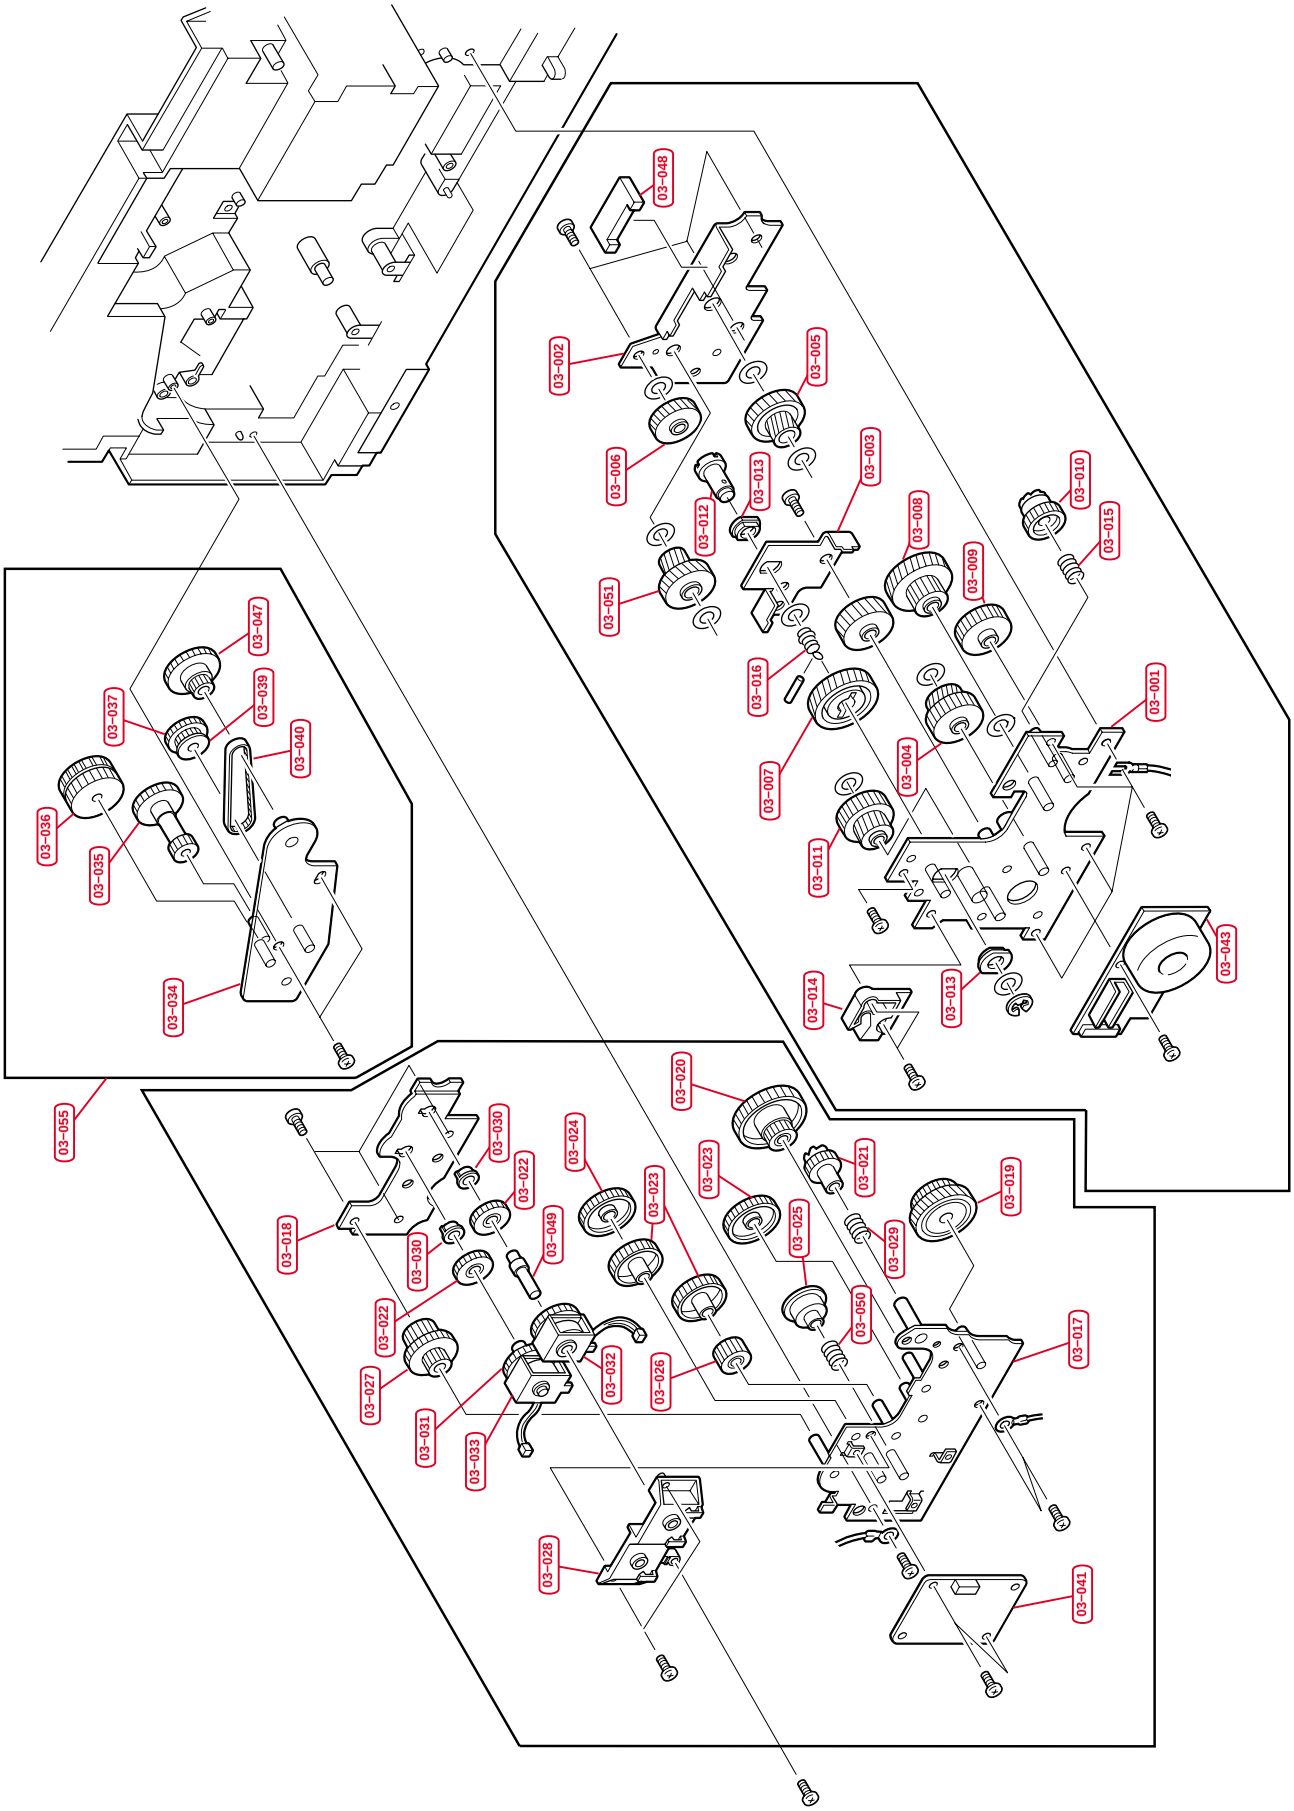

03-048
03-002
03-005
03-006
03-013
03-003
03-012
03-010
03-008
03-015
03-051
03-009
03-016
03-001
03-004
03-007
03-011
03-043
03-014
03-013
03-047
03-037
03-039
03-040
03-036
03-035
03-034
03-055
03-020
03-030
03-024
03-021
03-023
03-019
03-018
03-022
03-049
03-025
03-029
03-030
03-050
03-017
03-022
03-027
03-032
03-026
03-031
03-033
03-028
03-041

Fig.3 − Drive

Ref No.	Part Code	Description	Quantity
03−000	**DR−35A**	**Drive Assy A (5AAY9000E*22)**	**1**
03−000	**DR−35B**	**Drive Assy B (5AAY9000E*23)**	**1**
03−000	**DR−30C**	**Drive Assy C FS−7000+(5AAY7000E*37)**	**1**
03−000	**DR−35C**	**Drive Assy C FS−9000(5AAY9000E*24)**	**1**
03−000	**5AAY70+E**04**	**Drive Unit FS−7000+**	**1**
03−000	**5AAY9000E*06**	**Drive Unit FS−9000**	**1**
03−001	5MMX873SD005	Plate Drive Rear	
03−002	5MML776SD002	Plate Drive Front	
03−003	5MMU266SD002	Plate Drive Mid	
03−004	5MVG168DN011	Gear Z72H−Z27H	
03−005	5AAVGEAR*034	Gear Z46H−Z22H	
03−006	5MVG158DN018	Gear Z14H	
03−007	5MVG169DN029	GearZ55H	
03−008	5MVG169DN018	GearZ55H−Z27S	
03−009	5MVG158DN019	GearZ45S A	
03−010	5MVG148DN020	Gear Joint Z31S	
03−011	5MVG169DN014	GearZ76H−Z35H	
03−012	5MMT376LD002	Joint Drum	
03−013	5MMM177CX001	Bush Drum Joint	
03−014	5MVX441DB001	Joint DLP	
03−015	5MMW261LD020	Spring Joint Unit	
03−016	5MMW161LD031	Spring Earth DD	
03−017	5MMX773SD001	Plate Drive Clutch	
03−018	5MMS767SD004	Plate Cover Gear	
03−019	5MVG169DN020	Gear Z56H−Z37S	
03−020	5MVG169DN021	Gear Z53S−Z23S	
03−021	5MVG138DN028	Gear Joint Z28S	
03−022	5MVG148DN021	Gear Clutch Z32S	
03−023	5MVG158DN020	Gear Z45S B	
03−024	5MVG159DN008	Gear Z50S−Z24S	
03−025	5MVG138DN029	Gear Joint Z26S	
03−026	5MVG138DN030	Gear Z24S	
03−027	5MVG158DN022	Gear Z30S−Z43S−Z17S	
03−028	5MVC463DN001	Holder Clutch	
03−029	5MMW261LD020	Spring Joint Unit	
03−030	5MVM176DB008	Bushing Stop	
03−031	5MMT565SN003	Shaft Clutch F	
03−032	**5EYYAGAAK01**01**	**Clutch Regist**	
03−033	**5EYYAFAAM01**01**	**Clutch Feed**	
03−034	5MMX766SD004	Plate D−Container	
03−035	5MVG138DN031	Gear Z30S−Z20S	
03−036	5MVG158DN021	Gear Z45S−Z22S	
03−037	5MVG048DN003	Gear Z33S−P36	
03−039	5MVF182DN001	Cover Pulley	

Ref No.	Part Code	Description	Quantity
03−040	5MVM190RB023	Belt Drive Tower	
03−041	**5AAPRIFC1023AH**	**Con2 PWB KP−599**	
03−043	**5AAXMT029GEA**	**Main Motor**	
03−047	5MVG048DN004	Gear Z36S−P20	
03−048	5MVB541RH001	Seal Sencor	
03−049	5MMT665SN002	Shaft Clutch R	
03−050	5MMW261SD006	Spring Joint	
03−051	5AAVGEAR*033	Gear Z37H−Z22H Assy	
03−055	5AAY7000E*37	Drive C Assy	1

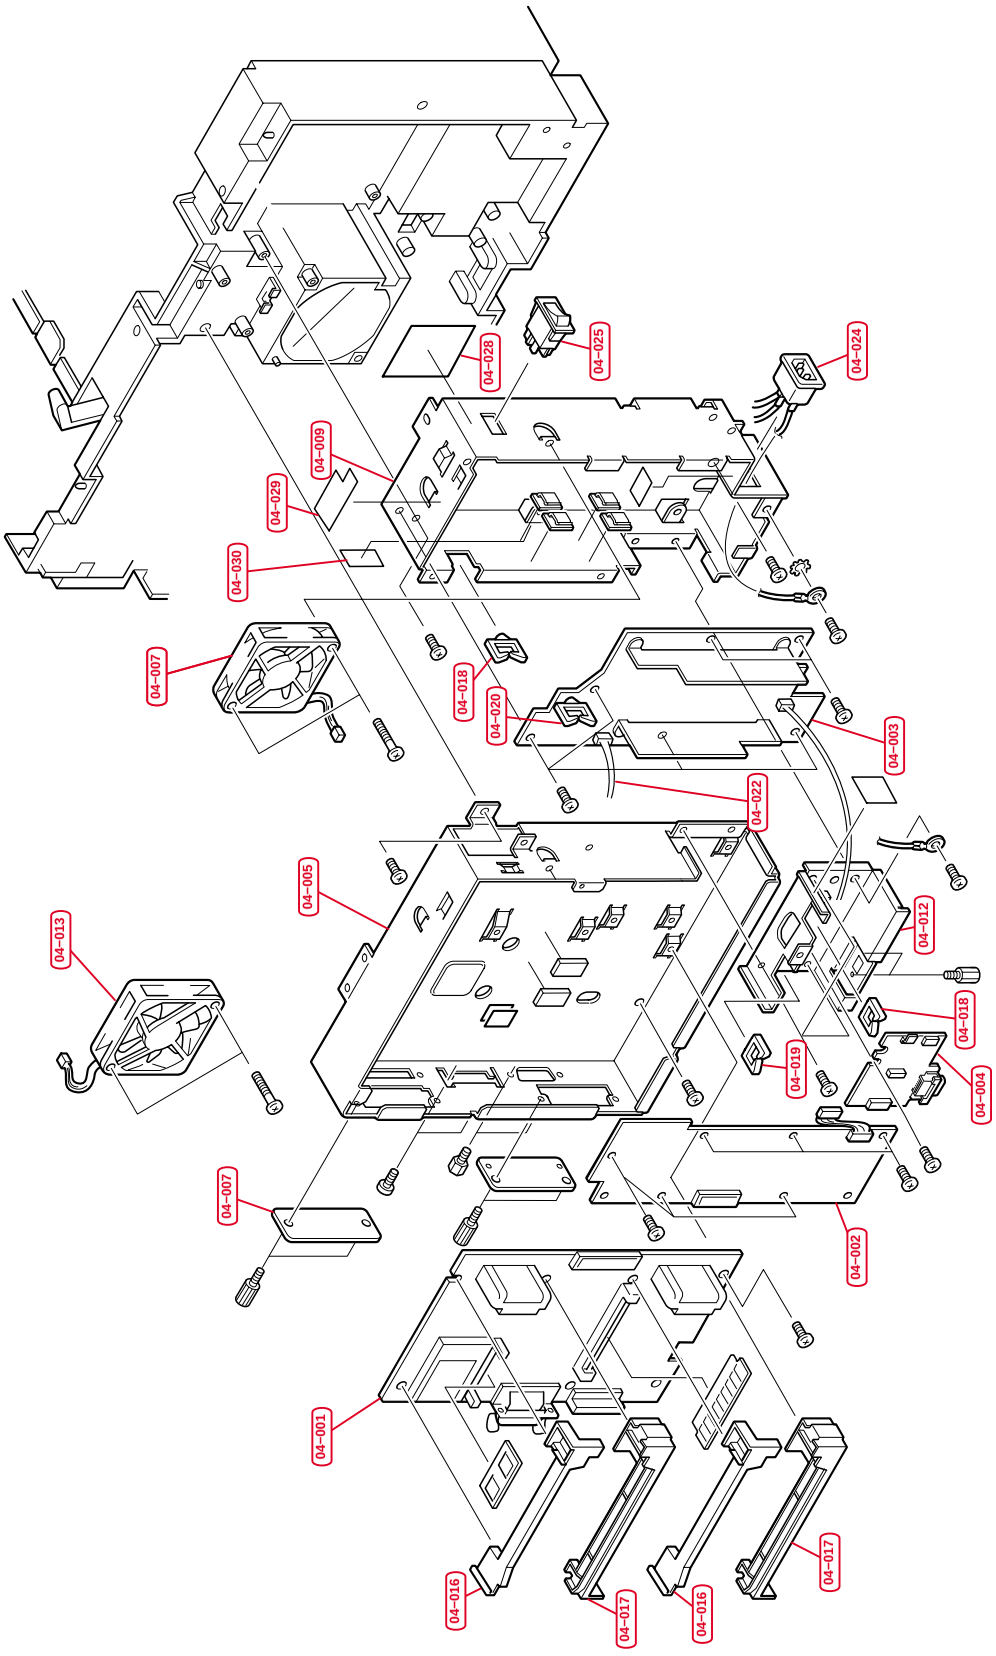


Fig.4 − Controller

Ref No.	Part Code	Description	Quantity
04−000	**5AAPRMEG401QH**	**DIMM PWB Assy KP−537A**	**1**
04−001	**5AAPRLGG4031AH**	**Main PWB Assy KP−536 Euro USA**	**1**
04−002	**5AAPRCZG4009AH**	**Engine PWB Assy FS−9000**	**1**
04−002	**5AAPRCZG4009BH**	**Engine PWB Assy FS−7000+**	**1**
04−003	**5AAEZ7000E*2**	**Switching Regulator**	**1**
04−003	**5AAEZ7000A*2**	**Switching Regulator (U)**	**1**
04−004	**5AAPRIFR2009AH**	**Con 3 PWB Assy KP−568**	**1**
04−005	5MMB886SB012	Cont Box	
04−006		Rail op Board	
04−007	5MMS636SD009	Plate Option	
04−009	5MMB876SD002	Shield Case	
04−011	**5AAPRLGG4013AH**	**PWB Assy FS−7000+**	**1**
04−011	**5AAPRLGG4032AH**	**PWB Assy FS−9000**	**1**
04−012	5MMC765SD001	Plate Con c	
04−013	5EZNF2402501*03	Fan Motor Main cont	
04−014	5EZNF2403004*01	Fan Motor Power supply	
04−016	5MVB743SL001	Rail Options L	
04−017	5MVB743SL002	Rail Options R	
04−018	5MVC331NN001	Edging Saddle	
04−019	5MVC441NN001	Edging Saddle	
04−020	5MVX321NN023	Locking Wire Saddle	
04−022	5AACCNQB7GEA	Conn Cord Assy S02063	
04−024	5AACCNQC5GEA	Conn Cord Assy S02071	
04−025	5ESC020205***01	See−saw SW	
04−028	5MVS662KF006	Sheet Cont E	
04−029	5MVS652KF005	Sheet Cont B	
04−030	5MVS332KF003	Sheet Cont C	

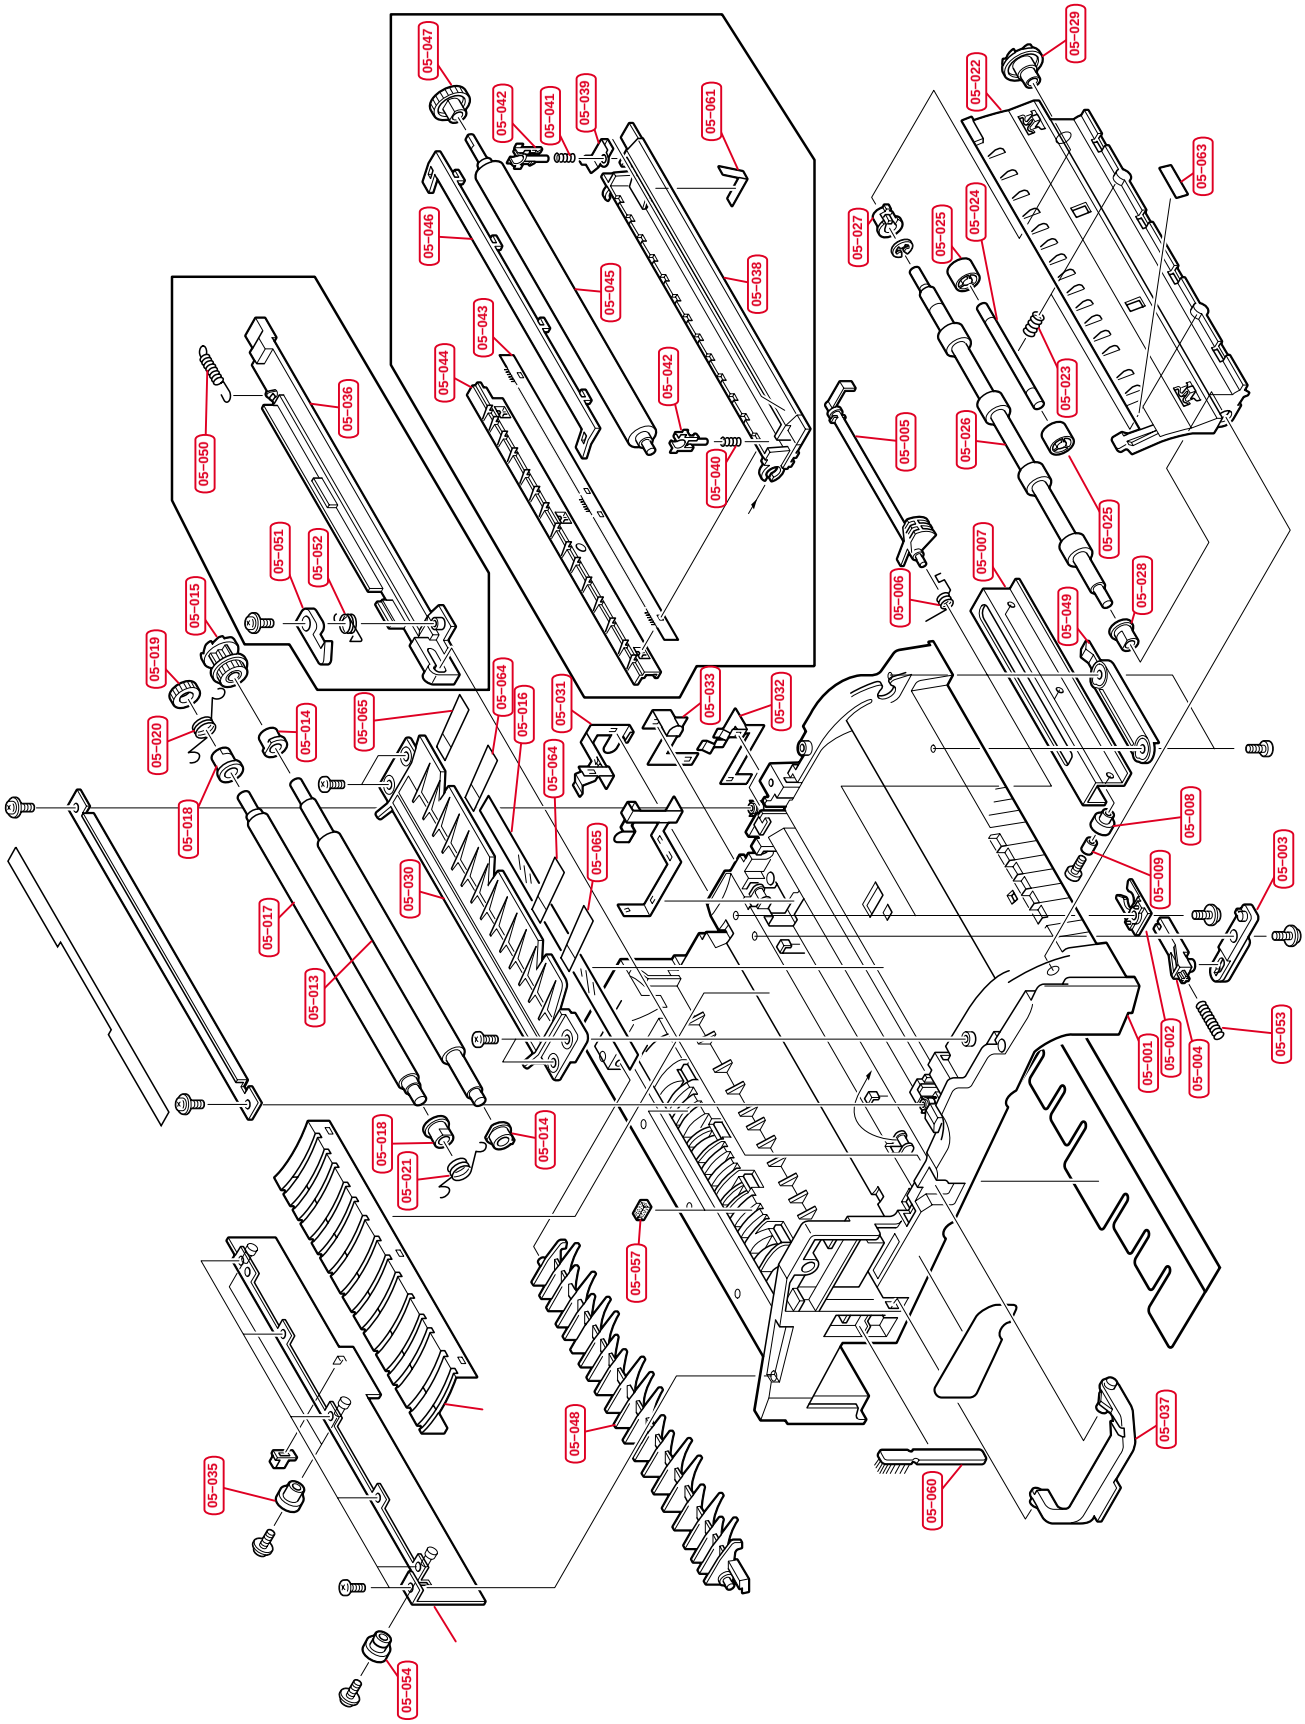


Fig.5 − Feed Transfer Unit

Ref No.	Part Code	Description	Quantity
05−000	**FE−35**	**Feed Trans Unit FS−9000(5PLPZ1RAPKX)**	**1**
05−000	**FE−33**	**Feed Trans Unit FS−7000+(5AAY70+E**06)**	**1**
05−000	**TR−35**	**Transfer Unit (5PLPZ6NAEKX)**	**1**
05−001	5MVX997XB002	Case Low	
05−002	5MVX321DN010	Latch Rail	
05−003	5MVX621DB003	Plate Plate Lock A	
05−004	5MVX511DB003	Plate Lock B	
05−005	**5MVX742SB006**	**Actuator Regist**	
05−006	5MMW161LD030	Spring Actuator RE	
05−007	5MMC843SD002	Rail Case R	
05−008	5MVM274DN001	Pulley Rail C	
05−009	5MMM140SZ009	Collar Spacer	
05−013	5MMT876SN050	Regist Low Assy with 16	
05−014	5MMM121CX001	Bush Drum	
05−015	5MVG147DB020	Gear Joint Z32	
05−016	5MVS822KF010	Sheet Regist	
05−017	5MMT876SN049	Roller Regist up	
05−018	5MMM276CJ001	Metal Bush Regist	
05−019	5MVG137DB064	Gear Regist Z24	
05−020	5MMW172SZ001	Spring Regist A	
05−021	5MMW172SD004	Spring Regist B	
05−022	5MVX876SC001	Guide Paper	
05−023	5MMW261LD018	Spring Middle	
05−024	5MMT743SN001	Shaft Pulley	
05−025	5MVM276DN005	Pulley Middle	
05−026	**5MMT876SN064**	**Roller Middle**	
05−027	5MVM276DN006	Bush B	
05−028	5MVM276DB012	Bush C	
05−029	**5MVM286DB002**	**Latch Joint**	
05−030	5MVS868SC001	Guide Paper B	
05−031	5MMX654LD003	Plate Regist	
05−032	5MMX662LD003	Plate TC	
05−033	5MMX662LD004	Plate Discharger	
05−035	5MMU863SD002	Plate Paper Guide	
05−036	5MVX822SG001	Plate Release	
05−037	**5MVX752SG001**	**Handle Case**	
05−038	5MVB864SB016	Guide TC	
05−039	5MMX321LD024	Plate Contact TC	
05−040	5MMW354LD003	Spring TC Roll	
05−041	5MMW255LD002	Spring Bush	
05−042	5MVX322DB018	Bush Transfer B	
05−043	5MMS821LD010	Brush DC Charge	
05−044	5MMVX822CB004	Holder DC Charge	
05−045	5MMT886SN013	Roller Transfer	

Ref No.	Part Code	Description	Quantity
05−046	5MVX852CB002	Guide Chute Low	
05−047	5MVG138DB062	Gear TC Z26	
05−048	5MVX863CB002	Guide Change DU	
05−049	5MVX731DN001	Holder Rail A	
05−050	5MMW461SD002	Spring Release B	
05−051	5MVX421DB011	Holder Release	
05−052	5MMW161SD006	Spring Release C	
05−053	5MMW461SD001	Spring Release A	
05−054	5MML962SD002	Rail Case L	
05−057	5MVS118YW002	Pad Cushion	
05−060	5AAVBRUSH035	Brush Clean Assy	
05−061	5MMS312AX001	Sheet Earth TC	
05−062	5MVVL111WN12	Label Release A	
05−063	5MVVL311WN30	Label Release B	
05−064	5MVS612KF009	Sheet Guide Paper A	
05−065	5MVS622KF005	Sheet Guide Paper B	

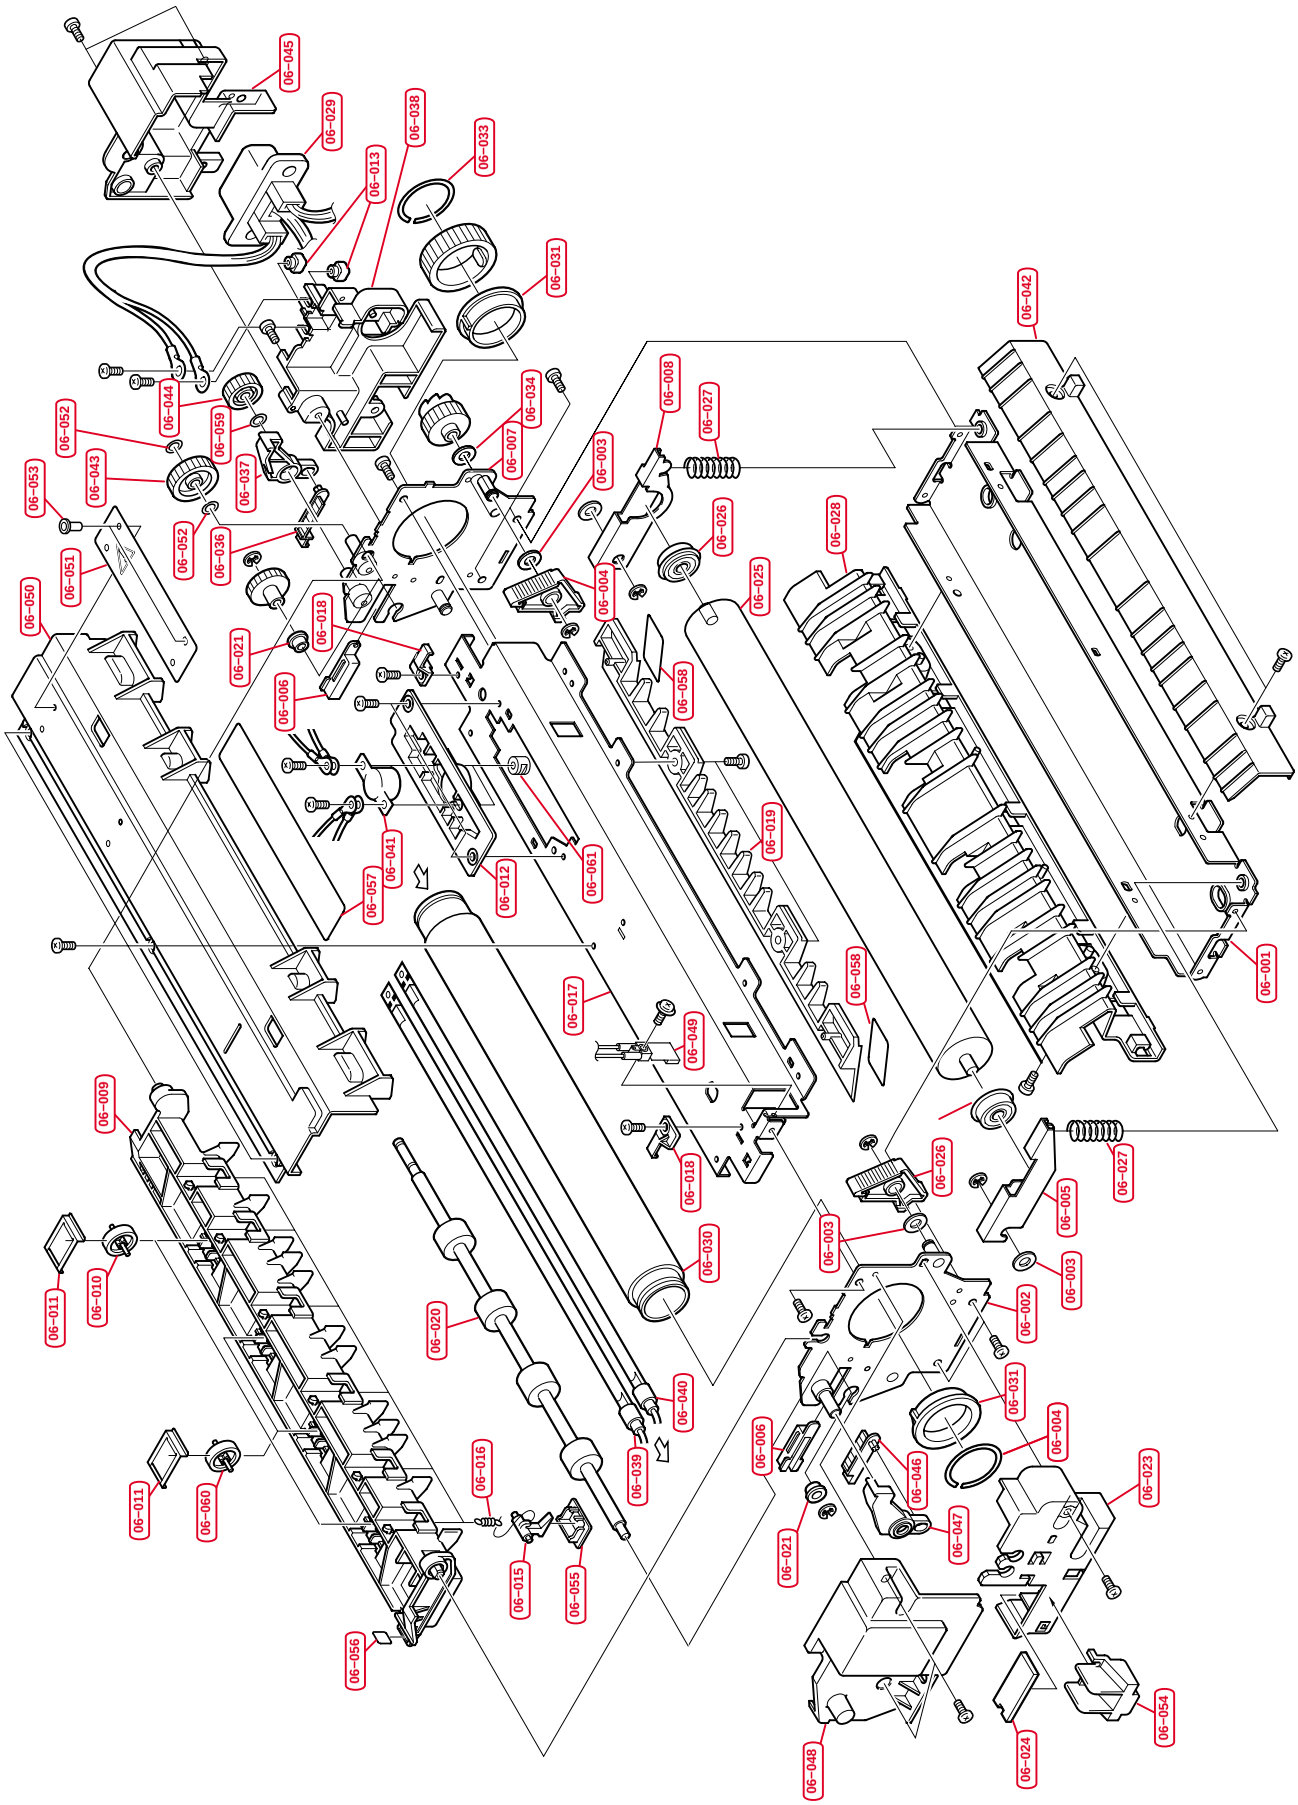

06-045
06-029
06-038
06-033
06-013
06-031
06-042
06-044
06-034
06-008
06-027
06-059
06-007
06-003
06-052
06-043
06-037
06-026
06-028
06-053
06-052
06-036
06-004
06-025
06-051
06-050
06-018
06-021
06-058
06-006
06-019
06-041
06-012
06-061
06-057
06-001
06-017
06-058
06-049
06-009
06-018
06-026
06-027
06-005
06-003
06-030
06-003
06-011
06-010
06-002
06-020
06-031
06-040
06-004
06-006
06-046
06-016
06-039
06-023
06-011
06-060
06-021
06-047
06-015
06-055
06-056
06-048
06-024
06-054

Fig.6 − Fuser

Ref No.	Part Code	Description	Quantity
06−000	**FK−30**	**Fuser Unit FS−7000+(E)(5PLPZYPAPKE)**	**1**
06−000	**FK−30**	**Fuser Unit (U)(5PLPZYQAAK1)**	**1**
06−000	**FK−35**	**Fuser Unit FS−9000 (E)(5PLPZ9MAEKE)**	**1**
06−000	**FK−35**	**Fuser Unit FS−9000 (U)(5PLPZ0NAAKI)**	**1**
06−001	5MMT880AX001	Rollller Heat	
06−002	5MVG169XN001	Gear Z55	
06−003	5MVM910XN001	Bush Heat	
06−004	5MMW486SJ001	Ring Stop	
06−005	5MMT886SN014	Roller Press	
06−006	5MMT876SN051	Roller Fuser	
06−007	5MVG138DN032	Gear Z29S	
06−008	5MMM176CJ005	Bushing SBK	
06−009	5MVG148XN006	Gear Fusing Z33	
06−010	5MVG148XN005	Gear Z36	
06−011	5MVG137DB025	Gear Mfeed Z25	
06−012	5MBELF1060ZZ	Ball Bearing	
06−013	**5MVX222XN002**	**Separator**	
06−014	5MVB842KB001	Cover Separator	
06−015	5MMW163LD005	Spring Separator	
06−016	5MVB975KB001	Frame Fuser Low	
06−017	5MVB875KB001	Frame Fuser UP	
06−018	5MVX865KB001	Cover Fuser	
06−019	5MMT622SN003	Shaft Exit	
06−020	5MVM176DB010	Pulley Exit	
06−021	5MMW255LD006	Spring Exit	
06−023	5MVB765KB001	Cover Fuser F	
06−024	5MVB766KB001	Cover Fuser B	
06−025	5MVB832KB001	Guide Entrance	
06−026	5MVX665KB001	BKT Fuser	
06−027	5MVQ511SB003	Link Lock	
06−028	5MVX542DG001	Lever Lock F	
06−029	5MVX542DG002	Lever Lock R	
06−030	5MVX321CG001	Lever Release	
06−031	5MMT310SN002	Pin Fuser	
06−033		Spring Lock F	
06−034		Spring Lock R	
06−036	5MMX661SD003	Plate Press R	
06−037	5MMX631CD001	Plate Fuser	
06−038	5MML142CD001	Plug Fuser	
06−039	5MMX543LD002	Plate Earth	
06−040	5MMS845LD001	Plate Fuser Up	
06−041	5MMX544SD002	Plate Fuser Gear	
06−042	**5AAXTM009GEA**	**Thermistor Assy**	
06−043	5EYFFQ19001**01	Thermostat 250V 190C	

Ref No.	Part Code	Description	Quantity
06−044	**5EZPB2412120201**	**Heater Lamp C Euro**	
06−044	**5EZPB1214220201**	**Heater Lamp C USA**	
06−044	**5EZPB1015020301**	**Heater Lamp C Japan**	
06−045	**5EZPB2412120301**	**Heater Lamp S FS−7000+ Euro**	
06−045	**5EZPB2412120402**	**Heater Lamp S FS−9000 Euro**	
06−045	**5EZPB1214220301**	**Heater Lamp S USA**	
06−045	**5EZPB1015020401**	**Heater Lamp S Japan**	
06−046	5MVVL645WN03	Label Caution Fuser	
06−047	5MMK116SZ001	Nut Fuser	
06−048	5MMK116SZ001	Nut Fuser	
06−049	5MMK116SZ001	Nut Fuser	
06−050	5AAPRIFC1015AH	PWB Assy	
06−051	5AACCNQD7GEA	Conn Cord Assy	
06−052	5AACCNQE7GEA	Conn Cord Assy	
06−053	5MVX842KB001	Guide Chute	
06−054	5MMB321LD003	Support Separtor	
06−055	5MVF111DN005	Bush SP	
06−056	5MVS421NF001	Sheet Fuser A	
06−057	5MVS211XG001	Sheet Fuser G	
06−058	5MVVL651WN37	Label Caution C	
06−059	5MBG513060CJ	Gremmet	
06−060	5MVM160XN001	Spacer	
06−061	5MVM160XN001	Poly Washer	

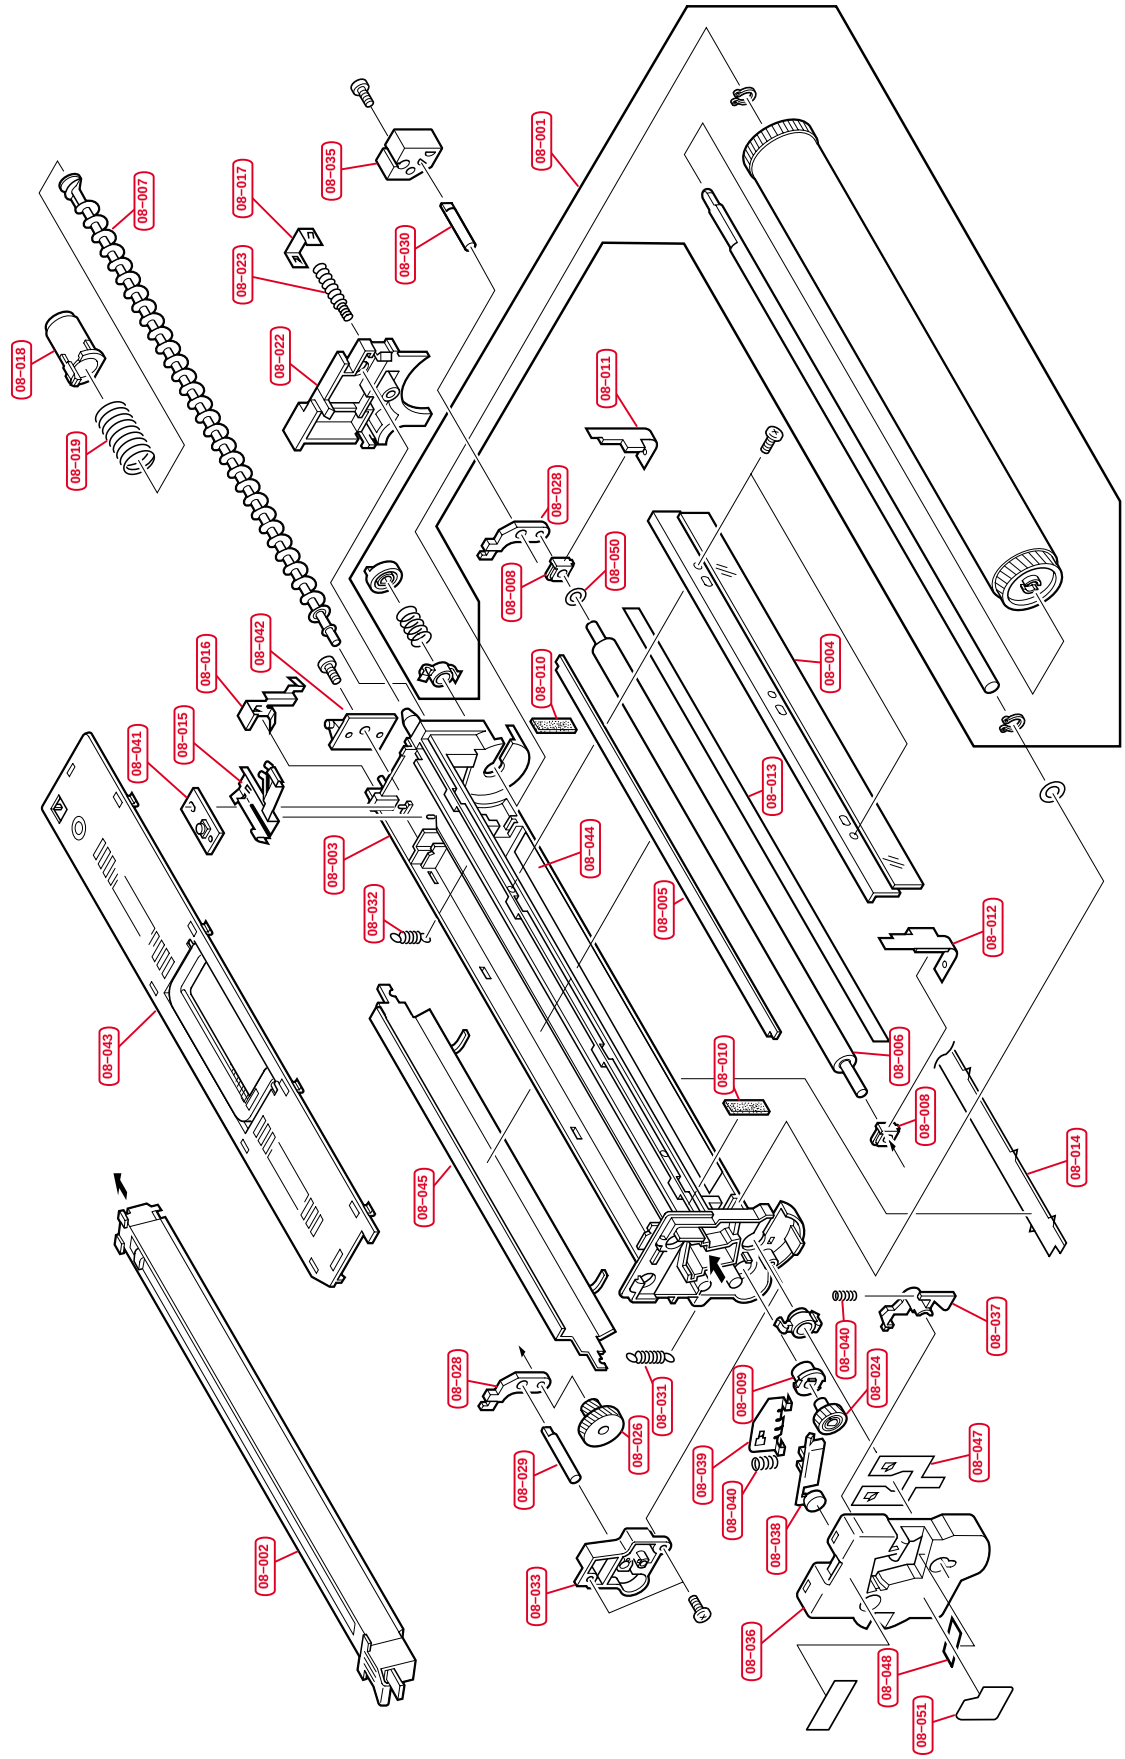


Fig.8 − Drum Unit

Ref No.	Part Code	Description	Quantity
08−000	**DK−33**	**Drum Unit FS−7000+ (5PLPZ0QAPKX)**	**1**
08−000	**DK−35**	**Drum Unit FS−9000 (5PLPZ3NAEKX)**	**1**
08−001		Drum Assy	
08−002	**5AAY9000E*26**	**MCH Assy**	
08−003		Frame Drum	
08−004		Blade Assy	
08−005		Led Assy	
08−006		Roll Clean	
08−007		Screw	
08−008		Bush Clean	
08−009		Bush Screw	
08−010		Seal Blade	
08−011		Seal Drum R	
08−012		Seal Drum F	
08−013		Sheet Drum	
08−014		Sheet Drum Low	
08−015		Plate Zenner A	
08−016		Plate Zenner B	
08−017		Plate MCH U	
08−018		Shutter	
08−019		Spring Shutter	
08−022		Cover Drum Rear	
08−023		Spring MCH	
08−024		Gear Z17H	
08−025		Gear Z16H	
08−026		Gear Z13H	
08−027		Gear Z15H−Z14H	
08−028		Arm Roll Clean	
08−029		Pin Idle A	
08−030		Pin Idle B	
08−031		Spring Roll A	
08−032		Spring Roll B	
08−033		Plate Gear	
08−034		Cover Clean Spring F	
08−035		Cover Clean Spring R	
08−036		Cover Drum Front	
08−037		Lock Cover Drum	
08−038		Lock MCH	
08−039		Plate Cover Holder	
08−040		Sring Lock MCH	
08−041		PWB Assy	
08−042		PWB Assy	
08−043		Drum Cover Up Assy	
08−044		Sheet Clean	

Ref No.	Part Code	Description	Quantity
08−045		Plate Drum Left	
08−046		Heat Seal Drum	
08−047		Plate Drum Front	
08−048		Sheet Drum Front	
08−049		Guide Drum	
08−050		Sheet Guide Drum	
08−051		Label Drum	

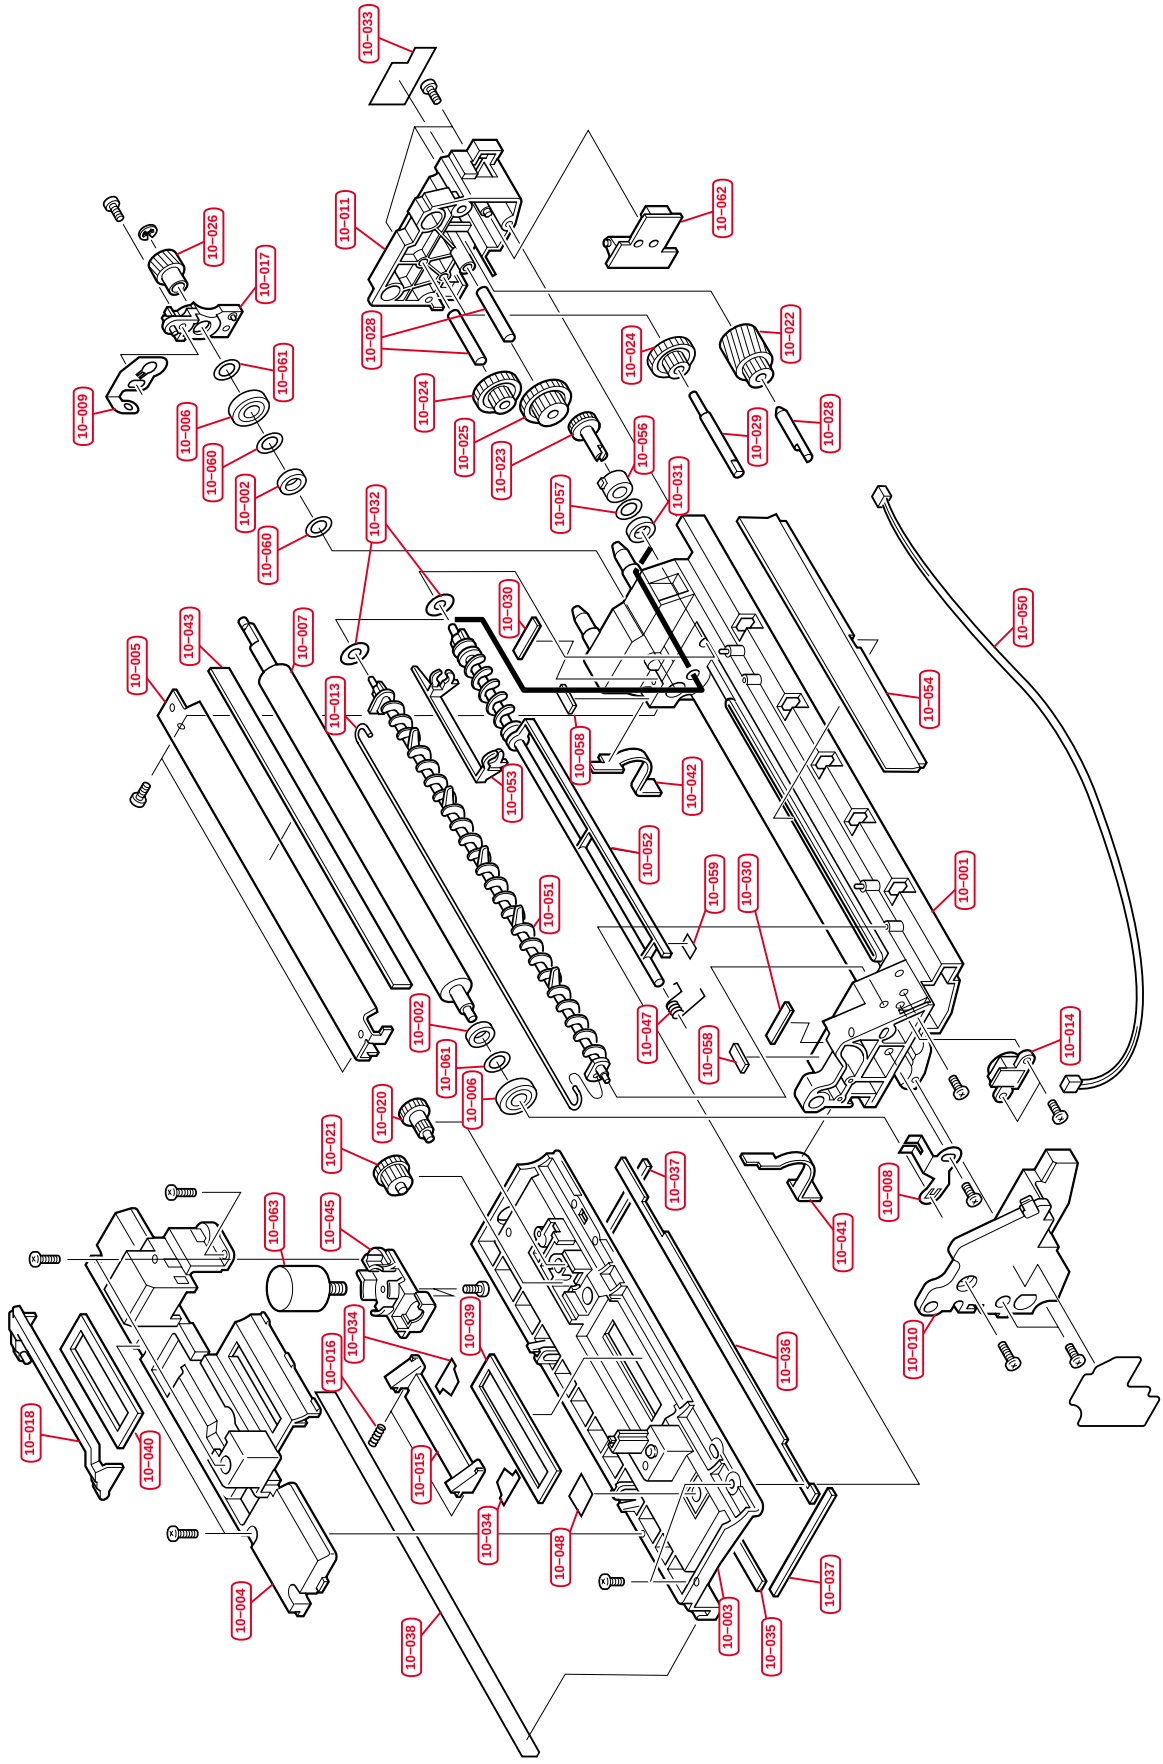


Fig.10 − Developer Unit

Ref No.	Part Code	Description	Quantity
10−000	**DV−35**	**Developer Unit (5PLPZ1NAEKX)**	**1**
10−001		Case DLP	
10−002		Ball Bearing	
10−003		Lid DLP	
10−004		Cover DLP	
10−005		Blade DLP	
10−006		Pulley DLP Assy	
10−007		Roller Magnet	
10−008		Plate Bias A	
10−009		Plate Bias B	
10−010		Cover R DLP	
10−011		Cover Gear	
10−012		Gear Feed Z22	
10−013		Scraper DLP B	
10−014		Toner Sensor	
10−015		Shutter DLP	
10−016		Spring Shutter	
10−017		Flange Mag	
10−018		Handle DLP	
10−020		Worm Wheel H28−Z14	
10−021		Gear Idle Z30−Z15	
10−022		Gear ZZ3H−z18S	
10−023		Gear Scrapper Z18S	
10−024		Gear Z34S−Z16S	
10−025		Gear Z36S−Z23S	
10−026		Gear MG Z17H	
10−028		Pin DLP A	
10−029		Pin DLP B	
10−030		Seal Side DLP	
10−031		Seal Scraper	
10−032		Sheet Scraper	
10−033		Sheet PWB	
10−034		Sheet Shut Side	
10−035		Seal Lid A	
10−036		Seal Lid B	
10−037		Seal Lid Side	
10−038		Sheet MG Up	
10−039		Sheet Shutter	
10−040		Seal Shutter	
10−041		Seal Side DLP L	
10−042		Seal Side DLP R	
10−043		Magnet Blade	
10−044		DC Motor (10−063)	
10−045		Bracket Motor	

Ref No.	Part Code	Description	Quantity
10−046		Gear Worm (10−063)	
10−047		Spring Sensor	
10−048		Seal Lid	
10−049		Conn.Cord Assy (10−063)	
10−050		Conn.Cord Assy	
10−051		Screw F DLP	
10−052		Screw B DLP	
10−053		Scrapper B DLP	
10−054		Separator DLP	
10−055		Label Caution	
10−056		Bush Scrapper	
10−057		Sheet Scraper MID	
10−058		Spacer DLP	
10−059		Scraper Screw	
10−060		Poly Washer	
10−061		Poly Washer	
10−062		P.W.Board Assy	
10−063		DC Motor Assy	
10−A01	**5AAY7000E*20**	**Toner Motor Assy**	**1**

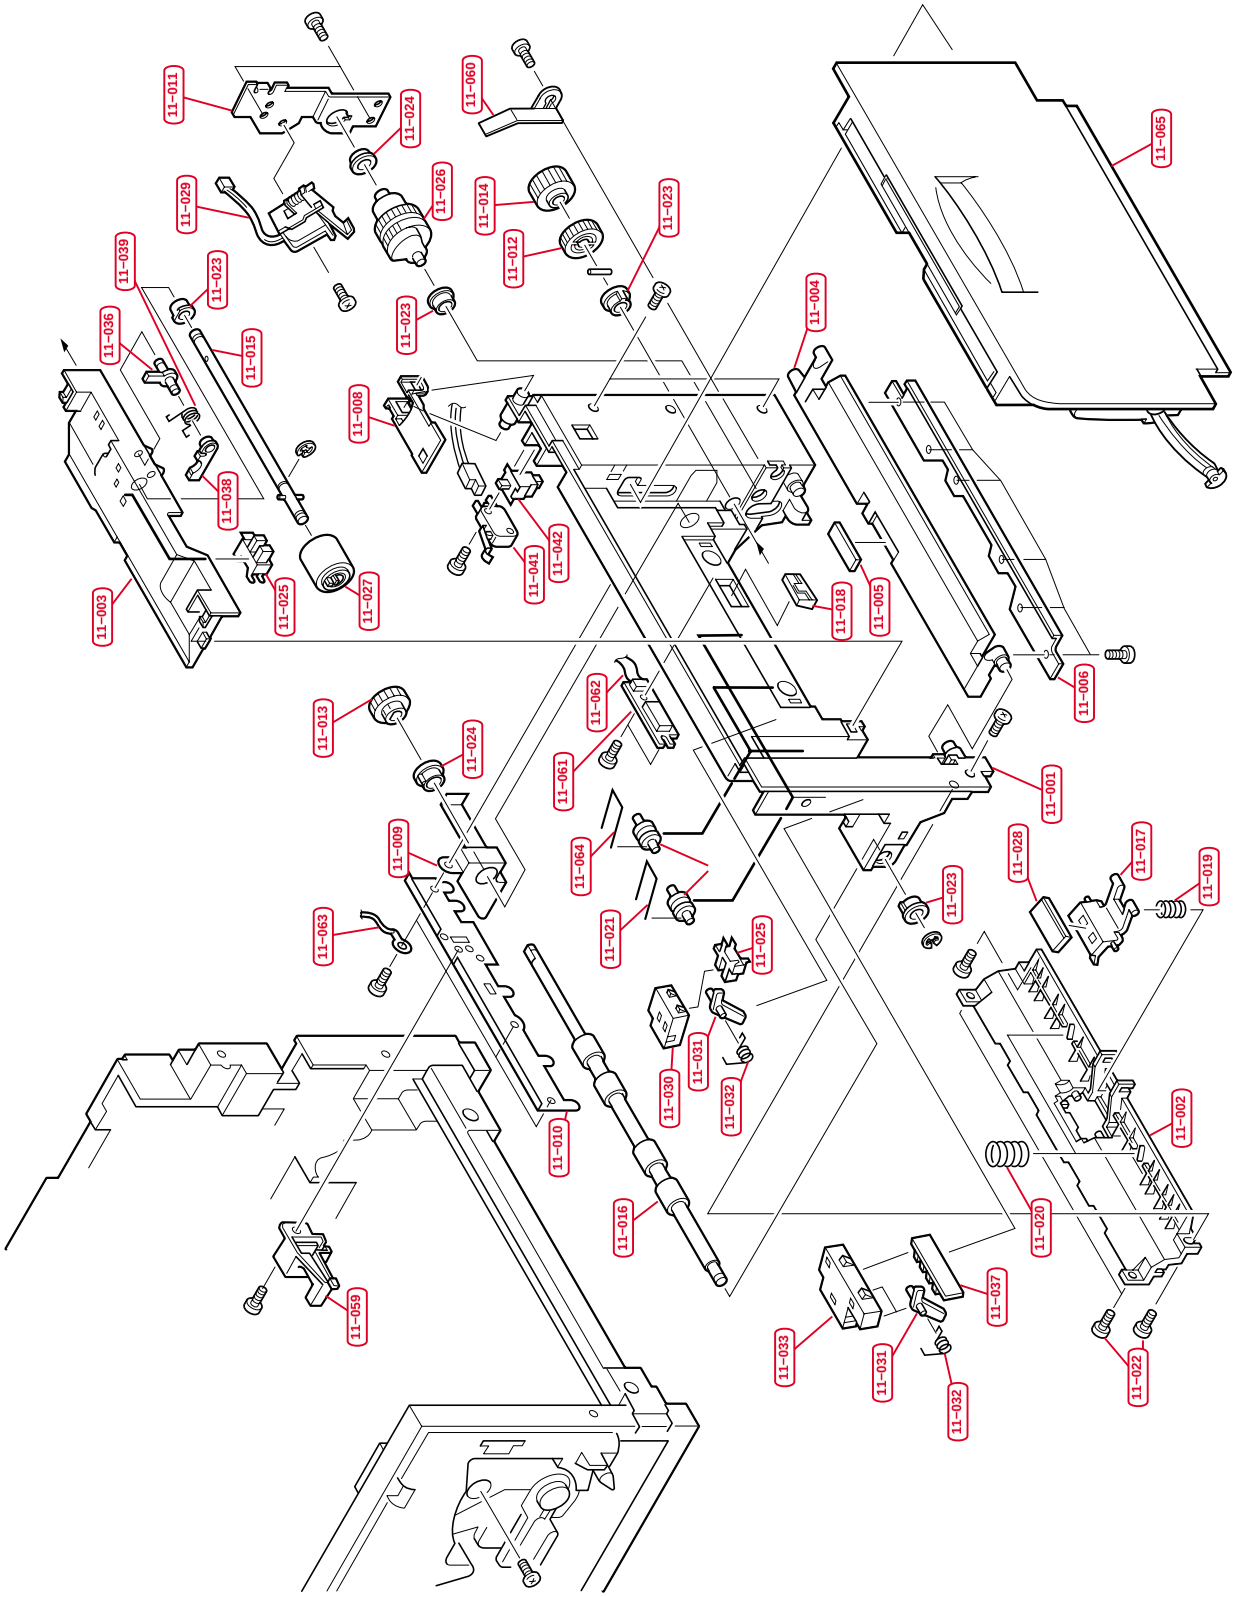


Fig.11 − Multi−purpose Feeder

Ref No.	Part Code	Description	Quantity
11−000	**5AAY7000E*04**	**Multi Feed Unit FS−7000+**	
11−000	**5AAY9000E*04**	**Multi Feed Unit FS−9000**	
11−001	5MVX976CH001	Frame Right	
11−002	5MVX774CH001	Frame Bottom	
11−003	5MVB863CH001	Holder Feed	
11−004	5MVB852CB003	Plate bottom	
11−005	5MVS427XN001	Pad friction	
11−006	5MML831SL002	Support bottom	
11−008	5MVX632SB014	Lever Interlock	
11−009	5MMX543LD003	Plate Earth MPF	
11−010	5MML732SL004	Plate Earth EF	
11−011	5MMS657SL016	BKT Clutch	
11−012	5MVG137DN016	Gear Feed Z22	
11−013	5MVG138DN026	Gear MD Z26	
11−014	5MVG137DN015	Gear Z22	
11−015	5MMT766SN005	Shaft MPF	
11−016	5MMT866SN023	Roller MPF MID	
11−017	5MVX653CB001	BKT Separator	
11−018	5MVB322DN001	Cap Connect EF	
11−019	5MMW361LD012	Spring Separator	
11−020	5MMW471LD001	Spring Bottom	
11−021	5MMW501SD001	Spring Pulley MD	
11−022	5MVM373DB001	Pulley S	
11−023	5MVM176DB012	Bush Pom B	
11−024	5MVM122DB004	Bush Pom EW	
11−025	5ENXGP1A73A**01	Photo Sensor	
11−026	**5AAVCLTCH007**	**Clutch Assy**	
11−027	**5AAVROLL*030**	**Roller Feed Assy**	
11−028	**5AAM7000E*01**	**Separator Assy**	
11−029	**5EZSZ2401210101**	**Solenoid Flapper**	
11−030	5MVB542SB001	BKT Sensor A	
11−031	5MVX422DB006	Actuator EF	
11−032	5MMW161LD028	Spring Act EF	
11−033	5MVB642SB010	Bkt Sensor B	
11−034		Actuator EF	
11−035		Spring Act EF	
11−036	5MVX331SB007	Actuator MPF A	
11−037	5AAPRSSC1017AH	PWB Assy KP−576/577	
11−038	5MVX311DB010	Actuator MPF B	
11−039	5MMW161LD027	Spring Act MPF	
11−040	5ENXGP1A73A**01	Photo Sensor	
11−041	**5ESM010242***01**	**Micro Switch 01X02**	
11−042	5ES01000101*01	Push Switch 01 SN	
11−050	5MVB873CH001	Cover Tray (01−065)	

Ref No.	Part Code	Description	Quantity
11−051	5MVB873CH002	Tray A (01−065)	
11−052	5MVS871SH001	Tray B (01−065)	
11−053	5MVS761CH001	Tray C (01−065)	
11−054	5MVX773SH001	Guide Paper R (01−065)	
11−055	5MVX773SH002	Guide Paper L (01−065)	
11−056	5MVH622DH001	Arm Tray R (01−065)	
11−057	5MVH622DH002	Arm Tray L (01−065)	
11−058	5MVG127SH003	Gear Manual (01−065)	
11−059	**5AAY7000E*53**	**Sensor Eton Assy**	
11−060	5MMX433LD005	Stopper Cam	
11−061	**5AAPRIFC1009BH**	**Env PWB KP−502**	
11−062	5AACCNQC8GEA	Conn Cord Assy	
11−063	5AACCNQB9GEA	Conn Cord Assy	
11−064	5MMW501LD002	Spring Pulley EF	
11−065	**5AAVTRAY*011**	**MPF Tray Assy**	

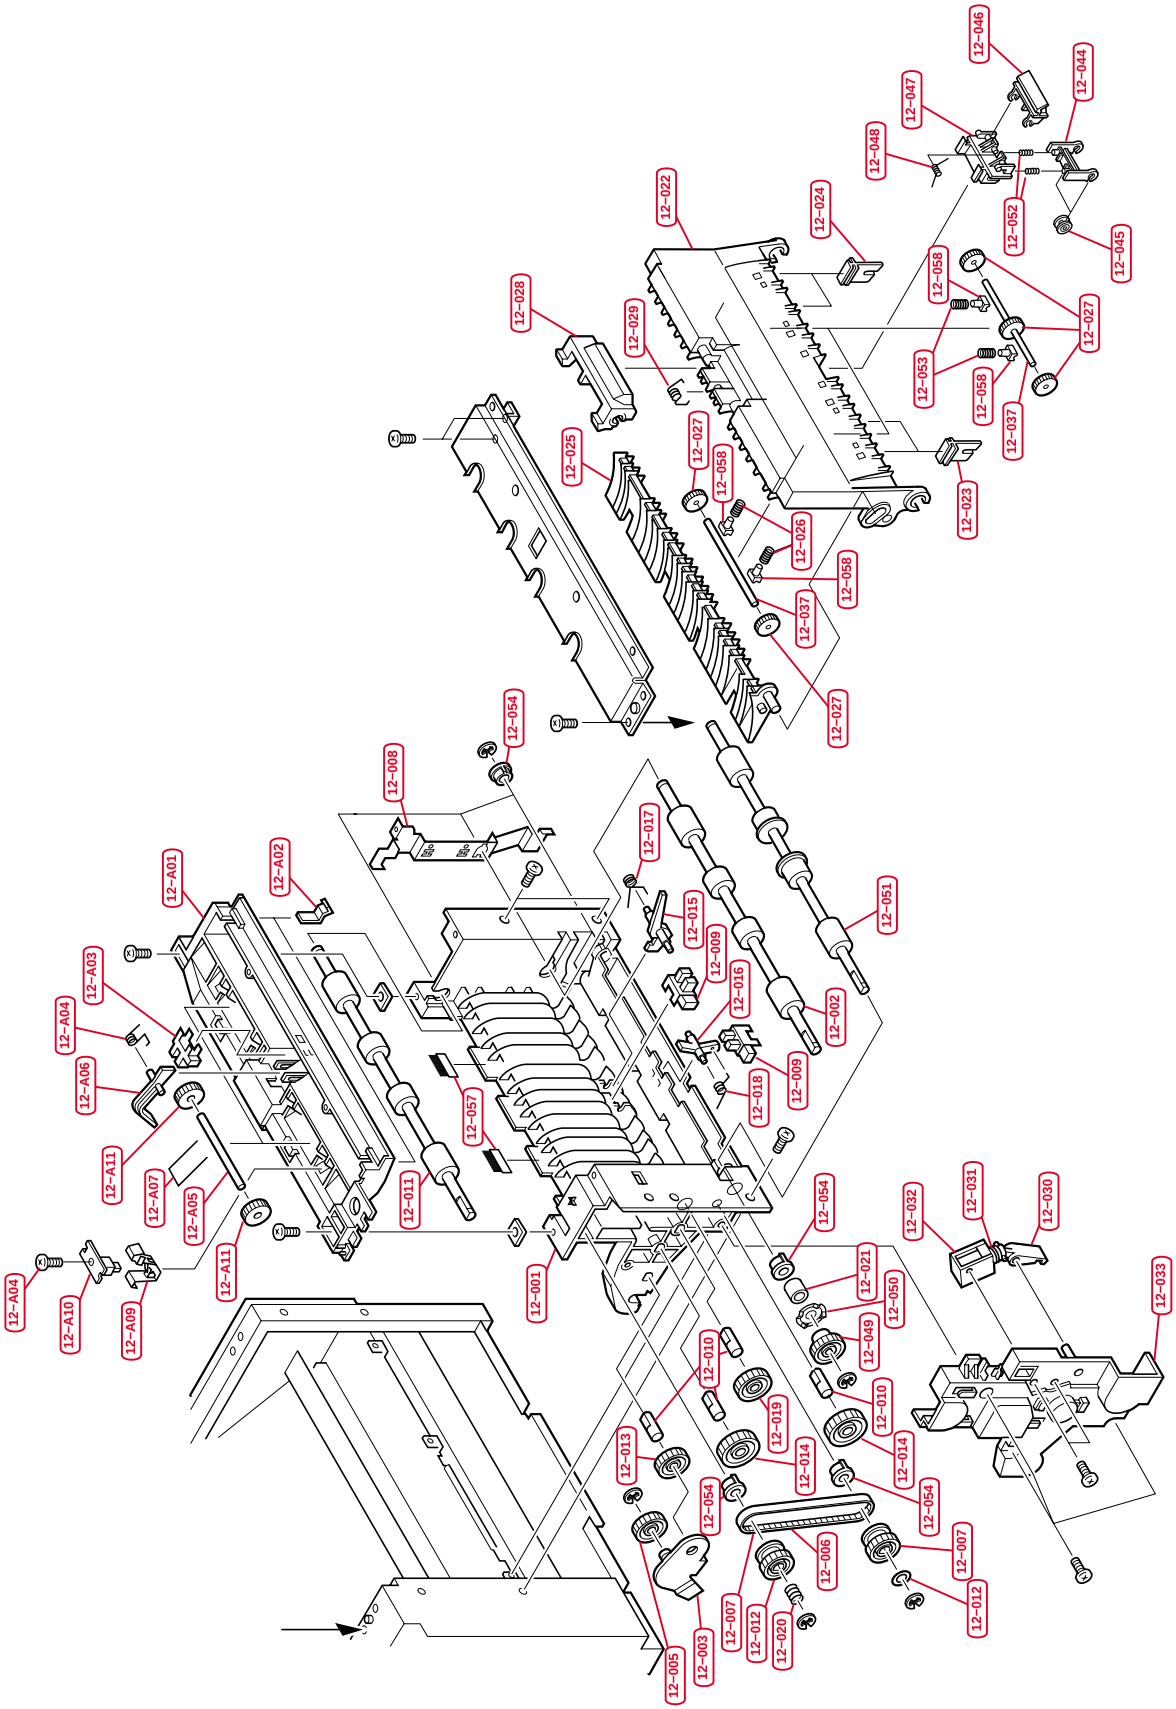


Fig.12 − Face Down Unit

Ref No.	Part Code	Description	Quantity
12−000	**5AAY7000E*11**	**Face Down Unit FS−7000+**	
12−000	**5AAY9000E*11**	**Face Down Unit FS−9000**	
12−001	5MVX876SH018	Frame FD	
12−002	5MMT865SN006	Roller Exit A	
12−003	5MMS647SD001	Plate Joint FD	
12−005	5MVG148DB010	Gear Feed Z34	
12−006	5MVG389RB001	Belt FD	
12−007	5MVG372DN003	Pulley P26	
12−008	5MMX743LD003	Plate Earth FD	
12−009	5ENXGP1A73A**01	Photo Sensor	
12−010	5MMT266SN003	Pin FD A	
12−011	5MMT865SN007	Roller Exit B	
12−012	5MVG138DN033	Gear Z29S	
12−013	5MVG148DN001	Gear Idle Z33	
12−014	5MVG148DB009	Gear Idle Z40	
12−015	**5MVX443SB003**	**Actuator FD**	
12−016	**5MVX322DB017**	**Actuator FU**	
12−017	5MMW164LD001	Spring FD	
12−018	5MMW153LD003	Spring FU	
12−019	5MVG148DB030	Gear Z38S	
12−020	5MMW266LD006	Spring Press A	
12−021	5MVM166AN001	Collar	
12−022	5MVX874SH002	Cover FD	
12−023	5MVX321SH004	Holder FD R	
12−024	5MVX321SH005	Holder FD L	
12−025	5MVX863CB003	Guide Change	
12−026	5MMW245LD001	Spring Exit	
12−027	5MVM174DB002	Pulley Exit	
12−028	5MVX633SH007	Latch FD	
12−029	5MMW256LD001	Spring Latch	
12−030	5MVX421SB018	Actuator Sol	
12−031	**5MMW261LJ032**	**Spring Sol**	
12−032	5EZSZ240102010	Solenoid	
12−033	5MVX774SB014	Cover Side	
12−037	5MMT733SN004	Shaft Exit	
12−038	**5MVX532SB006**	**Actuator Full**	
12−041	Cover PWB Assy		
12−044	5MVX331SH001	Holder Pulley	
12−045	5MVX111DB009	Pulley Stocker	
12−046	5MVX332SH002	Stocker	
12−047	5MVX422SH002	Base Stocker	
12−048	5MMW605LD003	Spring Stocker	
12−049	5MVG138DN036	Gear Z29S A	
12−050	5MMX331LD001	Washer Wave	

Ref No.	Part Code	Description	Quantity
12−051	5MMT865SN006	Roller Exit C	
12−052	5MMW143LD001	Spring Pulley	
12−053	5MMW245LD002	Spring Exit A	
12−054	5MMM121CX001	Bush Drum	
12−055	5AACCNQU3GEA	Conn Cord Assy S02064	
12−056	5AACCNQS9GEA	Conn Cord Assy S02109	
12−057	5MVS526FF001	Discharger FD	
12−058	5MVF111DN005	Bush SP	
12−A01	5MVX864SH008	Guide FD	
12−A02	5MVX332DN001	Snap	
12−A03	5ENXGP1A73A**01	Photo Sensor	
12−A04	5MMW453LD001	Spring Full	
12−A05	5MMT733SN004	Shaft Exit	
12−A06	5MVX532SB006	Actuator Full	
12−A07	5MMW606LD003	Spring FD Exit	
12−A08	5MMS967SD001	Plate FD	
12−A09	5MMX662LD005	Plate Switch	
12−A10	5APRZZC1048AH	PWB Assy	
12−A11	5MVM174DB008	Pulley Exit	