Electrolux

electrolux.com/register



**EW9H79A**

**EN** User Manual | **Tumble Dryer**

**Welcome to Electrolux! Thank you for choosing our appliance.**



In our drive to be sustainable, we are reducing paper assets and provide full user manuals online. Access your full user manual at **electrolux.com/manuals**



Get usage advice, brochures, troubleshooting, service and repair information at **electrolux.com/support**



Buy accessories, consumables, and original spare parts for your appliance at **electrolux.com/shop**

Subject to change without notice.

## CONTENTS


**1.** SAFETY INFORMATION..... 2
**2.** SAFETY INSTRUCTIONS..... 6
**3.** PRODUCT DESCRIPTION..... 8
**4.** TECHNICAL DATA..... 9
**5.** CONTROL PANEL ..... 10
**6.** DIAL AND BUTTONS ..... 11
**7.** DISCOVER YOUR APPLIANCE..... 13
**8.** FIRST TIME START-UP..... 14
**9.** WI-FI - CONNECTIVITY SETUP..... 14
**10.** PROGRAMMES ..... 18
**11.** OPTIONS ..... 22
**12.** MACHINE SETTINGS..... 26
**13.** BEFORE FIRST USE..... 28
**14.** DAILY USE..... 29
**15.** HINTS AND TIPS ..... 32
**16.** CARE AND CLEANING ..... 33
**17.** TROUBLESHOOTING ..... 36
**18.** CONSUMPTION VALUES ..... 38
**19.** ENVIRONMENTAL CONCERNS..... 40


# 1. ⚠ SAFETY INFORMATION



Before beginning the installation and use of this appliance, carefully read the supplied instructions.
The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage.
Always keep the instructions in a safe and accessible location for future reference, and download the full version available online.


Warning: Risk of fire / Flammable materials.
The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance. Be careful not to cause damage to the refrigerant circuit containing propane.

## 1.1 Children and vulnerable people safety

⚠ **WARNING!**

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

## 1.2 General Safety

- This appliance is for drying domestic-type, machine-dryable laundry only.

- Do not use the dryer function if laundry has been soiled with industrial chemicals.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions supplied with the accessory. Read it carefully before installation (refer to the kit's user manual).
- The appliance can be installed as freestanding or below a kitchen counter with correct space (refer to the installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- Ensure air circulation between appliance and the floor. The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- WARNING: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- WARNING: Do not install the appliance in an environment with no air exchange.
  The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance. Be

careful not to cause damage to the refrigerant circuit containing propane.
- WARNING: In the appliance enclosure or in the built -in structure, keep ventilation opening clear of obstruction.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not touch the accessible condenser metal fins with bare hands. Risk of injury. Wear protective gloves.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Do not exceed the maximum load of 9,0 kg.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without the filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Make sure that laundry is not trapped between the appliance door and the rubber seal.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer’s instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

# 2. SAFETY INSTRUCTIONS

## 2.1 Installation


Warning: Risk of fire / Flammable materials.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Do not install the appliance in an environment with no air exchange
  The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance. Be careful not to cause damage to the refrigerant circuit containing propane.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature can be lower than 5°C or higher than 35°C.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Always keep the appliance vertical when it is being moved.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.

## 2.2 Electrical connection

**⚠ WARNING!**

Risk of fire and electric shock.

- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- WARNING: This appliance is designed to be installed / connected to a grounding connection in the building.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.

## 2.3 Use

**⚠ WARNING!**

Risk of injury, electric shock, fire, burns or damage to the appliance.

- This appliance is for household (indoors) use only.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Dry only fabrics that are suitable to dry in the appliance. Follow the cleaning instruction on the item label.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door of the appliance.
- Do not dry dripping wet clothes in the appliance.
- To replace the internal lighting, contact the Authorised Service Centre. Visible LED radiation, do not look directly into the beam.

## 2.4 Care and cleaning

**⚠ WARNING!**

Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not

use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Be careful when you clean the appliance to prevent damage to the cooling system.
- When cleaning filters, dispose of lint in the garbage bin to prevent microplastics from entering the water system.

## 2.5 Compressor

**⚠ WARNING!**

Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with a special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. The damage of the system can cause a leakage.

## 2.6 Service

- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.
- Please note that self-repair or non-professional repair can have safety consequences and might void the guarantee.
- The following spare parts are available for at least 10 years after the model has been discontinued: gaskets and seals, switches and knobs, condensate pump, door locks, motors and motor brushes, transmissions between motor and drum, fan and fan wheels, drums and bearings, water piping and related equipment including hoses, valves and filters, cables and plugs, printed circuit boards, electronic displays, thermostats and temperature sensors, software updates (including reset software), springs, heaters and heating elements, electric fuses (separately or bundled together), tension pulley, support roller, doors, door seals, door handles, door lock assemblies and hinges, lint filters, air filters, plastic peripherals, condensate tank. The duration may be longer in your country. For further information, please visit our website.
- Please note that some of these spare parts are only available to professional repairers, and that not all spare parts are relevant for all models.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

## 2.7 Disposal


**⚠ WARNING!**

Risk of injury or suffocation.


Warning: Risk of fire / Risk of material damage and damage to the appliance.


- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- The appliance contains flammable gas (R290). Contact your municipal authority for information on how to discard the appliance correctly.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

## 3. PRODUCT DESCRIPTION

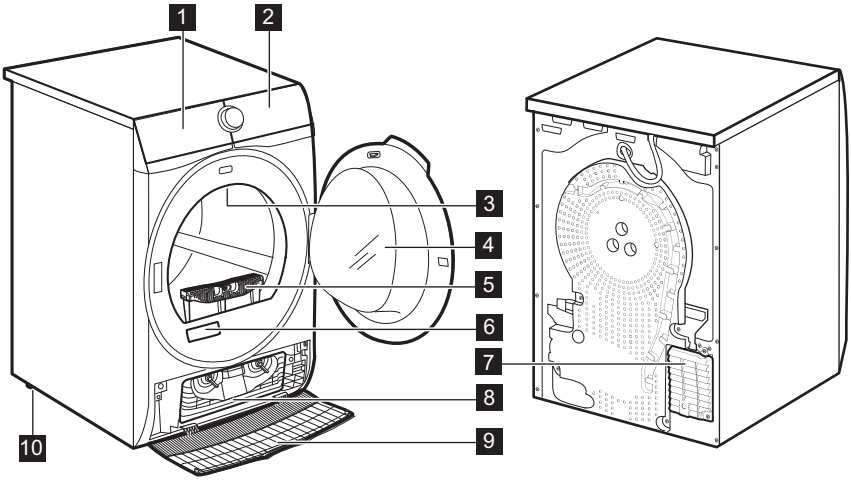


1 Water container
2 Control panel
3 Internal light
4 Appliance door
5 Filter
6 Rating plate
7 Airflow slots
8 Condenser lid
9 Condenser cover
10 Adjustable feet

For ease of loading laundry or ease of installation the door is reversible (see the separate leaflet).

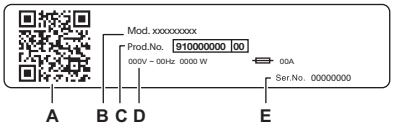


**The rating plate reports:**
A. QR code
B. model name
C. product number
D. electrical ratings
E. serial number

Scan the **QR code** with the camera to download our App from the app store on your smart device and follow the required steps. Register your product and get the most out of it.

- Access your appliance details, documentation and articles on how to use the best features (User Manual also available at **electrolux.com/manuals** )
- Get usage advice, troubleshooting, service and repair information (also available at **electrolux.com/support** )
- Buy accessories, Consumable and Original Spare parts for your appliance (also available at **electrolux.com/shop** )


### 3.1 Electrical connection

At the end of installation you can connect the mains plug to the mains socket.

The rating plate and the 'Technical Data' chapter indicate the necessary electrical ratings. Make sure that they are compatible with the mains power supply.

Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances may also be in use.

**Connect the appliance to an earthed socket.**

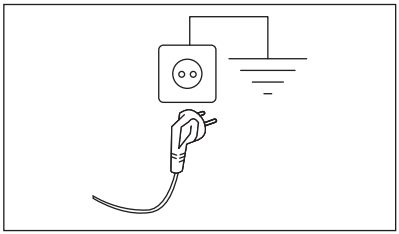

The power supply cable must be easily accessible after installing the appliance.

For any electrical work required to install this appliance, contact our Authorised Service Centre.

The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution.


## **4.** TECHNICAL DATA

| | |
|---|---|
| Height x Width x Depth | 85,0 x 59,6 x 65,9 cm |
| Max. depth with the appliance door open | 110,2 cm |
| Max. width with the appliance door open | 94,8 cm |
| Adjustable height | 85,0 cm (+ 1,5 cm - feet regulation) |
| Drum volume | 118 l |
| Maximum load | **9,0** kg |
| Voltage | 230 V |
| Frequency | 50 Hz |
| Acoustic airborne noise emission for the drying cycle of Eco programme at maximum load | 60 dB(A) |
| Total power | 900 W |
| Type of use | Household |
| Allowed ambient temperature | + 5°C to + 35°C |
| Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture | **IPX4** |
| Refrigerant gas designation | R290 |

| | |
|---|---|
| Refrigerant weight | 0,149 kg |

# 5. CONTROL PANEL

## 5.1 Control Panel

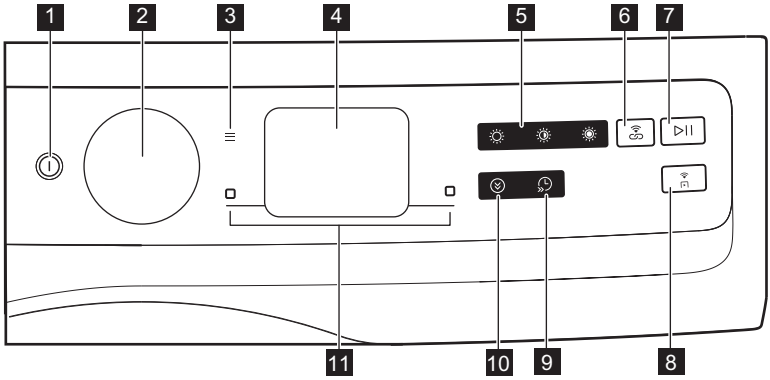


1. On/Off button
2. Programme dial
3. Menu touch button
4. Display
5. Direct access to dryness level:
   - Extra dry touch button
   - Cupboard dry touch button
   - Iron dry touch button
6. SyncDry touch button
7. Start/Pause touch button
8. Remote start touch button
9. Time Save touch button
10. Energy save touch button
11. Soft buttons:
    - Right Soft button
    - Left Soft button

Press the touch buttons with your finger in the area with the symbol or name of the option. Do not wear gloves when you operate the control panel. Make sure that the control panel is always clean and dry.

## 5.2 SmartSelect

This new interface area is designed with the aim of guiding the user through sustainable choices, and providing an improved and direct way of selecting the cycles and options with minimum effort. An indication on the sustainability will be given through the SmartLeaf indicator (see chapter *Control Panel: SmartLeaf feedback* ).

For more details refer to SmartSelect section in "Dials and buttons" chapter.

## 5.3 SmartLeaf feedback

SmartLeaf feedback shows how energy-efficient a programme is, based on energy

consumption weighted on programme's rated capacity.

There are four different levels of SmartLeaf feedback indicated by the leaf icon:

1. No leaf lit indicates an average consumption level or no indication possible (for Time based cycles).
2. one leaf indicates a good energy consumption level.
3. two leaves indicates a very good energy consumption level.
4. three leaves indicate the best consumption level.

### 5.4 Main symbols legend

| Symbol | Description | Symbol | Description |
|---|---|---|---|
| | SmartLeaf indicator. | | Favourite indicator. |
| | anti-crease indicator. | | extra silent indicator. |
| | Wi-Fi connection indicator. | | child lock on. |
| | finish in indicator. | | indicator: *clean filter* |
| | Notification indicator. | | indicator: *check Heat Exchanger* |
| | indicator: *drain the water container* | | |

## 6. DIAL AND BUTTONS

### 6.1 Introduction

The options/functions are not available with all drying programmes. Check the compatibility between options/functions and drying programmes in the "Option table". An option/function can exclude another one, in this case the appliance doesn't allow you to set incompatible options/functions.

Picture are indicative it could be some different depending on tumble dryer model.

### 6.2 On/Off button

Press and hold briefly this button for a few seconds to activate or deactivate the appliance. A dedicated jingle sound while switching the appliance on or off, lights and display switches on and Start/Pause button led pulse.

During the first switch on of the appliance, the system shall require to setup the appliance


**The default selected programme, at machine switch on, is always the Eco programme, also after wake up from standby.**

### 6.3 Programme dial

By rotating the programme dial it is possible to select the desired programme.

### 6.4 Menu

Tap the button to enter inside the option.

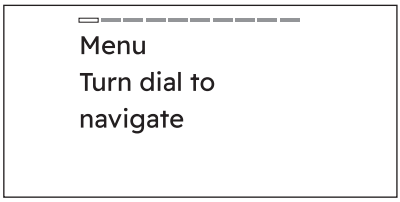


Turn the dial to navigate. To activate/ deactivate an option tap the ▢ right soft key touch button.


To exit the ☰ menu user shall:

- press the menu button again;
- press the quick select button;
- press the remote button;
- wait a timeout of 10 seconds.


## 6.5 ▢ Right/Left soft keys

The two soft keys ▢ buttons are located on the right and the left of the display.

Tap the right soft key ▢ to prompt the action that appears on the right bottom of the display (ex. Finish In, go back in the menu,..).

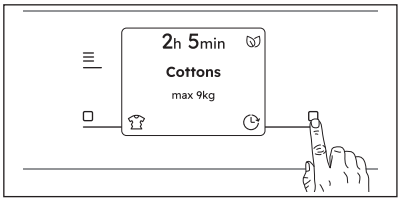


Tap the left soft key ▢ to prompt the action that appears on the left bottom of the display (e.g. Extra Anticrease, Final dryness level for Wool programme, activate or deactivate an option.)

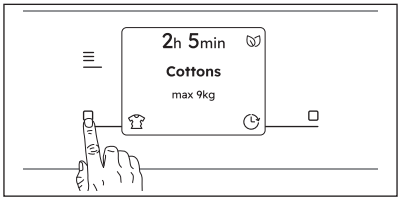


## 6.6 ▷❙❙ Start/Pause

Tap the ▷❙❙ Start/Pause button to start, pause the appliance or interrupt a running programme.

## 6.7 Remote start

A quick touch of this button activates the Remote Start function that allows you to start, pause and stop the appliance remotely.

The related led comes on and the related icon appears on display.

To exit this state, tap again the button; the related icon turns it off.

ⓘ

If the door is open, the Remote start is deactivated.

## 6.8 SmartSelect

SmartSelect guides you to save energy and time.
Scan the QR code to learn more.

### Dryness Levels

Easy direct access to dryness level with one simple touch.

For drying the three possible choices are:

1. Iron dry
   This option is recommended to dry garments suitable for ironing.
2. Cupboard dry

It is the default drying level selected for most programme, and it is indicated for items to be stored.

3. Extra dry
   This option is recommended for towelling materials.

> To activate one of this options turn the dial to select the desired programme. The default dryness level icon light on. To change it tap on the related icon.

### Energy save

This option reduces the cycle power consumption on automatic drying programmes only.

When set, the related button LED is lighted on and cycle time digits show updated cycle duration.

### Time Save

This option reduces the cycle duration on automatic drying programmes .

When set, cycle time digits show updated cycle duration in "hours : minutes" format.

> When Time Save option is selected the compressor noise can increase.

### SyncDry

This feature lets your tumble dryer to automatically set the most appropriate programme that matches the last washing program recently executed. All you need to do is start the drying programme once your tumble dryer is loaded. No other programme settings or options are required on the tumble dryer.

Once the washing programme has come to an end, the washing machine transfers the programme data via the home router Wi-Fi to the Electrolux Cloud, as well as to your tumble dryer.

> In order to use the SyncDry function, the Electrolux tumble dryer and washing machine must be paired with our app.

To activate the function:

1. Once the wash cycle has come to an end, place the clean laundry in the tumble dryer.
2. Touch **SyncDry** button.
3. The appliance is retrieving data from the cloud.
4. Display will update itself automatically with the suggested programme. After 10 seconds, if data retrieving is unsuccessful, the button LED is switched off and the machine gives an acoustic error signal. Then previously selected programme is restored.
5. Touch ▷|| Start/Pause button to begin drying process.

> When **SyncDry** programme is set, user is still allowed to change options or select another program by rotating knob or using APP. In such cases **SyncDry** button LED will turn off to indicate that the programme is not anymore the suggested one; **SyncDry** automatic programme can be selected again by pressing related button until data is available on Cloud.

## 7. DISCOVER YOUR APPLIANCE

The first time you turn the appliance on, the display guided through some information related to the appliance.


If user skipped it during first power on, it will show again on the next power up after start up. If user has press skipped for the second time, do not show anymore.

# 8. FIRST TIME START-UP

The first time you turn the appliance on, you are guided through the initial setup procedure.

## 8.1 Language setup

Scroll through the list of languages by rotating the knob to find the desired language and select it by pressing the right soft key.

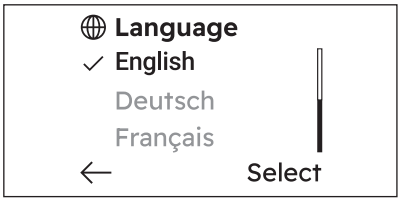


By turning the knob the selected language will be visible in white colour.

# 9. WI-FI - CONNECTIVITY SETUP

This chapter describes how to connect the smart appliance to the Wi-Fi network and to link it to a mobile device.

By this functionality you can receive notifications, monitor and control your tumble dryer from your mobile devices.


The Wi-Fi functionality is off as factory default setting.

To connect the appliance to enjoy the full range of features and services you need:

- Wireless network at home with internet connection enabled.
- Mobile device connected to wireless network.

| | |
|---|---|
| **Frequency** | 2.412 - 2.472 GHz for European market |
| **Protocol** | IEEE 802.11b/g/n |
| **Max power** | < 20dBm |
| **Encryption** | WPA, WPA2, WPA3 |

## 9.1 QR code on rating plate

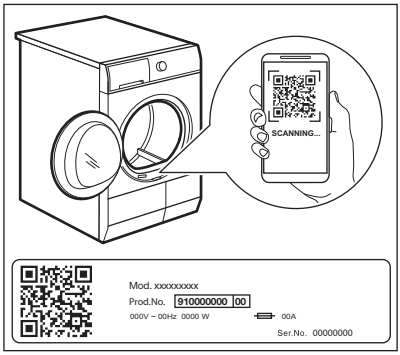


**QR code can be used in two ways:**

- Scan the QR code with the built-in camera app to download our app from the App store on your smart device and follow the required steps.
- Pairing your smart device with appliance to simplify the process. Scan the QR code with QR code scanner built-in our app.

## 9.2 Installing our app

When connecting the tumble dryer to the application, stand near it with Your smart device.

Make sure that your smart device is connected to the wireless network.

1. Go to the App Store on your smart device or scan QR code (*see chapter "QR code on rating plate"*).
2. Download and install our app.
3. Start the application. Select the country and language and login with Your email and password. If you do not have an account, create a new one following the instructions in our app.


## 9.3 Configuring the dryer wireless connection

Have our app downloaded and installed on your smart device.


ⓘ

You can also configure the dryer wireless connection by pushing the Remote start button about 5 second.

1. In our app - tap on Add appliance and follow the instructions on the App for appliance connection.
2. Press the on/off button for a few seconds to activate the appliance.
3. Tap on the **Menu** soft key, rotate the dial until the display shows **Machine settings**.

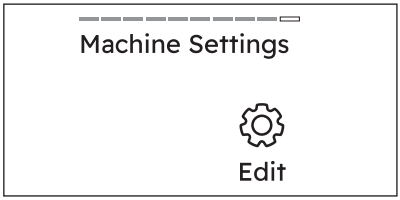



4. Tap the right soft key to enter to the machine settings.
5. Rotate the dial until the display shows **Wifi** screen.

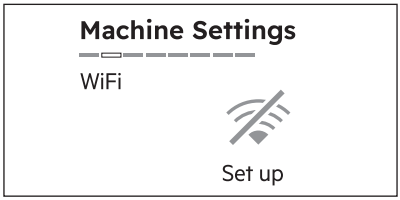



6. Tap the right soft key to set up WiFi connection.

The wireless module begins starting up. It may takes about 10 seconds before it is ready.

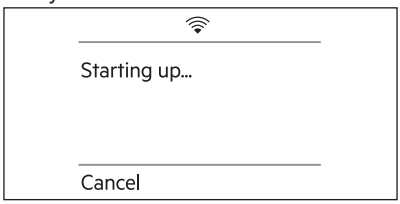



When the wireless module is ready the following screen pops up (**Ready to connect**):

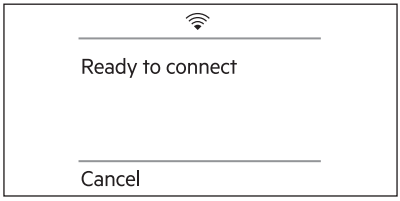


The access point will be open for about 5 minutes.

7. Configure our app on your smart device.

If the connectivity is configured following screen pops up (**Connection successful**):

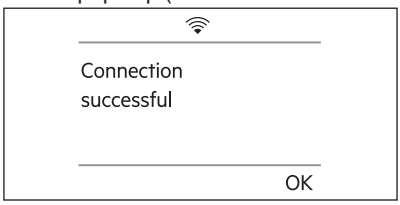


8. Tap the right soft key (**OK**) to get back to home screen.

ⓘ

Every time you switch the appliance on, the appliance takes 10 seconds to connect to the network automatically.


**Connecting to a different network (Reopening Access Point)**

Every time user tap and hold Remote start key button for 5 seconds, the access point will be open and broadcasted. New network credentials received at this point will overwrite previously saved credentials, and the appliance then connects to the new Wi-Fi network.


## 9.4 Turning Off Wi-Fi

If the user decides to no longer connect the appliance to Wi-Fi, he can tap and hold Remote start key button for 10 seconds and the appliance will reset and turn off.


1. Press the on/off button for a few seconds to activate the appliance.
2. Tap on the **Menu** soft key, rotate the dial until the display shows **Machine settings**.

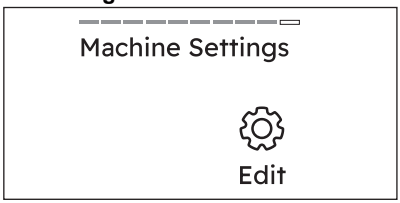


3. Tap the right soft key to enter to the machine settings.
4. Rotate the dial until the display shows **Wifi** screen.

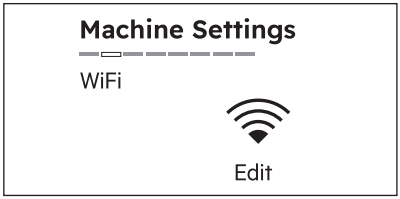



5. Tap the right soft key to edit WiFi connection.
6. Rotate the dial until the display shows **Reset network** screen.

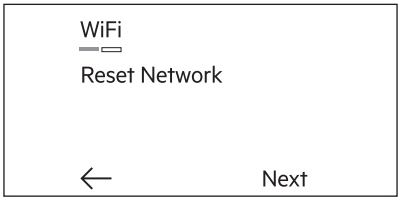



7. Tap the right soft key (**Next**).

The following screen pops up (**Reset network credentials?**):

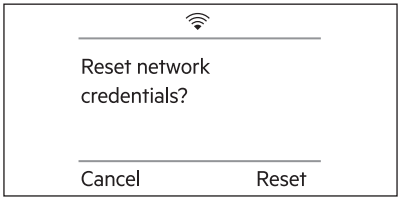



8. Tap the right soft key (**Reset**) to confirm your choice.

The network credentials begins resetting.

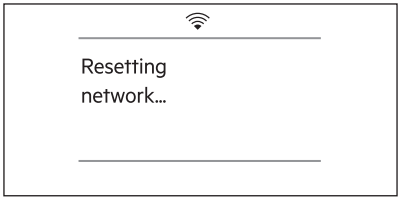



After a few seconds the following screen pops up (**Network is reset**):

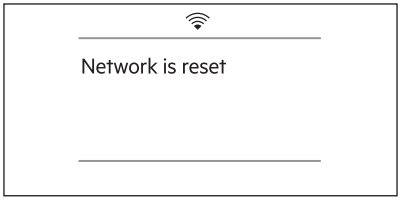



## 9.5 Network information

When the App is installed and the wireless connection is complete, you can check a few information regarding connection and network.

1. Press the on/off button for a few seconds to activate the appliance.
2. Tap on the **Menu** soft key, rotate the dial until the display shows **Machine settings**.

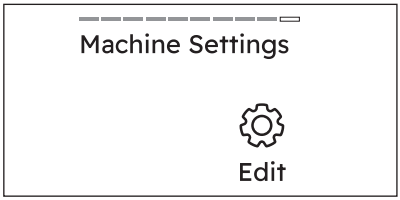


3. Tap the right soft key ▢ to enter to the machine settings.
4. Rotate the dial until the display shows **Wifi** screen.

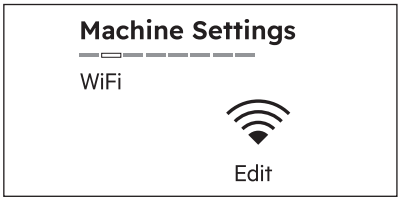



5. Tap the right soft key ▢ to enter the following screen:





here you can check:
- Status of connection ( e.g **Starting up..., Not connected, Connected**)
- Signal strength

6. Tap the right soft key ▢ (**Info**) to enter the following screen:

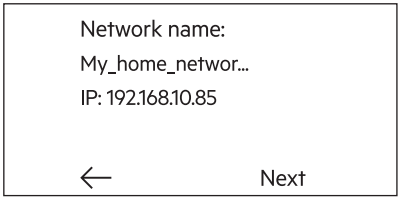


here you can check:
- Network name
- IP address of your dryer

7. Tap the right soft key ▢ (**Next**) to enter the following screen:

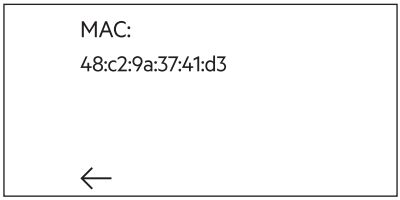


here you can check:
- MAC address of your dryer

8. Tap the left soft key ▢ (←) a few times to go back to the machine settings screen.

## 9.6 Remote start

A quick touch of this button activates the Remote Start function that allows you to start, pause and stop the appliance remotely.

The related led comes on and the related icon appears on display.

To exit this state, tap again the button; the related icon turns it off.

ⓘ

If the door is open, the Remote start is deactivated.

Press and hold this button for longer time to provide two other functions:

- hold it down for 5 seconds to connect to a different network.
- hold it down for 10 seconds as soon as double beep sounds to switch off WiFi.

## 9.7 Over-the-air update

⚠ **WARNING!**

During the update it is highly recommended to not turn off or unplug the appliance.

The App may propose an update for downloading new features.

The update is accepted via App only.

If a programme is running, the App notifies that the update will start at the end of the programme.

During the update, the fallowing message pops upon the display: **Don't turn off the appliance**

The appliance will be usable again at the end of the update, without any notification about successful update.

If an error occurs, , the fallowing message pops upon the display: **Update failed**. Press ☐ (**OK**) right soft key to return to normal use.

### 9.8 Wi-Fi Always On

The Wi-Fi Always On function can be activated only via our app.

This feature keeps the appliance connected to the network even when the appliance is turned off, so that it can always be woken up and managed remotely from your device.

The indicator goes on and off intermittently.

It is possible to turn the appliance on by pressing the ⏻ on/off button or through the App.

ⓘ

The Wi-Fi Always On function may affect your energy consumption.
Wi-Fi Always On function is disabled by default.


## 10. PROGRAMMES

### 10.1 ⓘ Programme Information

By rotating the programme dial to select a desired programme, there is a possibility to display the programme information screen.

If there is information on a programme, the ⓘ info icon is visible in the bottom right corner.

- Tap the right soft key ☐

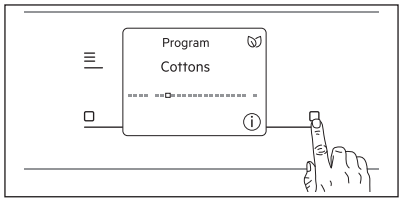


The information screen appear and can be dismissed pressing **OK** or automatically disappear after few seconds.

### 10.2 Programme table

| Programme | Load [1] | Properties / Fabric type[2] | |
|---|---|---|---|
| **Eco** [3] | **9,0 kg** | Programme suitable to dry wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry. Dryness level is not adjustable and it is set by default to Cupboard dry / ready to store. | / |
| MixCare | **6,0 kg** | Mix of garments made of cotton, cotton-synthetic blend and synthetic fabric. | / |
| Cottons | **9,0 kg** | White and coloured cotton fabrics programme. Default setting is for ready to store dryness level. | / |
| Synthetics | **4,0 kg** | Blended garments containing mostly synthetic fibres like polyester, polyamide, etc. | / |

| Programme | Load [1] | Properties / Fabric type[2] |
|---|---|---|
| Delicates | **2,0 kg** | Recommended for generic delicate fabrics such as viscose, rayon, acrylic and their blends. / |
| Wool | **1,0 kg** | Gently dries for machine and hand-washable woollens. Remove immediately the items when the programme is completed. |
| Rapid 3kg | **3,0 kg** | Fast cycle for everyday clothes made of cotton, cotton-synthetic blends and synthetic. Ideal for light items. / |
| Bed Linen **XL** | **4,5 kg** | Dries up to three bed linen sets at once. Minimises twists and tangles of large items to ensure every bed linen reaches a uniform dryness without wet spots. / |
| Jeans | **4,0 kg** | Deeply dries jeans and other denim garments, even in thick parts like pockets, seams, and cuffs reducing entanglement. / |
| Outdoor | **2,0 kg** | Maintains the functionality of outdoor fabrics made of technical textile and restores water repellency on waterproof jackets and shell jackets with removable linings (suitable for drying in tumble dryer). / |
| Down Jacket | **2,0 kg** | An automatic programme that precisely dries even the internal insulation of jackets with feather, down, or synthetic filling. Maintains garment appearance and thermal functionality . / |
| Sportwear | **4,0 kg** | Dries generic sportswear made with synthetic fibres including polyester, elastane blends, and polyamide. / |
| 1 Item Fast | **1 item** | Specially designed to quickly dry one item or a very small load that you need to wear as soon as possible. / |
| Silk | **0,5 kg** | Preserves the shape of delicate machine and hand-washable silk clothes, minimizing creases by using gentle warm air and soft movements. / |
| Hygiene | **5,0 kg** | Dries and sanitizes your garments and other items maintaining the temperature above 60°C over time, removing 99.9% of bacteria and viruses[4]. Note: This cycle should only be used for wet items. Not suitable for delicate items. / |
| Easy Iron | **2,0 kg** | Limits creases on small loads of cotton, synthetic and mixed-fabric garments for easy ironing. Features two drying levels: Iron leaves garments slightly damp for ironing or hanging; Cupboard fully dries items. / |

| Programme | Load [1] | Properties / Fabric type[2] |
|---|---|---|
| Refresh | **1,0 kg** | **For dry clothes only**<br>Short low temperature cycle that helps in removing odours from a small amount of garments. Indicated also for dry clothes that were in storage for long time. / |

**1)** The maximum weight refers to dry items.

**2)** For fabric mark meaning see chapter *HINTS AND TIPS: Preparing the laundry.*

**3)** This is the reference programme used to assess the compliance with EU ecodesign and Energy label regulations, Reg. (EU) 2023/2533 and Reg. (EU) 2023/2534. This programme is able to dry cotton laundry from an initial moisture content of the load of 60 % down to a target final moisture content of the load of 0 %.

**4)** Tested for Escherichia coli, Candida albicans and MS2 Bacteriophage. Indipendent test performed by Swissatest Testmaterialien AG in 2021 (Test Report No. 20212038).

## Woolmark Premium Wool Care - Green





The wool drying cycle of this machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled “hand wash” provided that the garments are washed in a Woolmark endorsed hand washing cycle and dried according to the instructions issued by the manufacturer of this machine. M2419
The Woolmark symbol is a Certification mark in many countries.

## 10.3 Additional Programmes

At the end of the programme list, there is a single position where it is possible to navigate to the secondary list called **More programs**.

ⓘ

If there are no more programmes to be displayed on the last position in the **More programs** screen, there will be **Reset** option instead of More.

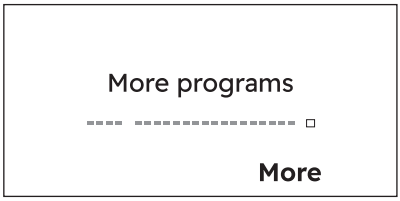


Press the right soft key next to **More** indication to enter the extra programs list.

Navigating this list works just like navigating the main list.

To go back to the main list, turn the rotary to the left to the **Back to main list** position and press the left soft key next to **Back** indication.




### List of default additional programmes

Our app provides you with **a wide choice of additional programmes**. Connect the appliance to our app and you will be able to choose the programme that suits your needs most.

ⓘ


Programme names are subject to change depending on market requirements without notice.
The App will give you a complete description of each programme.

| | |
|---|---|
| Duvet | Anti-Allergy |
| Towels | Pet Hair |
| Drying Rack | Pillow |
| Training Gear | Baby |
| Soccer/Rugby | Linen |
| Skiing Gear | Curtains |


### Reset additional programme list to factory default

At the end of the more programmes list, if the user has customised the programme list in the app, there is an option to reset it to the factory default list.

1. Rotate the dial to the end of **More programs** screen. The display shows **Reset list** screen.

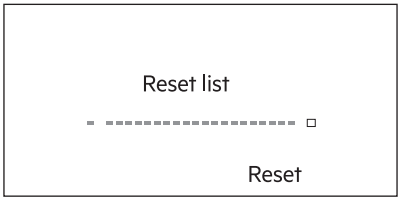


2. Taping the right soft key ▢ (**Reset**) will bring up a dialogue asking to cancel or confirm.

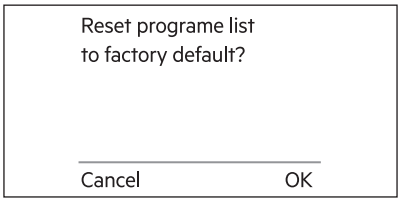


3. Tap the right soft key ▢ (**OK**) to reset the additional programme list to the factory default.

## 10.4 Programme options compatibility

| Programmes[1)] | Dryness Level | | | Extra anti-crease | Re-verse plus | Extra silent | Time dry |
|---|---|---|---|---|---|---|---|
| | | | | | | | |
| **Eco** | | ■ | | ■ | | | |
| MixCare | ■ | ■ | | ■ | ■ | | ■ |
| Cottons | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
| Synthetics | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
| Delicates | | ■ | | ■ | | | |
| Wool | | | | | | | |
| Rapid 3kg | | ■ | | ■ | | | |
| Bed Linen **XL** | ■ | ■ | ■ | ■ | ■ | | ■ |
| Jeans | ■ | ■ | | ■ | | | |
| Outdoor | | ■ | | ■ | | | |

| Programmes[1)] | Dryness Level | | | Extra anti-crease | Re-verse plus | Extra silent | Time dry |
|---|---|---|---|---|---|---|---|
| | | | | | | | |
| Down Jacket | ■ | ■ | | ■ | | | |
| Sportwear | | ■ | | ■ | | | |
| 1 item Fast | | ■ | | ■ | | | |
| Silk | | ■ | | ■ | | | |
| Hygiene | ■ | | | ■ | | | |
| Easy Iron | | ■ | ■ | ■ | | | |
| Refresh | | | | ■ | | | |


**1)** Together with the programme you can set 1 or more options. To activate or deactivate them, press the related touch button.

# 11. OPTIONS

## 11.1 Final dryness level for Wool programme.

Option suitable for Wool programme to adjust final dryness level.

- Tap the left soft key ☐ to set desired dryness level for Wool programme.

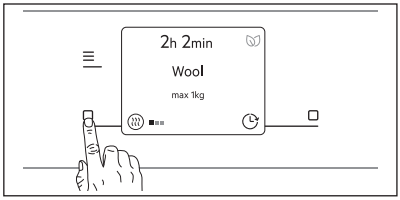


There are three default dryness levels available.

- ■□□ Standard
- ■■□ Extra
- ■■■ Maximum

## 11.2 Time dry

You can set the programme duration, from a minimum of 10 minutes to a maximum of 2 hours. The required duration is related to the quantity of laundry in the appliance.


ⓘ

We recommend that you set a short duration for small quantities of laundry or for only one item.


| TIME DRYING RECOMMENDATION | |
|---|---|
| 10 - 20 min | action of cool air only (no heater). |
| 20 - 40 min | additional drying to improve dryness after previous drying cycle. |
| >40 min | full drying of the small laundry loads up to 4 kg, well spun (>1200 rpm). |

To **activate** this option:


- Tap on the **Menu** soft key, rotate the dial until the display shows the Time dry option.

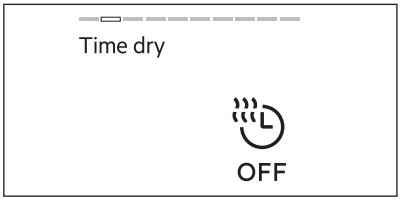



- You can activate this option by pressing the right soft key ☐. The display shows the minutes or hours of the time drying.

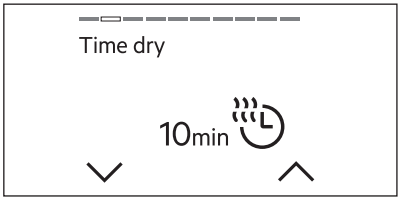


- Pressing the right soft key ∧ it is possible to increase the time by 10 minutes with each tap, up to 2 hours.

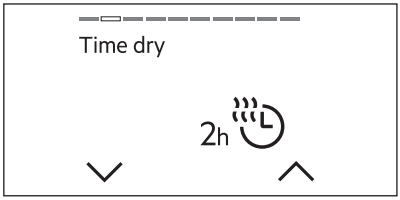


- If you want to decrease time tap the left soft key ∨, the duration will be reduced by 10 minutes with each tap.
- Once you have selected the desired timer wait 3 seconds or tap **Menu** ☰ and you will be redirected to the home screen where at the top of the display you will be able to see the time drying.

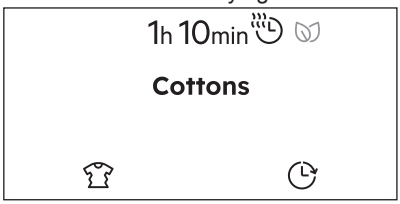


To **remove** the **time drying** option, select another programme by rotating the programme dial or:

- Navigate through the **Menu** ☰ to the **Time Dry** option.
- Reduce the time by pressing the left soft key until the display shows **OFF**

## 11.3 Extra anti-crease


This option extends the anti-crease phase by 90 minutes at the end of the drying cycle. This function reduces creases. The laundry can be removed during the anti-crease phase.

To **activate/deactivate** this option there are two possibilities.

**By taping left soft key**

ⓘ
if the option available for a selected programme on the home screen.

- Tap the left soft key ☐ and the icon (standard anti-crease) will change to the icon (extra anti-crease).

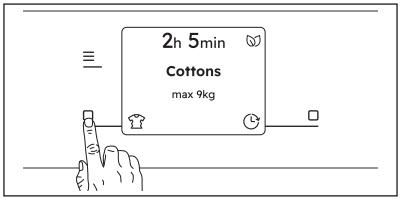


**By selecting option from Menu**

Tap on the **Menu** ☰ soft key, rotate the dial until the display shows the Extra anti-crease option.

- Tap the right soft key ☐ and the relevant indicator will turn On/Off.

## 11.4 Reverse plus

Increase drum reversing frequency to reduce items twisting and entanglement. To increase uniformity of drying result and help reduce creases. Recommended for large or long items (e.g. sheets, trousers, long dresses).

Tap on the **Menu** ☰ soft key, rotate the dial until the display shows the **Reverse plus** option.

To **activate/deactivate** this option:

- Tap the right soft key ☐ and the relevant indicator will turn On/Off.

## 11.5 Extra silent

The appliance operates with low noise without effect on the drying quality. The appliance operates slowly with longer cycle time.

Tap on the **Menu** soft key, rotate the dial until the display shows the **Extra silent** option.

To **activate/deactivate** this option:

- Tap the right soft key and the relevant indicator will turn On/Off.

## 11.6 End alert

The buzzer sounds at the:

- cycle end
- start and end of the anti-crease phase
- cycle interruption


The buzzer option is by default always on. You can use this option to activate or deactivate the sound.

Tap on the **Menu** soft key, rotate the dial until the display shows the **End alert** option.

To **activate/deactivate** this option:

- Tap the right soft key and the relevant indicator will turn On/Off.

If End alert option is deactivated, the display shows the End alert off icon.

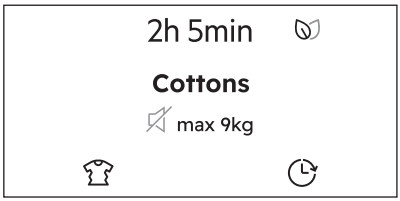


If the **Cycle End Alarm** is OFF (see **Machine settings** menu), End alert option is not available.

## 11.7 Finish In


With this option you can set the time to end of the selected cycle.

To **activate** this option:


- Tap on the **Menu** soft key, rotate the dial until the display shows the **Set timer to finish in** option.





- You can activate this option by pressing the right soft key . The display shows the hours of the time to end starting from 3 hours.

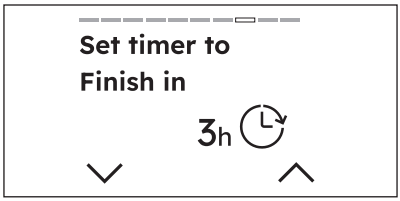


- Pressing the right soft key it is possible to increase the time by one hour with each tap, up to 24 hours.

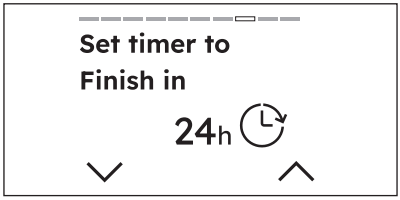


- If you want to decrease time tap the left soft key , the duration will be reduced by one hour with each tap.
- Once you have selected the desired timer wait 3 seconds or tap**Menu** and you will be redirected to the home screen where at the top of the display you will be able to see the countdown.

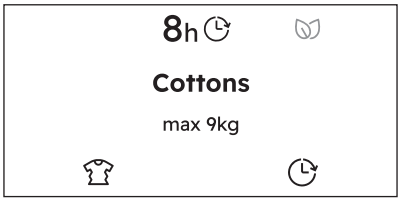


To **remove** the **Set timer to finish in** option.:


- Navigate through the **Menu** to the **Set timer to finish in** option.
- Reduce the time by pressing the left soft key until the display shows **OFF**

## 11.8 Child lock


With this option you can prevent the children from accidentally operating the appliance.

To **activate** this option:

- Tap on the **Menu** soft key, rotate the dial until the display shows the **Child lock** option.

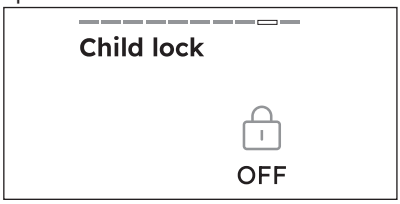



- You can activate this option by tapping the right soft key. The display shows the icon On.

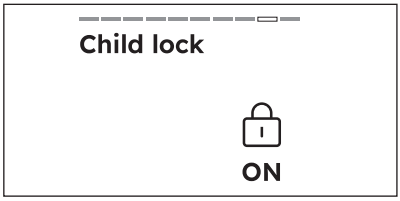


- After you have activated the child lock all touch buttons are deactivated. It is possible to turn the appliance off by means of the ON/OFF button.
- Before pressing the Start/Pause button the appliance cannot start.


The display shows the child lock icon.

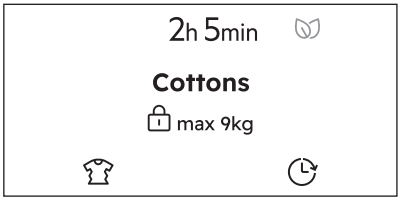



The appliance keeps the selection of this option after you switch it off.

To **deactivate** this option:

- Hold the right soft key for 3 seconds. A countdown will be visible in the display in the lower right corner.

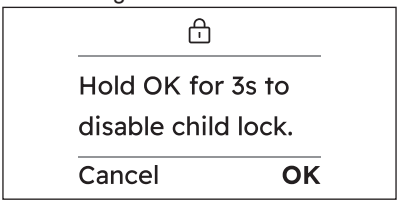


Once the option is deactivated the display will show the information as before activation,

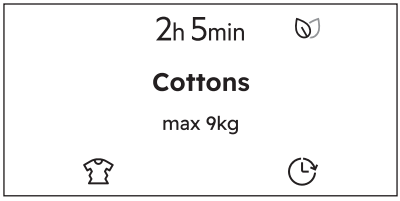


## 11.9 Favourites

**How to set a favourite cycle**
Up to three favourite cycles can be saved.

There are no favourite cycles saved by default.

Tap on the **Menu** soft key, rotate the dial until the display shows the Favourites option.

To **save** your favourite cycle:

- Select one of the three empty fields by tapping the right soft key.
- After two seconds, the display will show the selected cycle as a favourite recognizable by a heart at the top of the screen.

When you want to save the next favourite the first empty slot will be indicated automatically.

**How to replace a favourite cycle**
It is possible to **replace** favourites:

- Turn dial to select one of the three fields to be overwritten.
- Confirm the choice by tapping the right soft key.
- After two seconds, the display will show the selected cycle as a favourite recognizable by a heart at the top of the screen.

In order to delete favourites it is necessary to perform a factory reset of the appliance or by the app.


**How to access the favourites cycle**
To access the favourites from programmes list rotate the dial to the left.

If the fields are occupied the first favourite cycle will be displayed, then the second and eventually the third.

If the fields are empty, a suggestion on how to save new favourites will be displayed.

# **12.** MACHINE SETTINGS

In this part are explained the main settings of the appliance.

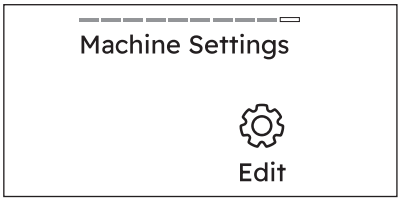


## 12.1 Language setup

It is possible to **change the display language** by scrolling through the list rotating the knob to find the desired language.

- Select it by tapping the right soft key ☐
- Go back ← to the previous view by tapping the left soft key ☐.

By turning the knob the selected language will be visible in white.

## 12.2 Default Dryness

With this setting you can change the default dryness.

This may be necessary since the dryness results are impacted by many conditions, e.g. the water type, the supply voltage or the ambient temperature etc.

**HOW TO ACHIEVE A PERFECT DRYING:**

1. Try to adjust the dryness level options (see "*Dial and buttons*" *SmartSelect* -***Dryness Level***" option ).
2. If you want to further increase the laundry dryness results, you can modify the default dryness setting (see below). This adjustment will act on most programmes, except **Eco**, Wool, Duvet, Down Jacket, Refresh programmes if available on the machine.

To **modify** the level:

- Tap the left soft key next to ∨ indicator to decrease default dryness.

- Tap the right soft key next to ^ indicator to increase default dryness.

There are three default dryness levels available.

- Standard
- Extra
- Maximum

Rotate the dial to move to the next setting.

## 12.3 Tank reminder

With this setting you can turn activate/ deactivate the tank reminder.

By default, the tank reminder indicator is on. It comes on when the programme is completed or when it is necessary to empty the water container.

Tap the right soft key ▢ to activate/ deactivate the tank reminder.

> ⓘ
>
> If a draining kit is installed (additional accessory), the appliance automatically drains the water from the water container. In this case we recommend that you deactivate the indicator of the water container.

Rotate the dial to move to the next setting.

## 12.4 Button sounds

With this setting you can turn off the sound of the buttons.

To **activate/deactivate** the sounds:

- Tap the right soft key ▢ and the relevant indicator will turn On /Off .

Rotate the dial to move to the next setting.

> ⓘ
>
> The sound of the on/off ⏻ button cannot be disabled

## 12.5 Cycle end alarm

With this setting you can change the cycle end alarm.

To **activate/deactivate or modify** the sound:

Tap the soft key next to v or ^ indicator to modify the cycle end alarm.

With this setting you have four possible choices:

- Long
- Medium
- Short
- Off

## 12.6 Display Brightness

With this setting you can change the display brightness.

To **modify** the level:

- Tap the left soft key next to v indicator to decrease brightness.
- Tap the right soft key next to ^ indicator to increase brightness.

Rotate the dial to move to the next setting.

> ⓘ
>
> There are five brightness levels available.

## 12.7 Guides

With this option you can see brief explanations of some features.

Rotate the programme dial and select by tapping the right soft key ▢ one of the following option:

- **Introduction**: information about the control panel, the SmartSelect, menu, soft keys and Remote start.
- **WiFi** : information about the onboarding

> ⓘ
>
> Go back ← to the previous view by tapping the left soft key ▢.

## 12.8 Operating hours counter

This function gives a possibility to display the total operating time of the appliance in hours, which is counted from the moment it is first switched on. The actual operating time of the cycles is shown (does not include pauses or delayed start time).

ⓘ

Hours counted are not deleted by the **reset to factory settings**.

### 12.9 Reset to Factory Settings

With this setting you can reset your appliance to the factory settings.

1. Tap on the right soft key ☐ to enter the option.
2. Tap on the left soft key ☐ to undo.
3. Tap on the right soft key ☐ to confirm the reset.
   Performing the reset will take a few seconds

ⓘ

Reset to factory settings deletes permanents options and favourites saved.

## 13. BEFORE FIRST USE

ⓘ

Rear drum locks are removed automatically when dryer is activated for the first time. Possible to hear some noise.

**To unlock the rear drum locks:**

1. Switch on the appliance.
2. Set any programme.
3. Press the Start/Pause button.

Drum starts to rotate. Rear drum locks are automatically deactivated.

**Before you use the appliance to dry items:**

- Clean the tumble dryer drum with a moist cloth.
- Start a 1 hour programme with moist laundry.

ⓘ

At the beginning of the drying cycle (first 3-5 min) there could be a slightly higher sound level. This is due to the compressor starting up. This is normal for compressor powered appliances such as refrigerators and freezers.

### 13.1 Unusual smell

The appliance is tightly packed.

After product unpacking you can feel an unusual smell. This is normal for brand new products.

Appliance is built of several different types of material which all together can generate unusual smell.

Over usage time, after few drying cycles unusual smell gradually disappears.

### 13.2 Noises


ⓘ

Different noises may be heard at different times during the drying cycle. They are perfectly normal operating sounds.


ⓘ

When Time Save option is selected the compressor noise can increase.


**Working compressor.**

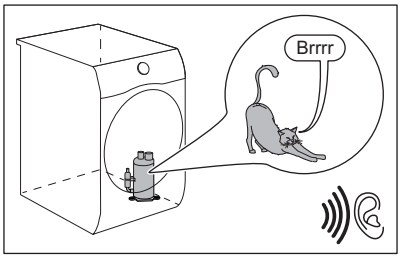



**Rotating drum.**

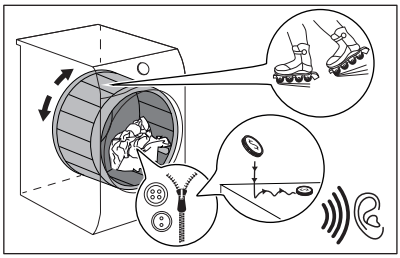

**Working fans.**

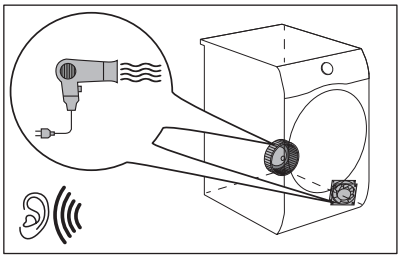


**Working pump and transferring condensation to the tank.**

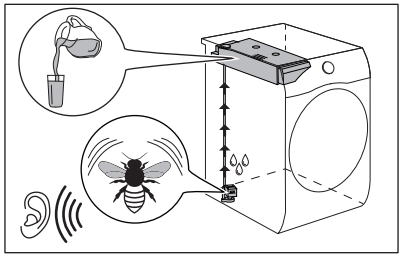

## **14.** DAILY USE

### 14.1 Start a programme without Finish In option

1. Prepare the laundry and load the appliance.

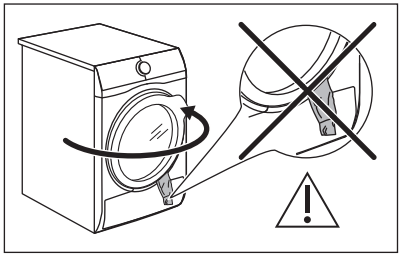


**⚠ CAUTION!**

Make sure that when you close the door, the laundry does not get caught between the appliance door and the rubber seal.

2. Press the on/off button to activate the appliance.

After a few seconds the display shows programme summary view with the following information:

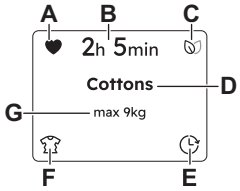


- **A.** Favourite, if already saved.
- **B.** Programme duration
- **C.** Eco feedback
- **D.** Selected programme
- **E.** Finish In option.
- **F.** Depends on selected programme ( e.g. Extra Anticrease, Final dryness level for Wool programme, .
- **G.** Maximum programme load.

3. Set the correct programme and options for the type of load.

ⓘ


Real drying time will depend on type of the load (quantity and composition), the room temperature and the initial moisture after spinning phase of your laundry.

4. Press the Start/Pause touch button.

The programme starts and during the first minutes of the cycle, the machine estimates the quantity of loaded laundry to better adapt the cycle profile and duration to effective load.

## 14.2 Starting the programme with Finish In option


1. Set the correct programme and options for the type of load.
2. Tap the left soft key ☐

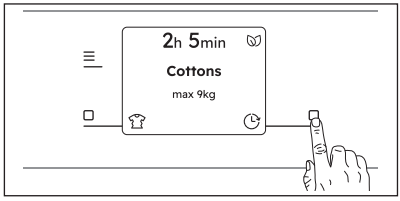


or tap on the **Menu** ☰ soft key, rotate the dial until the display shows the **Set timer to finish in** option.

3. ^ Increase or ˅ decrease time by taping soft keys ☐

Once you have selected the desired timer wait 3 seconds or tap **Menu** ☰ and you will be redirected to the home screen where at the top of the display you will be able to see the countdown.

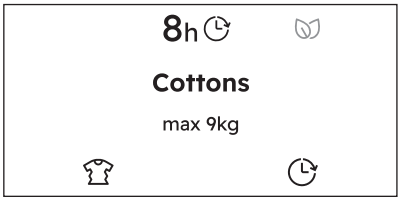



4. Press the Start/Pause touch button.

The drum starts rotating to perform the **SensiCare** estimation, if foreseen in the selected programme.

5. The appliance starts the countdown to the end of the programme and the programme will start at the right moment for ending.

## 14.3 The SensiCare System load detection


The SensiCare progress bar moves back and forth to communicate that estimation is in progress, if foreseen in the selected programme. .

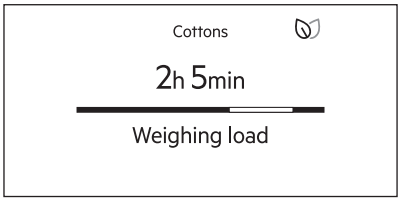


ⓘ

In case of **drum overload**, the maximum declared load the fallowing indicator comes on ⚠**Overweight** , during these 30 seconds, it is possible to open the door and remove the exceeding garments. Once removed, touch the Start/Pause button to start the programme again. If the laundry amount will not be reduced, the programme starts anyway. In this case, it will be not possible to guarantee the best results.

After the SensiCare accomplished estimates the quantity of loaded laundry the appliance starts selected programme and display shows following information:

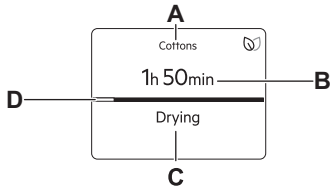


**A.** Selected programme
**B.** Remaining phase time
**C.** The phase of a cycle (e.g. drying, cooling)
**D.** Progress bar


## 14.4 Change a programme

1. Press the ⏻ on/off button to deactivate appliance
2. Press the ⏻ on/off button to activate the appliance.
3. Set the programme.


## 14.5 At the end of the programme

**When the programme is completed:**

- An intermittent acoustic signal operates.
- The display shows the completely filled progress bar and alternately messages pops up:
  **Remove items**

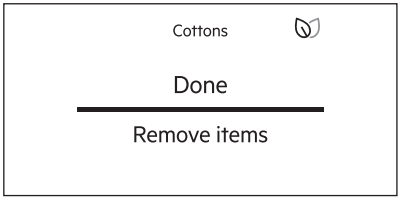


**Anti-crease**

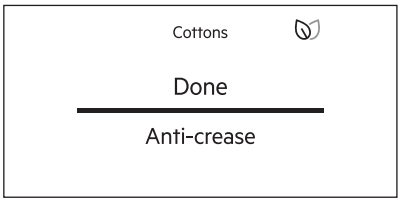


- The ▷|| Start/Pause indicator is on.


The appliance continues to operate with the anti-crease phase for approximately 30 minutes or more if Extra anti-crease option was set (see chapter *Option - Extra anti-crease* ).

The anti-crease phase reduces creasing.


You can remove the laundry before the anti-crease phase is completed. We recommend, for better results, that you remove the laundry when the phase is almost completed.

**When the anti-crease phase is completed:**


- The display shows the completely filled progress bar and alternately messages pops up:
  **Remove items**

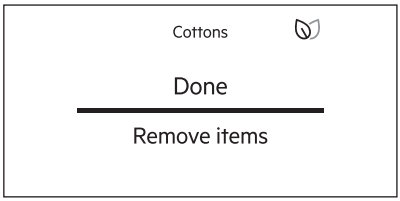


**Clean filter**

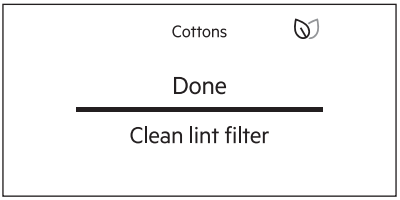


**Empty water tank**

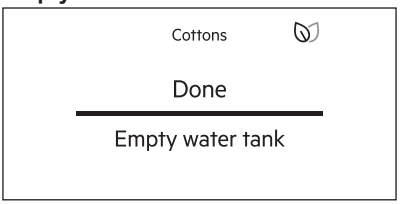


- ▷|| Start/Pause indicator goes off.

1. Press the ⏻ on/off button to deactivate the appliance.
2. Open the appliance door.
3. Remove the laundry.

Possible causes of unsatisfactory drying results:

- Inadequate default dryness level settings. See chapter *OPTIONS: Dryness Level - Adjustment of the target final moisture*
- Room temperature is too low or too high. Optimal room temperature is between 18°-25°C.

**Always clean the filter and empty the water container when a programme is completed.**

Leave the door slightly opened after every cycle to avoid moisture.

## 14.6 Low power mode

To reduce energy consumption, this function automatically deactivates the appliance:

- After 5 minutes if you do not start the programme.
- After 5 minutes from the end of the programme or anticrease phase.


When the appliance goes in low power mode, the display and icons turn off. You can reactivate it by pressing on/off button and the dryer.

**The default selected programme, after reactivate from low power mode is the Eco programme.**

If Wi-Fi is on and remote control is enabled, the remote start icon remains also when the appliance goes on low power mode, but in this case after appliance wakes up from low power mode the programme is set to previously selected programme.

### 14.7 Notifications and Reminders

If the icon will pops up in the left upper corner of the display, it indicates that there are notifications or reminders available to be browse.

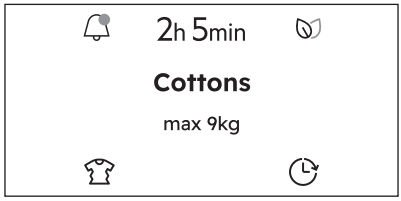


Pressing the menu key will show the notifications instead of going to the menu start page.

If there are multiple notifications, you can use the rotary or tap right soft key (**Next**) to walk through the notifications.

If you tap left soft key (**Skip**) , it will dismiss all notifications.

## 15. HINTS AND TIPS

### 15.1 Preparing the laundry

Loading the drum up to the maximum capacity indicated for the respective programmes will contribute to the energy saving.

Very often the clothes after washing cycle are kneaded and tangled altogether.
Drying kneaded and tangled clothes is inefficient.
To assure proper air flow and even drying it is recommended to shake and load one by one the clothes to the tumble dryer.

To assure proper drying process:

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.
- Turn items with the internal layer made of cotton inside out. Cotton layer must be faced outwards.
- Always set the programme suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable programme for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in the programmes chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.

- Shake the large clothes, fabrics before placing in the tumble dryer. It is to avoid moist places inside the fabric after the drying cycle.

| Fabric label | Description |
|---|---|
|  | Laundry is suitable for tumble drying. |
|  | Laundry is suitable for tumble drying at higher temperatures. |
|  | Laundry is suitable for tumble drying at low temperatures only. |
|  | Laundry is not suitable for tumble drying. |

# 16. CARE AND CLEANING

## 16.1 Periodic cleaning schedule

**Periodic cleaning helps to extend the life of your appliance.**

If the appliance is not used for a long time unplug the appliance.

**Indicative periodic cleaning schedule:**

| | |
|---|---|
| Cleaning the filter | When the message or symbol pops up: **Clean lint filter**  |
| Empty the water container | When the message or symbol pops up: **Empty water tank**  |
| Clean the Heat Exchanger | When the message or symbol pops up: **Clean condenser**  |
| Clean drum | Every two months |
| Clean the control panel and housing | Every two months |
| Clean the airflow slots | Every two months |

The following paragraphs explain how you should clean each part.

## 16.2 Removing the foreign items



Make sure that the pockets are empty and all loose elements are tied up before running the drying cycle. Refer to the "Preparing the laundry" section.

Remove any foreign items that you may find in the drum after the drying cycle (e.g. metal clips, buttons, coins, etc).

## 16.3 Cleaning the filter

At the end of each cycle the message or symbol pops up: **Clean lint filter**  and you must clean the filter.




The filter collects the lint during the drying cycle.

To achieve the best drying performance clean the filter regularly. The clogged filter causes the longer drying cycle and as a consequence the energy consumption increase.
Clean the filter by hand. Use a vacuum cleaner if necessary.


**⚠ CAUTION!**

When cleaning the filters, the lint should be thrown in the garbage bin and not washed through the drain in order to avoid spreading microplastics in the used water system.


1. Open the door. Pull the filter up.

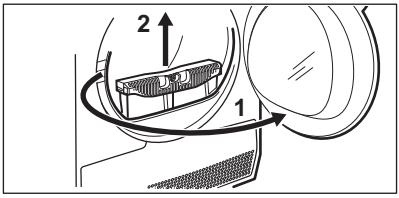


2. Push the hook to open the filter.

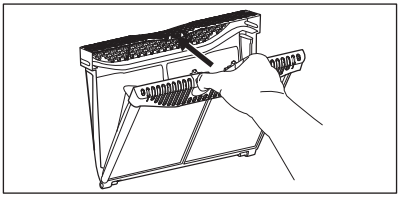



3. Gather lint with hand from both internal parts of the filter.

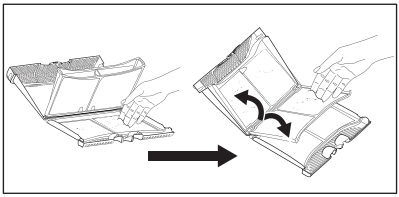

Throw the lint in the dustbin.

4. If necessary, clean the filter with a vacuum cleaner. Close the filter.
5. If necessary, remove lint from the filter socket and gasket. You can use a vacuum cleaner. Place the filter back inside the filter socket.

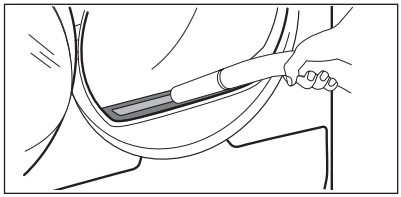

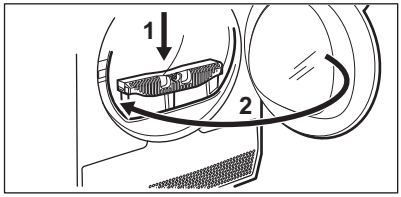



## 16.4 Emptying the water container

Empty the condensed water container after each drying cycle.


If the condensed water container is full, the programme stops automatically. The message or symbol pops up: **Empty water tank** on the display and you must empty the water container.

To empty the water container:


1. Pull the water container out keeping it in a horizontal position.

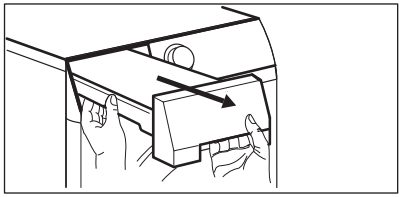

2. Pull the plastic connection out and drain the water into a basin or equivalent receptacle.

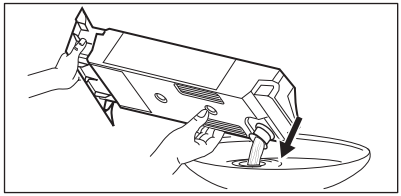

3. Push the plastic connection back in and place the water container back into position.

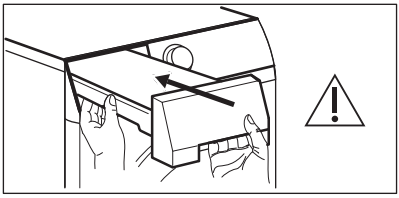

4. To continue the programme press the ▷|| Start/Pause button.

## 16.5 Cleaning the condenser


If the message or symbol pops up: **Clean condenser** on the display, inspect the condenser and its compartment. If it is dirty, clean it. Do the check not less than once a 6 months.

**⚠ WARNING!**

Do not touch the metal surface with bare hands. Risk of injury. Wear protective gloves. Clean carefully to avoid damaging the metal surface.


**⚠ WARNING!**

Do not use vacuum cleaner with a hard attachment to remove the fluff from the condenser, it may damages the ribs of the condenser, with leads to lower performance of the appliance and longer time drying.

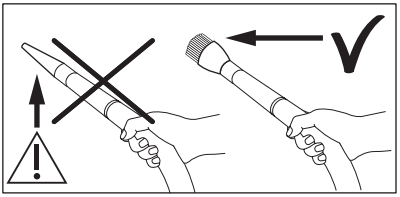


To inspect:


1. Open the door. Pull the filter up.

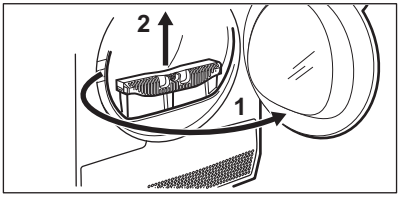



2. Open the condenser cover.

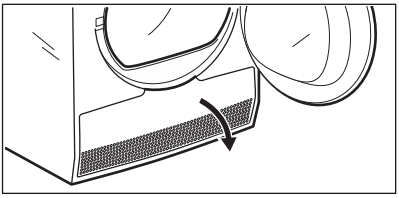


3. Turn the levers to unlock the condenser lid and lower the condenser lid. .

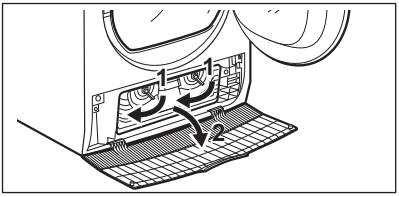



4. If necessary, remove the fluff from the condenser and its compartment. You can use a vacuum cleaner with a brush attachment.

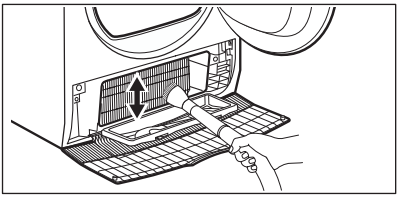


5. Close the condenser lid.

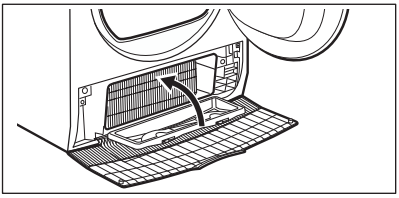

6. Turn the levers until it clicks into position.

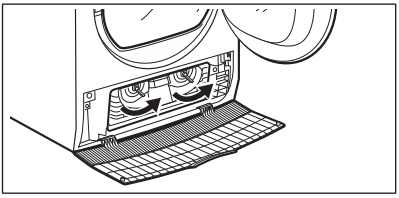

7. Put the filter back.

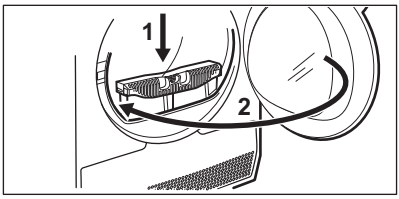


### 16.6 Cleaning the drum

**⚠ WARNING!**

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.

**⚠ CAUTION!**

Do not use abrasive materials or steel wool to clean the drum.

### 16.7 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.

**⚠ CAUTION!**

Do not use furniture cleaning agents or cleaning agents which can cause corrosion.

### 16.8 Cleaning the airflow slots

Use a vacuum cleaner to remove fluff from the airflow slots.

## 17. TROUBLESHOOTING

**⚠ WARNING!**

Refer to Safety chapter

### 17.1 ⚠Errors

The appliance does not start or it stops during operation.

First try to find a solution to the problem (refer to the table). If the problem persists, contact the Authorised Service Centre.

**⚠ WARNING!**

Deactivate the appliance before carrying out any check.

**In case of major problems, the acoustic signals operate, the display shows an error and the Start/Pause button may flash continuously:**

| Error | Possible cause | Remedy |
|---|---|---|
| **Error. Try restarting the machine** | Appliance motor overloaded.<br>Too much laundry or entrapped in the drum. | The programme was not completed. Remove the laundry from the drum, set the programme and restart the cycle. |

| Error | Possible cause | Remedy |
|---|---|---|
| **E91** | Internal fail. No communication between electronic elements of the appliance. | The programme was not finished properly or the appliance stoped too early. Switch the appliance off and on again.<br>If the error code appears again, contact the Authorised Service Centre. |
| **Mains voltage is unstable** | The mains supply is unstable. | Please wait until main supply is stable than press start. If the appliance paused the cycle without any indication then press the cycle start. If the warning will occur again check the power cord / socket integrity or main supply. |

If the display shows other errors, deactivate and activate the appliance. If the problem continues, contact the Authorised Service Centre.

In case of different problem with the tumble dryer check the table below for possible solutions.

## 17.2 Troubleshooting

| Problem | Possible solution |
|---|---|
| You cannot activate the appliance. | Make sure that the mains plug is connected to the mains socket. |
| | Check fuse in fuse box (domestic installation). |
| The programme does not start. | Press Start/Pause. |
| | Make sure that the appliance door is closed. |
| The appliance door does not close. | Make sure that the installation of the filter is correct. |
| | Make sure that the laundry is not caught between the appliance door and the rubber seal. |
| The appliance stops during operation. | Make sure that the water container is empty. Press Start/Pause to start the programme again. |
| | Load is too small, increase the load or use the Time dry programme. |
| The cycle time is too long or unsatisfactory drying result.**1)** | Make sure that the weight of the laundry is suitable for the duration of the programme. |
| | Make sure that the filter is clean. |
| | The laundry is too wet. Spin the laundry in the washing machine again. |
| | Ensure that the room temperature is higher than +5°C and lower than +35°C. Optimal room temperature is 18°C to 25°C. |
| | Set the Time dry or the Extra dry programme.**2)** |

| Problem | Possible solution |
|---|---|
| The App cannot connect to the dryer. | Check if your smart device is connected to the wireless network.<br>Check your home network and router.<br>Restart the router.<br>Contact your wireless service provider if there are problems with the wireless network. |
| | The dryer, the smart device, or both, need to be configured again. |
| The App frequently cannot connect to the dryer. | Try to move the home router as near the dryer as possible or consider purchasing a wireless range extender. |
| | Turn the microwave off. Avoid using the microwave and the Remote Control of the dryer at the same time. The microwaves disrupt the Wi-Fi signal. |

**1)** After maximum 5 hours, the programme ends automatically.

**2)** It can happen that some area remains humid when drying big items (e.g. bed sheets ).

# **18.** CONSUMPTION VALUES

## 18.1 Introduction

ⓘ

The user manual reports the EU energy label and ecodesign: Reg. (EU) 2023/2534 which is related to the Energy label Efficiency classes from **A** to **G**.

ⓘ

The QR code on the energy label supplied with the appliance provides a web link to the information related to the performance of the appliance in the EU EPREL database. Keep the energy label for reference together with the user manual and all other documents provided with this appliance.
It is also possible to find the same information in EPREL using the link **https://eprel.ec.europa.eu** and the model name and product number that you find on the rating plate of the appliance. Refer to 'Product description' chapter for the position of the rating plate.

## 18.2 Legend

| | | | |
|---|---|---|---|
| **kg** | Laundry load. | **rpm** | Spun at |
| **kWh** | Energy consumption. | | |
| **hh:mm** | Programme duration. | | |
| **%** | Initial moisture at the end of spinning phase and target final moisture at the end of drying programme.<br>The higher is the spin, the higher is the noise at spin, but lower is the initial moisture and energy consumption when drying the laundry. | | |

## 18.3 According to Commission Regulation Reg. (EU) 2023/2533 and Reg. (EU) 2023/2534.

ⓘ

Following values are obtained in laboratory conditions according with relevant standards. Different parameters can change the data, for example: the quantity of laundry, the type of laundry and the ambient conditions. The initial moisture content of the laundry, the water type, the supply voltage and if you change the default setting of a programme may also affect the energy use, the duration of the drying programme and final humidity.

| Programme | Load (kg) | Spun at (rpm) | Initial moisture (%) | Drying time (h:mm) | Energy consumption (kWh) | Target final Moisture (%) |
|---|---|---|---|---|---|---|
| Eco 1) | 9,0 | 1000 | 60 | 4:15 | 1,25 | 0,0 |
| Eco 1) | 4,5 | 1000 | 60 | 2:30 | 0,65 | 0,0 |

1) This is the reference programme used to assess the compliance with EU ecodesign and Energy label regulations, Reg. (EU) 2023/2533 and Reg. (EU) 2023/2534. This programme is able to dry cotton laundry from an initial moisture content of the load of 60 % down to a target final moisture content of the load of 0 %.

**Power consumption in different modes**

| Off mode power consumption (W) | Standby mode power consumption (W) | Delay Start (W) | Power consumption in networked standby (W) |
|---|---|---|---|
| 0,13 | 0,13 | 4,00 | 2,0 1) |

Time to Off/Standby mode is 15 minutes maximum.

1) The energy consumption of the connected function is approximately 17.5 kWh per year. To disconnect this function, please refer to the chapter 'Wi-fi - Connectivity setup'.

## 18.4 Common programmes

ⓘ

These values are indicative only.

| Programme | Load (kg) | Spun at (rpm) | Initial moisture (%) | Drying time (h:mm) | Energy consumption (kWh) | Target final Moisture (%) |
|---|---|---|---|---|---|---|
| Cottons Extra dry | 9,0 | 1000 | 60 | 4:12 | 2,21 | -3,0 |
| Cottons Extra dry | 4,5 | 1000 | 60 | 3:06 | 1,58 | -3,0 |

| Programme | Load (kg) | Spun at (rpm) | Initial moisture (%) | Drying time (h:mm) | Energy consumption (kWh) | Target final Moisture (%) |
|---|---|---|---|---|---|---|
| Cottons Iron dry | 9,0 | 1000 | 60 | 2:22 | 1,05 | 12,0 |
| Cottons Iron dry | 4,5 | 1000 | 60 | 1:34 | 0,63 | 12,0 |
| Synthetics Extra dry | 4,0 | 1200 | 40 | 1:17 | 0,56 | 0,0 |
| Synthetics Cupboard dry | 4,0 | 1200 | 40 | 1:00 | 0,46 | 1,0 |
| Synthetics Iron dry | 4,0 | 1200 | 40 | 0:45 | 0,35 | 12,0 |
| Wool | 1,0 | 1200 | 35 | 1:05 | 0,71 | 5,0 |

## **19.** ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

electrolux.com

136220060-A-202025

