TCL

The Creative Life

- Before using your dryer,please read this manual carefully and keep it for future reference.
- This manual shall also be available by sending E-mail to client.
- The drawings in this manual are for instruction only,it may vary from the model you buy.

Dryer

OWNER'S MANUAL

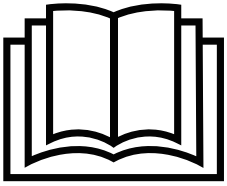

Read the instructions

TCL Home Appliances(HeFei)Co.,Ltd.

Contents

Safety information 1

Product Diagram 3

Installation Method and Precautions..... 4

Quick Guide..... 10

Instructions for Use 12

Cleaning and Maintenance..... 15

Service Guide 16

Environmental Protection and Wiring..... 17
Schematic Diagram

Product Fiche 18

Safety information

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- That the lint trap has to be cleaned frequently,
- That lint must not to be allowed to accumulate around the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil. acetone, alcohol. petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.
- Children of less than 3 years should be kept away unless continuously supervised.

-the maximum mass of dry textile material in kilograms to be used in the appliance;
-that the tumble dryer is not to be used if industrial chemicals have been used for cleaning;

Safety information

Parameter/Model	DF0840WD2NE
Rated Voltage/Frequency	220-240V~/50Hz
Rated capacity (kg)	8.0
Rated power (W)	630
Net weight (kg)	43
Gross weight (kg)	47
Outer dimensions (mm)	600*584*853
Package size (mm)	677*658*885
Refrigerant	R290
Refrigerant quantity(g)	115

- WARNING: In the appliance enclosure or in the built-in structure, keep ventilation openings clear of obstruction.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.



Warning: Flammable material, risk of fire

Product diagram

I. Component Name

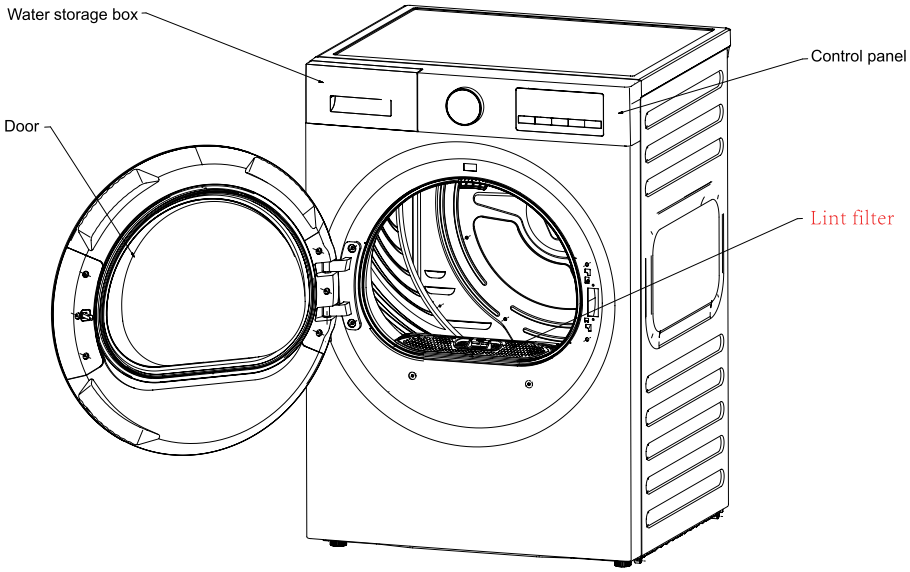

Note: This picture is only a reference diagram. Due to product improvement and serialization expansion, the appearance, color and functional components of the product may be inconsistent with this picture. Please refer to the actual product purchased.

II. List of Accessories

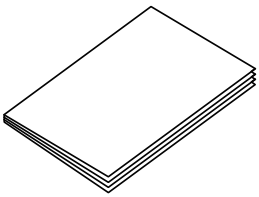

User Manual × 1

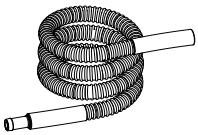

Drain hose x 1

Installation method and precautions

I. Pre-installation Precautions

- It is recommended to check whether the dryer is damaged during transportation. If any damage is found, please contact the Seller. Do not power on a damaged dryer;
- During handling, the maximum inclination angle of the machine shall not exceed 45°.
  In case of toppling, the dryer shall be set vertically for 2 hours before powered on;
- Installed the dryer in a dry and ventilated environment. Do not install it at a place affected by humid, steam and water (such as in the bathroom or besides a tap in outdoor balcony), or a location with accumulated cotton scraps or exposed to direct sunlight;
- Do not use ovens, gas appliances, etc. near the dryer to avoid danger;
- Install the dryer and washing machine together to facilitate drying after washing and spinning.
- Do not install the dryer in a place with heavy dust, so as to avoid dust accumulation blocking the air duct of the dryer.
- Please remove all the packages of the dryer, and then set it on a solid and flat surface, rather than on blankets, brackets, etc.
- Adjust the feet to realize stable installation. Do not fill the gap between the feet and the floor with woolen carpets or wooden strips, so as not to interfere with the operation of the machine.
- Install the dryer at least 5 cm from other furniture or walls.
- For appliances with ventilation openings in the base, a carpet must not obstruct the openings;
- Exhaust air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels;
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

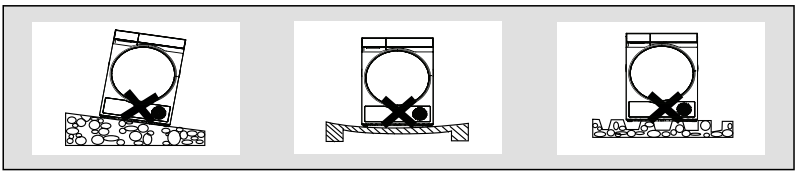

II. Installation of Dryer

1. Adjust the feet to make the dryer horizontal.
2. Connect the power supply.
   Check before power-on:
   1) The power supply voltage shall meet the requirements;
   2) The power socket shall match with the plug of the dryer;
   3) Confirm whether the power socket can bear the maximum power of the dryer, and ensure the socket is reliably grounded;

3. After the dryer is installed, please let it stand for 4 hours before starting it.

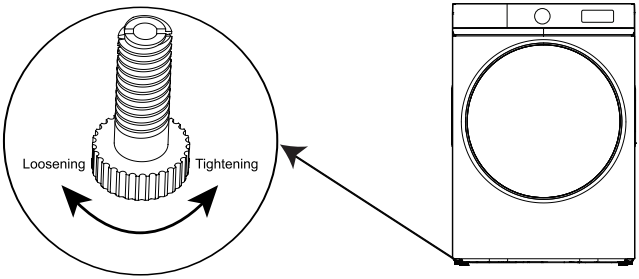

Installation method and precautions

Use and installation methods of accessories

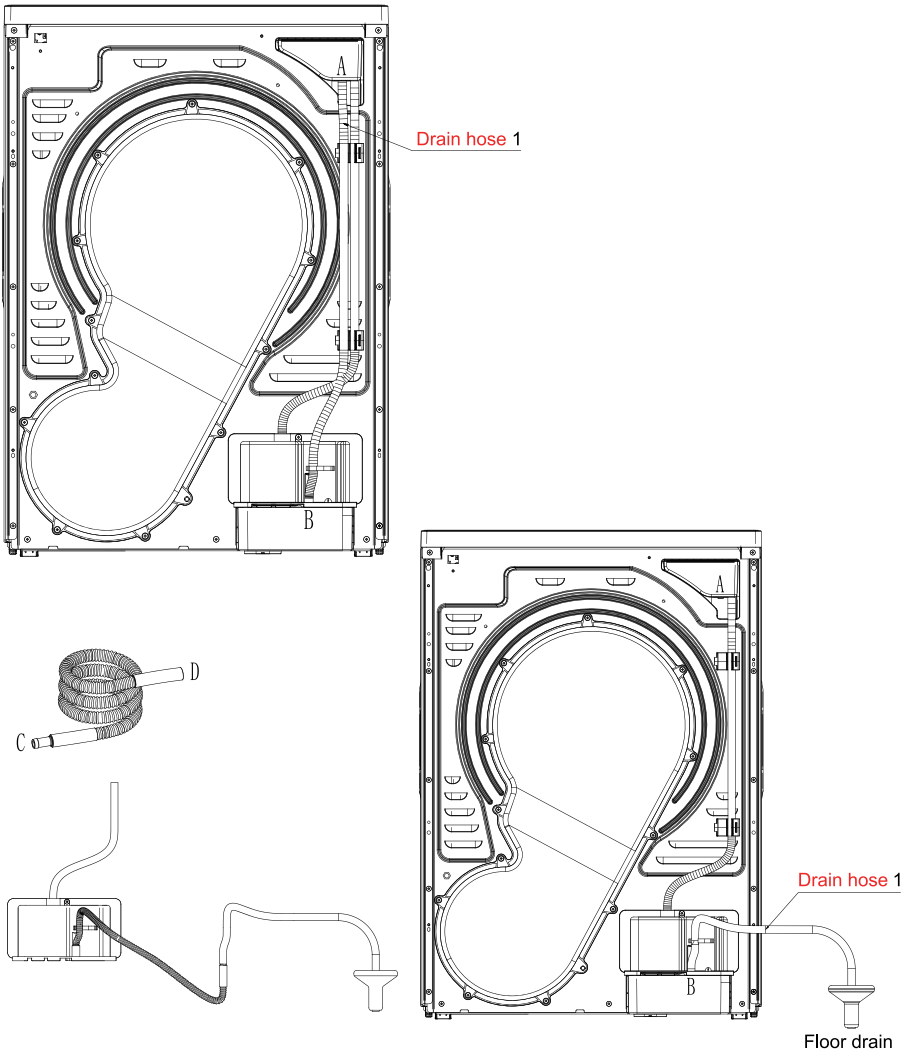

Installation instructions:

a. External drainage hose connection method:

1. Pull out drain hose 1 from position A and insert it into the floor drain to complete the external drainage hose connection. If you still need to use the water tank to receive water, reconnect the drain hose along the original path.

2. (If the length of drain hose 1 connected to the floor drain is not enough, an accessory can be used to extend the drain hose)

   The connection method is as follows: first pull out drain hose 1 from port B, then connect port C of the accessory drain hose with the outlet of drain hose 1, connect port D to port B, and insert the other end of drain hose 1 into the floor drain.

INSTALLATION INSTRUCTIONS

The stacking and installation of the heat pump dryer on the washer requires at least two people.
Please read the following installation instructions carefully before installing the connecting frame:

1. This manual is only used as installation instructions of washer and heat pump dryer stacked one above the other.
2. Please select the stacking location and reserve enough space for installing the water inlet pipe, drain pipe, power cord and other accessories.
   Keep enough clearance at the back of the machine so that the drain pipe can be connected smoothly without bending.
3. Before stacking the dryer, adjust the feet of the washer to make the washer level.

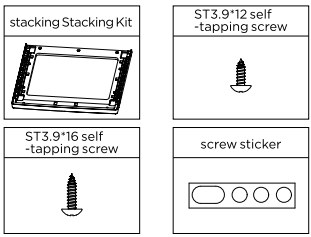

Installation Instructions

Installation instructions of stacking pad

1. Please stick the stacking pad on the dryer control panel (Figure 1). The stacking pad should be pasted at a distance of about 2.5mm from the gap of the drawer handle, and the distance on both sides should be kept equality (Figure 2);
2. After finish step 1， we can install the stacking kit。
   Installation instructions of stacking kit

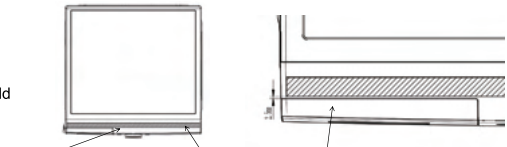

Installation Instructions

1. Place the stacking Stacking Kit assembly on the upper cover plate of the washer, and adjust the position of the stacking Stacking Kit assembly so that its left, right and front are aligned with the upper cover plate of the washer respectively (Fig. 1).
2. Take out four ST3.9*12 self-tapping screws from the accessory bag and fix the stacking Stacking Kit assembly on the top cover plate of the washer (Fig. 2).
3. Place the dryer on the stacking Stacking Kit so that its left, right and front are aligned with the stacking bracket respectively (Fig. 3).
4. Take out four ST3.9*16 self-tapping screws from the accessory bag and fix the dryer base on both sides of the stacking bracket assembly (Fig. 4).
5. Stick a screw sticker on both screw holes of the stacking bracket (Fig. 5). Then the stacking bracket is installed.

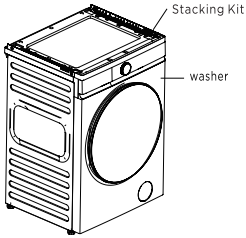

Figure 1

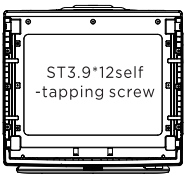

Figure 2

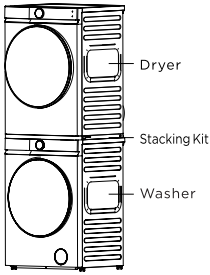

Figure 3



Figure 4



Figure 5

Note

The heat pump dryer should be installed and fixed on the workbench of the washer. Before installation, ensure that the heat pump dryer is smooth to prevent shaking and tipping.
Also you can use the stacking kit to stacked with a dryer with 439mm side plate of the box.
To purchase stacking kit, please contact sales network.

Installation method and precautions

During use, please pay attention to the safety precautions and operate carefully based on common sense.
The Company shall not be liable for any loss caused by improper use.
Refer to the icons below for the classification and instruction of possible hazard or damage degree caused by incorrect operations.

Warning Violation of the requirement may cause serious personal injury or death.

Caution Violation of the requirement may cause minor personal injury or substance damage.

Refer to the icons below for the classification and instruction of requirements.

This icon indicates the prohibited operations.

This icon indicates the obligatory operations.

Warnings and Precautions

- This product is Class I electrical appliances. Please pay attention to electrical safety when using it!

1. The power supply must be provided with reliable grounding, and the earth lead of the wire shall be directly buried into the ground, which must not be connected with public facilities, such as tap water pipes and gas pipelines.
2. The cross-sectional area of power supply system wires must meet the normal load requirements of electrical appliances.
3. The dry must be connected to a special socket that shall be a product with the national compulsory certification, being able to carry a current of more than 10A. For the consideration of safety, it is strictly prohibited to use the dry in case the power supply in your home fails to meet the above requirements.
4. In order to prevent errors in the installation and use of the socket and ensure the electric safety, the socket must be installed and the ground wires must be connected by people with common electric knowledge.
5. If the power cord is found damaged, it must be replaced by professional staff.
6. It is not allowed to connect the ground wire with the live wire or neutral wire; otherwise, the shell will be charged, which will easily lead to electric shock.
7. When the dryer finishes, it is better to pull out the power plug from the socket to ensure safety.
8. The machine is power by AC power, and it can run normally when the voltage changes within 10%.
9. If it is necessary to use an earth leakage (grounding protection) circuit breaker, the symbol must be ⏛, which can ensure that the power plug matches the socket.

- For safe use, please use the original parts and accessories provided by the manufacturer.
- If the dryer can no longer be used, cut the power cord and break the door hook device. Dispose waste and worn electrical appliance in designated disposal centers.
- Do not dry the clothes that are not suitable for drying in the dryer.
- Do not dry dirty clothes before washing.
- Do not use the dryer if there is a dust hazard (e.g. coal seam, rock powder).
- Do not lean against the door, or climb or sit on the dryer.
- If the ambient temperature around the dryer is lower than 0°C, frost damage may occur.
- Protect children from the packaging materials.

Prohibited Items

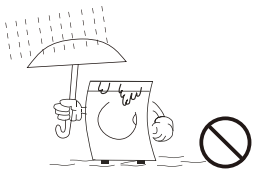

The dryer must not be installed in the open air or in a humid environment. It must be ventilated and dried before use if wet by water.

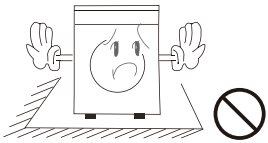

Do not place the dryer in an enclosed space. Please install the dryer in a well-ventilated place to avoid other accidents.

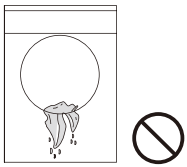

Do not put wet clothes not spin dried directly into the dryer for drying. Please put the clothes into the dryer after dehydration to prevent water drops on electrical devices and damages to the dryer.

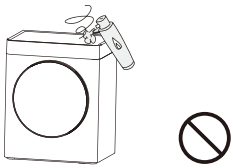

When the dryer is set to work, do not use flammable spray nearby. In case of gas or flammable gas leakage, do not plug or unplug the power plug or turn on/off the dryer.

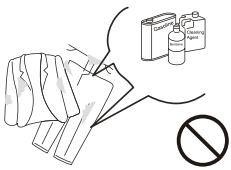

Do not dry clothes with flammable cleaning agents, dry cleaning solvents, gasoline, banana oil or other chemicals.



Do not dry raincoats, bicycle covers or other items containing rubber or similar elastic materials.

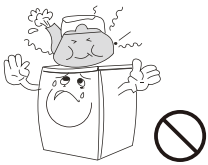

Do not place any hot or heavy objects (such as kettles with hot water) on the dryer.

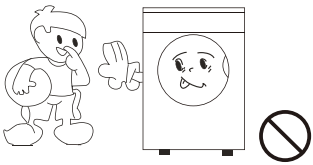

For the sake of safety, unattended children or disabled persons are prohibited from using the machine.

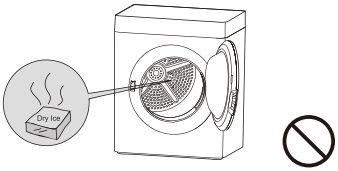

Do not store cigarettes, lighters, dry ice, gasoline or other flammable and explosive materials in the dryer.

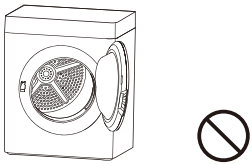

Do not open the door until the dryer procedure is completed, so as to prevent scalding of skin due to overheating.

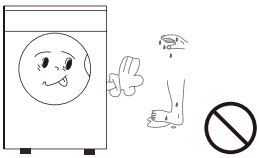

Do not use the dryer when there is water on your hands and feet.

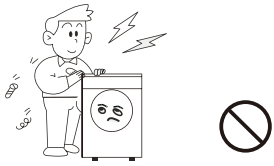

Do not disassemble, repair or modify the dryer by yourself.

Obligatory Operations

Do not unplug or switch the power supply when the dryer is working normally. When not in use or cleaning, be sure to unplug without pulling the power cord. Do not plug or unplug the power cord with wet hands.

Quick guide

⚠ Caution

- Before using the machine, please make sure that it has been correctly installed according to the installation instructions.

I. Prepare for drying

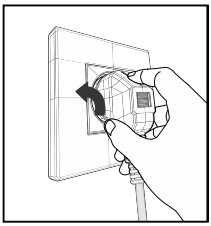

1. Connect the power plug properly.

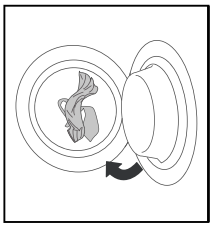

2. Put in clothes

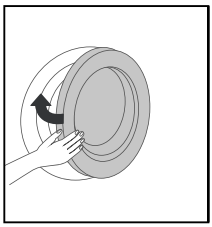

3. Close the door

⚠ Caution

- The laundry shall only be put into the dryer after spin dried at a speed of more than 1000 rpm.

II. Start Drying

- Turn the knob left and right to turn on the dryer.

III. Finish Drying

When the dryer is finished, the dryer will sound or display the word "End".

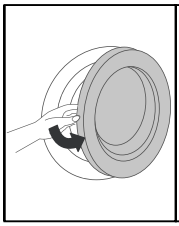

1. Open the door and take out the laundry.

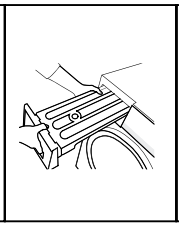

2. Pull out the water box.

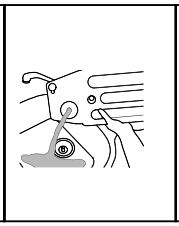

3. Pour out the water in the water box.

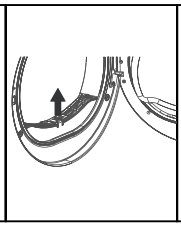

4. Clean the Lint filter

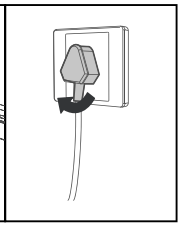

5. Disconnect the power supply

⚠ Caution

- If a socket with a switch is used, please directly press the switch to turn off the power supply.

1. Check

- ☑ Empty the water box and install it in place.
- ☑ Clean the scrap filter and install it in place.
- ☑ Check for special drying requirements.

2. Preparation

- ☑ Clear the bag and take out any coins, sand, keys or other items. 
- ☑ Knot the tie, button up and zip up. 
- ☑ Do not overload the dryer. Please spread out the clothes before putting them into the dryer. 
- ☑ When drying, please turn over the clothes with buttons before putting them into the dryer. 
- ☑ Vulnerable clothing needs to be placed in a nylon net before drying. 

General Knowledge and Use Skills of Dryer

(1) Put the laundry into the drum after spin dry. Raise the spinning speed to shorten the time for drying, thus reducing the energy consumption;
(2) Put the clothes into the dryer after shaking, so as to speed up the drying;
(3) Avoid overload of the dryer;
(4) Regularly clean the drum and Lint filter with a wring-out wet towel;
(5) Clean the filter regularly;
(6) The Lint filter must be completely dried before being put into the dryer;
(7) In order to obtain uniform drying effect, please classify according to the type of fabric and select the appropriate drying procedure. Be sure to follow the label information and select the right drying procedure to avoid unnecessary damage to clothes;
(8) Do not dry the sizing fabric, because a thin layer of sizing powder will reduce the drying effect;
(9) It is recommended to use a timing procedure for a small amount of fabric;
(10) Make sure that the airflow at the vent is not obstructed, and do not block or seal the vent;
(11) Warm fabric feels wetter than that of normal temperature, so it is recommended not to over-dry the clothes.

⚠ Caution

- The dryer is a household dryer. Please operate according to the recommended dryer capacity and procedures.
- DO NOT dry vulnerable or delicate fabrics such as silk and artificial fabrics, to avoid wrinkling.

The reference weight of common clothes is as follows			
 Blended coat (about 800g)	 Jacket (cotton, about 800g)	 Work clothes (upper and lower) (cotton, about 1120g)	 Shirt (cotton, about 300g)
 Sweatshirt (cotton, about 180g)	 Sleepwear (about 200g)	 Jeans (about 500g)	 Underwear (cotton, about 70g)
 Socks (blend, about 30g)	 Towel quilt (cotton, about 900g)	 Single bed sheet (cotton, about 600g)	

I. Function Descriptions

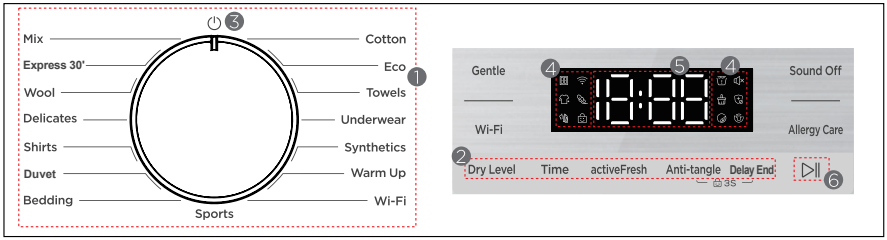

1- Procedure selection knob 3-Power on/off 5- Time/Error code
2- Function selection button 4- Indication icon 6-Start/Pause button

Indication icon	Function	Description
	Can be stored	This indicates that clothes can be stored after drying.
	Put clothes on immediately	This indicates that clothes are ready to be worn immediately after drying.
	Iron Dry	Clothes remain slightly damp after drying. To prevent wrinkles after drying, iron the clothes or hang them up.
	Wi-Fi	Unconnected state: After the machine is powered on for the first time, the icon flashes for a period during which it can be connected to the network. After the icon goes out, press the "Wi-Fi" button. The icon will flash for a period of time, during which it can be connected to the network. Connected state: The icon remains on when the machine is powered on or running.
	Gentle	It indicates that the gentle dry function is enabled.
	Child Lock	If this icon lights up, the cycle is locked. Any attempt to modify the cycle will be invalid.
	Water Storage Tank Full Alarm	This indicates that the water storage tank is full and needs to be emptied.
	Check Filter Alarm	Filter cleaning prompt.
	activeFresh	This indicates that the refresh feature is activated. The machine will automatically refresh the load after drying is complete.
	Sound on/off	When this icon is lit, the Sound Off function is activated, and all key sounds are disabled.
	Allergy Care	It means that the Allergy Care function is turned on.
	Anti-tangle	Prevent entanglement.

II. Operation Instructions

（1）Power on the machine and turn the [knob] to any program position，the display screen will light up，and the machine will show the default program settings.

You can select the desired program by turn the [knob] .

（2）Press these function keys to choose functions，such as [Dry Level] ,[Delay] ,[Time Dry] and [Sound off].

（3）Press the [⏯] button to start the machine.

1) Program running: The inner tub will be continuously rotate, the ":"on the display screen will keep flashing, and the remaining program time will be displayed。

2) Program completed: The display screen will show "End" accompanied by a completion beep. If the clothes are not removed within 1 minute, the machine will automatically shut down.

3) If the machine stops abnormally or displays error codes during program running, refer to the "Error Display and Solutions" section.

Instructions for use

S/N	Procedure name	Suggested Max Dry Capacity(kg)	Instructions for use	Dry level		Additional functions			
		8		Default	Optional range	Allergy Care	Time	Anti-tangle	Gentle
P01	Mix	5	Suitable for drying mixed fabrics, such as cotton, linen, and synthetic fibers.			P	N	S	P
P02	**Express 30'**	0.5	Suitable for drying 1-3 pieces of synthetic fiber/thin cotton garments with low moisture content.	N	N	N	P	S	N
P03	Wool	1	For auxiliary drying of machine washable wool or wool blended fabrics	N	N	N	P	N	N
P04	Delicates	2	For clothes made of real silk fabrics			N	N	N	P
P05	Shirts	1	Suitable for drying shirts and short jackets made of cotton and blended fibers, with minimized wrinkling.			N	N	O	P
P06	Duvet	1.5	Suitable for drying down jackets and similar garments, helping to protect the down filling.			P	N	S	P
P07	Bedding	2	Suitable for drying large items such as bed sheets and duvet covers.			P	N	O	P
P08	Sports	3	Suitable for drying sportswear, effectively helping to remove sweat odors.			N	N	S	P
P09	Cotton	8	Suitable for everyday drying of cotton, linen, and cotton blend garments.			P	N	S	P
P10	Eco	8	For New EU energy test For cotton and linen fabrics			N	N	S	N
P11	Towels	4	Suitable for drying towels/bath towels.			P	N	S	P
P12	Underwear	2	For clothes made of soft fabrics like silk			P	N	S	P
P13	Synthetics	4	Suitable for drying cotton, linen, and synthetic fabrics.			N	N	S	P
P14	Warm Up	4	Suitable for quick warming of dry clothes with a timed operation feature	N	N	N	P	S	P
P15	Wi-Fi	5	For networking			N	N	S	P
Wi-Fi	Curtain	2	For four sets and one set of curtains			P	N	O	P
Wi-Fi	Kids	2	Suitable for drying baby's clothes			P	N	S	P
Wi-Fi	Duvet	2	For four sets and one set of curtains			P	N	O	P
Wi-Fi	Refresh	4	Heats clothes for a set time and freshens them by removing odors. Users can adjust the drying time using the "Time" button according to the load and their own experience.	N	N	N	P	S	N
Wi-Fi	Rack	1	Dry with a drying rack (not applicable in some models)	N	N	N	P	N	N
Wi-Fi	Outdoor	2	For clothes of outdoor materials			P	N	S	P
Wi-Fi	Outdoor+	2	For clothes of outdoor materials			P	N	S	P
Wi-Fi	Silk	2	For delicate fabrics such as silk			N	N	N	P
Wi-Fi	Cold Air	4	Regular clothes refreshing without heating	N	N	N	P	S	N
Wi-Fi	Jeans	4	For clothes of jean materials			P	N	S	P
Wi-Fi	Hijab	1	For clothes of Hijab materials			N	N	S	P

Remarks:

（1）P: Default off, optional to enable; N: Not selectable; O: Default on, cannot be switched. S: Default on, can be switched.

（2）Additional functions not specifically marked are all selectable.

（3）Using the recommended load for drying can achieve the best drying results.

III.Additional Functions

（1）Dry Level Function

1) In standby mode, dry levels can be adjusted for all program except Quick30', Wool, Allergy Care, Cold Air, Time Dry , Refresh, and Rack.
2) Program with dry levels have default settings and can be toggled between "Iron Dry (if available)", "Cupboard Dry (if available)", and "Extra Dry (if available)", with corresponding icons remaining lit.

（2） Delay End Function

1) The delay time refers to the time when a program ends.
2) In standby or delay pause mode, delay can be made using the [Delay End] button. Users can set delay between X~24 hours for the selected program (where X is the initial delay time, varying by program). Pressing the button increases the delay time by 1 hour up to a maximum of 24 hours before deactivating delay and displaying the current program's operational time, with selection looping allowed.

（3）Time Function

1) This button applies only to the **Express 30'**, Wool, Cold Air, Time Dry, Refresh, and Rack program. After the user selects the above program, the corresponding time will be displayed.
2) In standby mode, pressing the [Time] button will increase the program time in a continuous loop.

（4）Sound Off Function

1) In standby or operation mode, pressing the [Sound Off] button toggles the buzzer on or off.
2) The Sound Off function will not shield fault alarms.

（5）Child Lock Function

1) In operation mode, press and hold [activeFresh] + [Features] buttons simultaneously for 3 seconds. If the buzzer is enabled, it will produce an active sound. All buttons on the keypad except for the power button will be locked, while a lock icon is displayed.
2) The child lock function is only activated when a program is running; it will be automatically released in case of fault alarm, program end, or door opening.

（6）activeFresh Function

1) In standby or pause mode, all program support selecting the [activeFresh] function.
2) During the activeFresh stage, pressing the [Start/Pause] button or the [activeFresh] button will deactivate the activeFresh function, and the screen will display “End”.

（7）Gentle Function

In standby mode, gentle function is available for all program except **Express 30'**, Wool, Eco, Cold Air, Refresh, and Rack. Press the [Features] button to activate the gentle function, and the corresponding icon will be displayed.

（8）Anti-tangle Function

In standby mode, the anti-tangle function is available for all program except Wool, Delicates, Rack, and Silk. The anti-tangle function is enabled by default. For program other than Shirt, Bedding, Curtain, and Duvet, you can deactivate this function by pressing the [Features] button.

Instructions for use

（9）Wi-Fi Function

1）Unconnected status: In standby mode, rotate the knob to the WiFi program and verify that the door is securely closed.Press and hold the [Wi-Fi] button for 3 seconds to enter network. Networking can be done during the flashing and the buzzer beeps as a reminder.

2）Connected status: The icon remains on when the machine is powered on or running.

Cleaning and maintenance

⚠ Disconnect the power plug from the socket before cleaning and maintenance

● Clean the filter

Check and clean the Lint filter screen before and after each use.

When the screen displays , please clean the filter and make sure that it is put back in place.

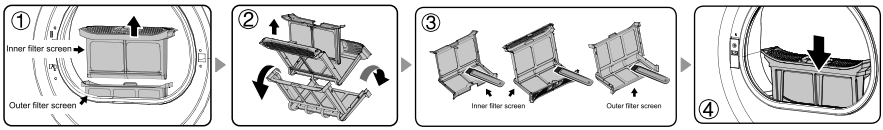

Open the door and take out the filter

Separate the inner and outer filters

Clean the inner and outer filters respectively

Reset the filter and put it back in place

Note: After cleaning, please install the filter in reverse order of removal and reinstall it in place.

● Clean the dryer

Clean the dust and stains on the surface of the machine body and main control board with a rag. Do not use organic solvents or corrosive agents to avoid damage to the machine.

● Clean the drum

After the dryer has operated for a period of time, the calcium contained in the clothing care agent or water will form a barrier layer that is almost invisible to the naked eye inside the drum. The inner wall of the drum shall be cleaned regularly with a wet cloth.

● Clean the water tank

When the machine is running, the steam condenses into water and is stored in the water tank

Check and empty the water tank before and after each use. When the dryer displays /FUL, please empty the water tank and restart it.

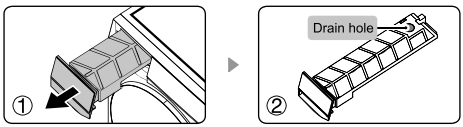

Remove the water tank from the dryer, drain the water through the drain hole and reset.

Note: Condensed water is not drinkable and cannot be used for processing food. After the end of the procedure, the water tank shall be emptied in time.

Service guide

Service guide

Fault display and solution

Fault Display	Possible Causes	Solutions
Filter Indicator Light Flashing	Filter cleaning reminder(no buzzing sound)	Clean the filter
The display time flashing when the machine is running	The door is opened	1. Please close the door. 2. Please contact the service when the display time still flashing after the door is closed
FUL	1.Water storage tank full	1.Empty the water in the water storage tank
	2.Water storage tank not properly installed	2.Correctly install the water storage tank
	3.Float malfunction	Contact after-sales service
E41	1.Temperature too high	
	2.Temperature sensor terminal loose	
	3.Temperature sensor malfunction	
E71	Mainboard communication cable loose	
	Mainboard communication failure	

Abnormal Phenomena and Solutions

Abnormality	Solution
No display on the panel	1. Confirm whether the socket is normally energized 2. Confirm whether the power supply of the machine is connected normally 3. Confirm whether the power button is pressed
The machine cannot be started	1. Confirm whether the door is closed 2. Confirm whether the start button is pressed and responds normally 3. Confirm whether to select the delay function Start the machine after a specific time if time delay is set
The procedure runs for too long or the clothes do not dry	1. Clean Filter Screen 2. Remove the condensate in the water tank 3. Keep the machine in a well-ventilated environment. 4. Select the appropriate procedure.

Note: Due to the automatic drying function of the dryer, the display time may change during operation, which is normal.

Remark:

The display show “EP” is not a error， it's means user change the program when the machine is running. Please pause machine and select others program by turn the [knob] if you want to change running program.

Environmental protection and wiring schematic diagram

Packaging material

- If the material is marked with "", it indicates that it can be recycled.

  >PE = Polyethylene

  >PS = Polystyrene

  >PP = Polypropylene

  Materials made from the above materials can be recycled, and you just need to throw them into the appropriate trash bin.

- If the product is marked with a "" on the package, it indicates that the product cannot be disposed of as household appliance waste, but should be handed over to an appropriate electronic and electrical device disposal station. Proper disposal of used appliances prevents potential negative impacts and protects the environment and human health. Otherwise, they may cause some waste.

Ecological information

In order to save energy and protect the environment, we recommend the following:

- Try to use the machine with large load because it is not economical to work with small load.
- To avoid wrinkling and save energy, please do not dry the dried clothes.
- Please select the drying procedure according to the type of clothing.
- Clean the filter regularly to avoid increasing drying times and wasting electricity.
- Keep the room ventilated and the indoor temperature shall not exceed 35°C.

⚠ NOTE:

1.Eco test program in accordance with Requlation (EU) 2023/2534 for energy labelling measured in accordance with EN 61121 and suitable for drying normal cotton load at rated load capacity.
2.The Company reserves the right to change the design of the product. The product you purchased may have been improved and is not completely consistent with this Manual, but its performance and usage will not be changed. Please feel free to use it.

Product Fiche

Supplier's name or trade mark (a) (c):TCL					
Supplier's address (a) (c):No.10 Yunhu Road, Economic Development Zone, Hefei 230601, Anhui, China					
Model identifier (a): DF0840WD2NE					
Technology of tumble dryer			electric condenser		
General product parameters:					
Parameter	**Value**		**Parameter**	**Value**	
Rated capacity (b) (kg)	8.0		Dimensions (a) (c) in cm	Height	85
				Width	60
				Depth	59
Energy Efficiency Index (EEI) (b)	70		Energy efficiency class (b)	[A/B/C/**D**/E] (d)	
Condensation efficiency (%) (b) (if applicable)	82		Condensation efficiency class (if applicable) (b)	[A/B/**C** /D] (d)	
Weighted energy consumption in kWh per drying cycle(h). Actual energy consumption will depend on how the appliance is used.	1.19				
Programme duration (b) (hours:minutes)	Rated capacity	3:25	Type	free-standing	
	Half	2:05			
Acoustic airborne noise emission (b) (dB(A) re 1 pW)	64		Acoustic airborne noise emission class (b)	[A/**B**/C/D] (d)	
Off-mode (if applicable) (W)	0.50		Standby mode (if applicable) (W)	N/A	
Delay start (W) (if applicable)	4.00		Networked standby (W) (if applicable)	N/A	
For household tumble dryers equipped with a heat pump, the chemical name or the accepted industry designation of the refrigerant gas used, without prejudice to Regulation (EU) No 517/2014 on fluorinated greenhouse gases (1) (a) (c).				R290	
Additional information (1) (c)					

(1) Regulation (EU) No 517/2014 of the European Parliament and of the Council of 16 April 2014 on fluorinated greenhouse gases and repealing Regulation (EC) No 842/2006 (OJ L 150, 20.5.2014, p. 195).

(a) This item shall not be considered relevant for the purpose of Article 2(6) of Regulation (EU) 2017/1369.

(b) For the eco programme.

(c) Changes to those items shall not be considered relevant for the purpose of Article 4(4) of Regulation (EU) 2017/1369.

(d) If the product database automatically generates the definitive content of that cell the supplier shall not enter those data.