■ Images are for reference only. Products are subject to change without notice.
■ Please read the instruction manual carefully before use and keep it for future reference.

TCL

RP503SSE1NE

USER MANUAL

REFRIGERATOR

PLEASE READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

Contents

Thank you for purchasing a TCL refrigerator.
We hope you enjoy using your new TCL refrigerator. We are committed to providing you with excellent service.

Safety instructions ---------- P2
Product introduction ---------- P5
Handling and placement ---------- P6
Preparations prior to use ---------- P7
Operation keys ---------- P8
Care and maintenance ---------- P13
Failure analysis ---------- P14
Non-failure ---------- P14
Technical parameter and Packing list ---------- P15
Safe recovery instructions ---------- P16

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.

4. WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure,clear of obstruction.

5. WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

6. WARNING: Do not damage the refrigerant circuit.

7. WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

8. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

9. This appliance is intended to be used in household and similar applications such as:
Staff kitchen areas in shops, offices, and other working environments;
Farm houses and by clients in hotels, motels, and other residential-type environments;
Bed and breakfast-type environments;
Catering and similar non-retail applications.

10. This product contains a light source of energy efficiency class F for light source ERP, tested with (without) light cover.

1.Warning

Warning: No barrier is allowed around the appliance or in the embedded structure in order to ensure the free ventilation.

Warning: It is forbidden to speed up the defrosting process with any mechanical equipment or by other method except for the method recommended by the manufacturer.

Warning: Never damage the refrigerating circuit.

Warning: Never use any electric apparatus in the food chamber of the appliance except for the type recommended by the manufacturer.

Warning: Never place the liquid beverage or food contained with glass container in the freezing chamber for fear of cracking.

Warning: If powered off, the refrigerator shall be powered on 5min later for fear of damaging the compressor.

Warning: If any live part, abnormal noise, smell, smoke or other abnormality is found during use, it is necessary to power off the appliance immediately and contact the after-sales service department of the Company timely.

Warning: Never place your finger or hand under the refrigerator, especially rear bottom of refrigerator; otherwise, you may be hurt by the sharp matter.

Warning: The children must not play or climb the refrigerator. The operation by the children must be supervised by their parents for fear of danger.

Warning: Never place your hand between the doors to open or close door for fear of jamming your finger. The door handle shall be used to open or close the door.

For refrigerating appliances with climate class

Depending on the climate class, This refrigerating appliance is intended to be used at ambient temperatures range as specified following table.

The climate class can be found on the rating plate. The product may not operate properly at temperatures outside of the specific range.

You can find climate class on label inside of your refrigerator.

Effective temperature range

The refrigerator is designed to operate normally in the temperature range specified by its class rating.

Class	symbol	Ambient Temperature range (°C)
Extended Temperate	SN	+10 to +32
Temperate	N	+16 to +32
Subtropical	ST	+16 to +38
Tropical	T	+16 to +43

NOTE

The cooling performance and power consumption of the refrigerator may be affected by the ambient temperature, the door-opening frequency, and the location of the refrigerator, We recommend adjusting the temperature settings as appropriate.



Warning: Risk of fire / flammable materials

Warning: When positioning the appliance, ensure the supply cord is not trapped or damaged.

Warning: Avoid placing multiple portable socket outlets or power supplies at the rear of the appliance.

Children aged 3-8 and individuals with limited capacity are prohibited from loading or unloading refrigeration equipment.

Prolonged door opening can lead to a significant increase in temperature within the appliance compartments.

Regularly clean surfaces that come into contact with food and accessible drainage systems.

Clean water tanks if they have not been used for 48 hours; flush the water system connected to a water supply if water has not been drawn for 5 days.

Store raw meat and fish in suitable containers in the refrigerator to prevent contact with or dripping onto other food.

Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.

One-, two-, and three-star compartments are not suitable for freezing fresh food.

If the refrigerating appliance is left empty for extended periods, switch it off, defrost, clean, dry, and leave the door open to prevent mould development within the appliance.

2. Cautions

Cautions: The power supply for this product must match the power supply stated on the nameplate, and a standard independent 3-hole socket rated above 10A and reliably grounded must be used. Avoid sharing one socket among multiple appliances to prevent overheating and potential fire hazards.

Cautions: Avoid pulling the power wire by hand. Always hold and unplug the power connector from the socket to disconnect the power supply.

Do not touch the power wire or connector with wet hands to prevent the risk of electric shock.

Cautions: Do not allow the power wire to be squeezed by the refrigerator or any heavy load, and avoid extreme bending of the power wire.

Damage or peeling of the power wire may lead to fire or electric shock hazards.

If the power wire is broken or cut, please contact the after-sales service department immediately for assistance.

Cautions: Do not store any flammable or explosive materials, corrosive acids, or alkaline substances in the refrigerator.

Cautions: Do not use the refrigerator in rainy conditions or under direct sunlight.

Cautions: Do not place containers with fluids on the refrigerator, as breakage or overturning of the container may compromise the electrical insulation of the refrigerator, leading to electric shock or fire hazards.

Cautions: The refrigerator must not be disassembled or modified without permission. The repair of refrigerator must be performed by the specialist.

Cautions: In the event of a leakage of any flammable gas such as coal gas, first, close the leaking valve, then open the window for ventilation. Do not unplug the refrigerator connector immediately to avoid the risk of fire or explosion due to electric sparks.

Cautions: Refrigerating appliances, especially refrigerator-freezers Type I, may not operate consistently if sited for an extended period below the cold end of the temperature range for which the appliance is designed. This may result in defrosting of contents or the temperature becoming too warm in the frozen food compartment.

Cautions: Effervescent drinks should not be stored in food freezer compartments or cabinets, or in low-temperature compartments or cabinets. Additionally, some products, such as iced water, should not be consumed when excessively cold.

Cautions: Do not exceed the storage times recommended by food manufacturers for any kind of food.

Cautions: Take precautions to prevent an undue rise in the temperature of frozen food while defrosting the refrigerating appliance.

Cautions: The rise in temperature of frozen food during manual defrosting, maintenance, or cleaning may reduce its storage life.

Cautions: Ensure proper care for frozen food storage during extended periods when the refrigerating appliance is not running, such as during a power outage or refrigeration system failure.

Cautions: Steps to take when temporarily or permanently switching off the refrigerating appliance include emptying, cleaning, and drying it, and propping the door(s) or lid(s) ajar.

Product introduction

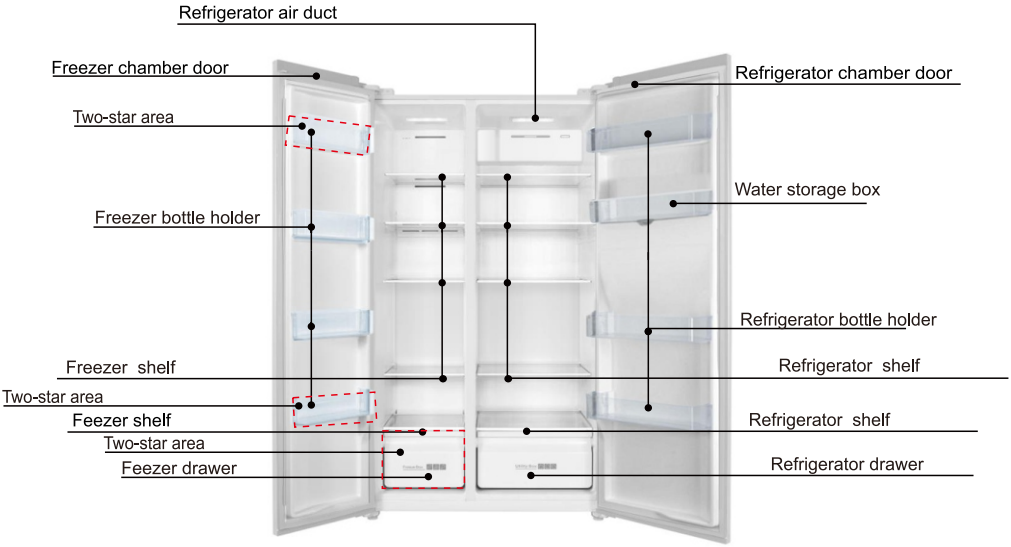

The pictures are for reference only. Please refer to the object

Friendly reminder:

If your product is an improved product, it may differ slightly from the instructions provided. However, rest assured that its performance and application method remain unchanged. You can confidently proceed with its usage.

Handling and placement

Certain space shall be left around the refrigerator, shown in the figure.

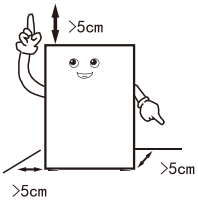

While handling, avoid contact between the refrigerator door side and handling tools.

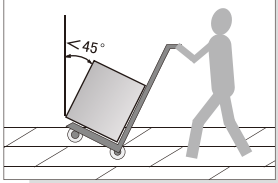

Position the refrigerator in a dry, well-ventilated area, away from direct sunlight and heat sources.

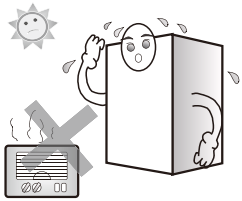

Place the refrigerator on a flat and stable surface. If the ground is uneven, adjust the leveling legs to ensure stability.

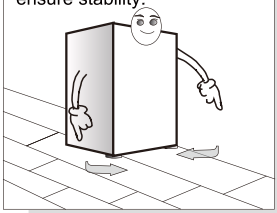

Avoid placing the refrigerator in excessively cold environments where freezing may occur.

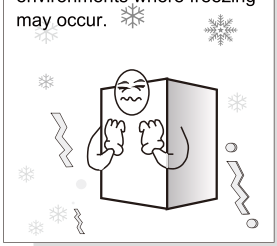

Removing the foam base aids in bottom heat dissipation and reduces the risk of fire.

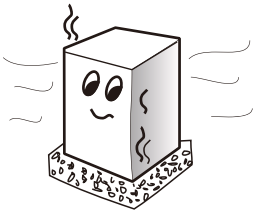

Friendly reminder：

–When handling the refrigerator, at least two persons are required: one to lift the top of the rear part, and the other to handle the bottom. If one part alone is clamped, it can be dangerous and may cause accidents.

–When moving the refrigerator, the lower runner may damage and scratch the floor. If you need to move the refrigerator over a long distance, use adhesive tape to secure the internal accessories to prevent them from getting damaged by crashing into each other.

–Place the refrigerator in a position with minimal vibration or where it is least exposed to vibration. For users in areas prone to earthquakes, ensure the refrigerator is fixed against a wall or pole to prevent accidents.

–Leave sufficient clearance around the refrigerator. If the clearance is too small or if goods are placed on top or too close to the sides, or if items are pasted onto the sides, it can affect the refrigerator's heat dissipation, leading to unnecessary electricity wastage and potential damage to walls and other items. Contact between the back of the refrigerator and the wall can also cause vibration and noise.

–Adjust the front part and adjusting leg of the refrigerator to level it. An unlevel refrigerator can cause vibration and noise.

Handling and placement

This refrigerating appliance is not intended to be used as a built-in appliance
The outline dimension of the product and the space needed by the use of product are shown in the following pictures:

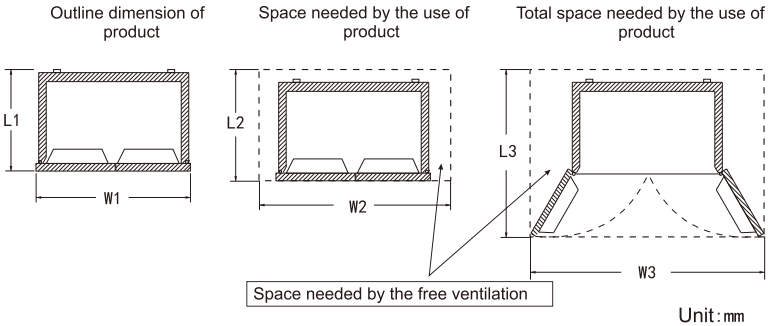

Unit: mm

Outline dimension of product		Space needed by the use of product		Total space needed by the use of product	
L1	W1	L2	W2	L3	W3
630	920	>L1+50	>W1+100	>L1+380	>W1+600

Preparations prior to use

1. Remove all packing assemblies such as case fixing tape etc., especially the foam base.
2. Use warm wet cloth to clean both interior and exterior of the refrigerator, (neutral detergent can be added in warm water).
3. After leveling and cleaning the refrigerator, stand it for about 2 hours before plugging the power plug for powering on, and cool the refrigerator for 2 to 3 hours before storing foods.

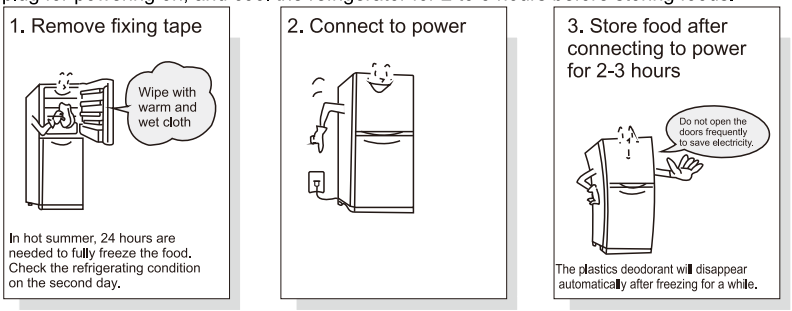

The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.
Please refer to the product introduction picture on page 6 for the placement of accessories.

Operation keys

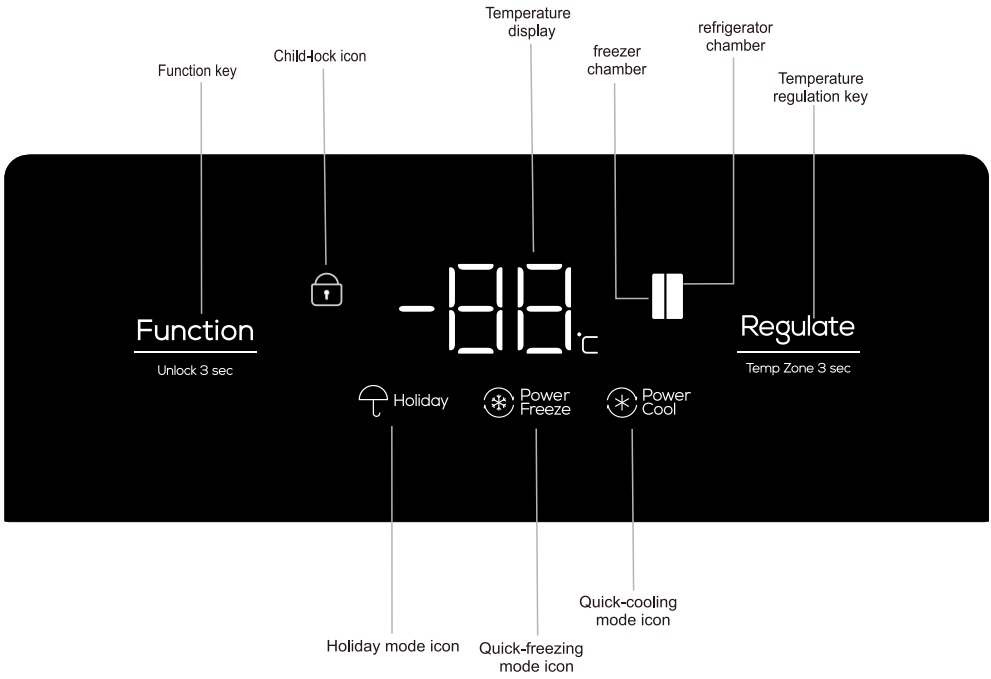

Operation keys

First power-on

After first power-on, the refrigerator shall operate with the refrigerator chamber set at 5℃and the freezer chamber set at -18℃.

The function of adjusting the temperature manually

Temperature regulation of refrigerator chamber (2℃~8℃)

Under the unlocking state, keep long press of " Regulate " key for 3 seconds, and press " Regulate " key to adjust the temperature of refrigerator chamber after the temperature zone icon switches to the refrigerator chamber . Then, press once " Regulate " key, the temperature will descend 1℃, and the gears of the refrigerator chamber cycle in "08" - "07" - "06" - "05" - "04" - "03" - "02" - "08". Stop the key operation after selecting the appropriate temperature and wait for 3 seconds, then the set temperature gear is confirmed.

Temperature regulation of freezer chamber (-24℃~ -15℃)

Under the unlocking state, keep long press of " Regulate " key for 3 seconds, and press " Regulate " key to adjust the temperature of freezer chamber after the temperature zone icon switches to the freezer chamber . Then, press once " Regulate " key, the temperature will descend 1°C and the gears of the freezer chamber cycle in "-15"- "-16"- "- 17"- "-18" - "-19" - "-20" - "-21" - "-22" - "-23" - "-24" - "-15". Stop button operation and wait for 5 seconds after appropriate temperature and wait for 5 seconds, then the set temperature gear is confirmed.

Fast cooling function

When the display panel is unlocked, press the " Function " button repeatedly until the " Power Cool " icon flashes, and then stop operating any button and wait for 5s to activate the fast cooling function of cold chamber. Such operation can quit the fast cooling function by hand.The fast cooling function operates for 2h, and then stops automatically.

When the " Power Cool " function is on, set temperature to 2℃ for refrigerator compartment, until the function exits. (Under "Power Cool"state,when setting refrigerator chamber temperature, you may automatically quit the power cool function. Open refrigerator door over three minutes exit quick refrigerating function under quick refrigerating status.)

Fast freezer function

When the display panel is unlocked, press the" Function "button repeatedly until the " Power Freeze " icon flashes, and then stop operating any button and wait for 5s to activate the fast freezing function of freezer chamber. Such operation can quit the fast freezer function by hand. After the fast freezer function is activated, the refrigerator will start the strong freezer for 4h, and then stop the fast freezer automatically.

When the " Power Freeze " function is on, set temperature to -32℃ for freezer compartment, until the function exits.

(Under "Power Freeze" state,when setting freezer chamber temperature, you may automatically quit the power freezing function)

(Open freezer door over three minutes exit quick freezer function under quick freezer status.)

Operation keys

Under laboratory environments with ambient temperature ≤16°C, the internal temperature of the refrigerator can reach as low as -32°C。

Holiday function

Under unlock status, repeatedly press " Function " key until the " Holiday " icon flashes. Stop key operation and wait for 3 seconds to enter holiday function. Manually exit holiday function through the same operation.

(Under "Holiday function" state, when setting refrigerator chamber temperature, automatically quit the Holiday function.)

(Notice: Please take the food out from the refrigerator chamber before the holiday function is activated.)

When the “Holiday” function is active, the refrigerator chamber is turned off, and the temperature setting of refrigerator chamber is OF.

Child lock function

Under unlock status, enter " " function:

Automatically on: the child lock function is automatically on after no key operation for 30 seconds," " icon is lit, and the key board is locked;Exit child lock: when the " " icon is lit, long press " Function " key for 3 second to unlock.

Power-off memory

In case of power failure, the operating state at the moment of power failure will be locked; after the power supply recovers, the refrigerator will operate under the settings before power failure.

Door-open warning

If the door of cold or freezer chamber is not closed tightly or is opened for more than 1min, the “beeping” warning will appear, be halted by operating any button, but recovered 1min later, or be eliminated by closing the door of cold or freezer chamber tightly.

Over-temperature hint of freezer chamber

If the temperature of freezer chamber is above -12℃ when the refrigerator is powered on, the corresponding temperature zone indicating box of freezer chamber will light on, and the digital zone will flash. When any button is pressed, the temperature of freezer chamber at the moment of power on will be shown; if the button is pressed again or 10s later, the normal display will recover.

Food storage

Refrigerating chamber (2℃~8℃)

--The refrigerating chamber is mainly used for storing short-term foods, like milk, eggs and bottled drink.
--Vegetables and fruits should be stored in the vegetable and fruit box to prevent loss of moisture.
--Cooked food should be placed in storage bags before storing them in the refrigerator to prevent an increase in energy consumption.

Freezing chamber (-24℃~-15℃)

--The freezing chamber is utilized for storing items intended for long-term preservation.
--Fish and meat to be frozen shall be cut into small pieces, packaged with preservative bags separately and then put into the frozen drawer.
--Placing glass or sealed containers with liquid in the freezing chamber is prohibited to prevent the risk of cracking or explosion.
--Fresh food should not be stored together with frozen food to maintain optimal storage conditions and prevent contamination.
--Do not place food close to inside wall in freezer lest food and wall should be frozen together.

★★ **Warm tips**:

Stored food should not obstruct the air duct outlet and return port to avoid compromising the refrigerating effect. Additionally, before placing food in the refrigerator, ensure that overheated water and food have cooled to room temperature.

Ice-making (If the appliance has it)

Fill the ice-making box with 4/5 water and put the box into the freezer chamber. After the water in the box turns into ice, twist the box slightly to separate the ice from the box. However, don't bend the box. When separating the ice, wrap the box with dry box to avoid finger frostbite.

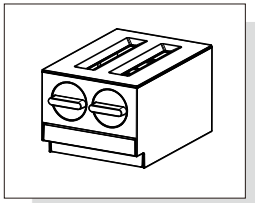

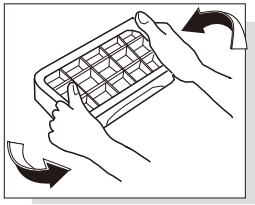

Operation keys

Disassembly and assembly method of accessory

--Glass shelf in the refrigerating chamber: the height of the shelf is adjustable, which facilitates the storage of articles with different volumes. Pull the shelf outwardly and upwardly in a slight way to take out.

--Fruit and vegetable box: for storing vegetables and fruits. It can be taken out by pulling outwardly.

--Drawer in the freezing chamber: storing foods to be preserved for long-term, such as meat and fish. It can be taken out by pulling outwardly and lifting upwardly.

Kindly tips: It is recommended to put into the large piece of meat after being cut into small pieces, to avoid difficult cutting after being frozen. The quick-freezing foods shall be distributed uniformly and stored together after being frozen.

--Bottle pedestal at the refrigerating door: storing eggs, various bottled drinks and other sundries. It can be taken out by being lifted up slightly.

Note: when disassembling the bottle pedestal in the refrigerating door, avoid pulling it out forcibly to prevent damage to the refrigerator.

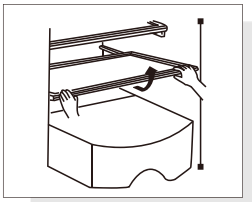

Take out by pulling upwardly and outwardly in a slight way

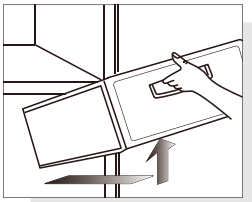

Remove by gently pulling it outward and upward.

Changing the Light

Any replacement or maintenance of the LED lamps is intended to be made by the manufacturer, itsservice agent or similar qualified person.

--Components of water storage box: Used for storing the water yield needed by the water dispenser for the purpose of taking the drinkingwater.

--Water-adding of water storage box: Firstly, open the box cover of water storage box by hand, then, pour the water into the water storage box from the container with water. After adding the water, close the box cover of water storage box.

--Installation of components of water storage box: Before installing the water storage box, firstly, cover the water storage box firmly and reliably, then hold the both sides of the water storage bucket by hand with balanced force, and slowly press along the arrow direction until it cannot be pressed. It indicates that the water storage box is installed well, otherwise, please continue to install.

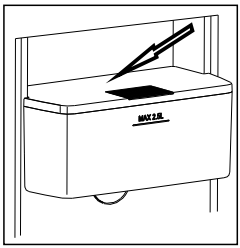

Gently pull and get out along the reverse direction of arrow

--Disassembly of components of water storage box: The disassembly method of the water storage box is same with the installation method. Just implement it in the reverse direction.

★★ Warm prompt:

When adding the water in the water storage box, the water addition cannot exceed the tip line of maximum water storage scale;

To ensure the water quality, it is suggested to clean the water storage bucket and outlet water pipe regularly.

During the maintenance and cleaning of water storage box and pipes, it is suggested to disconnect power supply to avoid the accident.

Pay attention to the operating strength when opening the door,lest the water in the storage tank overflowed by opening the door too fast.

Operation keys

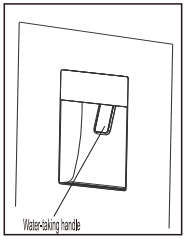

-- Water dispenser: The users can take the drinking water through the equipment at any time according to the own needs,

- Water taking: When the users want to drink water, they need to press (extrude) the water-taking handle or use the rigid container to press (extrude) the water-taking handle until the water outlet flows the water and after meeting the needs. After taking water, stop pressing(extruding) , release the water-taking handle, and the water stops flowing.

★★ Warm prompt:

Before taking water, please ensure the water storage box has enough drinking water;

Please ensure the water quality in the water storage box is better without impurities and foreign matters, etc., to avoid blocking the water outlet.

The users are suggested to use 2.5L of drinking water at least in one week to ensure the fresh water source in the water way system.

When taking water, it is suggested to close the door with water dispenser to avoid the shaking of refrigerator door, sprinkling of water and other accidents in the process of taking water.

Due to the different areas and seasons, as well as the instability of indoor environment temperature and humidity, it is the normal phenomenon if the water dispenser has water droplets and condensation in other places except for the water outlet. Please wipe it with towel and duster cloth, will not affect the usage.

Care and maintenance

It is recommended to perform refrigerator maintenance once a month.

Use a damp cloth or neutral detergent (cleanser essence) towipe away any oil contamination and dirt. After cleaning,ensure to thoroughly wipe off any residue of the detergent.

--Do not use alkaline detergent, soap powder, gasoline and alcohol, talcum powder etc.; otherwise the coats or plastics may be damaged;

--Regularly clean the refrigerator body and clear the ground dusts to keep the refrigerator clean.

Inspections after maintenance:

Check for any damages to the power line andplug.Look for dust on the power plug.Feel for abnormal heat on the plug.Check if the socket is loose.Ensure that the plug is fully inserted.

Note:

If the power line andplug are damaged and there is dust present, there is a risk of electric shock or fire.

After unplugging the plug, 5 minutes must pass before re-plugging it;

Do not put your hands under the refrigerator to avoid getting hurt.

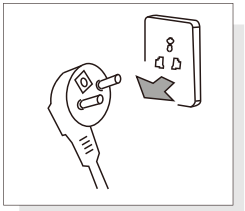

Unplug the refrigerator plug before cleaning



Please use neutral detergent

Failure analysis

The following items shall be inspected before occurring failures which require maintenance:

Failures:Refrigerator does not work,The refrigeration effect is poor

Causes:
1.Check the connection of the power supply.
2.Check whether the refrigerator is exposed to direct sunlight or if there is a heat source nearby.
3.Check whether there is adequate heat dissipation space around the refrigerator.
Remedies:
1.Ensure the power supply is properly connected.2.Move the refrigerator to a location without direct sunlight or heat sources nearby.3.Leave adequate space between the refrigerator and the wall for proper heat dissipation.

Failures:Foods in refrigerating chamber are frozen

Causes:1. Check whether the setting temperature is too low. 2. Additionally, rearrange foods with high water content to the door side of the glass shelf.

Remedies:1.Adjust the temperature settings accordingly to ensure they are adequately increased.
2.Rearrange foods with high water content to the door side of the glass shelf.

Failures:There is abnormal sound in refrigerator

Causes:1. Check whether the bottom of refrigerator is stable. 2. Check whether the refrigerator is too close to the wall. 3. Check whether the refrigerator touches other objects.
Remedies:1. Adjust the bottom adjusting leg to stabilize the refrigerator. 2. Leave sufficient space around refrigerator. 3. Remove the obstacles.

Failures:There is abnormal odor in refrigerator

Causes:1. Check whether the foods are sealed for storage. 2. Check whether the refrigerator is clean. 3. Check whether the foods have been stored for too long.
Remedies:1. Sealed foods for storage. 2. Regularly clean the refrigerator. 3.Do not store foods for too long.

Non-failures

Phenomenon:The surface between the refrigerating chamber and freezing chamber feels warm or hot on two sides and the spacing part.

Cause:The refrigerator pipes (such as condenser and anti-fog pipes) are located on two sides and the front part of the refrigerator for heat dissipation and to prevent condensation.

Phenomenon:The refrigerator door is too tight and not easy to open.

Cause:When the refrigerator door is closed and immediately reopened, hot air enters the refrigerator and contracts, creating a pressure difference. This makes it difficult to open the door immediately, but it becomes easier after some time.

Phenomenon:Water ripples are observed in the refrigerator.

Cause:The sound of water ripples can occur when the compressor starts or stops, as well as when water is produced during the defrosting process.

Phenomenon:There is a humming sound in the refrigerator.

Cause:The compressor running produces this sound. If the refrigerator is not leveled, the sound may be louder. Additionally, the shrinkage and swelling of the case, especially when it's cold or the door is opened, can also contribute to this sound.

Phenomenon:Condensation or frosting is observed on the freezing chamber door surface or food surface.

Cause:High temperature or humidity around the refrigerator; prolonged opening of the door; foods with high water content that are not sealed or tightly wrapped.

Phenomenon:Condensation is present on the built-in light surface.

Cause:The light generates heat when illuminated, and if the door is left open for an extended period, a temperature difference occurs, leading to condensation on the light case.

Phenomenon:Condensation and water mist are present on the refrigerator body.

Cause:High humidity around the refrigerator causes moisture in the air to accumulate in the case, resulting in condensation.

Technical parameter

Climate type	SN/N/ST/T					
Electric shock resistance	I					
Star sign	****					
Total volume:	503L					
Fresh food compartment	322L					
Volume of freezer	156L					
Volume of two-star section	25L					
Power type	220-240V~/50Hz					
Rated current	1.6A					
Freezing capacity	8kg/24h					
Power consumption	314 kWh/a					
Lamp power	3W					
Weight	77kg					
Noise level (dB(A) re 1 pW)	920x630x1768					
Refrigerant and charge amount	R600a,66g					
Annual energy consumption AE	37					

Packing list

Refrigerator shelf	5					
Freezer shelf	5					
Drinking water box	1					
Refrigerator drawer	1					
Ice-making box	1					
Egg box	1					
Refrigerator bottle holder	3					
Freezer bottle holder	4					
Freezer drawer	1					
Operating instruction	1					

The product has multiple configurations, please refer to the actual product for details.

Safe recovery instructions

Disposal

Old appliances still have some surplus value. An environmentally friendly approach will ensure that valuable raw materials are recycled.

The refrigerants used in your equipment and insulation materials require special handling procedures. Make sure there is no pipe damage on the back of the equipment before handling.

Up-to-date information on the options for disposing of old equipment and packaging from old equipment can be obtained from the local municipal office.

Correct Disposal of this product.	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To retum your used device, please use the return and ollection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycing.

Table 1 Climate classes

Class	Symbol	Ambient temperature ranges℃
Extended temperate	SN	+ 10 to + 32
Temperate	N	+ 16 to + 32
Subtropical	ST	+ 16 to + 38
Tropical	T	+ 16 to + 43

Extended temperate:'this refrigerating appliance is intended to be used at ambient temperatures ranging from 10 °C to 32 °C';

temperate: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 32 °C';

Subtropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from16°C to 38°C';

Tropical: 'this refrigerating appliance is intended to be used at ambient temperatures ranging from16°C to 43°C';

Dear customer

if you need customer service, please check warranty card for further information.