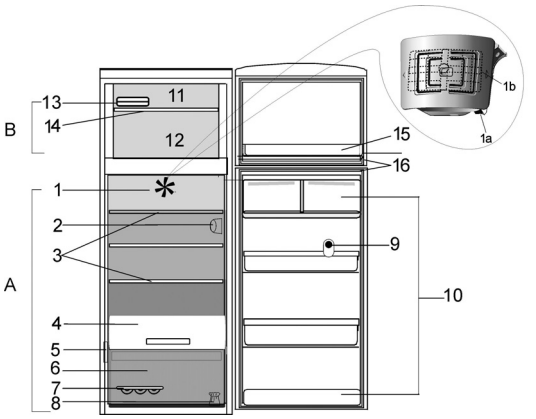

A. Refrigerator Compartment
2. Thermostat / light unit
3. Shelves / Shelf area
4. Cooler compartment
5. Rating plate with commercial name
7. Egg tray
8. Reversibility kit
9. Separator
10. Door trays

B. Freezer Compartment
11. Area for freezing and food storage
12. Area for storing frozen food
13. Ice tray
14. Wire shelf
15. The freezer door trays for pizza or other frozen products with a short storage time

Depending on the model the number and type of accesories may vary.

Anti-bacterial protection :
1. Filter in fan (depending on the model)
6. Crisper with antibacterial additives (depending on the model)
16. Door seals
The crisper and the door seals are manufactured from materials that inhibit bacterial growth.

Notes:
- All shelves and door trays are removable.
- The internal temperatures of the appliance depend on the ambient temperature, frequency of opening the doors, as well as location of the appliance. Temperature setting must consider these factors.
- The appliance accessories are not suitable for washing in dishwasher.

HOW TO START THE APPLIANCE



Fit the spacers (if supplied) on the upper part of the condenser at the rear of the appliance.
After plugging the appliance to the mains, it starts the operation automatically.
After starting the appliance, wait at least 4-6 hours before placing food into the appliance.

Note:
- If food is placed in the refrigerator before the appliance has cooled completely, it may deteriorate.

ECO GREEN FUNCTION (depending on the model)
This function gives best food preservation performance with the smallest energy consumption possible (up to 10% less in comparison with the normal settings) if there is lower amount of food to be preserved in the appliance.
The best food preservation conditions when ECO function is activated are in the ECO compartments:
- 2 "eco green" shelves in the fridge (with green frames)
- 1 "eco green" area for storing frozen food (item 12) in freezer compartment - below the shelf (located on the lower position).

To select the function turn the ECO symbol on the knob of the regulator.

FAN (depending on the model)
The **fan** gives more even temperature distribution inside the refrigerator compartment, allowing better preservation of stored food
Important:
Do not obstruct the air intake area with food items.
The fan will run ONLY when the compressor is in operation.

Fan with a button
To switch on the fan press the button (1a). It is advisable to activate the fan when the ambient air temperature is over 27 ÷ 28°C or if you perceive drops of water on the glass shelves or in the severe humidity conditions.
Fan switched on improves cooling conditions. To keep preferable appliances setting, having the fan switched on, there may be a need to adjust the thermostat.
Important:
Remember to turn off the fan when there is a lower ambient air temperature.

Fan without a button
An electric system automatically turn on and turn off the fan.
If the appliance has the fan it can be equipped with the filter.
Remove it from the box (found in the crisper drawer (item 6) and insert into the cover of fan (item 1b).
The replacement procedure is attached with the filter.

FRIDGE/FREEZER COMPARTMENT CONTROLS



A. Thermostat knob
B. Light button
C. Thermostat setting indicator
D. Light bulb (max 15W)

The thermostat adjusts temperature in both compartments.
Thermostat set to **1/MIN: low cooling intensity**
Thermostat set between **1/MIN** and **7/MAX:** cooling intensity can be adjusted according to the preferences.
Thermostat set to **7/MAX: maximum refrigeration intensity.**
For best food conservation **3-5/MED** position is recommended.
Thermostat set to •: **cooling and lighting off.**
Thermostat set to **ECO GREEN : ECO function active.**

FREEZING FRESH FOOD
Place the fresh food to be frozen on the freezer compartment wire shelf. Avoid direct contact with already frozen food. To freeze the quantity of food shown on the rating plate, move the freezer wire shelf to the upper position and rotate the thermostat knob towards a slightly warmer position (for example, in case of numbers, if chosen set value is 4 move it back to 3,5).
After 24 hours the food will be frozen. Move back the thermostat knob to the previous position.

REPLACING THE LIGHT BULB
Before replacing the bulb, remove the power plug from the mains socket.
To remove the light bulb turn anticlockwise as shown in figure .

Printed in Poland 05/11
5019 636 01013