Philips GoGEAR MP4 Player

GoGEAR


SA4TP404
SA4TP408

Quick start guide

Register your product and get support at
www.philips.com/welcome

PHILIPS

Unpack

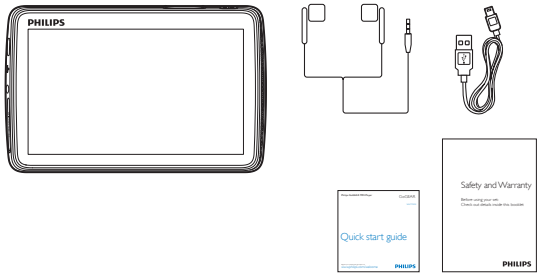




1 Install Philips Songbird




To get the latest Philips Songbird and user manuals, download from **www.philips.com**/Songbird and **www.philips.com/support**.


Charge

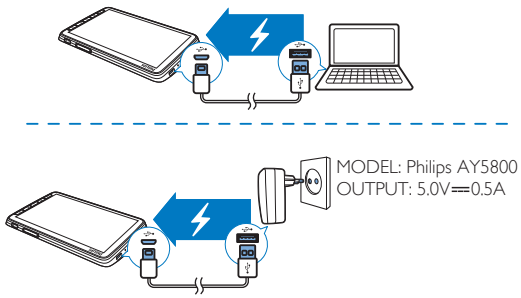

2 Transfer from a PC

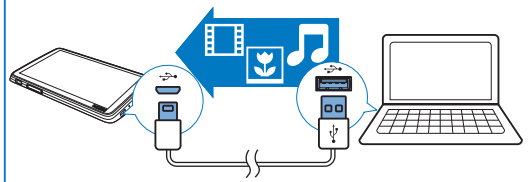

3 Use

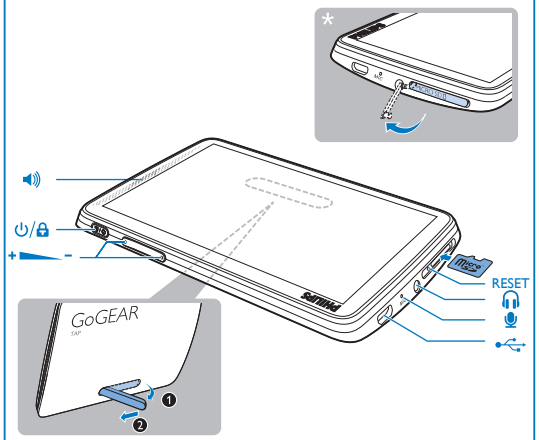

Be responsible
Respect copyrigh
Specifications are subject to change without notice.
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.


Printed in China
SA4TP4_QSG_94_V1.0
wk1244.3



Press and hold to switch on/off; press to lock/ unlock



Tap to sort the media library by song title, album,or artist. Tap a song to start play.

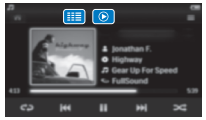

Tap to switch to the library or play screen




Tap to return to the Home screen



Tap to display play options such as Surround for movies (Surround sound for movie play)


On the play screen, tap or drag on the progress bar to select a playposition.

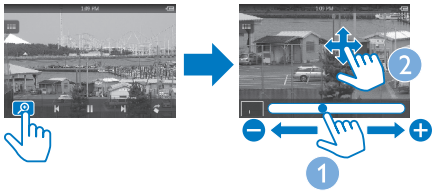

Tap to display zoom control bars; drag the track ball to zoom in/ out; swipe to pan through the picture



Tap to select a preset station.

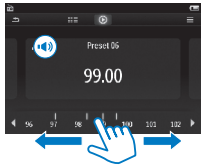


Tap to mute/ unmute the radio play.


To search for a frequency, swipe left/ right on the frequency bar.

Help

How to install Philips Device Manager to update the firmware or recover the player

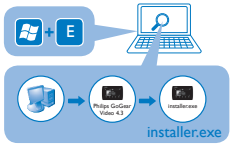

Device does not respond to the pressing of keys

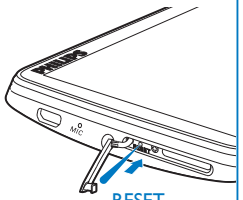

Go to **www.philips.com/support** for support information.