Spare lamp H LAMP 350W Replacement Manual

Warning:

- Be careful not to drop the lamp fixing screws into the inside of the projector. Don't put a metal piece or flammable object into the projector. Using the projector with any foreign object present inside may result in electric shock or fire. When you can't remove the foreign object from the inside, contact your dealer for removal.
- Do not touch the lamp with bare hands or give a shock to the lamp. Attach the lamp properly. Improper handling may cause explosion.
- Be sure to install the lamp securely. When the lamp isn't installed properly, it won't illuminate. Improper installation may also result in fire.
- Don't shake the removed lamp or don't lift it above your face. You may be injured in your eye by flying or falling glass fragments.
- Don't replace the lamp immediately after use because the lamp cover is very hot. You may get burned. Turn off the power using the POWER key. After the lamp goes out, wait about 2 minutes until the intake and exhaust fans for cooling the lamp stop rotating. Then unplug the power cord, and wait at least 1 hour to allow the lamp to cool down enough to the touch.

Before replacing the lamp

1. Check which lamp is to be replaced using the INFO menu in the OSD Lite menu.

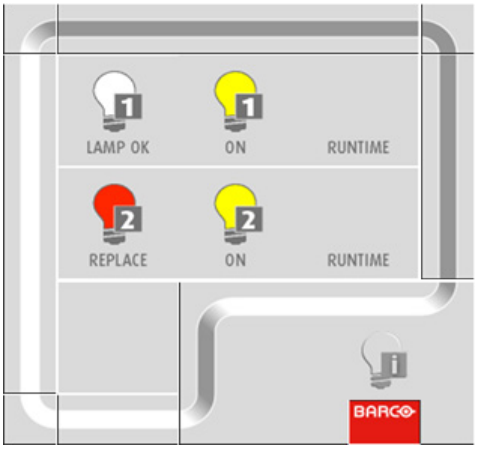

To replace the lamp:

1. Unplug the power cord from the outlet or appliance inlet.
2. Loosen two screws (a) on the rear and two screws (b) on the side that are securing the side cover (c) using a Phillips screwdriver.

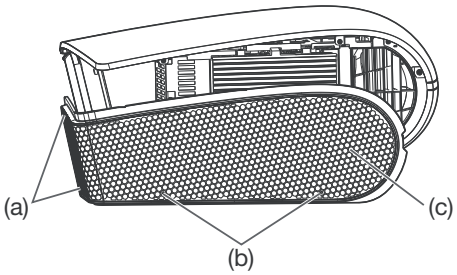

3. Slide and remove the side cover towards the rear.

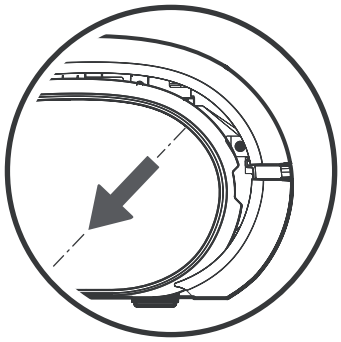

4. Loosen two screws (d) that are securing the lamp cover using a Phillips screwdriver and remove the lamp cover (e) from the projector.

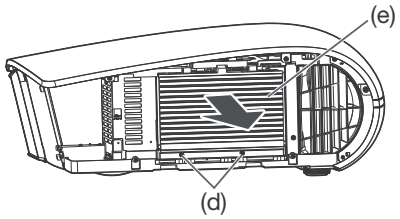

5. Loosen two screws (f) that are securing the lamp box to be removed using a Phillips screwdriver.

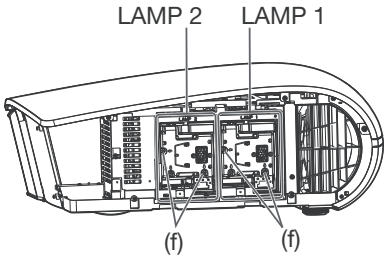

6. Pull the handle.
7. Pull out the lamp box by the handle while holding the projector.

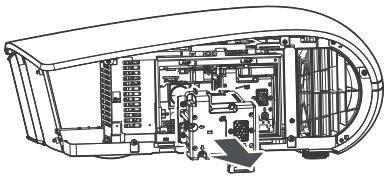

   - Pull the lamp box out of the projector slowly. When the lamp is broken, glass fragments may be scattering by quickly pulling out the lamp box.
   - Do not spill liquid on the removed lamp box or do not place it near any flammable object or where children can reach to prevent injury or fire.

8. Load a new lamp box securely into the projector in the right orientation.

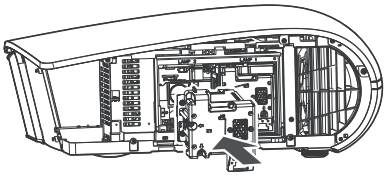

9. Put the handle back to the original position.
   - Make sure that the handle is locked.

10. Tighten two screws (f) of the new lamp box tightly using a Phillips screwdriver.

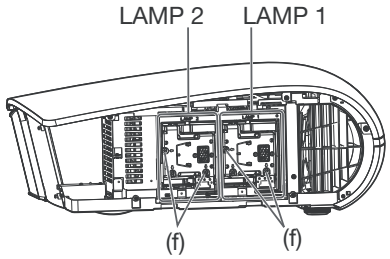

- Make sure that the screws are tightened firmly.

11. Insert the lamp cover (e) into the projector and tighten two screws (d) on the lamp cover firmly using a Phillips screwdriver.

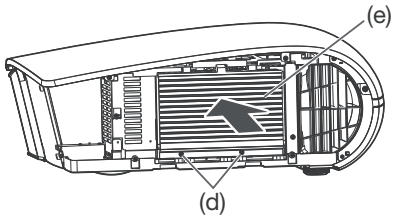

- You cannot turn on the projector without attaching the lamp cover.

12. Insert the side cover (c) into the projector and tighten two screws (a) on the rear and two screws (b) on the side of the side cover using a Phillips screwdriver.

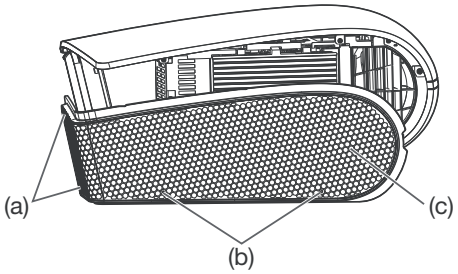

Reset of the lamp operation time
Reset the lamp operating time of the newly installed lamp.
You can reset the lamp operation time using the menu. (See page 30 for menu setting.)

13. Plug the power cord into the wall outlet.
14. Press the POWER key.
15. Display the FEATURE menu in the ADVANCED menu.
16. Select ADVANCED menu by pressing the ▲ or ▼ key.

ADVANCED MENU	ENTER ⏎

17. Press the ENTER key.
18. Select LAMP 1 TIME RESET or LAMP 2 TIME RESET by pressing the ▲ or ▼ key.

LAMP 1 TIME RESET	OK ⏎
LAMP 2 TIME RESET	OK ⏎

19. Press the ENTER key.
    - The confirmation dialog appears.

EXECUTE LAMP 1 TIME RESET ?
OK : ENTER CANCEL : MENU

20. Reset by pressing the ENTER key.
    - When the lamp operating time isn't reset, press the MENU key.

Important:
- When the operation times of both lamps have exceeded 4000 hours*, you can operate the projector only for 3 minutes after turning on the power. During this time, carry out steps 15 to 20 to reset the lamp operation times.
- The projector doesn't turn on if the lamp cover isn't attached securely.
- Be sure to reset the lamp operation time whenever you replace the lamp.
- Do not reset the lamp operation time unless you replace the lamp.
- The lamp is fragile. If it is broken, be careful not to cut yourself with glass fragments.

* When LAMP MODE is set to STANDARD, this duration will be shorted to 2000 hours.

When removing the lamp from the ceiling-mounted projector
When removing the lamp from the ceiling-mounted projector, follow the same steps as "To replace the lamp."

The lamp in this product contains mercury. Please dispose of properly. (For US only.)

