Simply Better Connections

ATEN VanCryst™

VM6404H / VM6809H

4 x 4 / 8 x 9 4K HDMI Matrix Switch with Scaler

User Manual

Compliance Statements

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Warning

Operation of this equipment in a residential environment could cause radio interference.

Achtung

Der Gebrauch dieses Geräts in Wohnumgebung kann Funkstörungen verursachen.

E3914

KCC Statement

유선 제품용 / A 급 기기 (업무용 방송 통신 기기)
이 기기는 업무용 (A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며 , 가정 외의 지역에서 사용하는 것을 목적으로 합니다 .

HDMI Trademark Statement

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



RoHS

This product is RoHS compliant.

User Information

Online Registration

Be sure to register your product at our online support center:

International	http://eservice.aten.com

Telephone Support

For telephone support, call this number:

International	886-2-8692-6959
China	86-400-810-0-810
Japan	81-3-5615-5811
Korea	82-2-467-6789
North America	1-888-999-ATEN ext 4988 1-949-428-1111

User Notice

All information, documentation, and specifications contained in this manual are subject to change without prior notification by the manufacturer. The manufacturer makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties as to merchantability or fitness for any particular purpose. Any of the manufacturer's software described in this manual is sold or licensed *as is*. Should the programs prove defective following their purchase, the buyer (and not the manufacturer, its distributor, or its dealer), assumes the entire cost of all necessary servicing, repair and any incidental or consequential damages resulting from any defect in the software.

The manufacturer of this system is not responsible for any radio and/or TV interference caused by unauthorized modifications to this device. It is the responsibility of the user to correct such interference.

The manufacturer is not responsible for any damage incurred in the operation of this system if the correct operational voltage setting was not selected prior to operation. PLEASE VERIFY THAT THE VOLTAGE SETTING IS CORRECT BEFORE USE.

Product Information

For information about all ATEN products and how they can help you connect without limits, visit ATEN on the Web or contact an ATEN Authorized Reseller. Visit ATEN on the Web for a list of locations and telephone numbers:

International	http://www.aten.com
North America	http://www.aten-usa.com

Package Contents

Check to make sure that all the components are in working order. If you encounter any problem, please contact your dealer.
The VM6404H / VM6809H package consists of:

- 1 VM6404H / VM6809H 4x4 / 8x9 4K HDMI Matrix Switch with Scaler
- 1 power cord
- 1 IR remote control (VM6404H only)
- 1 IR receiver (VM6404H only)
- 1 mounting kit
- 1 user instructions

Contents

Compliance Statements ii
User Information iv
Online Registration iv
Telephone Support iv
User Notice iv
Product Information v
Package Contents vi
Contents vii
About this Manual xi
Conventions xii

1. Introduction

Overview 1
Features 2
Requirements 3
Source Devices 3
Display Devices 3
Cables 3
Source Device Operating Systems 4
Browsers 4
Components 6
VM6404H Front View 6
VM6404H Rear View 7
VM6809H Front View 8
VM6809H Rear View 9
IR Remote Control 10

2. Hardware Setup

Rack Mounting 11
Grounding 13
Cable Connection 14
Installation Diagram 15
VM6404H 15
VM6809H 15

3. Front Panel Configuration

Overview 17
Front Panel Pushbuttons 17
Enter Password 18
Main Screen 19
Input Assignment 19
Output Port Assignment 20
LCD Menu Organization 21

Menu Pushbutton 22
IP Setting. 22
IP Address / Subnet Mask 22
Gateway 23
Serial Port Setting 24
Baud Rate 24
Operation Mode 25
EDID Mode 25
CEC 27
OSD 28
Video Outputs 29
Output Resolutions 30
Audio Extract 32
Security Mode 33
Mode 33
Changing the LCD Password 35
Save to a Profile 37
Playing / Stopping the Profile Schedule 38
Profile Pushbutton 39
IR Remote Control Operation 40

4. Browser Operation

Overview 43
Logging In 43
Main Page 44
Menu Bar 44
Profiles 45
Creating a Profile 46
Configuring Video Settings of a Profile 48
Configuring Video Settings in Normal View 50
Profile Layout Settings 50
Display Preferences 51
Video Wall Settings 52
Configuring Video Settings in Grid View 56
Playing a Profile 58
Input Assignment. 60
Exporting a Profile 61
Importing a Profile 62
Profile Scheduling 63
Playing a Profile Schedule 63
Creating the Profile Schedule 65
Editing the Profile Schedule 67
System Settings 69
Overview 69
General 71
Basics 71

Fan Status 71
Serial Settings 71
Port Settings 72
OSD/CEC 72
HDCP 73
Scaler 74
Customized Resolution 75
Port Name 78
EDID Settings 79
EDID Mode 80
Customized Mode 81
EDID & CEA Description 83
Customized EDID Parameters 84
Detail Timing / Display Description 86
Monitor Description 87
CEA Settings 88
Video Data 89
Audio Data 90
HDMI Forum Vendor Specific Block 91
YCBCR 4:2:0 Video Data Block. 92
YCBCR 4:2:0 Compatibility Map Data Block 93
Status 94
Connections 94
System Information 95
Maintenance 96
System Setup 96
System Upgrades 97
System Backup 97
Restoring Default Settings 97
User Account 98
Adding an User Account 99
Permission Level 100
Network 101

5. CLI Commands

Overview 103
Connecting to the Matrix Switch via Telnet 103
Connecting to the Matrix Switch via RS-232 104
Verification 105
Commands 105
Switch Port Command. 105
EDID Mode Command 108
Mute Command 109
CEC Command 111
Scaling Command 112
FrameSync Command 116

Fan Speed Command 117
Echo Command 118
Black Screen Command 119
Read Command 120
Reset Command 120
Baud Rate Command 121
Save/Load Profile Command 122
OSD Command 123
Alert Command 124
Fan Speed Command 125

Appendix

Safety Instructions 127
General 127
Rack Mounting 129
Technical Support 130
International 130
Specifications 131
Telnet Operation 133
Configuration Menu 133
1. H – Call up the command list for help 133
2. IP – Set network settings 133
3. LO – Load connections from profile 134
4. PW – Change password 134
5. RI – Read what input is connected to nn output 135
6. RO – Read what output is connected to nn input 135
7. SB – Set serial port baud rate 135
8. SS – Switch input to specified output 135
9. SV – Save the current connections into a profile 135
10. TI – Set timeout 135
11. VR – Software version information 135
Limited Warranty 136

About this Manual

This User Manual is provided to help you get the most from your VM6404H / VM6809H system. It covers all aspects of installation, configuration and operation. An overview of the information found in the manual is provided below.

Chapter 1 Introduction, introduces you to the VM6404H / VM6809H system. Its purpose, features and benefits are presented, and its front and back panel components are described.

Chapter 2 Hardware Setup, describes how to set up your VM6404H / VM6809H installation.

Chapter 3 Front Panel Configuration, explains the fundamental concepts involved in operating the VM6404H / VM6809H at the local site via the front panel LCD display using pushbuttons.

Chapter 4 Browser Operation, provides a complete description of the VM6404H / VM6809H's Browser Graphical User Interface (GUI), and how to use it to remotely configure and operate the VM6404H / VM6809H.

Chapter 5 CLI Commands, provides a complete list of the serial control protocol commands used when utilizing the RS-232 Serial Port so that an extra source device can be utilized in the installation.

Appendix, which provides specifications and other technical information regarding the VM6404H / VM6809H.

Note:

- Read this manual thoroughly and follow the installation and operation procedures carefully to prevent any damage to the unit or any connected devices.
- The product may be updated, with features and functions added, improved or removed since the release of this manual. For an up-to-date user manual, visit http://www.aten.com/global/en

Conventions

This manual uses the following conventions:

`Monospaced`	Indicates text that you should key in.
[ ]	Indicates keys you should press. For example, [Enter] means to press the **Enter** key. If keys need to be chorded, they appear together in the same bracket with a plus sign between them: [Ctrl+Alt].
1.	Numbered lists represent procedures with sequential steps.
♦	Bullet lists provide information, but do not involve sequential steps.
>	Indicates selecting the option (on a menu or dialog box, for example), that comes next. For example, Start > Run means to open the *Start* menu, and then select *Run*.
	Indicates critical information.

Chapter 1
Introduction

Overview

The ATEN VanCryst VM6404H / VM6809H 4x4 / 8x9 4K HDMI Matrix Switch with Scaler is a versatile solution that provides an easy way to route high definition video and audio from any of 4/8 HDMI sources to any of 4/9 HDMI displays at the same time. As a Matrix Switch, each input can be independently connected to any or all outputs, giving you the ultimate in flexibility and control in any multi-display audio/video installation.

The VM6404H / VM6809H features Seamless Switch™, which employs FPGA matrix system architecture to seamlessly switch between multiple sources and multiple displays. With EDID Expert technology, the VM6404H / VM6809H selects the optimum EDID settings for smooth power-up and the highest quality display. It also features a high-performing scaling engine that converts the video resolution into the display's native resolution to give you the best image quality in multiple resolutions up to 4K.

You can easily configure the VM6404H / VM6809H via the front panel LCD display and pushbuttons, and through the use of an IR Remote Control (VM6404H only). The LCD provides a quick view of all port connections, and lets operators access the unit's built-in configuration utility.

Furthermore, the VM6404H / VM6809H allows convenient configuration and operation via an intuitive Graphical User Interface (GUI) using any web browser. The web GUI provides you with advanced features which include easy setup of custom Video Wall and Digital Signage configurations that can be saved and recalled. Because your VM6404H / VM6809H can be controlled over a standard TCP/IP connection, it conveniently integrates into any existing network for easy remote access. For complete system and install integration, serial control is standard through the VM6404H / VM6809H's built-in RS-232 port that allows the switch to be controlled through a high-end controller or PC. You can also have mobile access to frequently used features such as switching of profile and AV inputs using the Video Matrix Control App. For more information, see *Video Matrix Control App User Manual*.

The VM6404H / VM6809H is an ideal solution for applications that require HDMI outputs from multiple sources to be conveniently delivered to multiple destinations, such as for stage presentations, competitions, control centers, and system installations that require real-time reports.

Features

- 4 x 4 / 8 x 9 HDMI input/output connections
- 4K Scaler – features a 4K video scaling function to convert input resolutions to the display's native resolutions
- Seamless Switch™ Technology – ATEN FPGA engine unifies video formats to provide continuous video streams, real-time switching and stable signal transmissions[1]
- Video Wall - allows you to create custom video wall layouts via intuitive web GUI[2]
- EDID Expert™ – selects optimum EDID settings for smooth power-up, high-quality display and use of the best video resolution across different screens
- FrameSync – prevents image tearing by synchronizing the scaler output frame rate to the input signal frame rate (VM6809H)
- HDMI (3D, Deep color, 4K); HDCP 2.2 compatible
- Audio-enabled, HDMI audio can be extracted to stereo audio (VM6809H)
- Multiple Control Methods – system management via front-panel pushbuttons, IR (VM6404H only), RS-232 and Ethernet (Telnet / Web GUI) connections
- Supports free mobile control using the Video Matrix Control App[3]
- ESD protection for HDMI
- Rack-mountable (1U design)

Note: 1. When Seamless Switch™ is enabled, mind the following: Video outputs will not display 3D, Deep Color, or interlace (i.e., 1080i) resolutions correctly. To use these features, make sure to first disable Seamless Switch™.

2. When Seamless Switch™ is enabled, mind the following: Videos may not display within range, in which case make sure to adjust the display settings on your device.

3. For more information on the Video Matrix Control app, see *video Matrix Control App User Manual*.

Requirements

The following devices are required for a complete VM6404H / VM6809H installation:

Source Devices

- Computer or A/V source device with HDMI Type-A output connector(s)

Note: A DVI / HDMI adapter is required when connecting a DVI source device.

Display Devices

- Display devices or receivers with an HDMI Type-A input connector

Cables

- 1 HDMI cable for each source device you will be connecting
- 1 HDMI cable for each display device you will be connecting
- 1 Cat 5e cable
- 1 RS-232 serial cable

Note: No cables are included in this package. We strongly recommend that you purchase high-quality cables of appropriate length since this will affect the quality of the audio and video display. Contact your dealer to purchase the correct cable sets.

Source Device Operating Systems

Supported operating systems are shown in the table below:

OS		Version
Windows		2000 or above
Linux	RedHat	6.0 or later
	SuSE	8.2 or later
	Mandriva (Mandrake)	9.0 or later
UNIX	AIX	4.3 or later
	FreeBSD	3.51 or later
	Sun	Solaris 8 or later
Novell	Netware	5.0 or later
Mac		OS 9 or later
DOS		6.2 or later

Browsers

Recommended web browsers for **VM6404H** are shown in the table below:

OS	Java Version	Browser	Version
Windows 8.1	V1.8.0_60	Chrome	45.0.2454.85 m
		Firefox	40.0.3
		Safari	5.1.7
		Opera	31.0.1889.174
		IE11	11
Windows 2012 R2 (64bit)	V1.8.0_60 (64bit)	IE11	11 (64bit)
Windows 2008 R2 (64bit)	V1.8.0_60 (64bit)	IE8	8
Windows 7 SP1(64bit)	V1.8.0_60 (64bit)	IE10	10 (64bit)
Windows XP	V1.8.0_60	IE8	8
CentOS 7.0 (64Bit)	V1.8.0_60 (64bit)	Firefox	40.0.3
Ubuntu 12.04	V1.8.0_60	Chrome	45.0.2454.85
Solaris 11(64bit)	V1.8.0_25	Firefox	33
Mac 10.10	V1.8.0_25	Safari	8

Recommended web browsers for **VM6809H** are shown in the table below:

OS	Java Version	Browser	Version
Windows 10 (64bit)	V1.8.0_144 (64bit)	Chrome	60.0.3112.113 (64bit)
		Firefox	54.0.1
		Opera	46.0.259.57
Ubuntu 16.04 (64bit)	V1.8.0_121 (64bit)	Chrome	60.0.3112.78 (64bit)
Solaris 11 (64bit)	V1.8.0_25	Firefox	30
Mac 10.10	V1.8.0_25	Safari	10.10.1

Components

VM6404H Front View

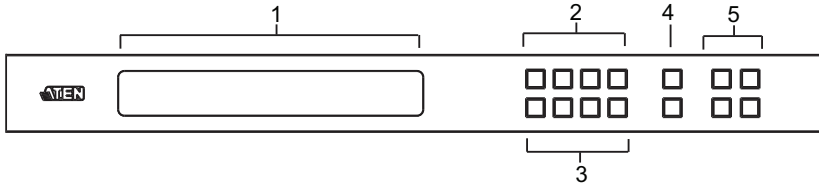

No.	Component	Description
1	LCD display	The LCD display gives a quick view of all port connections, and shows the various options for configuring and operating the VM6404H. For full details, see *Main Screen*, page 19.
2	input pushbuttons	These pushbuttons refer to the HDMI input ports found on the VM6404H rear panel. Press to select the input port. These pushbuttons may also correspond to menu options, connection profiles (P1–P4) and so on. **Note:** The **INPUT** (1–4) front panel pushbuttons have built-in LEDs that light to indicate they have been selected.
3	output pushbuttons	These pushbuttons refer to the HDMI output ports found on the VM6404H rear panel. Press to select the output port. These pushbuttons may also correspond to connection profiles (P5–P8). **Note:** The **OUTPUT** (1–4) front panel pushbuttons have built-in LEDs that light to indicate they have been selected.
4	Prev / Next pushbuttons	These pushbuttons allow you to cycle through the menu options on the LCD display.
5	function pushbuttons	The function pushbuttons (**MENU**, **PROFILE**, **ENTER** and **CANCEL**) are for navigating the LCD built-in configuration utility. For full details, see *Front Panel Pushbuttons*, **page 17**. **Note:** The **MENU** and **PROFILE** front panel pushbuttons have built-in LEDs that light to indicate they have been selected.

VM6404H Rear View

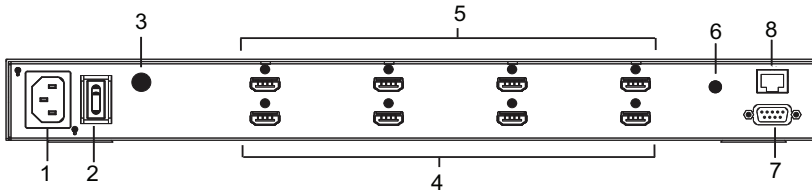

No.	Component	Description
1	power socket	This is a standard 3-pin AC power socket. The power cord from an AC source plugs in here.
2	power switch	This is a standard rocker switch that powers the unit on and off.
3	grounding terminal	The grounding wire attaches here. See *Grounding*, page 13, for further details.
4	HDMI input ports	The cables from your HDMI source devices plug into these ports.
5	HDMI output ports	The cables from your HDMI display devices plug into these ports.
6	IR port	Connect the IR receiver unit included with your product via this 3.5 mm mini stereo jack.
7	RS-232 serial port	Connect a computer or high-end system controller via this serial port.
8	Ethernet port	In order to access the VM6404H's Browser Graphical User Interface (GUI), the VM6404H must be connected to your network. The cable that connects the VM6404H to your LAN plugs in here. See *Cable Connection*, page 14, for further details

VM6809H Front View

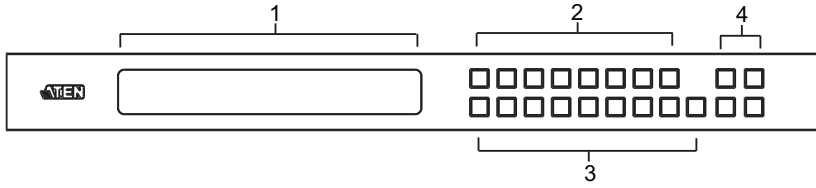

No.	Component	Description
1	LCD display	The LCD display gives a quick view of all port connections, and shows the various options for configuring and operating the VM6809H. For full details, see *Main Screen*, page 19.
2	input pushbuttons	These pushbuttons refer to the HDMI input ports found on the VM6809H rear panel. Press to select the input port. These pushbuttons may also correspond to menu options, connection profiles (P1–P8) and so on. **Note:** The **INPUT** (1–8) front panel pushbuttons have built-in LEDs that light to indicate they have been selected.
3	output pushbuttons	These pushbuttons refer to the HDMI output ports found on the VM6809H rear panel. Press to select the output port. These pushbuttons may also correspond to connection profiles (P9–P17). **Note:** The **OUTPUT** (1–9) front panel pushbuttons have built-in LEDs that light to indicate they have been selected.
4	function pushbuttons	The function pushbuttons (**MENU**, **PROFILE**, **ENTER** and **CANCEL**) are for navigating the LCD built-in configuration utility. For full details, see *Front Panel Pushbuttons*, **page 17**. **Note:** The **MENU** and **PROFILE** front panel pushbuttons have built-in LEDs that light to indicate they have been selected.

VM6809H Rear View

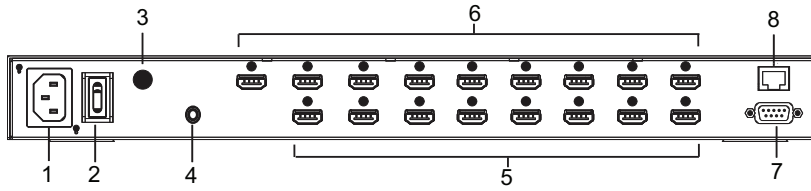

No.	Component	Description
1	power socket	This is a standard 3-pin AC power socket. The power cord from an AC source plugs in here.
2	power switch	This is a standard rocker switch that powers the unit on and off.
3	grounding terminal	The grounding wire attaches here. See *Grounding*, page 13, for further details.
4	Audio output port	The audio output port allows you to extract HDMI audio to stereo audio. The cable from a speaker plugs in here.
5	HDMI input ports	The cables from your HDMI source devices plug into these ports.
6	HDMI output ports	The cables from your HDMI display devices plug into these ports.
7	RS-232 serial port	Connect a computer or high-end system controller via this serial port.
8	Ethernet port	In order to access the VM6809H's Browser Graphical User Interface (GUI), the VM6809H must be connected to your network. The cable that connects the VM6809H to your LAN plugs in here. See *Cable Connection*, page 14, for further details

IR Remote Control

(for VM6404H only)

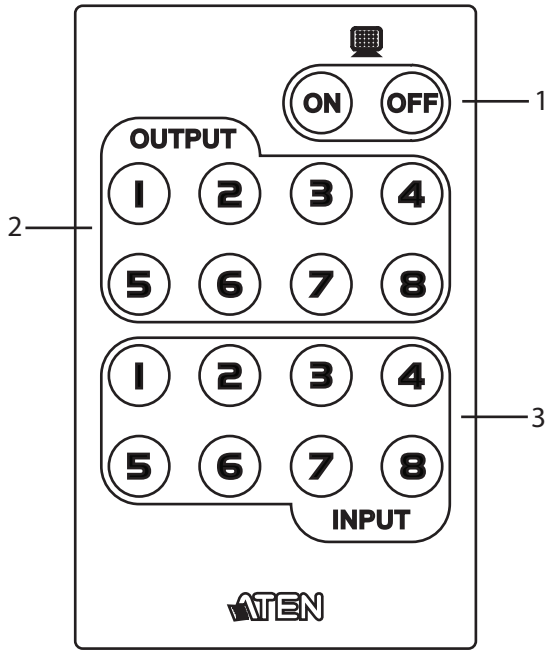

No.	Component	Description
1	power ON / OFF	Use the **ON** and **OFF** pushbuttons to turn the output displays on or off – by individual port, or all ports. (see *IR Remote Control Operation*, page 40)
2	output pushbuttons 1–8	Press **Output** display pushbuttons 1–8 to select the Output display you want to configure (see *IR Remote Control Operation*, page 40).
3	input pushbuttons 1–8	Press **Input** source pushbuttons 1–8 to select the Input source you want to display on a selected output (see *IR Remote Control Operation*, page 40).

Note: The VM6404H's IR remote control only supports use the 1-4 input and 1-4 output pushbuttons.

Chapter 2
Hardware Setup

1. Important safety information regarding the placement of this device is provided on page 127. Please review it before proceeding.
2. Make sure that the power to all devices connected to the installation are turned off. You must unplug the power cords of any computers that have the Keyboard Power On function.

Rack Mounting

The VM6404H / VM6809H can be mounted in a 19" (1U) system rack. For the most convenient front panel pushbutton configuration and operation at the local site, mount the unit at the front of the rack, as follows:

1. Use the M3 x 6 Phillips head hex screws supplied with the Mounting Kit to screw the rack mount brackets onto the front of the unit (VM6404H uses 6 screws and VM6809H uses 8 to fix the rack mount kit).

VM6404H

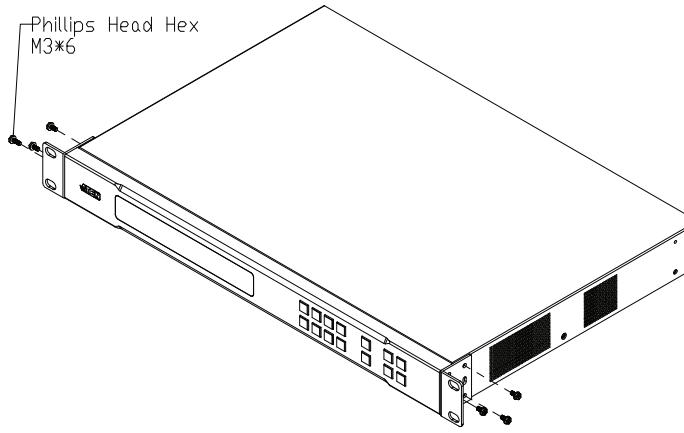

VM6809H

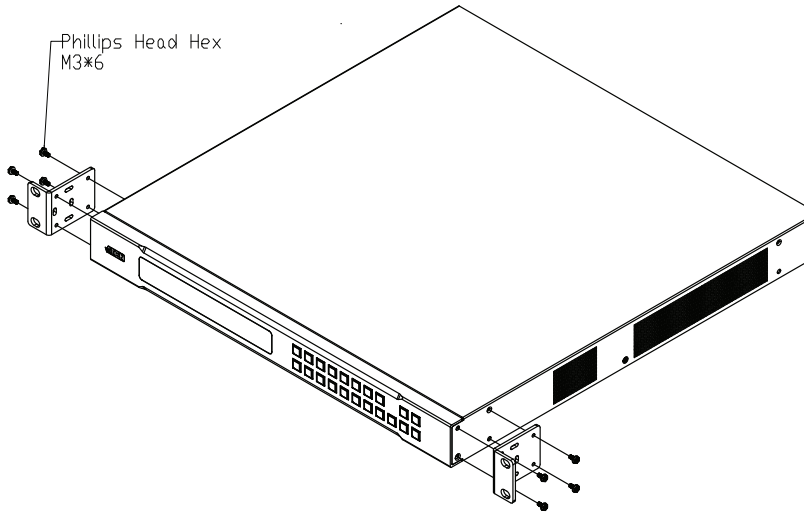

2. Position the unit in the front of the rack and align the holes in the rack mount brackets with the holes in the rack.
3. Screw the rack mount brackets to the rack.

Grounding

To prevent damage to your installation, it is important that all devices are properly grounded.

1. Use a grounding wire to ground the VM6404H / VM6809H by connecting one end of the wire to the grounding terminal, and the other end of the wire to a suitable grounded object.



2. Make sure that all devices in your VM6404H / VM6809H installation are properly grounded.

Cable Connection

Installation of the VM6404H / VM6809H is simply a matter of connecting the appropriate cables. Refer to the installation diagram on the following page (the numbers in the diagram correspond to the steps below), and do the following:

1. Use a grounding wire to ground the unit by connecting one end of the wire to the grounding terminal, and the other end of the wire to a suitable grounded object.

   Note: Do not omit this step. Proper grounding helps to prevent damage to the unit from surges or static electricity.

2. Connect up to 4 / 8 HDMI video sources to the **HDMI input** ports
3. Connect up to 4 / 9 HDMI display devices to the **HDMI output** ports
4. Connect the IR Receiver into the **IR** port (for VM6404H).
5. (Optional) To access the features in the web GUI or use Video Matrix Control App, plug a Cat 5e cable from the LAN into the VM6404H / VM6809H's **Ethernet** port.

   Note: For more information on the Video Matrix Control app, see *Video Matrix Control App User Manual*.

6. (Optional) If you are using the serial control function, use an appropriate RS-232 serial cable to connect the computer or serial controller to the VM6404H / VM6809H's female **RS-232 serial** port.
7. Plug the power cord supplied with the package into the VM6404H / VM6809H's 3-prong AC socket, and then into an AC power source.
8. (Optional) To extract HDMI audio, connect a speaker to the audio output port (for VM6809H).
9. Power on the VM6404H / VM6809H and all devices in the installation.

Installation Diagram

VM6404H

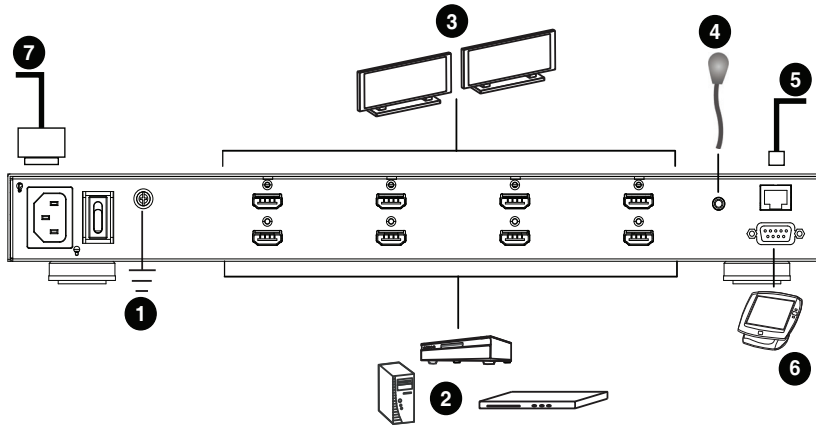

VM6809H

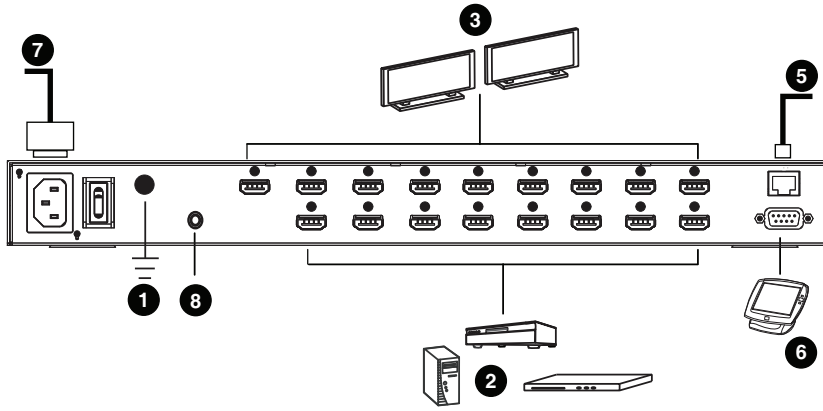

This Page Intentionally Left Blank

Chapter 3
Front Panel Configuration

Overview

The VM6404H / VM6809H can be configured and operated locally via the front panel LCD/pushbuttons and IR Remote Control (for VM6404H only); remotely over a standard TCP/IP connection via graphical user interface (GUI) using a web browser; via a remote terminal session using Telnet; or by a RS-232 serial controller.

The Front Panel Operation is discussed in this chapter. Web GUI Operation is discussed in Chapter 4, and RS-232 serial control is discussed in Chapter 5.

Front Panel Pushbuttons

The front panel features an LCD display and pushbuttons for convenient operation locally. This allows users to perform operations such as selecting which source shows on which display, viewing the IP settings, configuring the serial port, setting the EDID Mode / CEC / OSD /Output Status, selecting security settings, and loading/saving profiles.

Note the following front panel pushbutton functions:

- Use the **MENU** pushbutton to access the Menu page options: IP Setting, Serial Port Setting, Operation Mode, Security Mode, and Save to a Profile (see *LCD Menu Organization*, page 21).
- Use the **PROFILE** pushbutton to switch between the connection profiles which have been added to the Profile List (see *Profiles*, page 45). Pressing this pushbutton for longer than 3 seconds displays the Save to a Profile page (see *Save to a Profile*, page 37).
- Use the **CANCEL** pushbutton to go back to a previous page, return to the Main Screen, stop or exit an operation.
- Use the **ENTER** pushbutton to select options and confirm operations.
- Use the **INPUT (1-4 or 1-8) / OUTPUT (1-4 or 1-9)** pushbuttons to select the Input/Output port. These pushbuttons may also correspond to menu options, connection profiles, and so on.
- The VM6404H provides **Prev** / **Next** pushbuttons to navigate the menus.
- Use pushbuttons **7/8** (Prev/Next) to navigate the VM6809H menus.

Enter Password

Upon VM6404H / VM6809H startup, check the front panel LCD to view the loading progress. If the Password screen / LCD Menu fails to load, an error message displays. Reset the unit and try again.

If you are accessing the VM6404H / VM6809H for the first time, the Password screen appears as soon as the LCD loading process is done. Enter the default password 1234 to continue to the Main Screen (see *Main Screen*, page 19).



Additionally, the Password Screen appears if the VM6404H / VM6809H has been configured to require a password for Front Panel operation (see *Security Mode*, page 33).

To enter a password, do the following:

1. In the **Enter Password** field, check that the cursor is at the first asterisk (*) and flashing.
2. Use the front panel Input Port pushbuttons (1-4 or 1-8) to enter the 4-digit password. After the fourth digit has been entered correctly, the Main Screen displays.
3. Press **Cancel** to clear the password. The digits revert to 4 asterisks and the cursor goes back to the first asterisk.

Note: 1. The VM6404H / VM6809H password can be any 4-digit combination between 1111 to 8888 (VM6809H) or 1111 to 4444 (VM6404H). The default password is 1234.

2. If you enter an incorrect password, the cursor goes back to the first digit and reverts to flashing. The Incorrect Password message displays at the bottom of the screen, but clears as soon as a new password is entered.
3. If Password option is Enabled (see *Security Mode*, page 33), the LCD display time-out is 5 minutes by default.

Main Screen

The Main Screen shows the Input ports (1-4 or 1-8) in the top row, which are tied to the Output ports shown in sequential order (1-4 or 1-9) at the bottom row.



- The front panel pushbutton label corresponds to the **Input** ports (1-4 or 1-8) and **Output** ports (1-4 or 1-9) on the unit's rear panel.
- Use the **Menu** pushbutton to view the LCD Menu (see *LCD Menu Organization*, page 21).
- Use the **Profile** pushbutton to switch between profile connections (see *Profiles*, page 45).

Port Switching

From the Main Screen, users can configure the Input-to-Output port connections to associate an Input source device to an Output display.

Input Assignment

Use the Input Port pushbuttons to select the Input port you want to configure.



To assign an input to one or more output displays, do the following:

1. Press an Input pushbutton. The outputs already assigned with this input light blue.
2. To assign this input to more outputs, press the Output pushbutton. To de-select an output, press the pushbutton again.

Note:

- To deselect an input, press the pushbutton again. The pushbuttons dims.
- Input ports that are not assigned to any output will not be shown in the LCD screen.
- Pressing the **Cancel** pushbutton once stops the Input Port Selection operation and the LCD displays the active setting. Pressing the **Cancel** pushbutton again turns all LEDs off.
- After 10 seconds of inactivity, all the LEDs turn off.

Output Port Assignment

Use the Output Port pushbuttons to select the Output port you want to configure.



To assign an input to one output, do the following:

1. Press any Output pushbuttonn. The input assigned to this output lights yellow.
2. To assign another input to this output port, press the Input pushbutton. The pushbutton of the assigned input lights yellow.

   If an Output pushbutton is pressed a second time, it is deselected and the LED turns off.

To assign an input to multiple outputs, do the following:

1. Press the pushbuttons for the outputs to which you wish to assign a common input. These Output pushbuttons light blue.
2. Press an Input pushbutton to assign the input to the outputs you selected in step 1.

Note:

- To deselect an output, press the pushbutton again. The pushbutton dims.
- Pressing the **Cancel** pushbutton once stops the Output Port Selection operation and the LCD displays the active setting. Pressing the **Cancel** pushbutton again turns all LEDs off.
- After 10 seconds of inactivity, all the LEDs turn off.

LCD Menu Organization

The VM6404H / VM6809H has a built-in configuration utility via the front panel LCD, which can be controlled by pressing the **MENU** and front panel Input pushbuttons (1-4 or 1-8). User can cycle through the menu options, starting from IP Setting page, in the order shown in the table below:

Menu Page	Sub-Menu Page(s)		
IP Setting	IP Address		
	Subnet Mask		
	Gateway		
Serial Port Setting	Baud Rate	9600 / **19200** / 38400 / 115200	
Operation Mode	EDID	**Default** / Port1 / Remix / Customized	
	CEC	On / **NA**	
	OSD	**On** / NA	
	Output Status	Video	**On** / NA
		Audio Extract Mute	01-08 (VM6809H) On / **NA**
		Output Resolutions	01-04 (VM6404H); 01-09 (VM6809H)
Security Mode	Mode	**None**	
		Password Enable	
		Lock Screen	
	Change Password	Old Password	New Password
Save to a Profile	Save to a Profile No.	01–08 (VM6404H); 01-17 (VM6809H)	
Play/Stop the Profile Schedule			
Turn Video Wall Off			

Note: 1. The highlighted values are the default settings of the VM6404H / VM6809H.

2. The Audio Extract is only supported by VM6809H.

Menu Pushbutton

Press the **MENU** pushbutton to switch between the Main Screen and LCD Menu page. When the Menu is active, the MENU pushbutton's built-in LED lights up:



From the Menu page:

- Press **1** to go to the IP Setting page (see *IP Setting*, page 22)
- Press **2** to go to the Serial Port Setting page (see *Serial Port Setting*, page 24)
- Press **8** or **Next** to go to the next page(s) for the sub-menu pages
- Press **Menu** to return to the Main Screen

IP Setting

The IP Setting page displays the VM6404H / VM6809H's IP configuration. The values in the LCD Menu are read-only and can be edited via the Browser GUI (, page 102).

IP Address / Subnet Mask

To view the VM6404H / VM6809H's IP address and Subnet Mask, do the following:

1. Press the **Menu** pushbutton, and then press **Input pushbutton 1** to see the IP Setting submenu. The IP address and Subnet Mask are then shown.



Note: The VM6404H / VM6809H's default IP address is 192.168.0.60. The default Subnet Mask is 255.255.255.0

2. Press **8** or **Next** to go to the next page.
3. Press **Menu** to return to the Menu page.
4. Press **Cancel** to return to the previous page without saving.

Gateway

To view the VM6404H / VM6809H's gateway address, do the following:

1. Press the **Menu** pushbutton, press **Input pushbutton 1** to see the IP Setting submenu, then press **8** or **Next** to get to the next page. The gateway address displays.



Note: The default Gateway is 192.168.0.1.

2. Press **7** or **Prev** to go to the previous page.
3. Press **Menu** to return to the Menu page.
4. Press **Cancel** to go back a level, return to the initial screen, or exit.

Serial Port Setting

Baud Rate

To set the VM6404H / VM6809H's baud rate, do the following:

1. Press the **Menu** pushbutton, and then press **Input pushbutton 2**.



2. Press **Input pushbutton 1** to select **Baud Rate Setting**.



3. Press **Input pushbuttons 1–4** to make your selection.



Baud Rate options are:

- **1:** 9600
- **2**: 19200
- **3**: 38400
- **4**: 115200

Note: The default baud rate is 19200.

4. Press **Menu** to return to the Menu page.
5. Press **Cancel** to go back a level, return to the initial screen, or exit.

Operation Mode

The EDID Mode, CEC, OSD and Output Status features can be configured from the Operation Mode page.

- **EDID Mode:** The EDID (Extended Display Identification Data) mode is used to have the VM6404H / VM6809H automatically apply a preset EDID Mode, which utilizes the best resolution across different monitors.
- **CEC:** Consumer Electronics Control (CEC) allows interconnected HDMI devices to communicate and respond to one remote control.
- **OSD:** Use this option to enable real-time port switching information for each port.
- **Output Status:** The Output Status shows whether the video/audio of an Output port is turned on or off and allows viewing and setting of the Output Resolution.

EDID Mode

To configure the EDID Mode, do the following:

1. Press the **Menu** pushbutton, press **8** or **Next**, and then press **Input pushbutton 1**.



2. From the Operation Mode page, press **Input pushbutton 1**:



(Continues on next page.)

3. Press **Input pushbuttons 1–4** to make your selection.



EDID Mode options are:

EDID Option	Description
1: Default	The default EDID is passed to all video sources.
2: Port 1	. The EDID from port1 is passed to all video sources.
3: Remix	Uses the EDID of each connected display according to its connection when the VM6404H / VM6809H is first powered on, or immediately after pressing 3 to select the Remix option.
4: Customized	This mode features an EDID Wizard that allows user-defined EDID configurations for optimum output. See *Customized EDID Parameters*, page 84.

4. Press **Menu** to return to the Menu page.
5. Press **Cancel** to go back a level, return to the initial screen, or exit.

CEC

To configure the CEC setting, do the following:

1. Press the **Menu** pushbutton, press **8** or **Next**, and then press **Input pushbutton 1**.



2. From the Operation Mode page, press **Input pushbutton 2**:



3. Press **Input pushbuttons (1-4 or 1-9)** to enable (**ON**) or disable (**NA**) the CEC feature for the output port. If the port does not support CEC, an **NA** is shown.



Note: The default CEC setting is NA.

4. Press **Menu** to return to the Menu page.
5. Press **Cancel** to go back a level, return to the initial screen, or exit.

OSD

The On-Screen Display or OSD feature enables real-time text updates to appear on the display device's screen for any configuration changes made to the Output port via the VM6404H / VM6809H's front panel, IR remote control or Browser GUI.

To configure the OSD setting for each output port, do the following:

1. Press the **Menu** pushbutton, press **8** or **Next**, and then press **Input pushbutton 1**.



2. From the Operation Mode page, press **8** or **Next** to go to the next page, then press **Input pushbutton 1**:



3. Press **Input pushbuttons (1-4 or 1-9)** to enable (**ON**) or disable (**NA**) the OSD feature for the output port.



Note: The default OSD setting is On.

4. Press **Menu** to return to the Menu page.
5. Press **Cancel** to go back a level, return to the initial screen, or exit.

Video Outputs

To configure the **Output Status** settings for each output port, do the following:

1. Press the **Menu** pushbutton, press **8** or **Next**, and then press **Input pushbutton 1**.



2. From the Operation Mode page, press **8** or **Next** to go to the next page, then press **Input pushbutton 2**:



3. From the Output Status page, press **Input pushbutton 1** to select **Video**.



4. Press **Input pushbuttons (1-4 or 1-9)** to enable (**ON**) or disable (**NA**) the video/audio of the output port.



Note: The default Output Status setting is On.

5. Press **Menu** to return to the Menu page.
6. Press **Cancel** to go back a level, return to the initial screen, or exit.

Output Resolutions

To configure the **Output Resolution** settings for each output port, do the following:

1. Press the **Menu** pushbutton, press **8** or **Next**, and then press **Input pushbutton 1**.



2. From the Operation Mode page, press **8** or **Next** to go to the next page, then press **Input pushbutton 2**:



3. **VM6404H**: From the Output Status page, press **Input pushbutton 2** to select Output Resolution.



VM6809H: From the Output Status page, press **8** to go to the next page, and press **Input pushbutton 1** to select Output Resolution.





4. Press **Input pushbuttons (1-4 or 1-9)** to select an output port whose resolution will be changed.



5. Available options include: Native Resolution, 560x360@60HZ, 720x576@50HZ, 768x480@60HZ, 1024x768@60HZ, 1280x720@50HZ, 1280x720@60HZ, 1920x1080@30HZ, 1280x800@60HZ, 1280x1024@60HZ, 1366x768@60HZ, 1400x1050@60Hz, 1600x900@60HZ, 1600x1200@60HZ, 1920x1200@60HZ, 1920x1080@50HZ, 1920x1080@60HZ, 2560x1080@60HZ, 3440x1440@50HZ, 3840x2160@24HZ, 3840x2160@25HZ, 3840x2160@30HZ, 4096x2160@24HZ, 4096x2160@25HZ, 4096x2160@30HZ, 3840x2160@50HZ 4:2:0, 3840x2160@60HZ 4:2:0, 4096x2160@50HZ 4:2:0, and 4096x2160@60HZ 4:2:0
6. Press **Menu** to return to the Menu page.
7. Press **Cancel** to return to the previous step without saving.

Audio Extract

To configure the **Audio Extract** settings for VM6809H, do the following:

1. Press the **Menu** pushbutton, press **8** or **Next**, and then press **Input pushbutton 1**.



2. From the Operation Mode page, press **8** or **Next** to go to the next page, and then press **Input pushbutton 2**:



3. From the Output Status page, press **Input pushbutton 2** to select Audio Extract.



4. Press **Input pushbuttons (1-8)** to select an input port to the stereo audio output. To mute the audio, press the PROFILE pushbutton until it indicates ON.



Security Mode

The Security Mode page allows users to manage the VM6404H / VM6809H's security-related settings. Three security modes are available: None, Password Enable and Lock Screen. The VM6404H / VM6809H's password can also be changed here.

Mode

To configure the security mode settings:

1. Press the **Menu** pushbutton, press **8** or **Next**, and then press **Input pushbutton 2** to access the Security Mode page.



2. Press **Input pushbutton 1** in Security Mode.



3. In the Mode menu, the following options available:
   - To disable password authentication for the panel LCD, press **Input pushbutton 1**. To enable password authentication when the LCD times out or when the VM6404H / VM6809H is powered on, press **Input pushbutton 2**.



Note:

- The panel password can be any 4-digit combination between 1111 to 4444. The default password is **1234**.
- When password authentication is enabled, the LCD display times out after idling for 5 minutes.

- To enable a lock screen, press **8** or **Next** to navigate to the next page, then press **Input pushbutton 1**. The menu will then return to the home screen. When Lock Screen is enabled, pressing any pushbutton from the home screen will trigger the following message: *Please press "Menu" to start.*



4. Press **Menu** to return to the Menu page.
5. Press **Cancel** to return to the previous step without saving.

Changing the LCD Password

To configure the front panel password:

1. Press the **Menu** pushbutton, press **8** or **Next**, and then press **Input pushbutton 2** to access the Security Mode page.



2. Press **Input pushbutton 2**.



3. In the Old Password field, the cursor flashes at the first digit. Enter the old password (see *Enter Password*, page 18). If the old password is entered correctly, you can proceed to the next step.



Note: If you entered an incorrect password, an error message appears and the cursor goes back to the first digit (flashing). The Incorrect Password message clears as soon as a new digit is entered.

4. In the New Password field, the cursor flashes at the first digit. Enter the new password using the front panel number pushbuttons: 1111–4444 for VM6404H; 1111–8888 for VM6809H.



5. Re-enter the new password in the following screen. The new password is applied by the VM6404H / VM6809H immediately.



If the password you entered does not match the one entered in the previous screen, an error message appears. Enter the new password correctly.

6. Press **Menu** to return to the Menu page.
7. Press **Cancel** to return to the previous step without saving.

Save to a Profile

The switch allows users to store up to 8 (VM6404H; numbered P1-P8) or 17 (VM6809H; numbered P1-P17) different connection profiles that can be saved and recalled later.

The active Input-to-Output port connections on the LCD Main Screen is the configuration saved to a profile. When a user loads a profile, the change is immediate and the profile number is shown on the lower right corner of the LCD screen.

To save a profile once the desired port connections are set, do the following:

1. Press the **Menu** pushbutton to access the Menu page, then **8** or **Next** to navigate to the next pages. Press pushbutton **1** to open the Save to a Profile page.



2. On the page that opens, you are asked to give the profile a number. Use the front panel number pushbuttons to select a profile number into which you want to save the configuration.



VM6404H Options are P1–P8 (when saving a profile via the LCD), where:

- Input port pushbuttons **1–4** correspond to Profile **P1** to **P4**
- Output port pushbuttons **1–4** correspond to Profile **P5** to **P8**

VM6809H Options are P1–P17 (when saving a profile via the LCD), where:

- Input port pushbuttons **1–8** correspond to Profile **P1** to **P8**
- Output port pushbuttons **1–9** correspond to Profile **P9** to **P17**

3. Press **Enter** to store the configuration – the LCD shows Profile Saved.
4. Press **Menu** to return to the Menu page,
5. Press **Cancel** to return to the previous step without saving.

Note: Access the Save to a Profile page quickly by pressing the **Profile** pushbutton for longer than 3 seconds.

Playing / Stopping the Profile Schedule

The final option in the menu allows users to play or stop the selected profile schedule (to learn more about switching between connection profiles, see *Profile Pushbutton*, page 39).

To play or stop a profile, do the following:

1. Press the **Menu** pushbutton to access the Menu page, then **8** or **Next** twice to navigate to the next pages. Press **Input pushbutton 2** to play the selected profile schedule.



2. Press the **Menu** pushbutton to access the Menu page, then **8** or **Next** twice to navigate to the next pages. Press **Input pushbutton 2** to stop the selected profile schedule.



Turn Video Wall Off

If a video wall is currently playing, a submenu will appear.



Selecting **Turn video wall off** will return port assignments to their default (i.e. disassemble the video wall).

Profile Pushbutton

The **PROFILE** pushbutton lets users conveniently switch between connection profiles that have been saved or added to the Profile List (see *Profiles*, page 45).

If a Profile is in use, its profile number (P1-P8 or P1-P17) is shown on the lower right corner of the LCD display.



The Profile pushbutton functions as follows:

- After pressing the Profile pushbutton, available profile numbers will light up. The active profile number will flash. use the Input/Output pushbuttons to switch to a specific profile (P1 to P8) or (P1 to P16). Note that:
  - **Input** ports **1-4** or **1-8** correspond to Profile **P1** to **P4** or **P1** to **P8**
  - **Output** ports **1-4** or **1-9** correspond to Profile **P5** to **P8** or **P9** to **P17** (VM6404H: where Output Port 1=Profile 5, Output Port 2=Profile 6... Output Port 4=Profile 8; VM6809H: where Output Port 1=Profile 9, Output Port 2=Profile 10... Output Port 9=Profile 17)

  The selected pushbutton's light flashes, and the VM6404H / VM6809H immediately applies the port connections configured in the selected profile. If the light changes to a steady state, it means the profile is valid.
- After pressing the Profile pushbutton, pressing it again will change to the next profile in Profile Scheduling (see page 63), not the next profile list. This feature is only available while a schedule is playing.
- Press the **Cancel** pushbutton to exit

Note: If there are no profiles configured on the VM6404H / VM6809H device, an error message "*No Available Profile*" is displayed when the Profile pushbutton is pressed.

A Profile's port connections can be edited using the front panel pushbuttons (see *Port Switching*, page 19) or from the *Connections* page of the Browser GUI (see page 72). Additionally, the Profile List can be configured via the Profile page of the Browser GUI (see *Profiles*, page 45).

IR Remote Control Operation

The IR remote control (see page 10) included with the VM6404H can be used to:

- change the Input source of any Output display
- power on/off individual Output displays; or
- power on/off all Output displays simultaneously

Before using the remote control, a user must first plug the IR External Receiver into the rear panel of the VM6404H and place the receiver where the IR signal can be reached (see *IR port*, page 7).

Change the Input source of an Output display

To change the Input source of an Output display, using the remote control, do the following:

1. Press the **Output** port number (**1-4**) you want to change.
2. Within 2 seconds press the **Input** port number (**1-4**) you want the Output port to display.*
3. Repeat steps 1-2 to change additional ports.

*For the change to occur the Input number must be pressed within 2 seconds of pressing the Output number.

Power on/off individual Output displays

To power on/off individual Output displays, using the remote control, do the following:

1. Press the **Output** port number (**1-4**) you want to power on/off.
2. Within 2 seconds press the **ON** or **OFF** pushbutton.*
3. Repeat steps 1-2 to change the power status back on/off.

*If the **ON** or **OFF** pushbutton is pressed *after* 2 seconds of pressing the Output port number, all the displays are powered on or off instead of just the intended Output port.

Power on/off all Output displays

To power on/off all Output displays simultaneously, with the remote control, do the following:

1. Press the **ON** or **OFF** pushbutton.*
2. Repeat step 1 to simultaneously change back the power status of all Output ports, to on or off, respectively.

*The **ON** or **OFF** pushbuttons bring all displays to the same power status, regardless of the individual power statuses.

This Page Intentionally Left Blank

Chapter 4
Browser Operation

Overview

The VM6404H / VM6809H can be configured over a standard TCP/IP connection via its built-in Graphical User Interface (GUI). Because it can be accessed from anywhere over a network or the Internet, operators can easily log in via web browser. Security is ensured by password protection and user-configurable time-out. The VM6404H / VM6809H supports three levels of remote users with various privileges, and up to 16 users can log into the GUI at one time. For full details, see the sections that follow.

Logging In

To access the GUI, type the VM6404H / VM6809H's IP address into the address bar of any browser. If a Security Alert dialog box appears, accept the certificate – it can be trusted. The login screen appears:

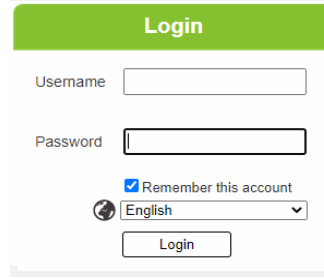

- The default IP address is **http://192.168.0.60**
- The default Username and Password are: **administrator / password**
- Enter the username and password, then click **Login**.
- The same user can not be logged in simultaneously.
- Use the drop-down menu to select the GUI language.
  - English, French, German, Italian, Japanese, Korean, Portuguese, Russian, Spanish, Simplified Chinese and Traditional Chinese

Main Page

The Main Page opens to the **Profile List**. This is where you configure the input to output connections by creating profiles. The page is divided into three parts: the *Menu Bar*, *Profile List*, and *Profile Scheduling*.

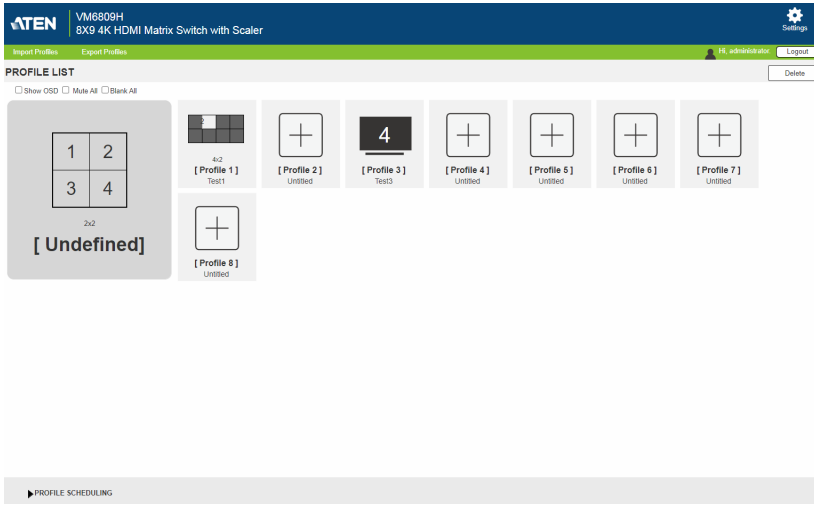

Menu Bar

The Menu Bar consists of *Model information*, *Import Profiles*, *Export Profiles*, the *Settings* icon, and the *Logout* button.



- Click the model number to add a description for the Video Matrix switch that you wish to show after the model number.
- Click **Import Profiles** or **Export Profiles** to import or export a configuration file (see page 61).
- Click **Settings** to enter the System Settings (see page 69).
- Click the **Logout** button to log out of the GUI.

Profiles

Understanding Profiles and Profile List

A profile is a set of settings that specifies how audio and video sources are to be displayed or played on one or more video walls and speakers. You can create and save up to 64 profiles to the Profile List to be conveniently switched via the front panel, web console (GUI), or the Video Matrix Control app as needed.

Note: For more information on the Video Matrix Control app, see *Video Matrix Control App User Manual*.

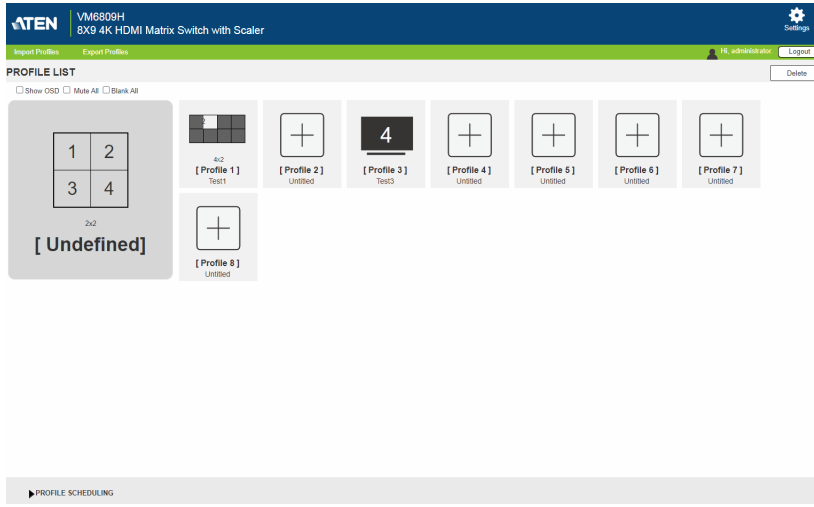

Creating a Profile

1. From the Profile List, click an empty profile [+] icon. This window appears.

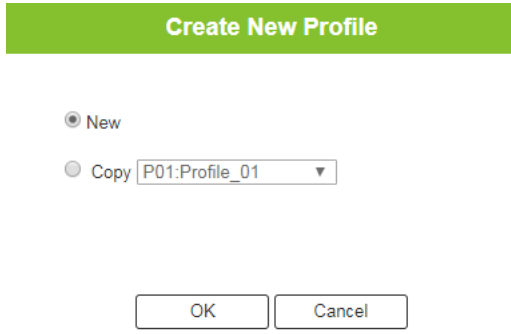

2. Follow the on-screen instructions to select a template and define the number of displays for the display zone.
   - **New:** Select this option to configure a profile from scratch.
   - **Copy:** Select this option to configure a profile based on an existing profile.

   This screen appears. In this example, the profile is set to a quad view (2 x 2 division) using 4 displays.

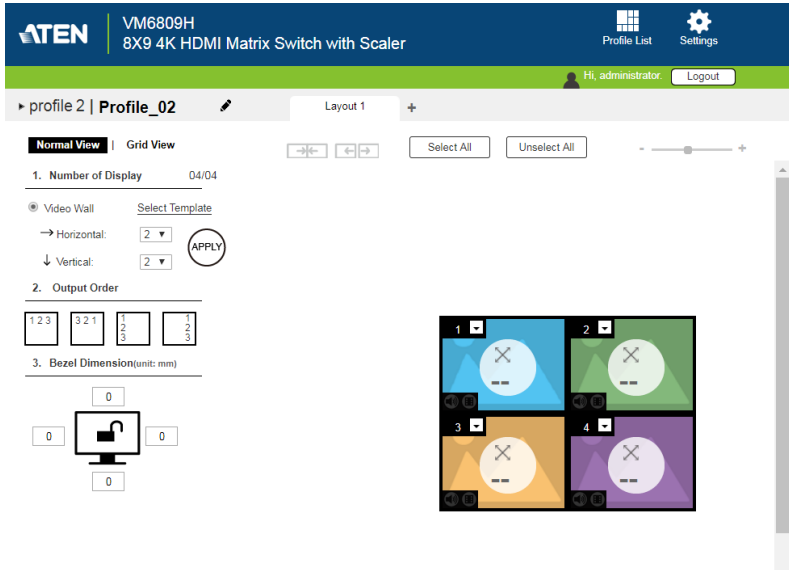

3. Click on each display in the preview and specify its video input and scaling preference. The selected input port is immediately indicated as the big number in the selected display.



4. Click **Save** to finish the configuration. The profile immediately appears in the Profile List.

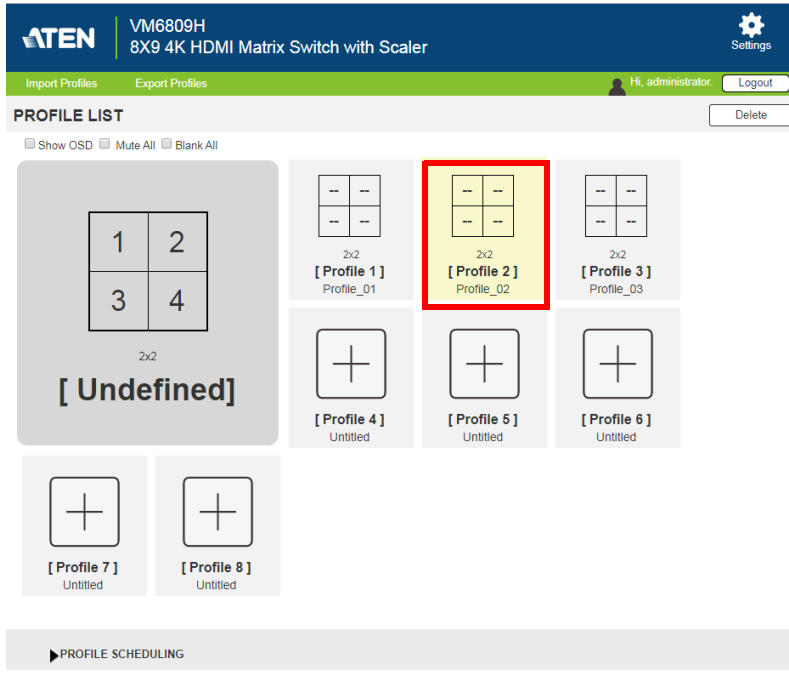

Configuring Video Settings of a Profile

1. In the Profile List, locate the profile you wish to configure.
2. Click the profile and then click **Edit**. This screen appears.

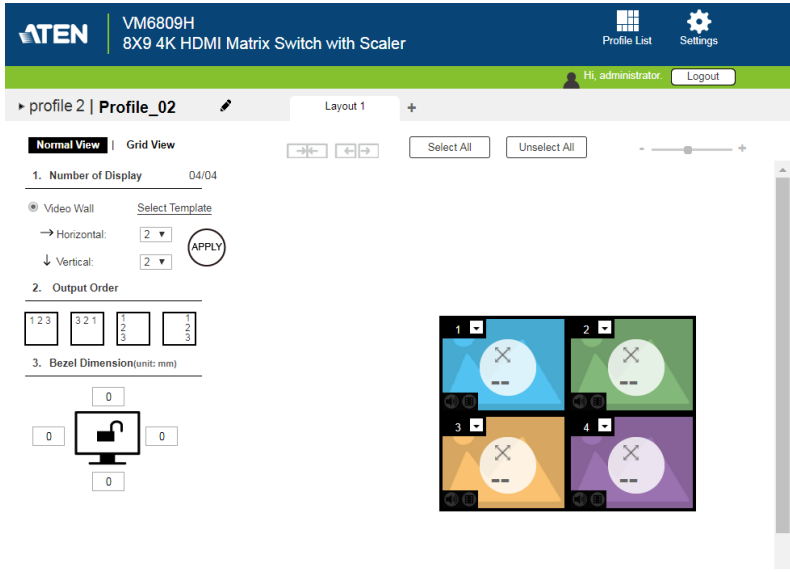

3. You can choose either the **Normal View** or the **Grid View** to edit the profile.

   Normal View

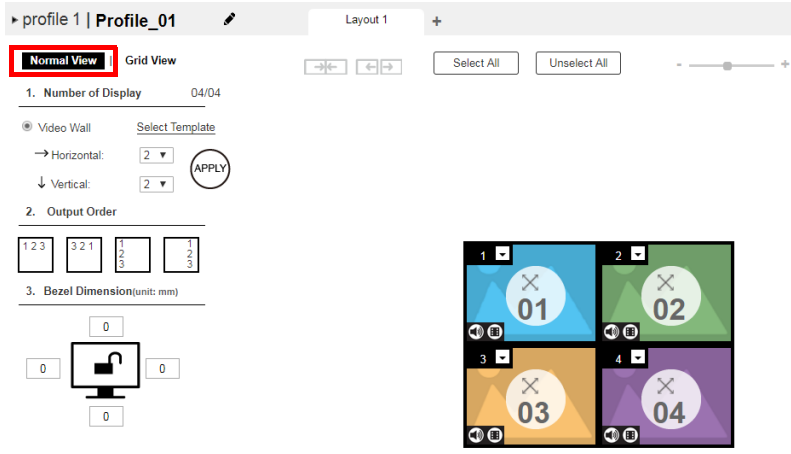

- On top of video and audio assignments, the Normal View also allows you to configure the number of monitors and the bezel dimensions of the profile.
- For detailed information, see *Configuring Video Settings in Normal View*, page 50.

Grid View

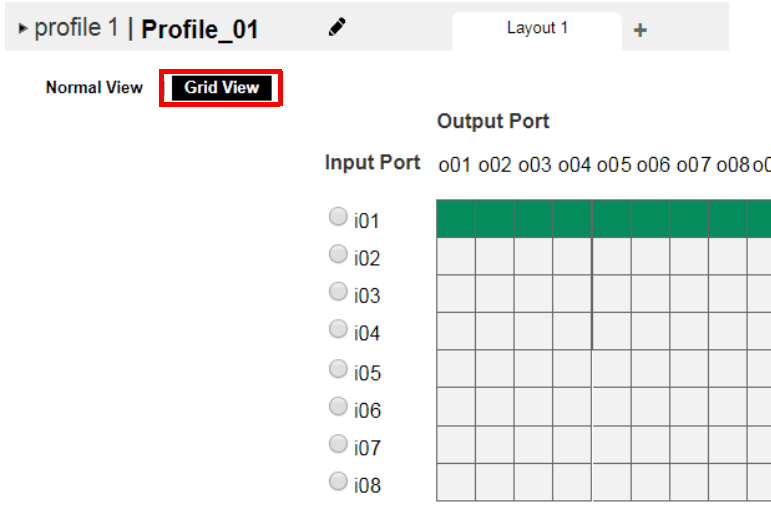

- In grid view, the audio and video outputs are assigned by mapping the audio/video input on the vertical axis to the audio/video output on a horizontal axis.
- For detailed information, see *Configuring Video Settings in Grid View*, page 56.

4. (Optional) Click **Test** to apply your configuration without saving it.
5. To save your configuration, click **Save & Apply**, **Save**, or **Save As**.

Configuring Video Settings in Normal View

Profile Layout Settings

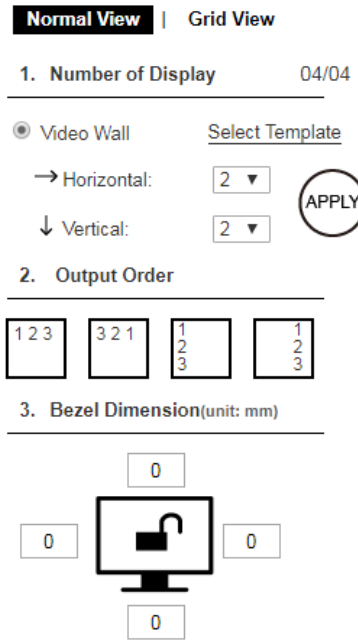

Control	Description
Number of Displays	Use the following controls to configure the layout type and the number of displays. ◆ **Video Wall**: Select this option for displays that are tiled together, where multiple monitors form one large screen – in various arrangements. ◆ **Select Template**: Click to open a window that allows you to select a predefined video wall layout. ◆ **Horizontal** / **Vertical**: Use these drop-down lists to select the number of displays that make up the video wall (a maximum of 64 are supported). Match this to the physical layout of the displays. **Note:** Click **Apply** to save the changes. A preview of the profile is shown on the right of the screen.
Output Order	Click any of the listed options to automatically assign output ports.
Bezel Dimension	Use the four boxes to increase/decrease the frame size for each active display.

Control	Description
Monitor Lock / Unlock 	Click the monitor icon to **Lock** the (4) bezel settings, so that when one size is changed they all change. Click the monitor icon to **Unlock** the (4) bezel settings, so that each size can be set independently.

Display Preferences

To configure the display preferences for one or more displays, click the display(s) in the preview, the Display Preference settings appear. Configure the settings as required.

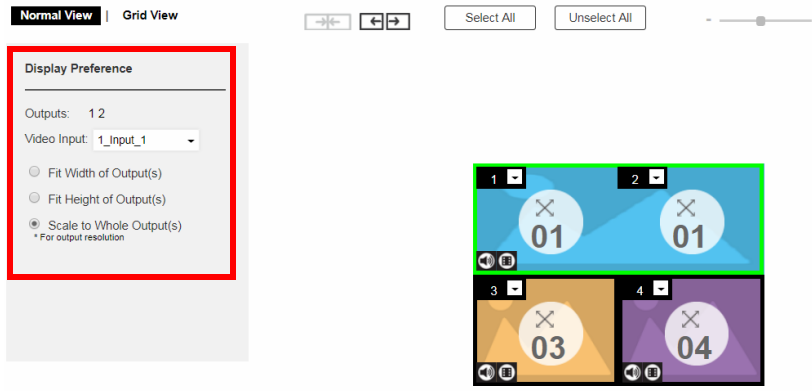

Option	Description
Output	Indicates the select display(s).
Video Input	Click to select a video source for the output(s). The chosen video source (port number) is indicated at the center of the output(s) in the preview.
Radio Button	◆ **Fit Width of Output(s)**: fits the video to the width of the display. ◆ **Fit Height of Output(s)**: fits the video to the height of the display. ◆ **Scale to Whole Output(s)**: fits the video on the entire display.

Video Wall Settings

Each icon represents an output port and the connected display. Use the icons to create independent or grouped outputs. An independent output displays video on a single monitor. A set of grouped outputs displays video across multiple monitors as one large screen.

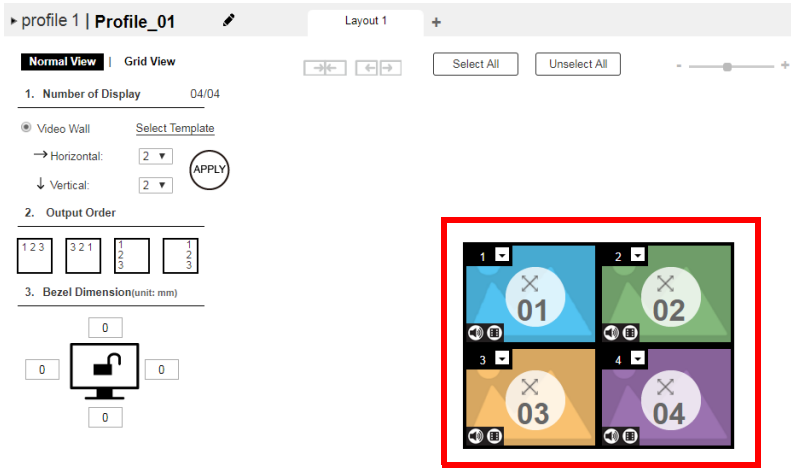

- Click an icon to configure the video input and display ratio from the *Display Preference* menu (see *Display Preferences*, page 51).
- Click multiple icons to Group Outputs (see *Grouping*, page 54).
- Click **Select All** to select all outputs.
- Click **Unselect All** to unselect all outputs.
- Use the drop-down list to define the video output.



- Use the slider bar to zoom in and out of the display layout.
- On the *Top Bar* click:
  - to rename the profile
  - + to add another layout to the profile
  - to configure audio outputs

Null Input

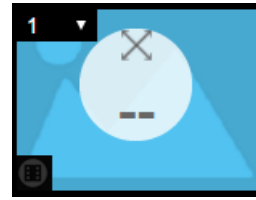

Option	Description
Null Icon	Click Null Input icons to highlight icons in green and use the Display Preferences menu to set the video options (see *Display Preferences*, page 51). Select a **single** icon to set the **Output** and **Video Input** for an independent display (see *Independent Output*, page 53). Select **multiple** icons and set the **Video Input** to group displays as one screen (see *Grouping*, page 54). *You must first set the Output port for each icon*.
Drop-Down Menu	Use the drop-down menu to select the Output port.

Independent Output

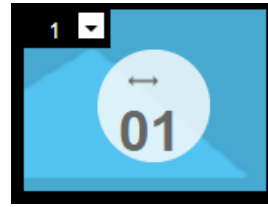

Option	Description
Independent	Independent Outputs are displays that have their own **Video Input** and **Output** selected. Independent Outputs: ◆ Display their own video ◆ Icons have their own color and Video Input Select an Independent Output and use the *Display Preferences* menu to select the **Video Input** (see page 51).
Drop-down Menu	Use the drop-down menu (top-right corner) to select the Output port.
Mute / Video 	Click the **speaker** icon to mute the audio on/off. Click the **video** icon to turn the video off/on.

Grouping

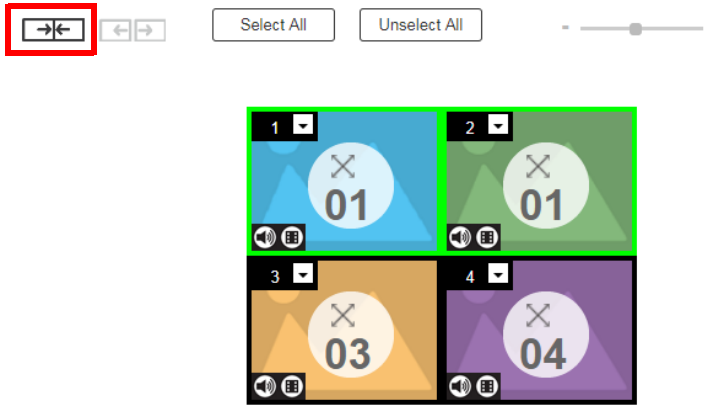

Option	Description
Grouping	Click multiple icons to Group Outputs (highlighted in green) and click →|← to group the displays into one screen. Use the **Display Preferences** menu to select the **Video Input** for the group - each Output icon in the Group will appear with the same Video Input number and icon color (see page 51).
Ungroup	Select a group and click ← → to ungroup the displays.

Group

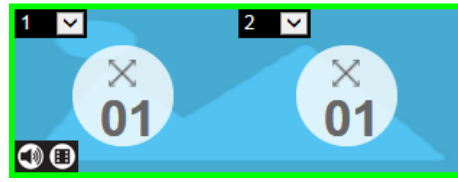

Option	Description
Group	A **Group** (of Outputs) shares the same **Video Input** and displays the video together as one large screen. A Group of Outputs: ◆ Displays video across multiple monitors to form one screen ◆ Icons have the same color and Video Input number. ◆ Select a Group and use the *Display Preferences* menu to select the **Video Input**. ◆ To group outputs see *Grouping*, page 54.
Mute / Video 	Click the **speaker** icon to mute the audio on/off. Click the **video** icon to turn the video off/on.

Video Wall Example

This example shows a video wall with 4 displays.

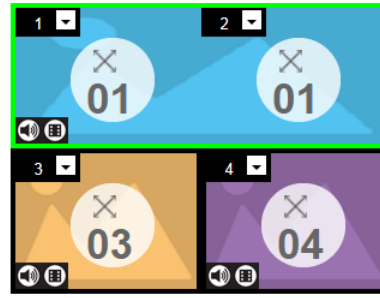

- This video wall has 1 group and 2 independent displays.
- Each group and independent output has a unique color.
- The blue group will show video Input 01 across the two displays as one large screen.
- The independent displays will show video from their assigned video input 03 and 04.

Configuring Video Settings in Grid View

In a grid view, the audio/video inputs are assigned by mapping the audio/video input on the vertical axis to the audio/video output on the horizontal axis.

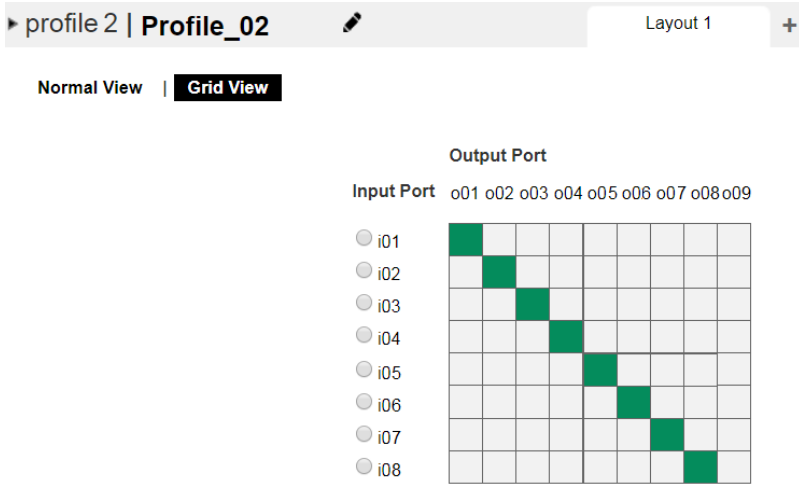

Example 1

In the following illustration, input 01 is assigned to output 01, and input 02 to output 02, and so forth.

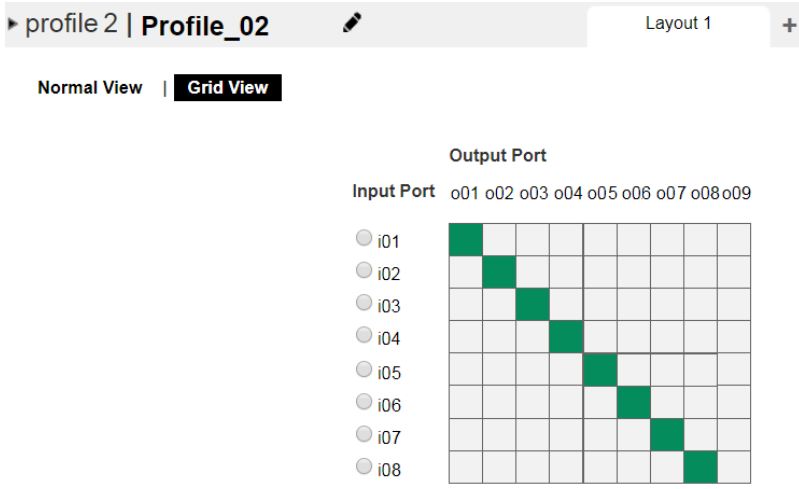

Example 2

To assign the same input for all outputs, click the input from the vertical axis. In the following illustration, all output ports are assigned with input 01.

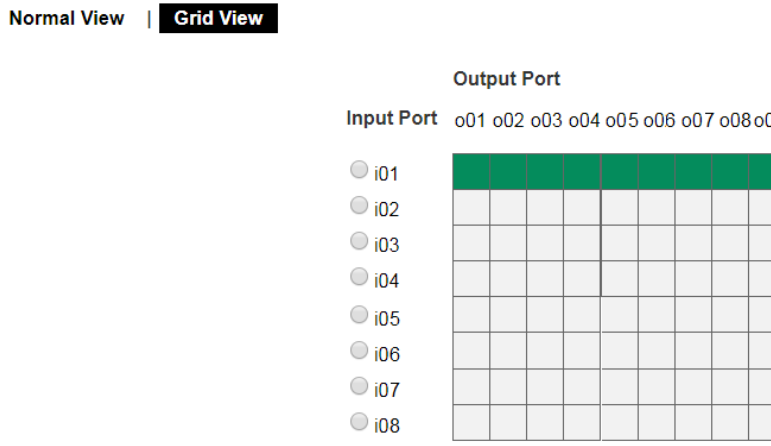

Playing a Profile

1. In the Profile List, locate the profile you wish to apply.
2. Click the profile and then click **Apply**.

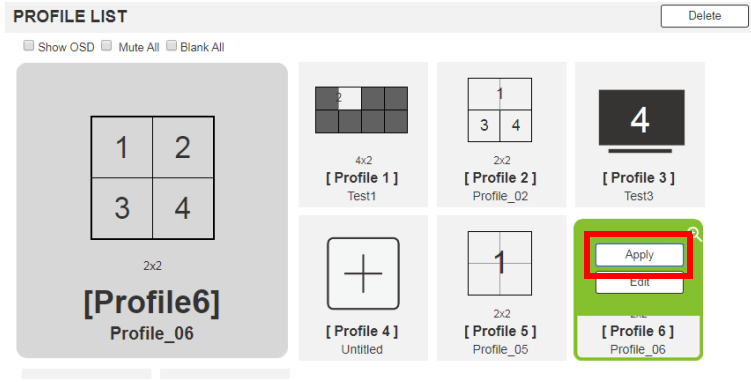

3. The profile is immediately applied and appears in the large **Play** window.

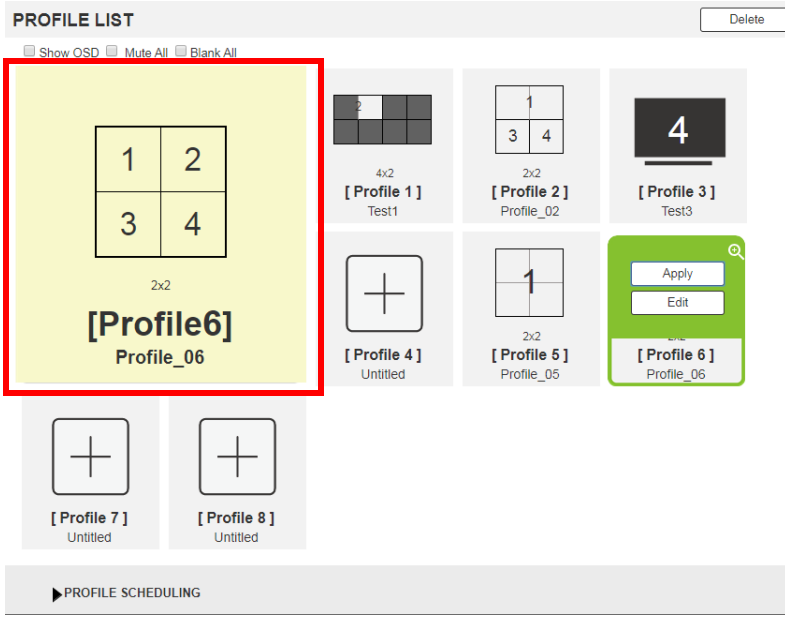

4. To adjust the played profile, click on the Play window. The following controls appear.

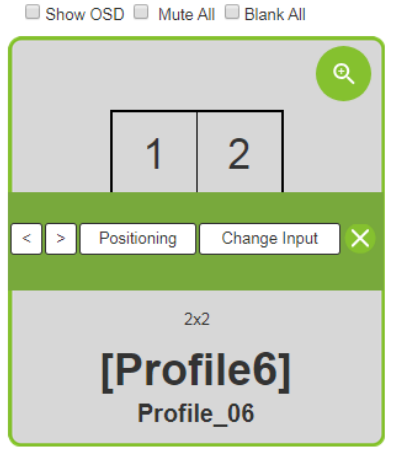

Option	Description
Show OSD	Check **Show OSD** to show the current connection status via OSD. When **Show OSD** is unchecked, the OSD will disappear.
Mute All	Check **Mute All** to mute the audio for all ports.
Blank All	Check **Blank All** to turn off the video to all displays.
	Click this icon to show a source assignment for this profile.
On Sequence	**On Sequence** appears when a profile schedule is playing.
<	Click < to go back to the previous profile in the sequence, when Profile Scheduling is in use. Only available with *On Sequence*.
>	Click > to advance to the next profile in the sequence, when Profile Scheduling is in use. Only available with *On Sequence*.
Positioning	Click **Positioning** to open a window that allows you to adjust the image position on each display. For Video Wall profiles, you can also set the Bezel Dimension, which is the frame thickness between each display.
Change Input	Click **Change Input** to change the input for single and grouped outputs, as explained on the next page.
	Click this icon to delete the profile.

Input Assignment

Use the Change Input page to see a preview of the input assignments for the profile, allows you to change the inputs and view a live stream of each input. To access this page, click **Change Input** from the Play Window (see *Input Assignment*, page 60).

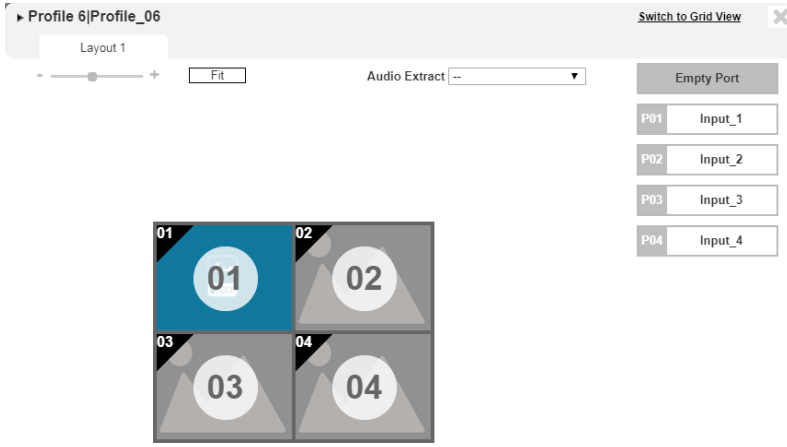

The following controls are available on the Change Input page.

Option	Description
	Click "-" or "+" to zoom out or zoom in the layout.
	Click to fit the layout screen to the default view.
	Drag from the Port List on the right side and drop on any display of the layout to set/change the input source.
	Use the drop-down menu to select the input source for audio extraction to stereo audio output.
Switch to Grid View	Click to switch the layout view to **Grid View**.
	Click to exit the Change Input window.

Exporting a Profile

To export the VM6404H / VM6809H's connection profiles, click **Export Profiles**. A configuration file starts downloading.

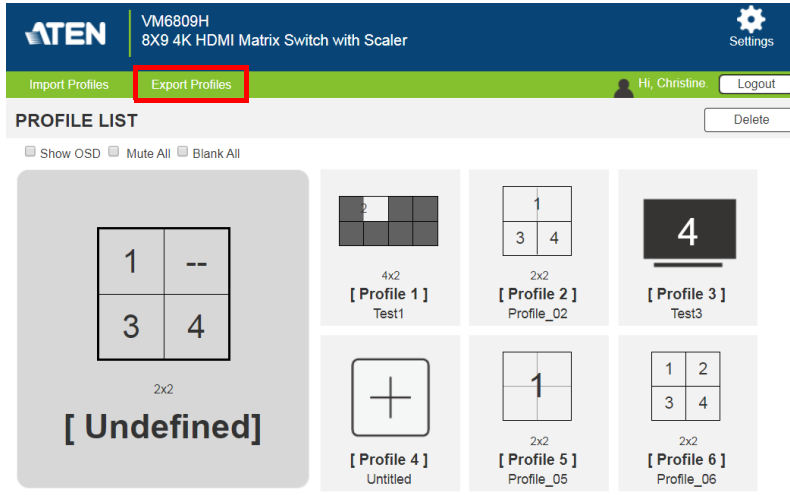

Importing a Profile

To import connection profiles to the VM6404H / VM6809H, do the following:

1. From the main screen, click **Import Profiles**.

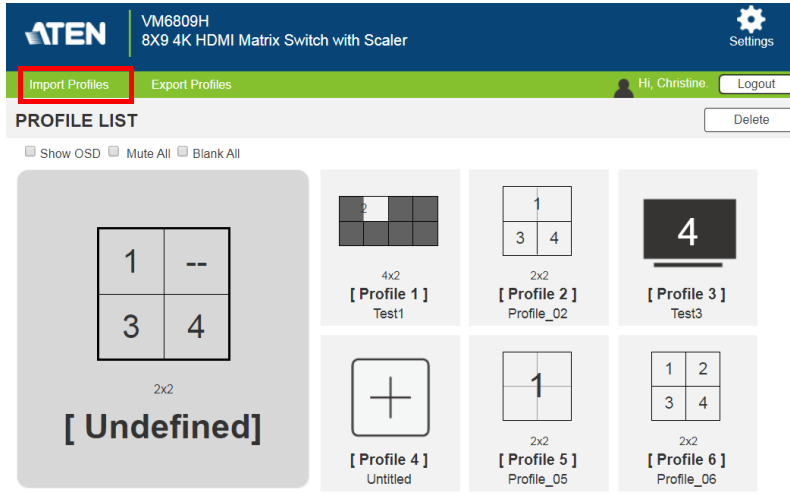

2. Browse the configuration file and click **Open**.

> **Note:** Importing a connection profile database will overwrite the current profiles.

Profile Scheduling

You can create one or more profile playlists that play periodically on specified time frames.

Playing a Profile Schedule

To play profiles on schedules, follow the steps below.

1. Configure the profiles you need. For details, see *Creating a Profile*, page 46.
2. Configure profile schedules. For details, see *Creating the Profile Schedule*, page 65.
3. Enable profile scheduling.
   a) Go to the Profile List page.

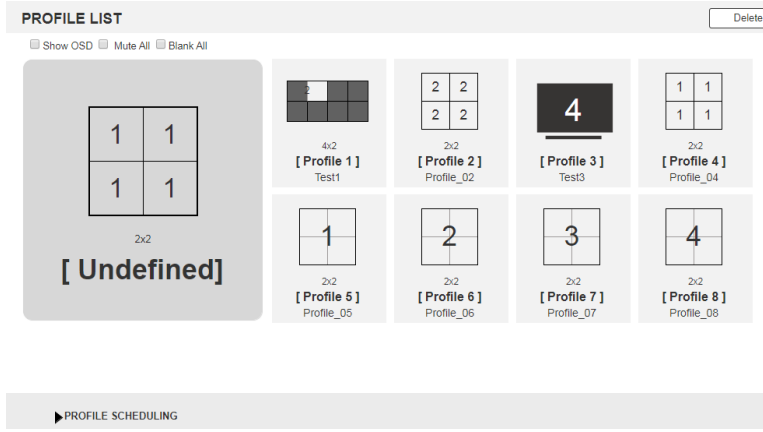

b) Click **PROFILE SCHEDULING**. This screen appears.

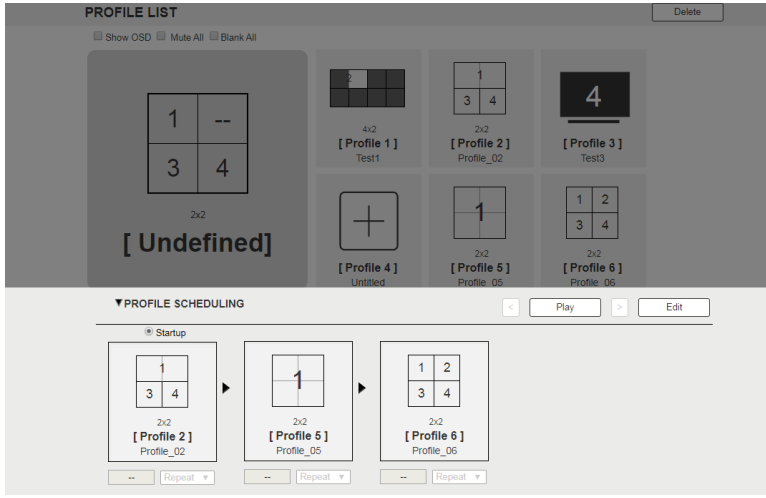

c) Click **Play**.

Creating the Profile Schedule

1. From the Profile List page, click **PROFILE SCHEDULING**. This screen appears.

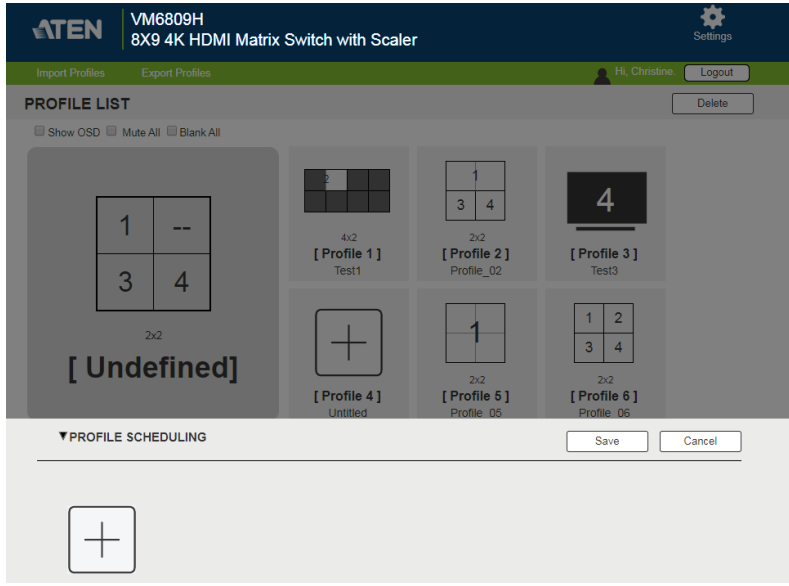

2. Click [+] to add a new schedule. This screen appears.

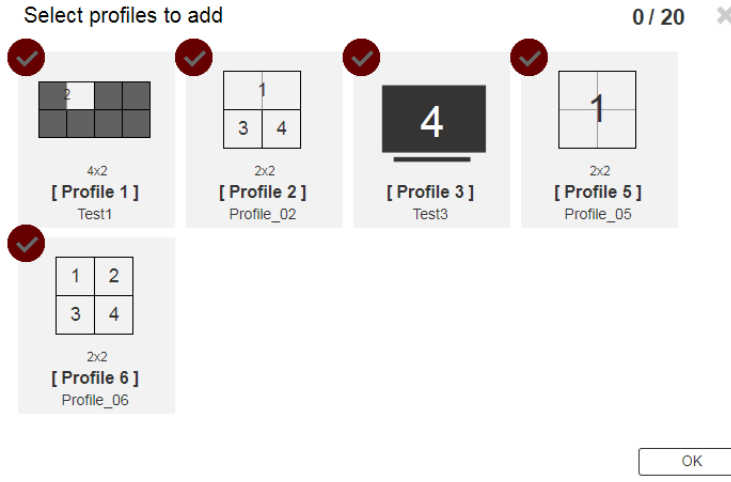

3. Click to select profiles to add into the schedule and then click **OK**. The selected profiles appear in the schedule.

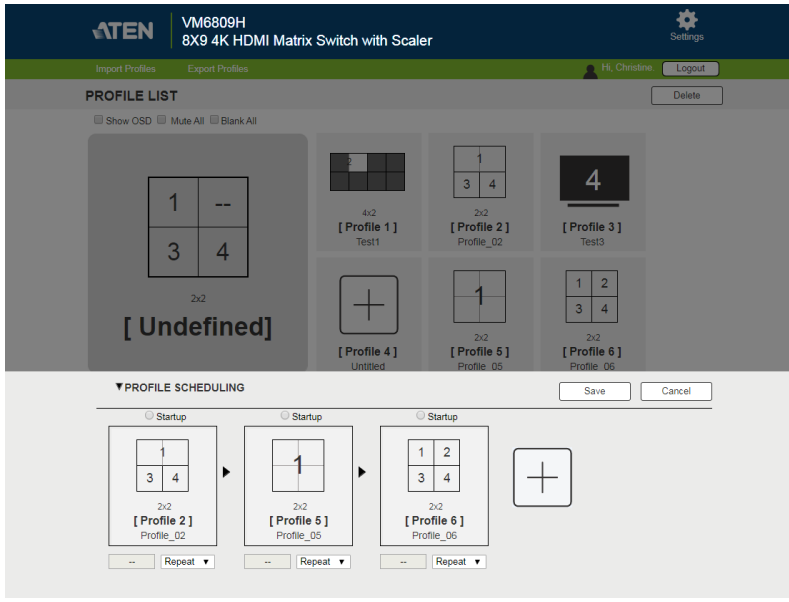

4. Configure the profile schedule as needed. For details, see *Editing the Profile Schedule*, page 67.

Editing the Profile Schedule

1. On the Profile List page, click **PROFILE SCHEDULING**. This screen appears.

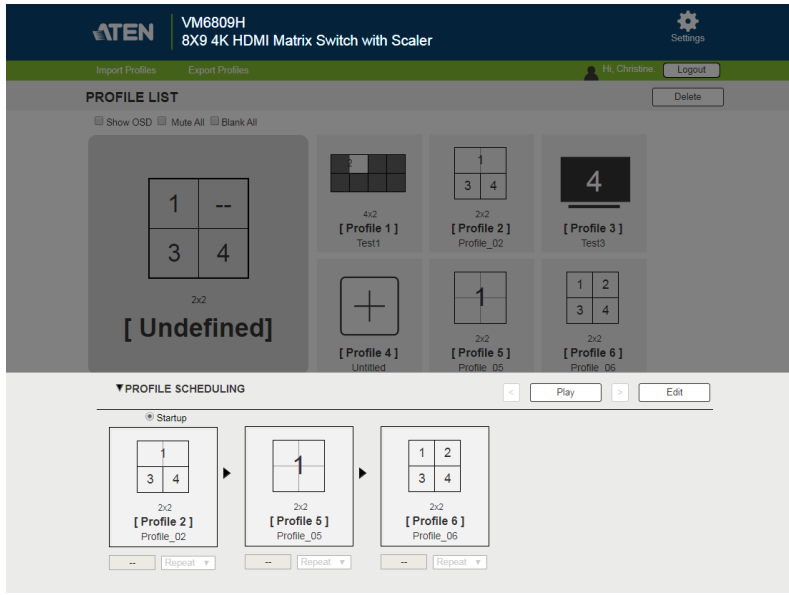

2. Click **Edit**. This page appears.

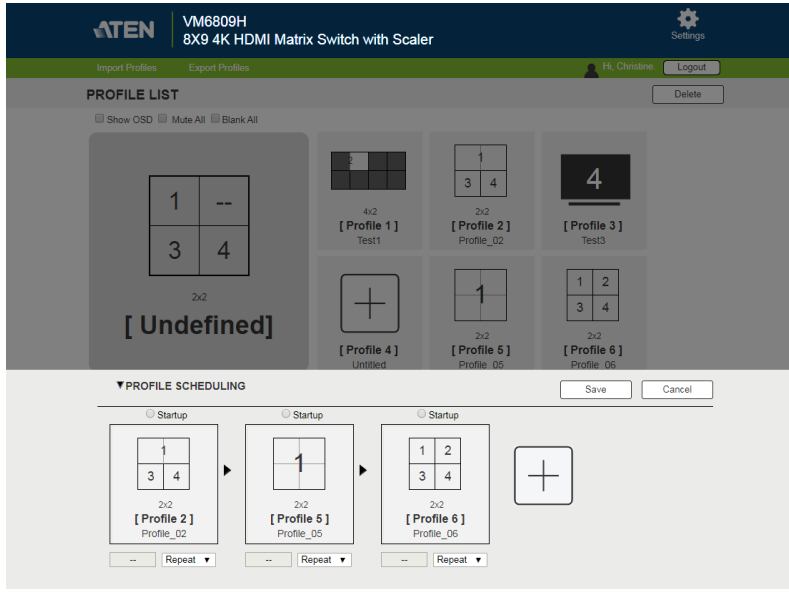

3. Configure the sequence, play duration of the added profiles using the following controls.

Option	Description
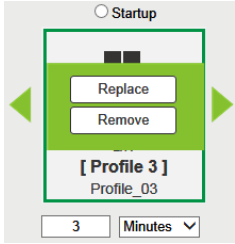	◆ Select **Startup** to set a profile as the starting point each time the schedule is played. ◆ Click **Replace** to replace the selected profile with another profile. ◆ Click **Remove** to delete the profile from the schedule. ◆ Use **< >** to change the profile's position in the schedule. ◆ Use the drop-down list to set the duration that the profile is played.
	Use the drop-down menu to select the duration (Hours, Minutes, or Seconds) and enter the amount of time for the profile to play. After the time expires, the schedule switches to the next profile. Use **Repeat** to stop switching between schedules and stay on the currently selected profile. If **Repeat** isn't used, the schedule will loop back to the first profile. If **Repeat** is used, a specific number of hours, minutes and seconds cannot be set and later profiles will not be played.
	Click to play profile schedule.
	Click to edit profile schedule.
	Click to stop profile schedule.
	Click to change to next or previous profile when a profile schedule is playing.

System Settings

Overview

The setting pages allow you to configure the VM6404H / VM6809H's system settings.

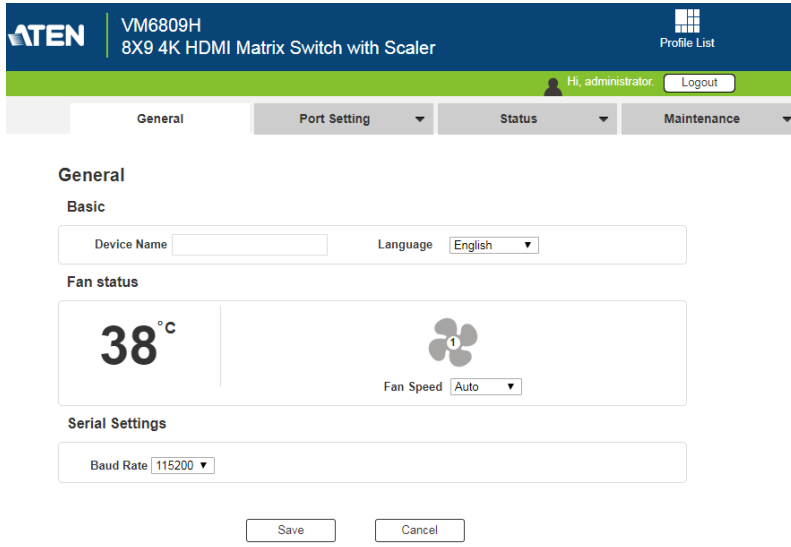

If your Web GUI is not showing these setting, click the **Settings** icon from the top-right corner in the web interface.

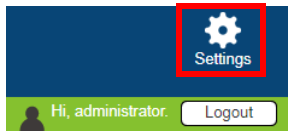

The table below provides an overview of the available settings for each tab.

Tab	Supported Functions	Detailed Information
General	◆ Configure the device name. ◆ Select the interface language. ◆ Monitor the VM6404H / VM6809H's fan. temperature and configure the fan speed. ◆ Configure the baud rate for serial communications.	For more information, see *General*, page 71.
Port Settings	◆ Configure the OSD and CEC port settings. ◆ Configure the HDCP key for input and output ports. ◆ Configure the Seamless Switch™ settings. ◆ Name the input and output ports. ◆ Select EDID modes.	For more information, see *Port Settings*, page 72.
Status	◆ View statuses of the sources connected to the VM6404H / VM6809H and enable/ disable FrameSync. ◆ View system information such as network settings, firmware version, and the settings for audio/video assignment, volume, CEC, audio mode settings, and more.	For more information, see *Status*, page 94.
Maintenance	◆ Upgrade system firmware. ◆ Back up or restore the VM6404H / VM6809H's configuration. ◆ Reset the unit to system default settings. ◆ Add, edit, or remove user accounts. ◆ Configure the system network settings.	See *Maintenance*, page 96.

General

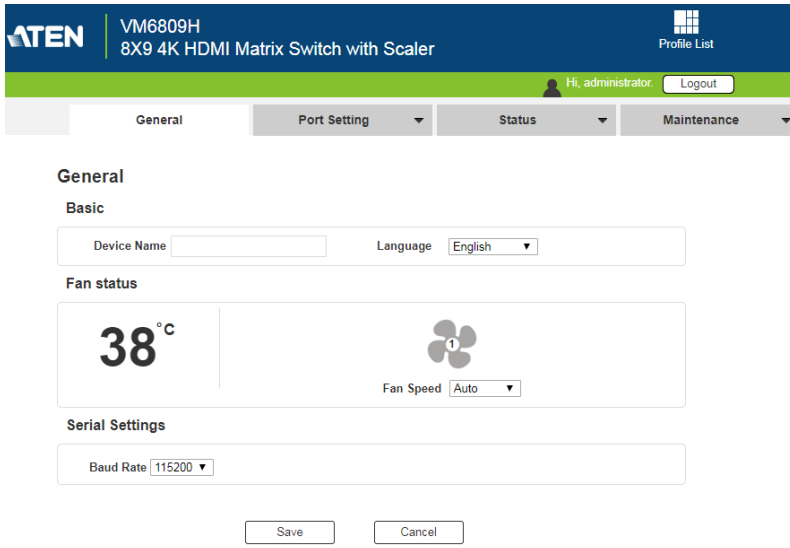

Basics

- **Device Name:** Type to name your Modular Matrix Switch.
- **Language:** Click to select a language for the web interface.

Fan Status

- **Fan speed:** Click to select a fan speed.
- Temperature and fan icons: Indicates the internal temperature and status of the cooling fans. The fan icons rotate to indicate they are working.

Note: If the fans have stopped working or are switched off, they will appear as follows. The fan module will then need to be replaced or reset.



Serial Settings

- **Baud rate**: Defines the baud rate for the RS-232 serial port.

Port Settings

OSD/CEC

The OSD/CEC page lets users view and set OSD and CEC settings for all ports.

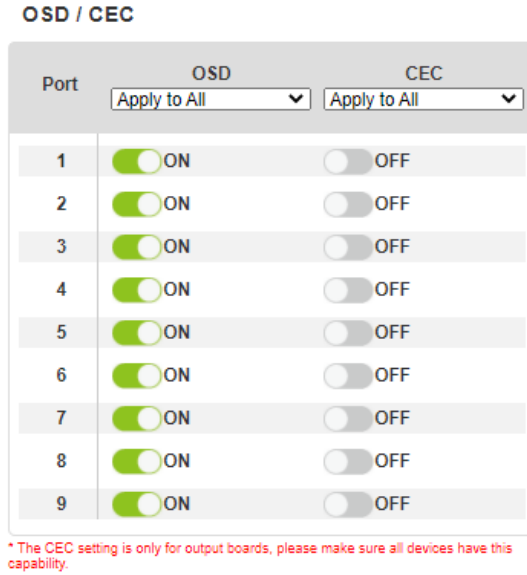

- **OSD**: Sets the default OSD option for the port. When OSD is on, real-time text updates appear on the display for 10 seconds when configuration and port changes are made to its output.
  - Use the drop-down menu to apply options to all ports, or ON/OFF button to enable/disable the OSD for each port.
- **CEC**: Consumer Electronics Control (CEC) allows interconnected HDMI devices to communicate and respond to one remote control.
  - Use the drop-down menu to apply options to all ports, or On/Off button to enable/disable CEC for a port.

HDCP

The *HDCP* page lets users view and set HDCP key settings between input and output ports for digital copy protection and to ensure Seamless Switch™ functionality between different devices. This is an Administrator and Advanced User only function.

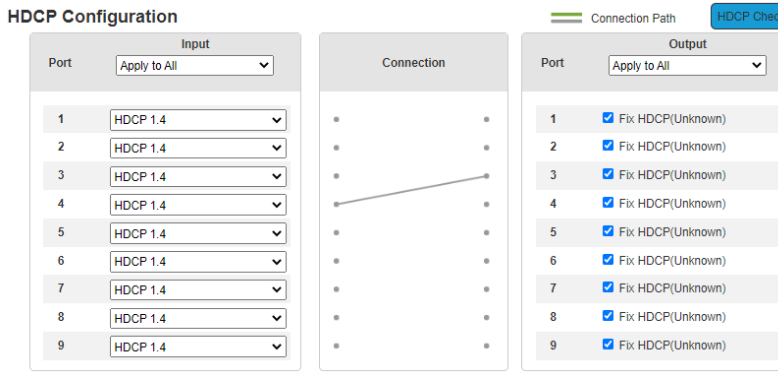

Input

Here users can select whether port capability is HDCP 2.2, HDCP 1.4 or non-HDCP enabled, either individually or by applying one setting to all ports.

Connection

Here users can find a visual display of connection paths between inputs and outputs. When selecting an input, its path is displayed in green.

Output

Here users can define whether or not HDCP settings are fixed, either by individual port or by applying one setting to all ports. By prearranging and fixing keys, this setting ensures that Seamless Switch™ is possible even when switching between HDCP and non-HDCP enabled devices.

HDCP Check

The HDCP Check button (upper-right corner) allows you to check the HDCP capability of the connected displays at one time. The analyses are indicated in the brackets after the Fix HDCP check box for each port.

Scaler

The *Scaler* page allows you to set Seamless Switch™ options which determine how a display performs when the Input port is changed.

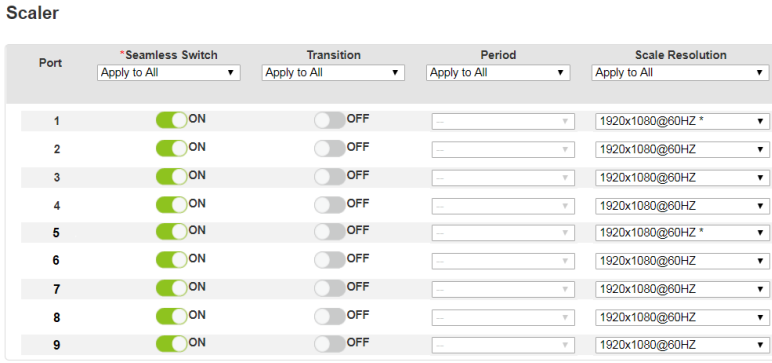

Note:

When Seamless Switch™ is enabled:

- The *Transition*, *Period* and *Scale Resolution* options can be enabled.
- Video outputs will not display 3D, Deep Color, or interlace (i.e., 1080i) resolutions correctly. To use these features, first disable Seamless Switch™.
- Videos may not display within range (fit on the screen), in which case, make sure to adjust the display settings on your device.

Enable Seamless Switch™ to remove the video distortion and delay seen when an input port is switched. Use the drop-down menu to apply options to all ports, or the On/Off button to enable/disable Seamless Switch™ per port. With Seamless Switch™ enabled, the following options are made available:

- **Transition**: Allows you to fade the video display when the Input port is changed. Use the period option to set the fade speed.
  - Use the drop-down menu to apply options to all ports, or On/Off button to enable/disable Transition per port.
- **Period**: Sets the fade speed for the Transition option.
  - Use the drop-down menu to apply an option (*Slow*, *Normal*, or *Fast*) to all ports, or lower drop-down menus to apply options per port.
- **Scale Resolution**: Forces the port to scale the video displayed to the selected resolution.
  - Use the top drop-down menu to apply an option to all ports, or lower drop-down menus to apply options per port.

Customized Resolution

Use the **Customized Resolution** to define an unique video resolution for your VM6809H. To set a customized resolution on your Seamless Switch™, follow the steps below.

Note: This function is only supported on VM6809H.

1. Choose a port that you wish to define an unique video resolution to.

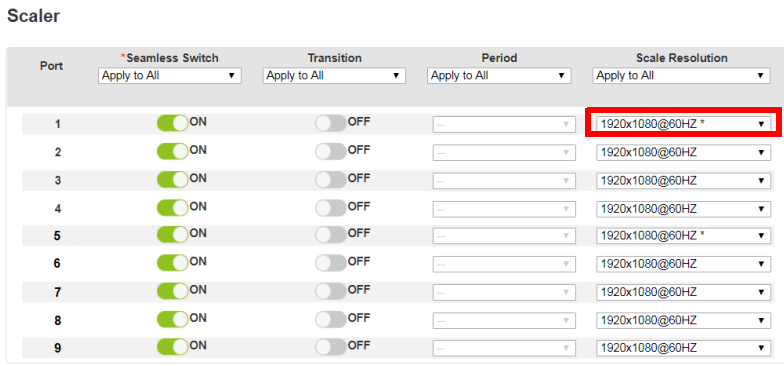

2. Use the drop-down menu and select **Customized**.

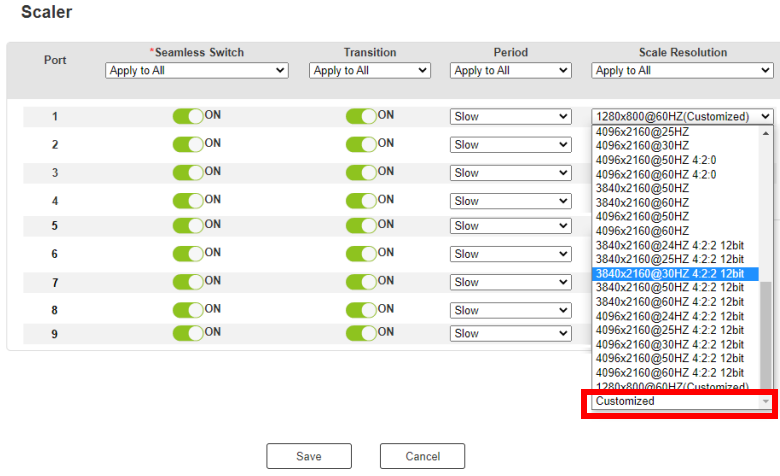

3. Click +Add New.

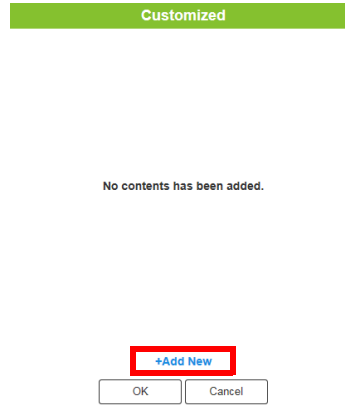

4. Define your resolutions and click **OK**. Click to remove the customized resolution. To reduce blanking, check the Reduce Blanking checkbox.

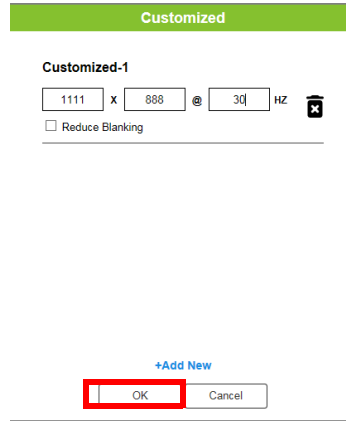

5. Use the drop-down menu to select your pre-defined video resolution.

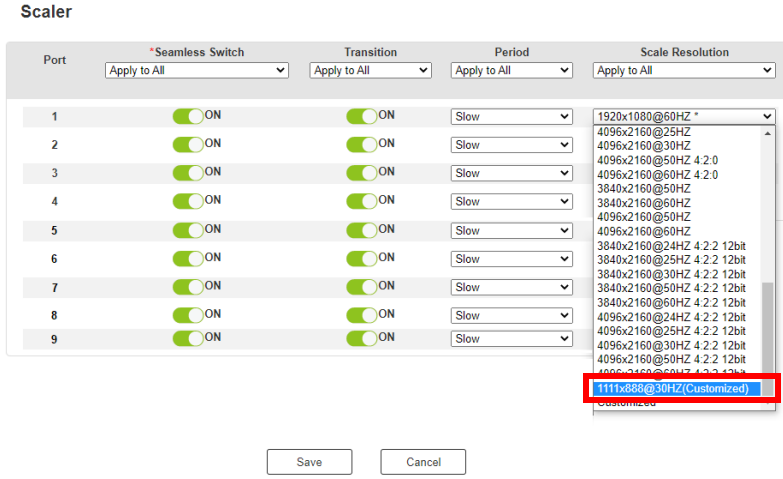

Port Name

The *Port Name* page lets users name the Input and Output ports for easy identification.

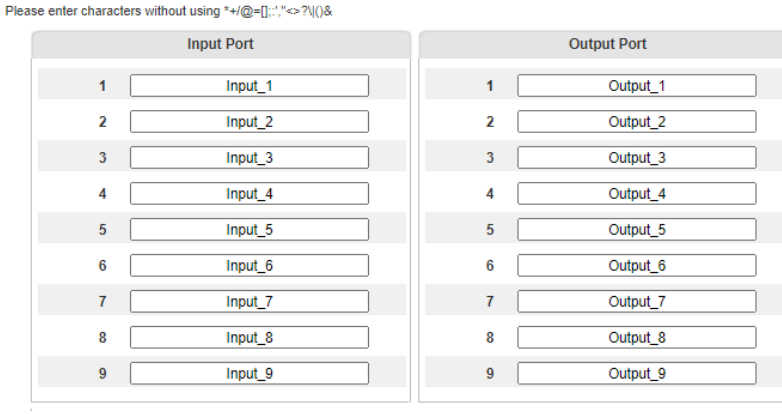

- To name an Input/Output port, enter a descriptive name of up to 16 characters (including 0-9, a-z, A-Z, _, -) in the corresponding field.
- To change an Input/Output port's name, enter another value and click **Save.**

Note: The Input and Output port names can be the same.

EDID Settings

Extended Display Identification Data (EDID) is a data format that contains a display's basic information and is used to communicate with the video source/ system. Use the EDID Setting page to select or customize the EDID that provides optimum resolutions for the displays.

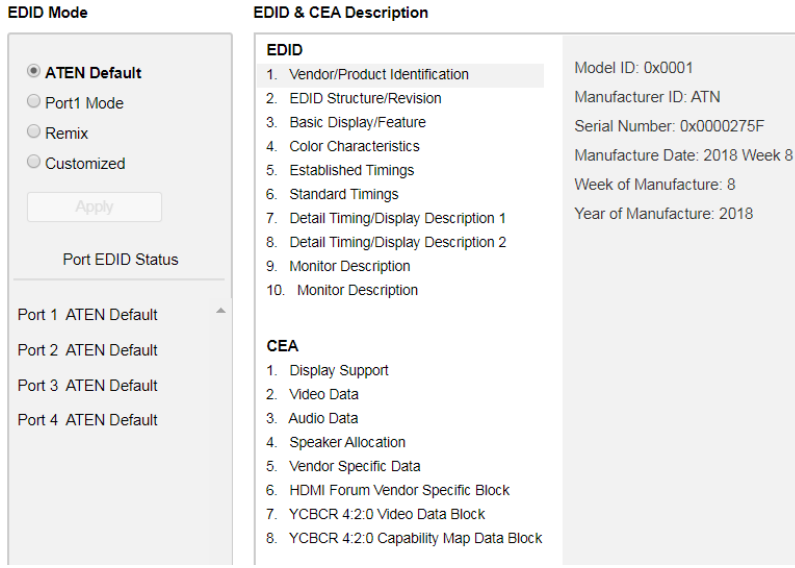

Note: The EDID Mode can also be selected via the Front Panel pushbuttons – see *EDID Mode*, page 25.

EDID Mode

In the left panel of the page, users can select a pre-configured EDID Mode using the **EDID Mode** radio buttons.

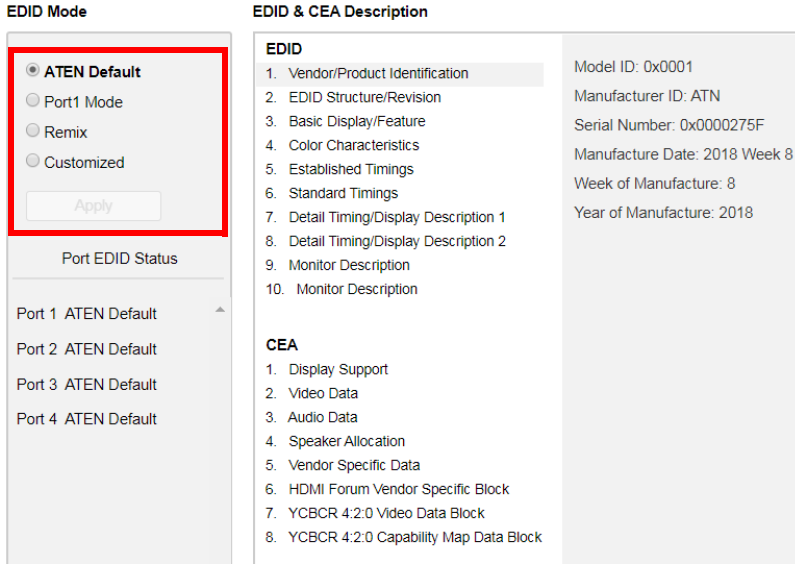

Select the EDID Mode to use and click **Apply**. The VM6404H / VM6809H uses the settings configured for that EDID mode.

Options are:

- **ATEN Default**: All ports' EDID is the same as the hardware default EDID.
- **Port 1 Mode**: All ports' EDID is the same as Port1's EDID.
- **Remix**: All ports' EDID uses the best display resolution.
- **Customized**: See Customized Mode, see page 79.

Customized Mode

Use the **Customized** mode to automatically retrieve and save the EDID of a connected monitor/display device to an input source port.

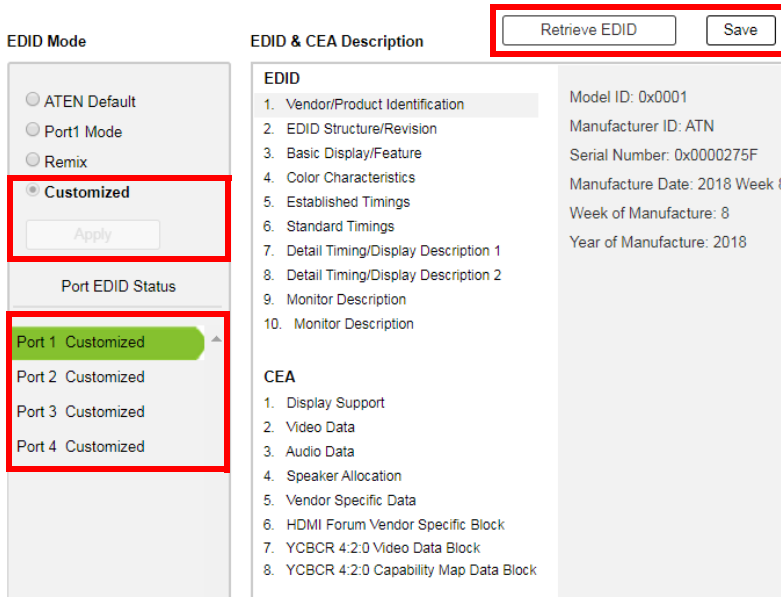

- In the left panel, select **Customized** from the EDID Mode section and click **Apply**.
- **Port EDID Status**: Select the input source port to which you want to store the EDID configuration.
- **Retrieve EDID**: Click this button to retrieve the EDID of a selected port. Select a port using the pop-up screen.

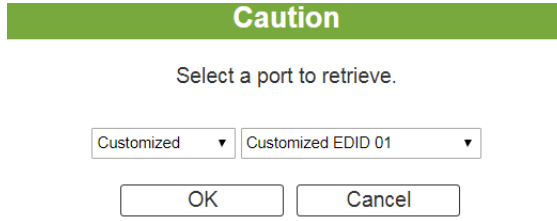

- The right panel displays a summary of the acquired EDID settings that you can edit. Click **Save** and select the configuration for the **Current Port** or **All Ports** for the duration of the session.

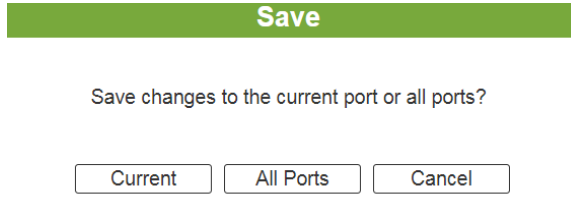

EDID & CEA Description

The middle panel of the screen lets users view and configure the EDID or the CEA mode.

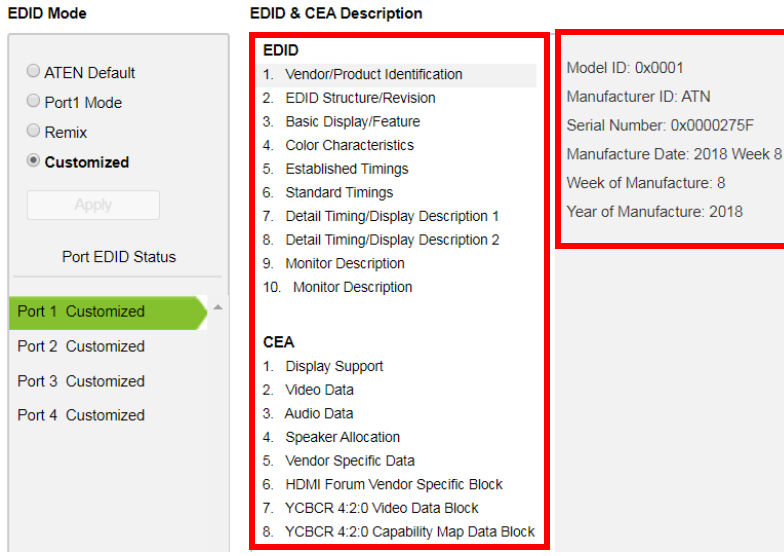

- From the middle column, click the option that you want to view and/or edit. There are two categories: **EDID** (Extended Display Identification Data) and **CEA** (Consumer Electronics Association).
- When you select the menu items on the middle column, the current settings for the selected EDID appear on the right column. Some of the screens are read-only.
- For more information, see *EDID Settings*, page 79.

Customized EDID Parameters

The EDID structure is comprised of 128 bytes in total – each heading shown in the left column corresponds to a specific number of bytes.

The pages for the pre-configured EDID Modes (Port 1, Default and Remix) cannot be edited. The pages for the Customized EDID, which can be edited, are discussed in the proceeding sections:

Established Timings

This page lists video resolutions/timings that display devices can support.

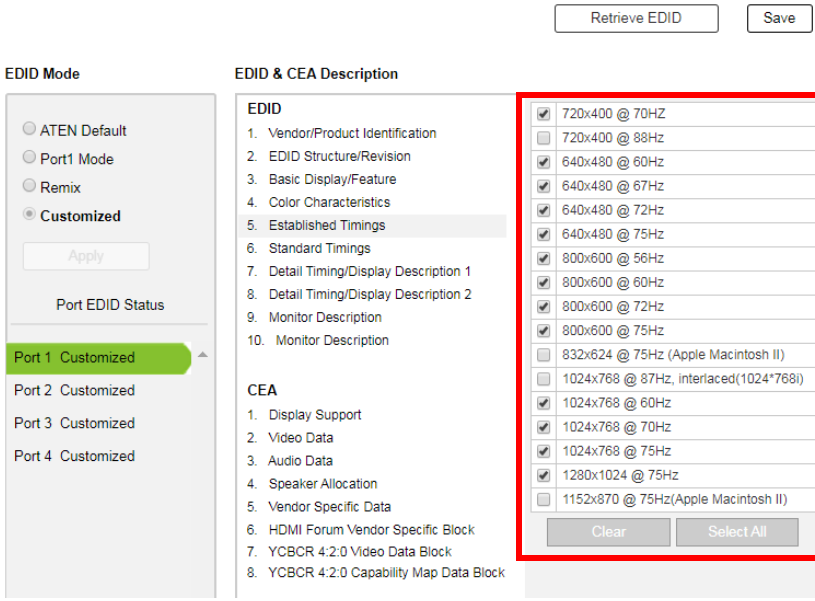

- Select the resolution(s) you want to use for the attached monitor/ display device.
- Click **Clear All** to unselect all the items.
- Click **Select All** to check all the items.
- Click **Save** to apply the changes.

Standard Timings

This page shows eight resolutions/timings that display devices can support in addition to those listed in the Established Timings page.

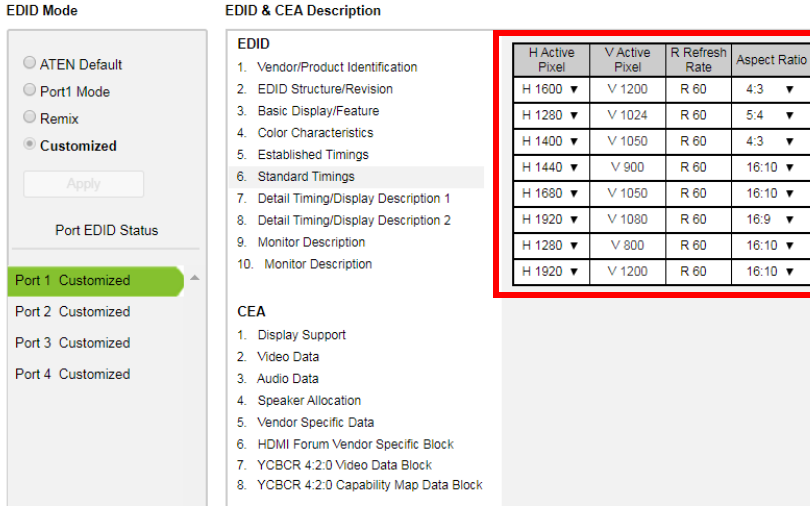

- Select the *H Active Pixel* from the drop-down menu.
- Select the *Aspect Ratio* from the drop-down menu.
- Click **Save** to apply the changes.

Detail Timing / Display Description

This screen gives more video resolution options, and provides resolution/ timing details.

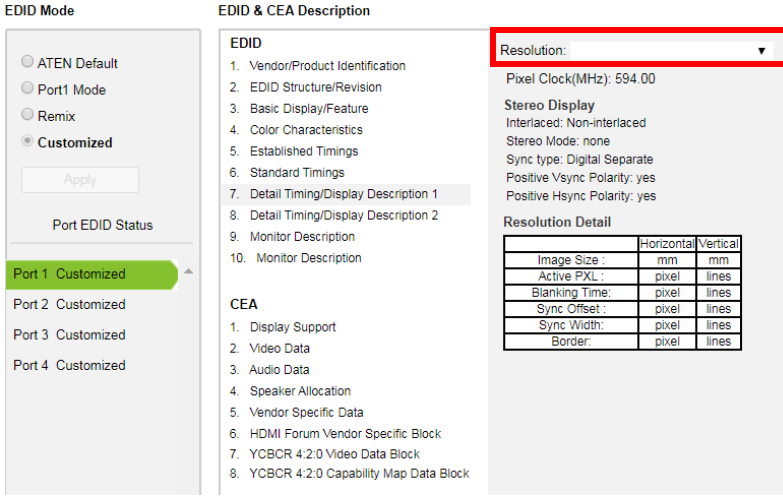

In the drop down menu, choose a resolution with values that fit the attached monitor/display device and click **Save**.

Monitor Description

This screen lets you specify the viewing specifications, namely horizontal and vertical scan ranges and pixel clock rate, of your monitor/display device.

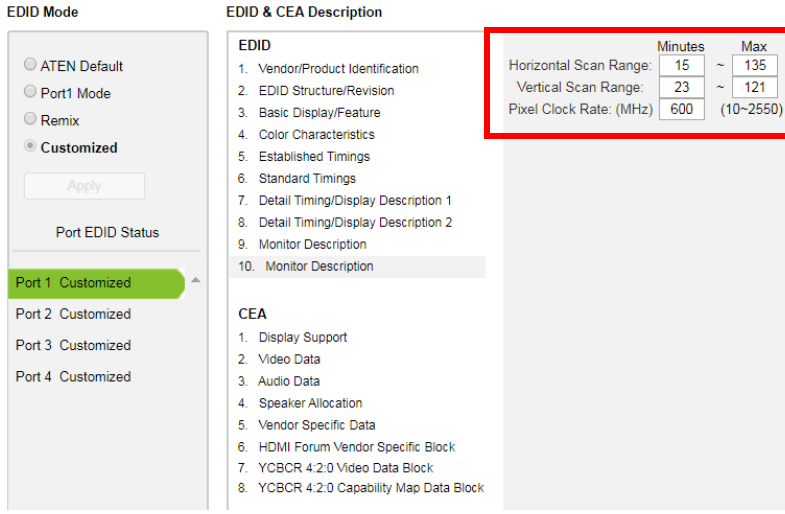

Enter the values that correspond to your device and click **Save** to apply the changes.

CEA Settings

CEA is an extension data of the EDID structure, which further extends the standard definitions of EDID to support advanced features of monitors/display devices.

Display Support

This screen describes the display's basic digital components.

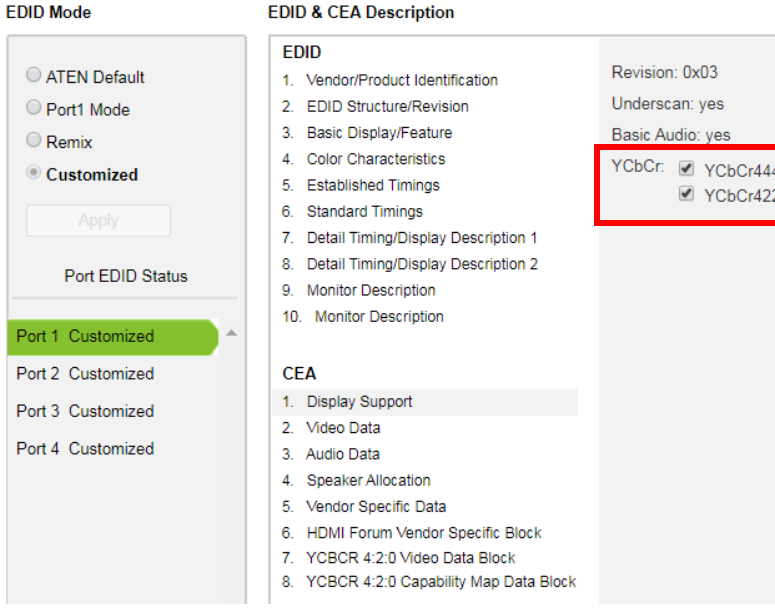

Select the YCbCr mode applicable to your display and click **Save**.

Video Data

This screen lists additional video resolution/timing displays that may be supported by other devices, other than PC monitors (for example, 1080i).

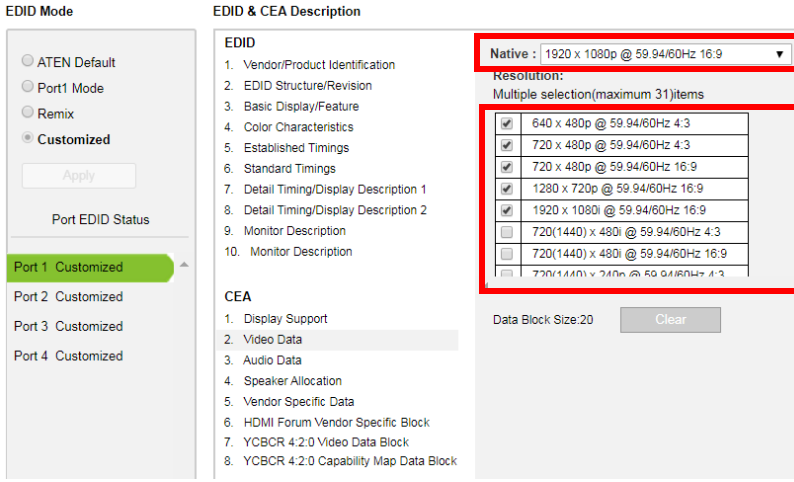

- Select the native resolution of the attached display device.
- Select the resolutions that work with the attached monitor/display device.
- Click **Clear All** to deselect all the items.
- Click **Save** to apply the changes.

Audio Data

This screen lets you select advanced audio configurations for your device.

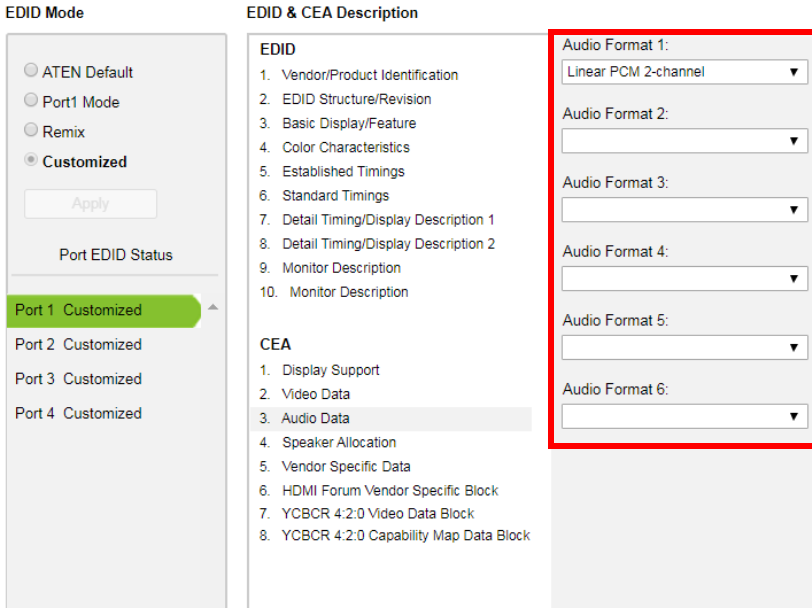

Use the drop down menu to select the **Audio Format** (1~6) applicable to your audio output device, and click **Save** to apply the changes.

HDMI Forum Vendor Specific Block

This screen shows the display device's supported video parameters. Use the toggle button to enable or disable this function.

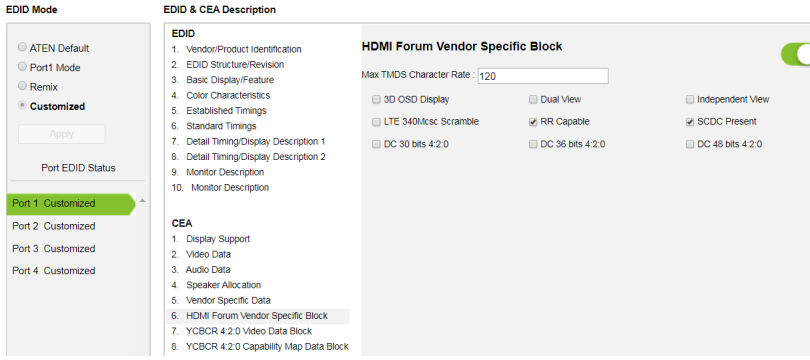

- **3D OSD Disparity:** Select this option to have Sink support receiving 3D OSD Disparity Indication in the HF-VSIF.
- **Dual View:** Select this option to have Sink support receiving 3D Dual View in the HF-VSIF.
- **Independent View:** Select this option to have Sink support receiving 3D Independent View in the HF-VSIF.
- **LTE 340Mcsc Scramble:** Select this option to have Sink support scrambling for TMDS Character Rates at or below 340 Mcsc.
- **RR Capable:** Select this option to have Sink initiate an SCDC Read Request.
- **SCDC Present:** Select this option to have Sink support SCDC functionality.
- **DC 30bit 420:** Select this option to have Sink support 10-bits/component Deep Color 4:2:0 Pixel Encoding.
- **DC 36bit 420:** Select this option to have Sink support 12-bits/component Deep Color 4:2:0 Pixel Encoding.
- **DC 48bit 420:** Select this option to have Sink support 16-bits/component Deep Color 4:2:0 Pixel Encoding.

Use the drop down menu to select the **Audio Format** (1~6) applicable to your audio output device, and click **Save** to apply the changes.

YCBCR 4:2:0 Video Data Block

Use this page to configure a list of supported YCBCR 4:2:0 video resolutions and select one to be applied. Use the toggle button at the top-right to enable or disable this feature.

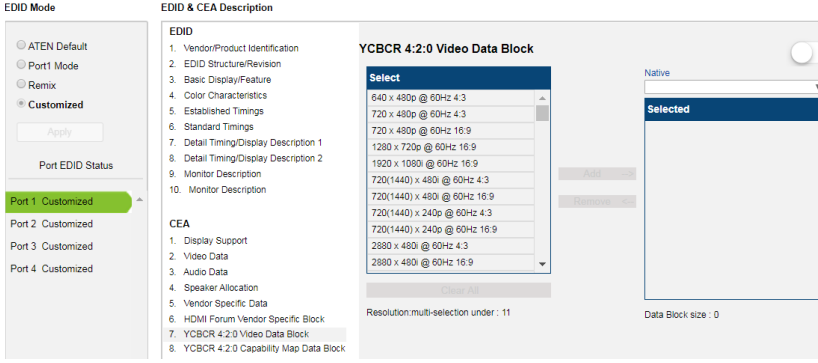

- To add a supported resolution, click an item in the Select column, and then click **Add**.
- Use the drop down menu **Native** to adjust the supported resolution of the display.

YCBCR 4:2:0 Compatibility Map Data Block

Use this page to configure a list of supported video resolutions for YCBCR 4:2:0 Compatibility Map Data Block and select one to be applied. Use the toggle button at the top-right to enable or disable this feature.

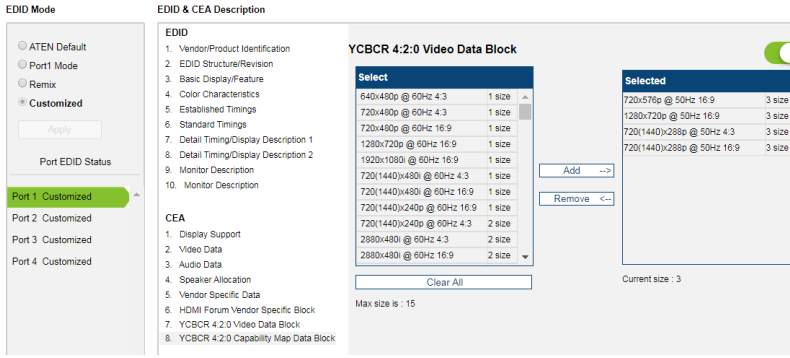

- To add a supported resolution, click an item in the Select column, and then click **Add**.
- Use the drop down menu Native to adjust the supported resolution of the display.

Status

Connections

The connections tab provides a status summary of the connection status, hardware version, HDCP setting of the input and output devices installed to the VM6404H / VM6809H, and also allows you to enable FrameSync to prevent image tearing on a video wall.

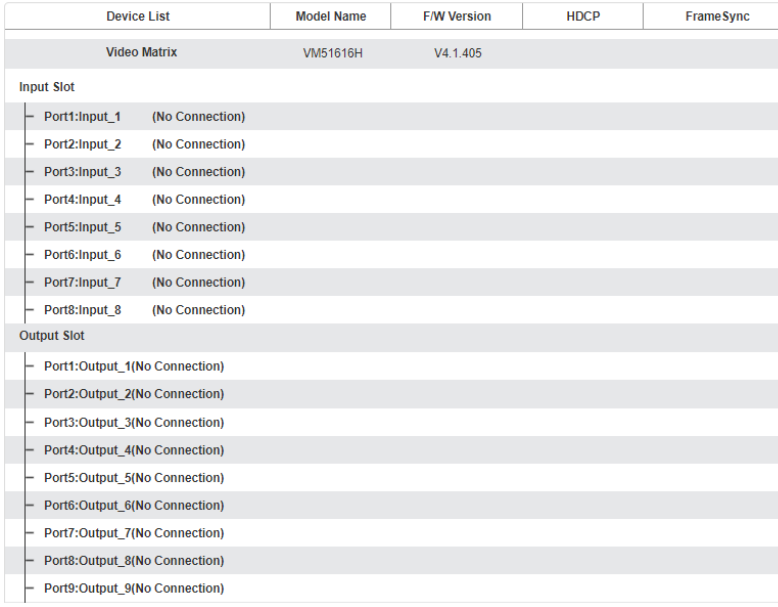

System Information

Use this page to look up system settings, including network settings, firmware version, video/audio input assignments, output audio volumes, CED/OSD settings, and output resolutions.

Hint: Click  to view details and  to refresh the system.

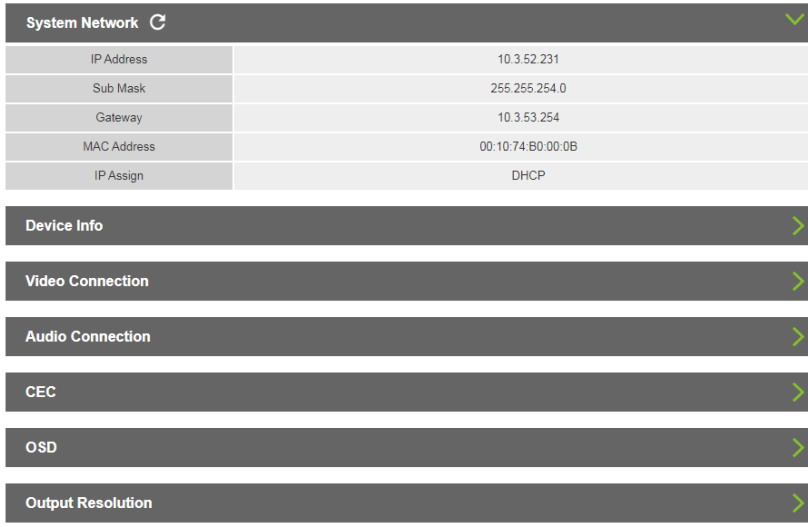

Maintenance

System Setup

Use the System Setup page to:

- Upgrade the VM6404H / VM6809H's mainboard, its streaming board, and any installed I/O boards.
- Back up or restore the VM6404H / VM6809H's settings. Note that account settings cannot be backed up or restored.
- Load system default settings to the VM6404H / VM6809H.

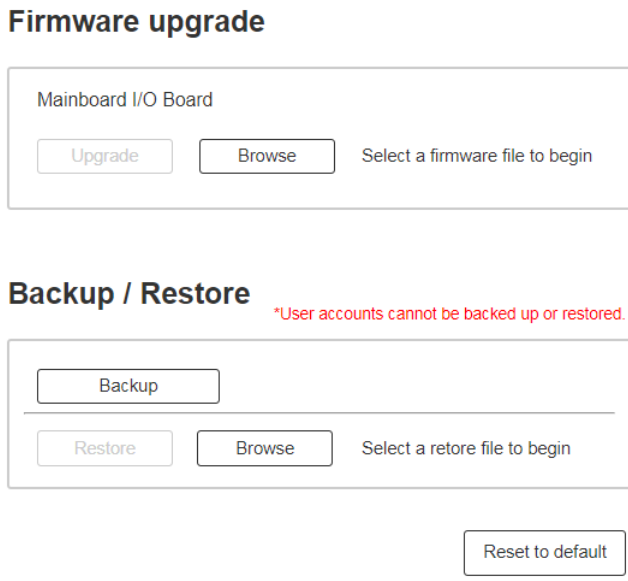

System Upgrades

To upgrade the VM6404H / VM6809H's firmware, do the following:

1. Download the firmware package from ATEN's official website.
2. In the VM6404H / VM6809H web interface, go to **Maintenance** > **System Setup** > **Firmware Upgrade**, click **Browse** to locate the firmware upgrade package.
3. Click **Upgrade** to begin the upgrade.

Note: After updating the firmware, it's recommended that you clear your web browser's cache and then close and reopen the web browser. This will ensure the GUI refreshes and functions properly.

System Backup

To back up the VM6404H / VM6809H's system settings, click **Backup**. A configuration file will then begin downloading.

To restore the VM6404H / VM6809H's system settings, do the following:

1. Use the **Browse** button to locate the configuration file. Make sure you have the correct file saved on your PC.
2. Click **Restore** to begin the restoration procedure.

Note: User accounts cannot be backed up or restored.

Restoring Default Settings

To reset the VM6404H / VM6809H to its default settings, click the **reset to default** button on the far right.

User Account

The *User Account* page lets you add, edit, or delete users and change the password for accessing the VM6404H / VM6809H's GUI.

Note: This is an Administrator only function.

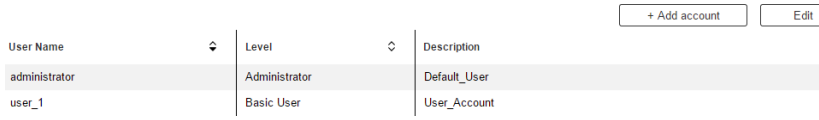

- **Add account** – Click the *Add account* button to add another user to the list. The VM6404H / VM6809H supports up to 32 users and up to 16 concurrent logins (see page 99 for more details).
- **Edit** – Click the *Edit* button to change user information. This option allows an Administrator to edit individual accounts.



- **Edit** – Rename the user account, set the password, add a description, and set the user's permission level (see page 99 for more details).
- **Delete** – Removes the user account.
- The default username and password are: administrator/password.

Adding an User Account

Use the **Add Account** button to create a user account, set the user's password, add a description, and set the user's permission level (see *Permission Level*, page 100) when accessing the VM6404H / VM6809H's GUI.

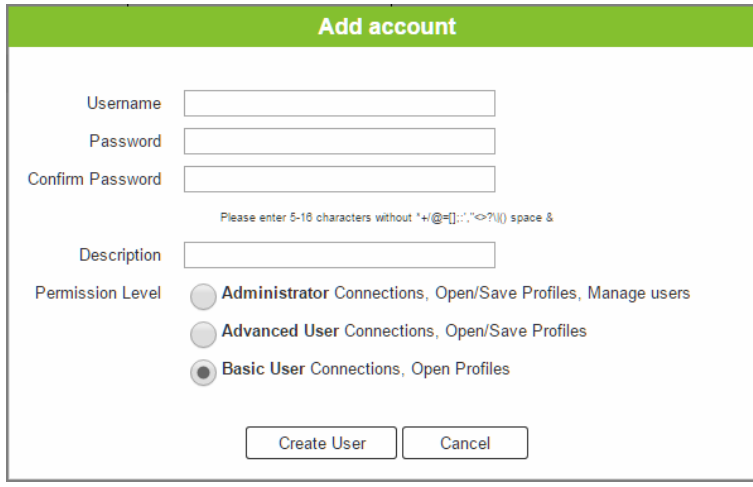

- Fill in a username or edit an existing one.
- Enter a password and re-type the password to confirm.

Note: Usernames and passwords are case-sensitive and must be 5–16 alphanumeric characters (excluding ***+/@=[];:'","<>?\|() &** or **space**).

- Add or edit the description for the user.
- Select the permission level that you want to grant the user (see *Permission Level*, page 100).
- Click **Create User** to save the data.
- Click **Cancel** to discard the changes and exit.
- If a user is logged into the VM6404H / VM6809H's GUI, their user settings cannot be edited, and the fields in this screen are grayed out.

Permission Level

At the bottom of the New/Edit User page is the permission section, which is used to set a user's permission level.

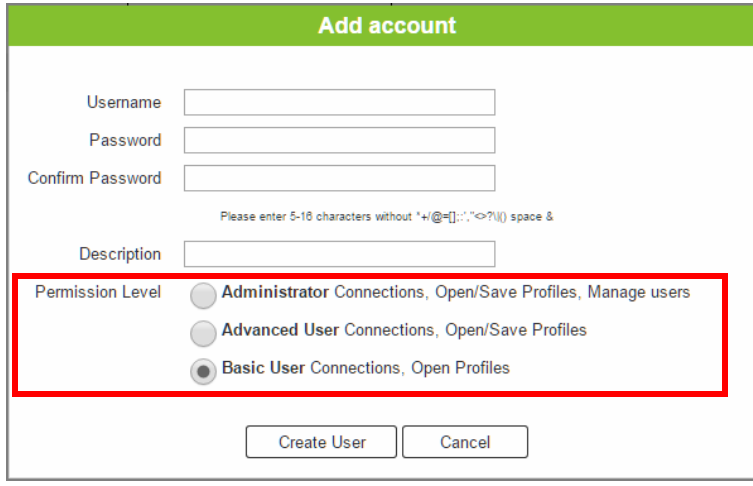

The three available permission levels are as follows:

- **Administrator** – this level provides full access and control of the VM6404H / VM6809H, in addition to full User Management privileges.
- **Advanced User** – this level provides full access and control with no User Management privileges.
- **Basic User** – this level only provides basic functions (connections and open profiles).

Network

The *Network* page lets you configure the VM6404H / VM6809H's IP settings for connecting to it via the web GUI, and enable/disable Telnet.

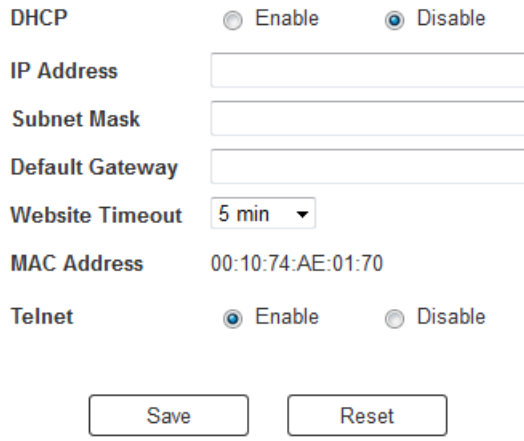

Enable DHCP to allow the DHCP server to assign an IP address to the VM6404H / VM6809H. Select **Disable** to enter your own static IP address settings for the device.

Click **Reset** to use the following default values:

- IP Address – **192.168.0.60**
- Subnet Mask – **255.255.255.0**
- Default Gateway – **192.168.0.1**
- Website Timeout* – N/A, 5, 10, 30, 60 minutes
- Telnet Configuration enabled (checked)

Enter the values, then click **Save**. Changes may take a few seconds and after refreshing the page automatically redirects you to the IP address specified.

Note: This option controls how long an inactive web connection stays logged into the VM6404H / VM6809H. Any changes will take effect immediately. The default setting is 5 minutes.

This Page Intentionally Left Blank

Chapter 5
CLI Commands

Overview

The VM6404H / VM6809H can be configured and controlled via RS-232 or Telnet commands when connected to a host computer or other device, such as a control system. This chapter provides information on how to connect to the VM6404H / VM6809H via RS-232/Telnet and command syntax.

Connecting to the Matrix Switch via Telnet

To establish a Telnet session with the VM6404H / VM6809H, do the following:

1. Connect a host computer or control system to a shared network with the VM6404H / VM6809H.
2. Open a command-line interpreter program from your computer.
3. In the command-line interpreter, type the VM6404H / VM6809H's IP address in the following way:

   ```
   telnet [IP address]:23
   ```

4. Press **Enter**. The login screen appears.
5. At the login prompt, type the login username and password for the VM6404H / VM6809H.
6. When a session is established with the VM6404H / VM6809H, you can control and configure the VM6404H / VM6809H via RS-232 commands. For more information on commands, see *Commands*, page 105.

Connecting to the Matrix Switch via RS-232

You can control and operate the VM6404H / VM6809H using a high-end controller or PC. To connect to the VM6404H / VM6809H via RS-232, do the following:

1. Connect the RS-232 serial port on the VM6404H / VM6809H to the RS-232 serial port on your computer using a 9-wire straight cable, with only pin 2 to pin 2, pin 3 to pin 3, and pin 5 to pin 5 connected.

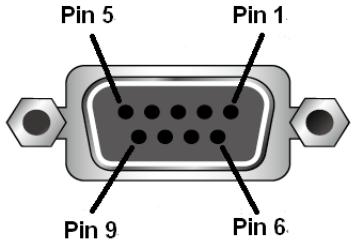

Pin	Description
1	Not connected
2	RXD
3	TXD
4	Not connected
5	GND
6	Not connected
7	Not connected
8	Not connected
9	Not connected

2. The controller's serial port should be configured as follows:

RS-232 Protocol	
Baud Rate	19200
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

3. When a session is established with the VM6404H / VM6809H, you can control and configure the VM6404H / VM6809H via RS-232 commands. For more information on commands, see *Commands*, page 105.

Verification

After entering a command, a verification message appears at the end of the command line as follows:

- **Command OK** - indicates that the command is correct and successfully performed by the switch
- **Command incorrect** - indicates that the command has the wrong format and/or values.

Commands

After connecting to the VM6404H / VM6809H via Telnet or RS-232, you can operate the system using the following commands.

Switch Port Command

The Switch Port command allows you to switch ports on the VM6404H / VM6809H.

The formula for the Switch command is as follows.

VM6404H:

Command + Input + Number + Output + Number + Control + [Enter]

VM6809H:

Command + Input + Number + Output + Number + Group + Control + [Enter]

1. For example, to switch input port 02 to output port 04, type:
   sw i02 o04 [Enter]
2. To switch output port 04 to the next port, type:
   sw o04 + **[Enter]**
3. To turn off video output on port 03, type:
   sw o03 off [Enter]
4. To switch audio from input port 06 to stereo audio output, type:
   sw i06 console audio [Enter]

The following tables show the possible values for the **Switch Port** command:

Command	Description
sw	Switch command

Input Command	Description
i	Input command

Port number	Description
xx	01~04 or 01~08 port

Output Command	Description
o	Output command

Port number	Description
yy	01~04 or 01~09 port
*	All output ports

Group	Description
normal	default HDMI audio outputs
console audio	Switch the audio to the stereo audio output port of VM6809H.

Control	Description
on	Turn on the display
off	Turn off the display
+	Next Port
-	Previous Port

Note: 1. By default, input port 01 is tied to output port 01; input port 02 is tied to output port 02; and so on until port 04 (i.e., o01 i01, o02 i02).

2. Each command string can be separated with a space.
3. The **Port Number** can be skipped, and the default value will be used.
4. The **Group** can be skipped, and the default value (normal; HDMI audio output) will be used.

The following table lists the available Switch Port commands:

Com-mand	Input Com-mand	Input Port	Output Com-mand	Out-put Port	Group	Con-trol	Enter	Description
sw	i	xx	o	yy *	normal console audio		[Enter]	Switch Input Port xx to Output Port yy (xx:01~04 or 01~08; yy:01~04 or 01~09, *)
sw			o	yy *		on off	[Enter]	Turn on Output Port yy Turn off Output Port yy (yy:01~04 or 01~09, *)
sw			o	yy *	normal console audio	+ -	[Enter]	Switch Output port yy to next Output port. Switch Output port yy to previous Output port. (yy:01~04 or 01~09, *)

EDID Mode Command

Extended Display Identification Data (EDID) is a data that contains a display's basic information and is used to communicate with the video source.

The formula for the EDID command is as follows:

Command + Control + [Enter]

1. For example, to use the Port1 EDID mode, type:

   edid port1 [enter]

The following tables show the possible values for the **EDID** command:

Command	Description
edid	EDID Mode command

Control	Description
port1	Implement the EDID of the connected display to Port 1, and pass it to the video source.
remix	Implement the EDID of each connected display according to its connection when the VM6404H / VM6809H is first powered on, or immediately after selecting the Remix option.
default	Implements ATEN's default EDID. (default)
custom	Implements the customized mode as set in the EDID system settings. (See *Customized EDID Parameters*, page 84)

Note: Each command string can be separated with a space.

The following table lists the available EDID commands:

Command	Control	Enter	Description
edid	port1	[Enter]	The EDID from Port 1 is passed to the video source.
edid	remix	[Enter]	The VM6404H / VM6809H implements the EDID of each connected display according to its connection when the VM6404H / VM6809H is first powered on, or immediately after selecting the Remix option.
edid	default	[Enter]	ATEN's default EDID is passed to the video source.
edit	custom	[Enter]	Implements the customized mode.

Mute Command

Mute allows you to enable or disable an output port(s) audio.

The formula for the Mute command is as follows:

VM6404H:

Command + Output + Number + Control + [Enter]

VM6809H:

Command + Output + Number + Group + Control + [Enter]

1. For example, to mute the audio coming from output port 1, type:
   mute o01 on [enter]

The following tables show the possible values for the **Mute** command:

Command	Description
mute	Mute command

Output Command	Description
o	Output command

Port number	Description
yy	01~04 or 01~09 port (default is 01)
*	All output ports

Group	Description
normal	Mute the default HDMI audio outputs.
console	Mute the stereo audio output of VM6809H.

Control	Description
on	Mute on; audio from HDMI output port is disabled
off	Mute off; audio output enabled (default)

Note: 1. Each command string can be separated with a space.

2. Skip the output port command to mute or enable the audio of all output ports.

3. The **Group** can be skipped, and the default value (normal; HDMI audio output) will be used.

The following table lists the available Mute commands:

Command	Output Command	Port Number	Group	Control	Enter	Description
mute	o	yy *	normal console	on	[Enter]	Audio on for output port yy (yy:01~04 or 01~09, *)
mute	o	yy *	normal console	off	[Enter]	Audio off for output port yy (default) (yy:01~04 or 01~09, *)

CEC Command

Consumer Electronics Control (CEC) allows interconnected HDMI devices to communicate with and respond to the same remote control.

The formula for the CEC command is as follows:

Command + Output + Number + Control + [Enter]

1. For example, to enable the CEC function on output port 1, type:

   cec o01 on [enter]

The following tables show the possible values for the **CEC** command:

Command	Description
cec	CEC command

Output Command	Description
o	Output command

Port number	Description
yy	01~04 or 01~09 port (default is 01)
*	All output ports

Control	Description
off	Disable CEC (default)
on	Enable CEC

Note: Each command string can be separated with a space.

The following table lists the available CEC commands:

Command	Output Port	Control	Enter	Description
cec	yy *	off	[Enter]	CEC off for output port yy (default) (yy:01~04 or 01~09, *)
cec	yy *	on	[Enter]	CEC on for output port yy (yy:01~04 or 01~09, *)

Scaling Command

The Scaling command allows you to set a resolution for scaling the display connected to an output port.

The formula for the Scaling command is as follows:

Command + Output + Number 1 + Horizontal Resolution + Number 2 + Vertical Resolution + Number 3 + Frequency + Number 4 + Control + [Enter]

1. For example, to turn scaling off for output port 02, type:

   scaling o02 off [Enter]

2. To set the scaling for output port 04 to 1920x1080@60Hz, type:

   scaling o04 1080p [Enter]

3. To set the scaling for all output ports to the connected display's native resolution, type:

   scaling o* native [Enter]

The following tables show the possible values for the **Scaling** command:

Command	Description
scaling	Scaling command

Output	Description
o	Output command

Port Number	Description
yy	01~04 or 01~09 port
*	All output ports

Horizontal Resolution	Description
hor	Horizontal resolution command for scaling

Resolution Number	Description
hhhh	Horizontal resolution

Vertical Resolution	Description
ver	Vertical resolution command for scaling

Resolution Number	Description
vvvv	Vertical resolution

Frequency	Description
freq	Frequency command for scaling

Frequency Number	Description
fff	Frequency resolution

Control	Description
off	Turn off the scaling function (by pass mode)
native	Map display's native resolution for scaling (default)

Note: 1. Each command string can be separated with a space.

2. The **Port Number** command string can be skipped, and the default value will be used.

The following table lists the available Scaling commands:

Command	Output	Port Number	Horizontal Resolution	Number	Vertical Resolution	Number	Frequency	Number	Control	Enter	Description
scaling	o	yy *							off	[Enter]	Turn off scaling for port yy (by pass mode) yy:01~04, 01~09, or *
scaling	o	yy *							native	[Enter]	Enable display's native resolution for scaling on output port yy (default) yy:01~04, 01~09, or *

Command	Output	Port Number	Horizontal Resolution	Number	Vertical Resolution	Number	Frequency	Number	Control	Enter	Description
scaling	o	yy *	hor	1920	ver	1080	freq	60		[Enter]	Scale output port yy to 1920x1080@60Hz yy:01~04, 01~09, or *
scaling	o	yy *	hor	1280	ver	720	freq	60		[Enter]	Scale output port yy to 1280x720@60Hz yy:01~04, 01~09, or *
scaling	o	yy *	hor	1920	ver	1200	freq	60		[Enter]	Scale output port yy to 1920x1200@60Hz yy:01~04, 01~09, or *
scaling	o	yy *	hor	1600	ver	1200	freq	60		[Enter]	Scale output port yy to 1600x1200@60Hz yy:01~04, 01~09, or *
scaling	o	yy *	hor	1400	ver	1050	freq	60		[Enter]	Scale output port yy to1400x1050@60Hz yy:01~04, 01~09, or *
scaling	o	yy *	hor	1280	ver	1024	freq	60		[Enter]	Scale output port yy to 1280x1024@60Hz yy:01~04, 01~09, or *
scaling	o	yy *	hor	1024	ver	768	freq	60		[Enter]	Scale output port yy to 1024x768@60Hz yy:01~04, 01~09, or *

Command	Output	Port Number	Horizontal Resolution	Number	Vertical Resolution	Number	Frequency	Number	Control	Enter	Description
scaling	o	yy *	hor	1280	ver	800	freq	60		[Enter]	Scale output port yy to 1280x800@60Hz yy:01~04, 01~09, or *
scaling	o	yy *	hor	720	ver	576	freq	50		[Enter]	Scale output port yy to 720x576@50Hz yy:01~04, 01~09, or *
scaling	o	yy *	hor	1600	ver	900	freq	60		[Enter]	Scale output port yy to 1600x900@60Hz yy:01~04, 01~09, or *

FrameSync Command

The FrameSync command allows you enable or disable the Frame Synchronization function for VM6809H.

The formula for the Scaling command is as follows:

Command + Control + [Enter]

For example, to enable the Frame Synchronization function, type:

frsync on [Enter]

The following tables show the possible values for the **FrameSync** command:

Command	Description
frsync	Frame Synchronization command

Control	Description
off	Turn off the FrameSync
on	Turn on the FrameSync

Note: Each command string can be separated with a space.

The following table lists the available FrameSync commands:

Command	Control	Enter	Description
frsync	off	[Enter]	Turn off the Frame Synchronization function
frsync	on	[Enter]	Turn on the Frame Synchronization function

Fan Speed Command

The Fan Speed command allows you to set the internal fan speed that cools the VM6404H / VM6809H.

To set the fan speed, use the following command:

Command + Control + [Enter]

1. For example, to set the fan to low speed, type:

   fan low [Enter]

The following tables show the possible values for the **Fan Speed** command:

Command	Description
fan	Fan Speed Command

Control	Description
low	Set internal fan to low speed (default)
mid	Set internal fan to normal speed
high	Set internal fan to high speed

Note: Each command string can be separated with a space.

The following table lists the available Fan Speed commands:

Command	Control	Enter	Description
fan	low	[Enter]	Sets fan speed to low
fan	mid	[Enter]	Sets fan speed to normal
fan	high	[Enter]	Sets fan speed to high

Echo Command

The Echo function updates the RS-232 controller when operations are made via the front panel pushbuttons, web browser, or telnet. The changes echo back to the RS-232 controller to keep the settings in sync with the device.

The formula for the Echo command is as follows:

Command + Control + [Enter]

1. For example, to enable the echo feature, type:

   echo on [Enter]

The following tables show the possible values for the **Echo** command:

Command	Description
echo	Echo command

Control	Description
on	Turns Echo function on
off	Turns Echo function off (default)

Note: Each command string can be separated with a space.

The following table lists the available Echo commands:

Command	Control	Enter	Description
echo	on	[Enter]	Turn on Echo function
echo	off	[Enter]	Turn off Echo function

Black Screen Command

The Black Screen command turns a display screen black when no source signal is detected. This prevents the display from showing the default blue or other color used when no source signal is detected.

The formula for the Black Screen command is as follows:

Command + Control + [Enter]

1. For example, to enable the Black Screen function, type:

   blackscreen on [Enter]

The following tables show the possible values for the **Black Screen** command:

Command	Description
blackscreen	Black Screen command

Control	Description
on	Turns Black Screen function on (default)
off	Turns Black Screen function off

Note: Each command string can be separated with a space.

The following table lists the available Black Screen commands:

Command	Control	Enter	Description
blackscreen	on	[Enter]	Turn on Black Screen function
blackscreen	off	[Enter]	Turn off Black Screen function

Read Command

The Read command allows you to view the current configuration, firmware and other information about the device.

The formula for the Read command is as follows:

Command + [Enter]

1. To view information about the device, type:

   read [Enter]

The following table shows the possible values for the **Read** command:

Command	Description
read	Read command

Note: Each command string can be separated with a space.

The following table lists the available Read commands:

Command	Enter	Description
read	[Enter]	View information about the device

Reset Command

The Reset command allows you to reset the VM6404H / VM6809H to the default factory settings.

The formula for the Reset command is as follows:

Command + [Enter]

The following tables show the possible values for the **Reset** command:

Command	Description
reset	Reset command

Note: Each command string can be separated with a space.

The following table lists the available Reset commands:

Command	Enter	Description
reset	[Enter]	Resets the device settings

Baud Rate Command

The Baud Rate command allows you to set the RS-232 data rate for the VM6404H / VM6809H to use. Options are 9600, 19200 (default) 38400 and 115200.

The formula for the Baud Rate command is as follows:

Command + Control + [Enter]

1. For example, to set 38400 as the baud rate, type:

   baud 38400 [Enter]

The following tables show the possible values for the **Baud Rate** command:

Command	Description
baud	Sets the RS-232 baud rate

Control	Description
9600	Use 9600 baud rate
19200	Use 19200 baud rate (default)
38400	Use 38400 baud rate
115200	Use 115200 baud rate

Note: Each command string can be separated with a space.

The following table lists the available Baud Rate commands:

Command	Control	Enter	Description
baud	9600 / 19200 / 38400 / 115200	[Enter]	Sets the RS-232 baud rate

Save/Load Profile Command

The Save/Load Profile command allows you to save and load connection profiles. Saving profiles will save the connections currently in use.

The formula for the Save/Load Profile command is as follows:

Command + Profile + Number + Control + [Enter]

1. For example, to save the current connection configuration to profile 02, type:

   profile f 02 save [Enter]

The following tables show the possible values for the **Save/Load Profile** commands:

Command	Description
profile	Save / Load profile

Profile	Description
f	Profile command

Profile Number	Description
yy	VM6404H: 01~08 (default is 01) VM6809H: 01~17 (default is 01)

Control	Description
save	Save the connection configuration
load	Load a saved profile

Note: Each command string can be separated with a space.

The following table lists the available Save/Load Profile commands:

Command	Profile	Profile Number	Control	Enter	Description
profile	f	yy *	save	[Enter]	Save the connections as profile yy. (yy:01~08 or 01~17, *)
profile	f	yy *	load	[Enter]	Load profile yy. (yy:01~08 or 01~17, *)

OSD Command

To enable or disable the On-Screen Display (OSD) for displays, use the following command:

Command + Output + Number + Control + [Enter]

1. For example, to enable the OSD for output 04, type:

   osd o04 on [Enter]

2. For example, to disable the OSD for all outputs, type:

   osd o* off [Enter]

The following tables show the possible values for the **OSD** command:

Command	Description
osd	OSD command

Output	Description
o	Output port command

Number	Description
yy	Output port VM6404H: 01~04 (default is 01) VM6809H: 01~09 (default is 01)
*	All output ports

Control	Description
on	Enable OSD function
off	Disable OSD function (default)

Note: Each command string should be separated with a space.

The following table lists the available OSD commands:

Command	Output Command	Output Port	Control	Enter	Description
osd	o	yy *	on	[Enter]	OSD on for output yy yy:01~04/09, *
osd	o	yy *	off	[Enter]	OSD off for output yy (default) yy:01~04/09, *

Alert Command

To trigger a warning when issues arise for a specific input port, use the following command:

Command + Input + Number + Control + [Enter]

1. For example, to enable the basic Alert function for input port 1, type:

   alert i01 m1 [enter]

The following tables show the possible values for the **Alert** command:

Command	Description
alert	Alert command

Input	Description
i	Input command

Port number	Description
yy	01~04 or 01~08 port

Control	Description
off	Disable Alert (default)
m1	Show basic Alert (flashing border)
m2	Show detailed Alert (flashing border and port information)

Note: Each command string can be separated with a space.

The following table lists the available Alert commands:

Command	Input Command	Input Port	Control	Enter	Description
alert	i	yy	off	[Enter]	Alert off for input port yy (yy:01~04 or 01~08)
alert	i	yy	m1	[Enter]	Basic Alert on for input port yy (yy:01~04 or 01~08)
alert	i	yy	m2	[Enter]	Detailed Alert on for input port yy (yy:01~04 or 01~08)

Fan Speed Command

To setup fan speed, use the following command:

Command + Speed Value + [Enter]

For example, to set the fans to operate at high speed, type:

fan high [Enter]

The following tables show the possible values for the **Fan Speed** command:

Command	Description
fan	Fan Speed command

Speed Value	Description
low	Low speed
mid	Standard speed
high	High speed
auto	Automatically detect the temperature and activate a proper speed

Note: Each command string can be separated with a space.

The following table lists the available Fan Speed commands:

Command	Speed Value	Enter	Description
low	low	[Enter]	Set the fan speed to low
mid	mid	[Enter]	Set the fan speed to standard
high	high	[Enter]	Set the fan speed to high speed
auto	auto	[Enter]	Set the fan speed to auto

This Page Intentionally Left Blank

Appendix

Safety Instructions

General

- Read all of these instructions. Save them for future reference.
- Follow all warnings and instructions marked on the device.
- This product is for indoor use only.
- Do not place the device on any unstable surface (cart, stand, table, etc.). If the device falls, serious damage will result.
- Do not use the device near water.
- Do not place the device near, or over, radiators or heat registers.
- The device cabinet is provided with slots and openings to allow for adequate ventilation. To ensure reliable operation, and to protect against overheating, these openings must never be blocked or covered.
- The device should never be placed on a soft surface (bed, sofa, rug, etc.) as this will block its ventilation openings. Likewise, the device should not be placed in a built in enclosure unless adequate ventilation has been provided.
- Never spill liquid of any kind on the device.
- Unplug the device from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- The device should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- The device is designed for IT power distribution systems with 230V phase-to-phase voltage.
- To prevent damage to your installation it is important that all devices are properly grounded.
- The device is equipped with a 3-wire grounding type plug. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not attempt to defeat the purpose of the grounding-type plug. Always follow your local/national wiring codes.
- Do not allow anything to rest on the power cord or cables. Route the power cord and cables so that they cannot be stepped on or tripped over.

- If an extension cord is used with this device make sure that the total of the ampere ratings of all products used on this cord does not exceed the extension cord ampere rating. Make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes.
- To help protect your system from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or un-interruptible power supply (UPS).
- Position system cables and power cables carefully; Be sure that nothing rests on any cables.
- Never push objects of any kind into or through cabinet slots. They may touch dangerous voltage points or short out parts resulting in a risk of fire or electrical shock.
- Do not attempt to service the device yourself. Refer all servicing to qualified service personnel.
- If the following conditions occur, unplug the device from the wall outlet and bring it to qualified service personnel for repair.
  - The power cord or plug has become damaged or frayed.
  - Liquid has been spilled into the device.
  - The device has been exposed to rain or water.
  - The device has been dropped, or the cabinet has been damaged.
  - The device exhibits a distinct change in performance, indicating a need for service.
  - The device does not operate normally when the operating instructions are followed.
- Only adjust those controls that are covered in the operating instructions. Improper adjustment of other controls may result in damage that will require extensive work by a qualified technician to repair.
- Avoid circuit overloads. Before connecting equipment to a circuit, know the power supply's limit and never exceed it. Always review the electrical specifications of a circuit to ensure that you are not creating a dangerous condition or that one does not already exist. Circuit overloads can cause a fire and destroy equipment.

Rack Mounting

- Before working on the rack, make sure that the stabilizers are secured to the rack, extended to the floor, and that the full weight of the rack rests on the floor. Install front and side stabilizers on a single rack or front stabilizers for joined multiple racks before working on the rack.
- Always load the rack from the bottom up, and load the heaviest item in the rack first.
- Make sure that the rack is level and stable before extending a device from the rack.
- Do not overload the AC supply branch circuit that provides power to the rack. The total rack load should not exceed 80 percent of the branch circuit rating.
- Make sure that all equipment used on the rack – including power strips and other electrical connectors – is properly grounded.
- Ensure that proper airflow is provided to devices in the rack.
- Ensure that the operating ambient temperature of the rack environment does not exceed the maximum ambient temperature specified for the equipment by the manufacturer.
- Do not step on or stand on any device when servicing other devices in a rack.

Technical Support

International

- For online technical support – including troubleshooting, documentation, and software updates: **http://eservice.aten.com**
- For telephone support, see *Telephone Support*, page iv:

North America

Email Support		support@aten-usa.com
Online Technical Support	Troubleshooting Documentation Software Updates	http://www.aten-usa.com/support
Telephone Support		1-488-999-ATEN ext 4988

When you contact us, please have the following information ready beforehand:

- Product model number, serial number, and date of purchase.
- Your computer configuration, including operating system, revision level, expansion cards, and software.
- Any error messages displayed at the time the error occurred.
- The sequence of operations that led up to the error.
- Any other information you feel may be of help.

Specifications

Function		VM6404H	VM6809H
Video Input	Interface	4 x HDMI Type A Female (Black)	8 x HDMI Type A Female (Black)
	Impedance	100 Ω	
	Max. Distance	1.8 m	
Video Output	Interface	4 x HDMI Type A Female (Black)	9 x HDMI Type A Female (Black)
	Impedance	100 Ω	
	Max. Distance	15 m	
Video	Max. Data Rate	10.2 Gbps (3.40 Gbps per Lane)	
	Max. Pixel Clock	340 MHz	
	Compliance	HDMI (3D, Deep Color, 4K) HDCP 2.2 Compatible Consumer Electronics Control (CEC)	
	Max. Resolution	Up to 4096 x 2160 / 3840 x 2160 @ 60Hz (4:2:0); 4096 x 2160 / 3840 x 2160 @ 30Hz (4:4:4)	
	Max. Distance	Up to 15 m	
Audio	Output	N/A	1 x Mini Stereo Jack Female (Green)
Control	RS-232	Connector: 1 x DB-9 Female (Black) Baud rate and protocol: Baud Rate: 19200, Data Bits: 8, Stop Bits:1, Parity: No, Flow Control: No	
	IR	1 x Mini Stereo Jack Female (Black)	N/A
	Ethernet	1 x RJ-45 Female	
EDID Settings		EDID Mode: Default / Port 1 / Remix / Customized (EDID Wizard Support)	
Power	Connector	1 x 3-Prong AC Socket	
	I/P Rating	100-240 VAC;50-60Hz;1.0A	
	Consumption	120VAC,47.6W; 230VAC, 47.5W	110VAC, 79.5W; 220VAC, 78.1W
Environment	Operating Temp.	0–50ºC	
	Storage Temp.	-20–60ºC	
	Humidity	0–80% RH, Non-condensing	

Function		VM6404H	VM6809H
Physical Properties	Housing	Metal	
	Weight	4.72 kg	7.05 kg
	Dimensions (L x W x H)	43.24 x 30.73 x 4.40 cm	43.24 x 45.03 x 4.40 cm
Carton Lot		1 pcs	

Telnet Operation

To connect to VM6404H / VM6809H via Telnet, follow the steps in *Connecting to the Matrix Switch via Telnet*, page 103.

Configuration Menu

Once a Telnet connection to the VM6404H / VM6809H is established, the device's text-based Configuration Menu comes up, with the following items:

1. H – Call up the command list for help

Command list:

IP – Set IP address

LO – Load connections from profile *nn*

PW – Change password

RI– Read what input is connected to *nn* output

RO – Read what output is connected to *nn* input

SB – Set the serial port baud rate

SS – Switch input to specified port

SV – Save the current connections into profile *nn*

TI – Set timeout

VR – Software version information

Ctrl-Q – Quit

2. IP – Set network settings

- **Set IP Address**

  ```
  IP
  ```

  Old IP Address: 192.168.0.60

  Old IP Subnet Mask: 255.255.255.0

  Old Gateway Address: 192.168.0.1

  New IP Address:

- **Set Subnet Mask**

```
IP
```

Old IP Address: 192.168.0.60

Old IP Subnet Mask: 255.255.255.0

Old Gateway Address: 192.168.0.1

New IP Address: 10.3.52.220

New IP Subnet Mask:

- **Set Gateway Address**

```
IP
```

Old IP Address: 192.168.0.60

Old IP Subnet Mask: 255.255.255.0

Old Gateway Address: 192.168.0.1

New IP Address: 10.3.52.220

New IP Subnet Mask: 255.255.254.0

New Gateway Address:

Note: After the New IP Address, Subnet Mask, and Gateway Address are entered, the Video Matrix Switch will automatically reboot to apply the new network settings.

3. LO – Load connections from profile

```
LO 01
```

Load profile 01 OK.

4. PW – Change password

```
PW
```

Old password: ********

New password:

5. RI – Read what input is connected to *nn* output

```
RI 01
```

Input port 02 04 is connected to output port 01

6. RO – Read what output is connected to *nn* input

```
RO 01
```

Output port 02 is connected to input port 01

7. SB – Set serial port baud rate

```
SB 96
```

Serial port baud rate is set to 9600

8. SS – Switch input to specified output

```
SS 01,03
```

Switch input 01 to output 03

9. SV – Save the current connections into a profile

```
SV 01
```

Save the current connections into profile 01

10. TI – Set timeout

```
TI 30
```

Set 30 minute timeout

11. VR – Software version information

```
VR
```

Software version 1.0.

Limited Warranty

ATEN warrants its hardware in the country of purchase against flaws in materials and workmanship for a Warranty Period of two [2] years (warranty period may vary in certain regions/countries) commencing on the date of original purchase. This warranty period includes the LCD panel of ATEN LCD KVM switches. Select products are warranted for an additional year (see *A+ Warranty* for further details). Cables and accessories are not covered by the Standard Warranty.

What is covered by the Limited Hardware Warranty
ATEN will provide a repair service, without charge, during the Warranty Period. If a product is detective, ATEN will, at its discretion, have the option to (1) repair said product with new or repaired components, or (2) replace the entire product with an identical product or with a similar product which fulfills the same function as the defective product. Replaced products assume the warranty of the original product for the remaining period or a period of 90 days, whichever is longer. When the products or components are replaced, the replacing articles shall become customer property and the replaced articles shall become the property of ATEN.

To learn more about our warranty policies, please visit our website:
http://www.aten.com/global/en/legal/policies/warranty-policy/

© Copyright 2021 ATEN® International Co., Ltd.
Released: 2021-11-25

ATEN and the ATEN logo are registered trademarks of ATEN International Co., Ltd. All rights reserved.
All other brand names and trademarks are the registered property of their respective owners.