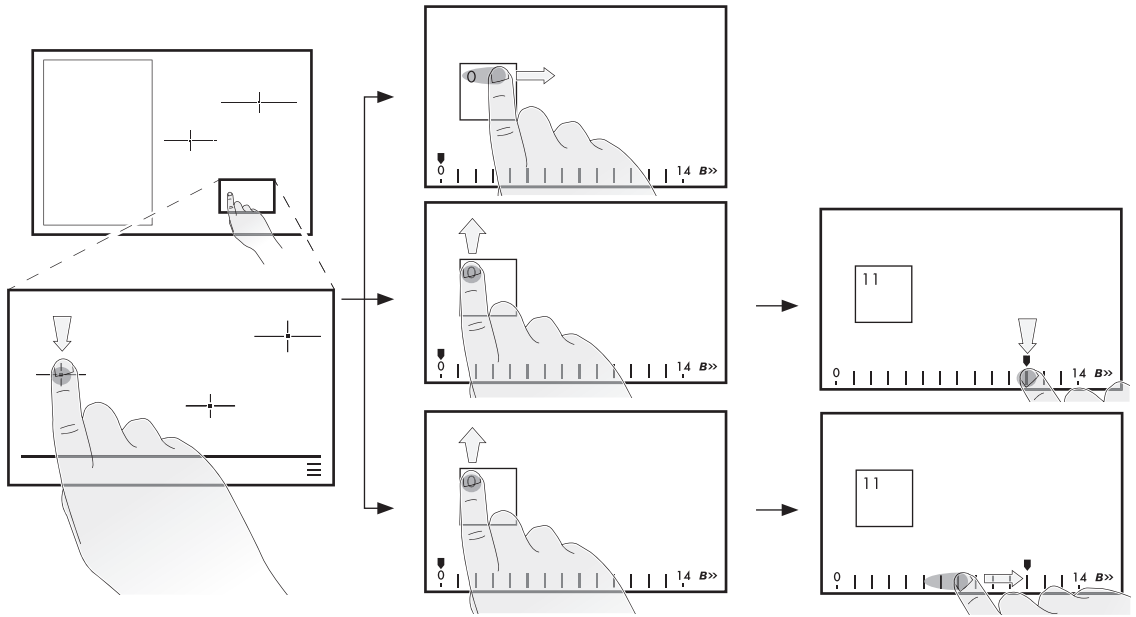
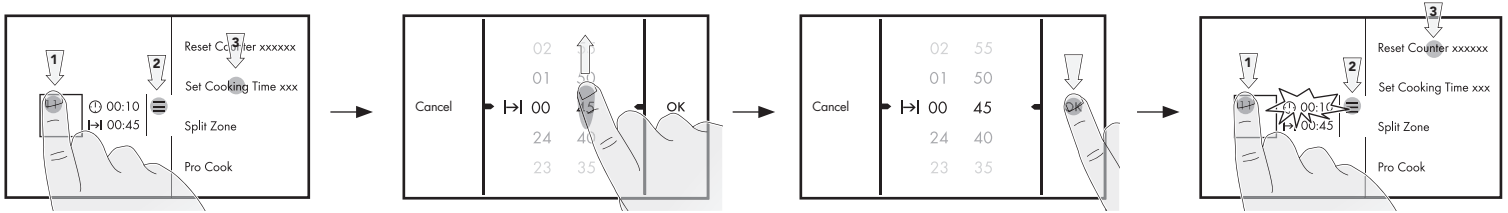
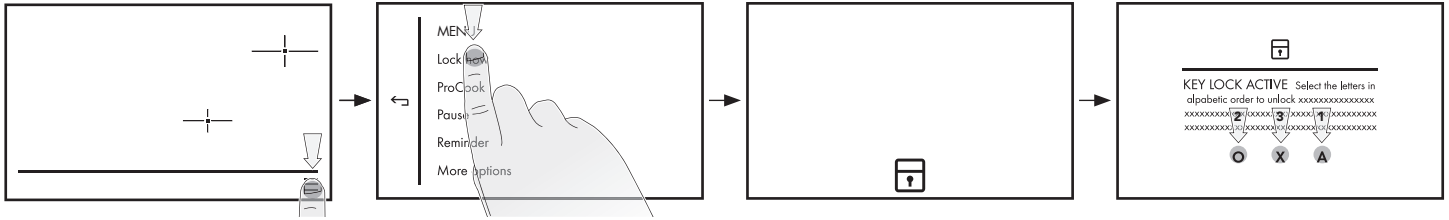
QUICK GUIDE

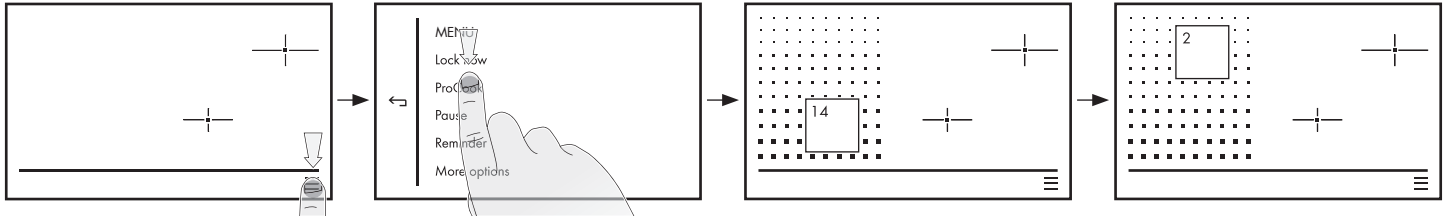
Let's help you get started. Use the recipe overleaf to discover the various features of your appliance.

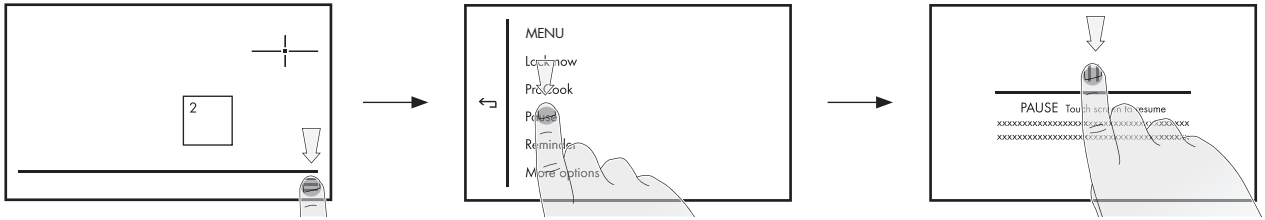


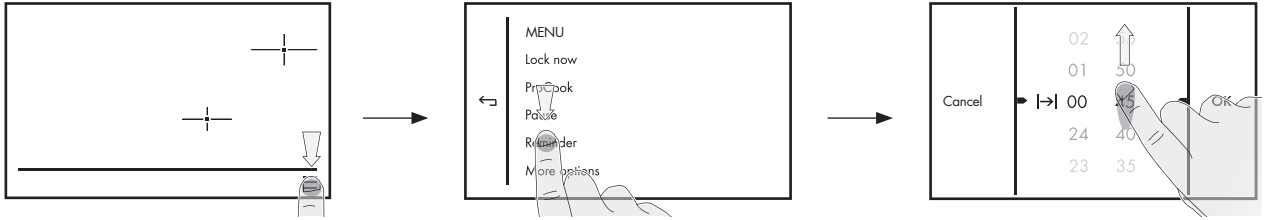


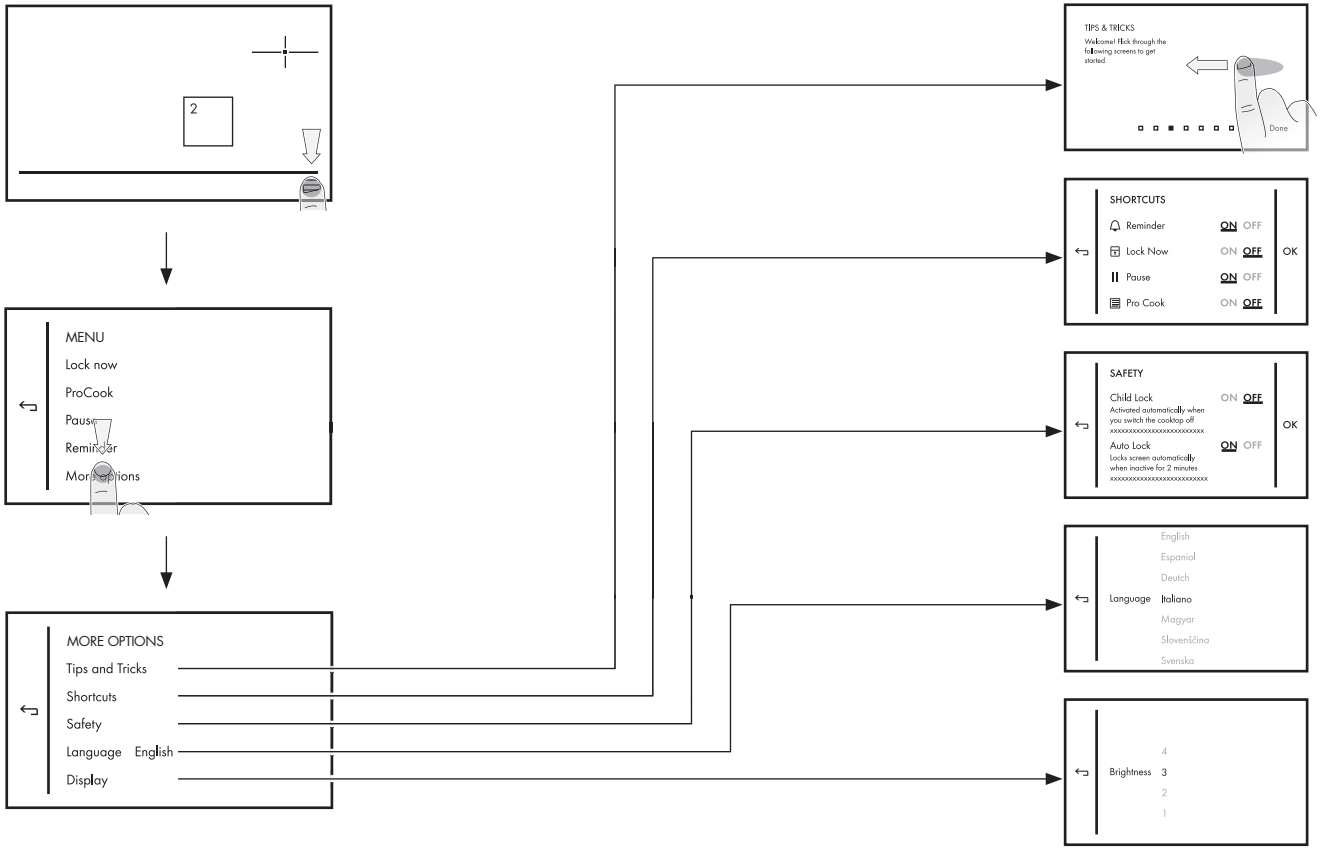
AEG


MENU
Lock now
ProCook
Pause
Reminder
More options
KEY LOCK ACTIVE Select the letters in
alpabetic order to unlock
2
3
1
O
X
A


MENU
Lock now
ProCook
Pause
Reminder
More options
14
2


2
MENU
Lock now
Pro Cook
Pause
Reminder
More options
PAUSE Touch screen to resume


MENU
Lock now
Pro Cook
Pause
Reminder
More options
Cancel
02
01
00
24
23
50
40
35
OK


2
MENU
Lock now
ProCook
Pause
Reminder
More options
MORE OPTIONS
Tips and Tricks
Shortcuts
Safety
Language English
Display
TIPS & TRICKS
Welcome! Flick through the following screens to get started.
Done
SHORTCUTS
Reminder ON OFF
Lock Now ON OFF
Pause ON OFF
Pro Cook ON OFF
OK
SAFETY
Child Lock ON OFF
Activated automatically when you switch the cooktop off
xxxxxxxxxxxxxxxxxxxxxxxxx
Auto Lock ON OFF
Locks screen automatically when inactive for 2 minutes
xxxxxxxxxxxxxxxxxxxxxxxxx
OK
Language English
Espaniol
Deutch
Italiano
Magyar
Slovenščina
Svenska
Brightness 4 3 2 1