USER GUIDE

UK

CORDLESS TELEPHONE

Voxtel D550BT



AEG

perfekt in form und funktion

V1

P1

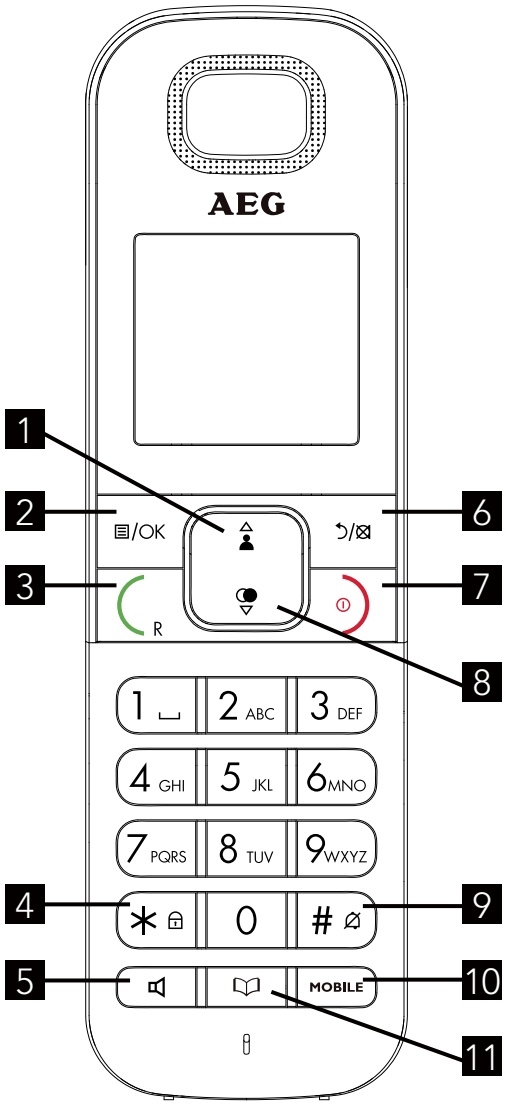
AEG
1
2
3
4
5
6
7
8
9
10
11
/OK
R
1
2 ABC
3 DEF
4 GHI
5 JKL
6 MNO
7 PQRS
8 TUV
9 WXYZ
0
MOBILE

P2

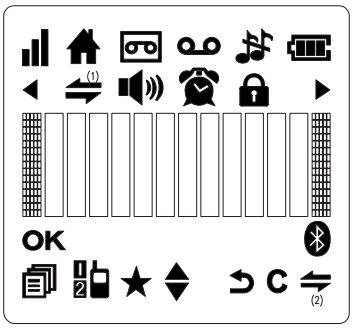
OK
C

P3

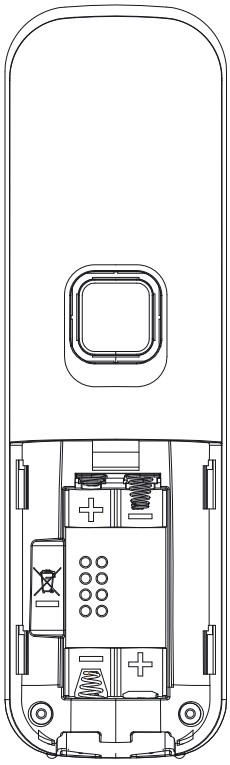

P4

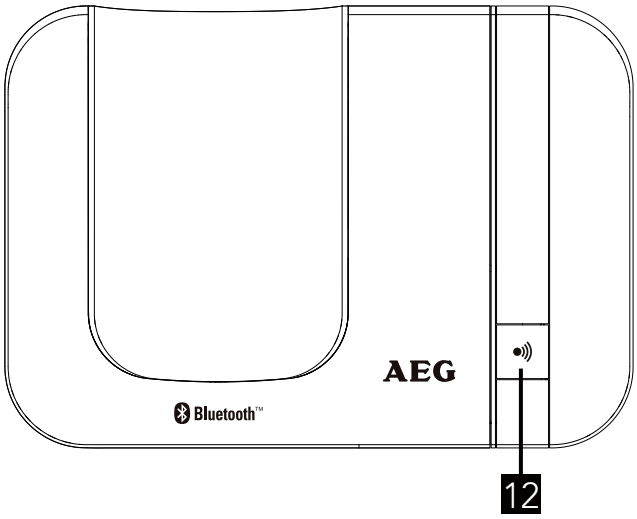
AEG
Bluetooth
12

P5

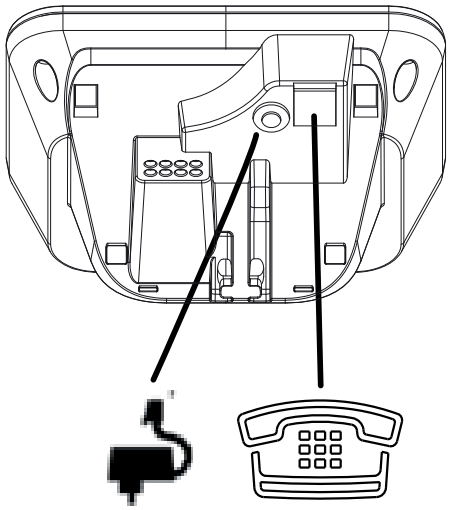

1 BECAUSE WE CARE

Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product with a quick installation guide to reduce the number of paper (pages) and therefor save trees to be cut for making this paper. A full and detailed user guide with all the features descripted can be found on our website **www.aegtelephones.eu**. Please download the full user guide in case you want to make use of all the advanced features of your product. To save the environment we ask you not to print this full user guide. Thank you for supporting us to protect our environment.

2 IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the
following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Keep your phone away from hot, humid conditions or strong sunlight, and don't let it get wet or use this product near water (for example, near a bath tub , kitchen sink, swimming pool).
5. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6. Unplug this product from the wall outlet and refer servicing to our Repair Centre under the following conditions:
   - When the power supply cord or plug is damaged.
   - If the product does not operate normally by following the operating instructions.
   - If the product has been dropped and the cabinet has been damaged.
   - If the product exhibits a distinct change in performance.

7. NEVER use your phone outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area. Damage caused by lightning is not covered by the guarantee.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.
9. Use only the supplied NiMH (Nickel Metal Hydride) batteries! The operation periods for the handsets are only applicable with the default battery capacities
10. The use of other battery types or non-rechargeable batteries/ primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
11. Do not use third party charging bays. Damage may be caused to the batteries.
12. Please ensure the batteries are inserted in the correct polarity.
13. Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

3 INTENDED USE

This telephone is intended to be connected to a public analogue telephone network or to an analogue extension of a compatible PBX system.

4 UNPACKING YOUR PHONE

The package contains the following items:

- 1 Handset
- 1 Base station
- 1 Mains power adapter
- 1 Telephone line cord
- 2 Rechargeable batteries
- 1 User manual

Handset - Base connection

- When purchased, all handset are already registered to the base unit..

- To use your handset and base together, you must be able to establish a radio link between them. The signal between the handset and the base is in accordance with the normal standards for a DECT phone: Maximum range up to 300 metres outdoors or 50 metres indoors.
- The signal range may decrease if there is any large metal object between the handset and the base, such as a refrigerator, a mirror, a filing cabinet, metallic doors or reinforced concrete. The signal strength may also be reduced by other solid structures like walls, or by other radio or electrical interference.
- Do not place the handset or base close to another telephone, a TV or audio equipment - they may cause interference.
- Out of range warning - if you hear a warning tone during a call, and/ or the sound in the earpiece becomes faint or distorted, you may be going out of range of the base unit, so move nearer to the base within 20 seconds, otherwise the call may be cut off.

5 GETTING TO KNOW YOUR PHONE

5.1 Handset overview (see P1)

#		Meaning
1	△	**Up** • In idle mode: Press to access the call list • In menu mode: Press to scroll up the menu items • In Phonebook list / Redial list / Call List: Press to scroll up the list • During a call: Press to increase the earpiece or speaker volume • During ringing: Press to increase the ringer volume
2	目/OK	**Left soft key (Menu/OK)** • In idle mode: Press to access the main menu • In sub-menu mode: Press to confirm the selection • During a call: Press to access Intercom/Phonebook/ Redial List/ Call List

3		**Off Hook/Flash key** • In idle / predialling mode: Press to make a call • In Redial list / Call List / Phonebook list: Press to make a call to the displayed entry. • During ringing: Press to answer a call • During a call: Press to send a flash signal
4		**Keypad Lock** • Press and hold to lock/unlock keypad. • Press and hold to conference between the external and internal calls when both are set up.
5		**Speakerphone** • During a call: Press to turn on / off the speakerphone. • Call List / Phonebook entry : Press to make a call with speakerphone • During ringing: Press to answer a call with speakerphone
6		**Right soft key (clear/back/mute/intercom)** • In main menu mode: Press to go back to idle screen • In sub-menu mode: Press to go back to previous level • In sub-menu mode: Press and hold to go back to idle screen • In editing / predialling mode: Press to clear a character / digit • In editing / predialling mode: Press and hold to delete all the characters / digits • During a call: Press to mute/unmute the microphone • In idle mode:Press to intercom another handset

7		**On Hook / ON** • During a call: Press to end a call and go back to idle screen • In menu / editing mode: Press to go back to previous menu • In idle mode: Press and hold to power off the handset • In idle mode (when the handset is powered off): Press and hold to power on the handset.
8		**Down/Redial list** • In idle mode: Press to access the redial list • In menu mode: Press to scroll down the menu items • In Phonebook list / Redial list / Call List: Press to scroll down the list • During a call: Press to decrease the earpiece or speaker volume • During ringing: Press to decrease the ringer volume
9		**Ringer Off** • Press and hold to turn the handset ringer off or back on.
10	MOBILE	**Mobile** • Press to answer the mobile line call.
11		**Phonebook / Contacts List** • Press to access the contacts list.

5.2 Cordless handset display (see P2)

The LCD display gives you information on the current status of the telephone.

#		Meaning
		Steadily on when the handset is in range of the base. More bars indicate a stronger signal.
		Indicates a call is in progress on that handset.

		Indicates when you have a new Voice Mail message. This is a network service please check with your operator.
		Indicates that the handset ringer is switched off.
		Indicates when the battery is fully charged. The internal segments cycle when the battery is charging.
		Indicates when the battery needs charging. Flashes when low battery power level is detected.
		Indicates when there are more characters or numbers in front of those being displayed.
		(1) Steadily on when an intercom is in progress. Flashes when there is an incoming internal call.
		Indicates the handsfree/speakerphone mode
		Steadily on when an alarm is set. Flashes when the alarm is sounding.
		Indicates that the keypad is locked.
		Indicates when there are more characters or numbers after those being displayed.
	OK	Press to confirm the current selection if applicable.
		Press to access the main menu.
		Indicates new call in the call list.
		Indicates more options available in lists, above or below.
		Press to go back to previous menu level or cancel the current action if applicable.
	C	Press to clear a character, stop the alarm if applicable or to mute / unmute the microphone during a call.

	⇌	(2) Press to start an intercom call.
	ᛒ	Indicates a mobile is linked via Bluetooth

5.3 Corded base station

#		Meaning
12	•))	**Paging/Find** • Press to page your registered handset(s). It will ring for approximately 60 seconds. • Press and hold to put base into registration mode.

5.4 Menu structure

- In idle mode, press ☰/OK to go to **"CALL LIST"**, the first option in the menu list.
- Press △/▽ to go to other options in the menu list.
- Press OK to enter a sub-menu or function.
- Press ↩ to go back to the previous level
- Refer to the following for the menu structure.

Key press 📋 ↔ △/● ↔ △/● ↔ △/● ↔ △/● ↔ △/● ↔ △/●

Main Menu	CALL LIST	CONTACTS	BS SETTINGS	HS SETTINGS	PAIR MOBILE	REGISTRA-TION	RESET
Sub-menu	- STORE NUMBER - DELETE - DELETE ALL - DETAILS	- ADD CAPACITY or - ADD - VIEW - EDIT - DELETE - DELETE ALL - CAPACITY	- DELETE HANDSET - FLASH TIME - CHANGE PIN	- ALARM - RINGER - TONES - LAN-GUAGE - HANDSET NAME - AUTO ANSWER - DATE AND TIME - DIAL MODE (only for Tone/Pulse version)		----	----

5.6 Text and digit entry

The following tables show you where each letter and punctuation character can be found, by using repeated presses of the alphanumeric keypad. This will be helpful when storing a name in the phonebook and renaming your handset.

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing tips:

- Once a character is selected, the cursor will move to the next position after a short pause.
- You can move the cursor within the text with the △/▽ keys to amend the text entry.
- Press ⮌ to delete the last character.
- Press and hold ⮌ to delete the entire text string.

5.6.1 English character set

Key	Alphanumeric Editing (For phonebook name editing and renaming handset)										Number Editing (For phone number editing, date/time editing)
Key Press	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	
1	space	-	1								1
2	A	B	C	2							2
3	D	E	F	3							3
4	G	H	I	4							4
5	J	K	L	5							5
6	M	N	O	6							6
7	P	Q	R	S	7						7
8	T	U	V	8							8
9	W	X	Y	Z	9						9
0	0										0, or P (if press and hold)
*	*	?	/	\	(	)					*
#	°	’	,	-	&						

6 INSTALLING YOUR PHONE

6.1 Connecting the base station (see P5)

- Plug the power supply and line cord into the base station.
- Plug the power adapter into a 100 - 240V, 50Hz mains socket and the line cord into your telephone line socket.
- Always use the cables provided in the box

Warning:

Use only the provided adaptor, using other power supplies may cause a hazard.

Warning:
Install the base unit in a position where the mains adapter plug will reach an easily accessible mains socket. Never try to lengthen the mains power cable.

Note:
The base unit needs mains power for normal operation, not just for charging the handset batteries.

6.2 Installing and charging the batteries (see P3)

- Place the 2 supplied batteries into the battery compartment with the polarity markings as shown. Use only the NiMH rechargeable battery type provided.
- Position the battery compartment cover over the batteries and slide up to click into place.
- Put the handset on the base and charge for 15 hours before using the handset for the first time. The handset will give a beep when it is properly placed on the base or charger.

7 USING YOUR PHONE

7.1 Introducing Bluetooth

Your new telephone system with Bluetooth wireless technology allows you to pair and connect a Bluetooth enabled mobile phone with the telephone base, so that you can benefit from the ease and comfort of your home telephone system to receive your mobile phone calls, or make a call through your mobile phone plan to its last dialled number. .

IMPORTANT INFORMATION

- Refer to your mobile phone user's guide for more information about its Bluetooth function.
- Make sure that your Bluetooth enabled mobile phone is between one to 2 m away from the telephone base in order to maintain a clear and consistent connection between your Bluetooth mobile phone and telephone base.
- Make sure that your Bluetooth enabled mobile phone has sufficient signal strength. You may need to move the Bluetooth enabled

mobile phone and telephone base to a location where the mobile signal may be stronger.
- Charge your Bluetooth mobile phone while it is connected to the telephone base because your mobile phone's battery will discharge faster while it is connected wirelessly to the telephone base.

7.2 Bluetooth setup

To use a Bluetooth enabled mobile phone with your telephone, you must first pair and connect your Bluetooth mobile phone with the telephone base. Any handset registered to the base can be used to make or answer calls on the mobile phone line.

7.2.1 Add a mobile phone

To pair and connect a Bluetooth enabled mobile phone:
- Place your mobile phone near the base unit.
- Press ☰ and then △/▽ to select **"PAIR MOBILE"**.
- Press ☰ and display will show **"MOBILE READY?"**.
- Press ☰ and display will show **"DISCOVERABLE MODE"**. The Bluetooth feature is activated.
- Using your Bluetooth enabled mobile phone, turn on the Bluetooth feature and search for a new device.
- Once your Bluetooth enabled mobile phone has found the D550 BT telephone, select it and continue the pairing process.
- When the Bluetooth enabled mobile phone is successfully paired, the screen will display **"COMPLETED"** with a tone and the icons ᛒ appear on the handset.

Refer to the user's manual of your Bluetooth enabled mobile phone to learn how to search for or add new Bluetooth devices.

Notes:

> A paired mobile phone will be connected automatically and stored.

> When a Bluetooth enabled mobile phone is successfully connected, the ᛒ icon will be displayed on screen.

7.2.2 Replace a paired mobile phone

If you have already paired up a Bluetooth enabled mobile phone, you will need to remove it follow the below steps.
- Press ☰ and then △/▽ to select **"PAIR MOBILE"**.

- Press ☰ and then △/▽ to select **“REPLACE“**.
- Press ☰ to confirm and the screen will display **“MOBILE READY?“**.
- Press ☰ to confirm and the screen will display **“REMOVING“**.
- When the device is removed, you will hear a confirmation tone and **“REMOVED“** will be displayed on the screen.
- The screen will display **“MOBILE READY?“** again. Press OK to confirm, the screen will display **“DISCOVERABLE MODE“**.
- Using your Bluetooth enabled mobile phone, turn on the Bluetooth feature.
- Refer to steps 5 to 7 in section 7.2.1 add a mobile phone to proceed with the next steps to replace a new Bluetooth enabled mobile phone.

7.2.3 Remove a paired mobile phone

If you have paired up a Bluetooth enabled mobile phone and you wish to remove it if you would like to pair up another device. Follow the below steps to replace and pair up a new device.

- Press ☰ and then △/▽ to select **“PAIR MOBILE“**.
- Press ☰ and then △/▽ to select **“REMOVE“**.
- Press and the screen will display **“REMOVE THE MOBILE?“**
- Press to confirm and the screen will display **“REMOVING“**.
- When the device is removed, you will hear a confirmation tone and **“REMOVED“** will be displayed on the screen.

7.2.4 To answer a mobile phone call

If the paired mobile phone receives a call, the handset will ring with the MOBILE RING tone and the display will show the 1/2 icon flashing.

- Press the MOBILE key to answer the call.
- Press the ⏻ key to end the call.

7.2.5 To redial the last Mmobile number

- Press the MOBILE key to show **“REDIAL LAST MOBILE NUMBER“**.
- Press the ☰ key to dial the number over your mobile service and initiate the call.
- Press the ⏻ key to end the call.

Note:

The screen will show **“NOT POSSIBLE“** if a call is attempted when the Bluetooth of the mobile phone is turned off or out of range.

7.3 Make a call

7.3.1 Preparatory dialing

Enter the phone number (up to 24 digits) and press (or to connect to line and dial the number. When entering the number, if you make a mistake, press ↩/⊠ to delete digits.

7.3.2 Direct dialling

Press (or to connect to the line and then enter the phone number.

Note:

If you enter a wrong digit, you cannot correct it with the ↩ key.

7.3.3 Call from the phonebook

- Press 📖 to access the phonebook and press △/▽ to select the desired phonebook entry.
- Press (or to dial out the selected phonebook entry.

Notes:

> You can also access the phonebook by pressing ☰, ▽, OK.

> The alphanumeric keys provide a short-cut to find entries beginning with the corresponding letters.

7.3.4 Call from the call list (only available with Caller Display)

- Press 👤 to access the call list and then press △/▽ to select the desired call list entry.
- Press (or to dial out the selected call list entry.

Note:

You can also access the Call List by pressing ☰/OK twice

7.3.5 Call from the redial list

- Press ◐ to access the redial list and then press △/▽ to select the desired redial number.
- Press (or to dial out the selected redial number.

7.3.6 Call timer

Your handset automatically times the duration of every call.
The call timer is displayed as soon as you answer a call or press the (key and remains on the screen for 5 seconds after the end of the call. It is shown in hours, minutes and seconds format (HH:MM:SS).

7.4 Answer a call

If handset is not on the charging cradle:

• When the phone rings, press (or to answer a call:

Note:

If AUTO ANSWER is set to ON, then lifting the handset off the base or charger will answer the call automatically, and no buttons need to be pressed.

7.5 End a call

• During a call press to end the call.

OR

• Put the handset on the base station or charger to end the call.

7.6 Handset speakerphone

During a call, you can press to alternate between hands-free speakerphone and normal handset use.

7.7 Adjust the earpiece or speakerphone volume

There are 5 levels (VOLUME 1 to VOLUME 5) to choose from for each of the earpiece and speakerphone volumes.

During a call:

• Press △/▽ to select volume 1-5. The current setting is shown.

When you end the call, the setting will remain at the last selected level.

7.8 Mute a call

You can talk to someone nearby without letting the caller hear you during a call.

During a call:

• Press ⊠ to mute the microphone and **"MUTE"** will display on the display. Your caller cannot hear you.

• Press ⊠ again to unmute the microphone.

7.9 Turn off the handset ringer

• In idle, press ♫ and hold to turn off the handset ringer. The icon appears on the display.

Note:
The display will still flash the Call icon and show Incoming call or the Caller Display number, when there is an incoming call, even if the ringer is turned off.

- To turn the ringer back on, press and hold 🔕 again.

7.10 Turn on the keypad lock

In idle, press and hold 🔓 to turn off the keypad lock. The icon 🔒 appears on the display.

Note:
You can still use (to answer a call when the handset is ringing.
To turn the keypad lock off, press and hold 🔓 again.

7.11 Redial the last number

You can redial any of the 10 last numbers called. If you have stored a name in the phonebook to go with the number, the name will be displayed instead.
The most recent last number will display at the top of the redial list.

7.11.1 Redial a number from the redial list

- In idle mode, press ◐ to access the redial list.

Note:
If the redial list entry shows a name, press # 🔕 to view the number of this entry.

- Press △/▽ to browse the redial list.
- Press (to dial to the selected redial number.

Note:
If there are no numbers in the redial list, the display shows **"EMPTY"**.

7.11.2 Redial a number from the mobile

- In idle mode, press MOBILE. The screen will display **"REDIAL LAST MOBILE NUMBER"**.
- Press MOBILEor ☰/OK to dial out the last dialled mobile number.

Note:
If there is no Bluetooth enabled mobile phone paired up and connected, when pressing MOBILE, the screen will display **"NO MOBILE"**.

7.11.3 Store a redial number into the phonebook

- Follow Steps in section 7.11.1.
- Press ☰/OK and △/▽ to select Store number.
- Press ☰/OK and then enter the name you want to use in the phonebook.
- Press ☰/OK and then modify the number, if necessary.
- Press ☰/OK to show **"MELODY 1"**.
- Press △/▽ to browse the list of 10 available melodies. The respective ringtone will be played when browsing the ringtone list.

Note:
The selected melody will only be played when you receive a call if you subscribe to Caller Display and the incoming number matches the stored number.

- Press ☰/OK to confirm, and the entry will be stored.

7.11.4 Delete a redial number

- Follow Steps in section 7.11.1.
- Press ☰/OK and △/▽ to select **"DELETE"**.
- Press ☰/OK to confirm, and the entry will be deleted.

7.11.5 Delete all redial list entries

- Follow Steps in section 7.8.1.
- Press ☰/OK and △/▽ to select **"DELETE ALL"**.
- Press ☰/OK to display **"DELETE ALL?"**.
- Press ☰/OK to confirm. All entries will be deleted and the display will show **"LIST EMPTY"**.

7.12 Find the handset

You can locate the handset by pressing •)) on the base station. All the handsets registered to the base will produce the paging tone and show **"PAGING"** on the display. You can stop the paging by pressing (/ ⏻ / ⮌/⊠ on any handset or •)) on the base again.

Note:
If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

7.13 Make an internal call (Multi-handset versions only)

This feature is only applicable when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls. If the called handset is not answered within 60 seconds, the called handset will stop ringing and the calling handset will return to standby mode.

Note:
If only one handset is registered to the base station, when ↩/⊠ is pressed, it will display **"HANDSET NOT AVAILABLE"**.

7.13.1 Intercom another handset

- In idle mode, press ↩/⊠ and all the other registered handset numbers will display, along with a **"9"**.
- Enter the number of the handset that you want to call, or enter "9" to call all handsets.
- The called handset rings and (must be pressed on that handset to establish the intercom call.

Note:
If only two handsets are registered to the base station, pressing ↩/⊠ will call the other handset immediately.

Note:
If there is an external call while you are on an intercom call, you'll hear warning beeps, and you have to end the intercom call, before you can answer the external call.

7.13.2 Call all handsets

- In idle mode, press ↩/⊠ and the registered handsets will display.
- Press 9 to ring to all registered handsets.

7.13.3 Transfer an external call to another handset

<u>During an external call:</u>

- Press ☰/OK and △/▽ to select **"INTERCOM"**.

- Press ☰/OK to show all the other registered handset numbers, plus **"9"**. Enter the number for the handset you want to transfer the call to.
- The external call is put on hold automatically and the called handset rings.
- Press (on the called handset to establish an internal call.
- Press ⏻ on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
- The external call is transferred to the called handset.

Note:
If the other handset does not answer the intercom call within 60 seconds, or if you press ⏻, the intercom will stop and return you to the external call.

7.13.4 Make a 3-way conference call

The conference call feature allows one external call to be shared with two handsets (in intercom).
The three parties can share the conversation and no additional network subscription is required.
During an external call:

- Follow Steps 1 to 4 in section 7.13.3.
- Press and hold * 🔒 on the calling handset to establish the conference call.

Either handset can exit the conference by pressing ⏻, leaving the other handset still connected to the external call.

8 PRIVATE PHONEBOOK

Each handset can store up to 50 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 24 digits for the phone number and 14 characters for the name. You can also select different ringtones for your phonebook entries.

Note:
The different ringtones only play when you receive a call if you subscribe to Caller Display and the incoming number matches the stored number.
Phonebook entries are stored alphabetically by name.

8.1 Add a new phonebook entry

In idle:

- Press 📖 to access the phonebook
- Press ☰/OK to show **"ADD"**.
- Press ☰/OK and then enter the name.
- Press ☰/OK and then enter the number.
- Press ☰/OK and △/▽ to select the desired ringtone for your phonebook entry from the 10 ringtones available.
- Press ☰/OK to store the phonebook entry.

8.2 Search for a phonebook entry

In idle:

- Press 📖 to access the phonebook.

OR

- Press ☰/OK and △/▽ to select **"CONTACTS"** and then press ☰/OK to access the phonebook.
- Enter the first letter of the name using the alphanumeric keys (e.g. if it begins with C, press the 2 key three times), and then △/▽ to scroll to the entry you want.

8.3 View a phonebook entry

In idle:

- Press 📖 to access the phonebook.
- Press △/▽ to select the desired phonebook entry.
- Press ☰/OK and then △/▽ to select **"VIEW"**.
- Press ☰/OK to see the name and number of the selected phonebook entry, and press △/▽ to see other phonebook entries.

Note:

If the number is more than 12 digits, press # 🔕 to view the remaining digits.

8.4 Edit a phonebook entry

In idle:

- Press 📖 to access the phonebook.
- Press △/▽ to select the desired phonebook entry.
- Press ☰/OK and then △/▽ to select **"EDIT"**.
- Press ☰/OK to display the current name.
- Edit the name and press ☰/OK .

- Edit the number and press☰/OK .
- Press △/▽ to change the ringtone and press ☰/OK to confirm.

8.5 Delete a phonebook entry

In idle:

- Press 🕮 to access the phonebook.
- Press △ to select the desired phonebook entry.
- Press ☰/OK and then △/▽ to select **"DELETE"**.
- Press ☰/OK to confirm, and the entry will be deleted.

8.6 Delete all phonebook entries

- Press 🕮 to access the phonebook.
- Press ☰/OK and then △/▽ to select **"DELETE ALL"**.
- Press ☰/OK to confirm and the screen will display **"DELETE ALL?"**.
- Press ☰/OK to confirm. All entries will be deleted and the screen will show **"LIST EMPTY"**.

8.7 Check the phonebook usage

You can check how many phonebook entries are stored in your handset and how many phonebook entries are available for you to store in the phonebook.

- Press 🕮 to access the phonebook.
- Press ☰/OK and then △/▽ to select **"CAPACITY"**.
- Press ☰/OK to display how much of the phonebook is being used, for example, **"14/50 USED"** means 14 entries are stored out of the total 50 available spaces.

9 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed to the Calling Line Identification service with your network service provider. Your phone can store up to 20 received calls with date/time information in the Call List. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your Private Phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the ringtone associated with that phonebook entry.

If the call is from someone who withheld their number, **"WITHHELD"** will display.
If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange, **"UNAVAILABLE"** will display.
If you've got new Caller Display records, the handset will display **"1 NEW CALL"** or **"X NEW CALLS"** (for x=2 to 20) in standby mode. The New Calls indication will remain until all the new call records have been viewed on that handset.

9.1 View the call list

All received calls are saved in the Call List with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a ★ icon at the centre of the bottom line of the display.

- Press 👤 to access the call list.
- Press △/▽ to select the desired entry.
- Press # to view the caller's number if applicable.
- Press ☰/OK, △/▽ to show **"DETAILS"**, and then ☰/OK to display the date and time of the call with the name or number. Press # to see more of the name or number, if necessary. Press ☰/OK to go back to the previous screen.

9.2 Store a calls list number into the phonebook

- Follow Steps 1 and 2 in Section 9.1.
- Press ☰/OK to show **"STORE NUMBER"**.
- Press ☰/OK and then enter the name.
- Press ☰/OKand the selected call list number is displayed.
- Edit the number if necessary.
- Press ☰/OKand then △/▽ to select the ringtone.
- Press ☰/OK to store the phonebook entry and return to the calls list.

9.3 Delete an entry in the call list

- Follow Steps 1 and 2 in Section 9.1.
- Press ☰/OK and △/▽ to select **"DELETE"**.
- Press ☰/OK to confirm and delete the entry.

9.4 Delete all calls list entries

- Follow Steps 1 and 2 in Section 9.1.
- Press ☰/OK and then △/▽ to select **"DELETE ALL"**.
- Press ☰/OK to display **"DELETE ALL?"**.
- Press ☰/OK to confirm. All entries will be deleted and the display will show **"LIST EMPTY"**.

10 PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

10.1 Date and time settings

If you subscribe to Caller Display the time and date settings will be automatically updated by the network when you receive an incoming call.

The Caller Display service only sends the month and date, not the year, so you may need to set the year.

10.1.1 Change the date format

- Press ☰/OK and △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK and △/▽ to select **"DATE AND TIME"**.
- Press ☰/OK to show **"DATE FORMAT"**.
- Press ☰/OK and △/▽ to select your desired date format (DD-MM-YY or MM-DD-YY).
- Press ☰/OK to confirm.

10.1.2 Change the time format

- Press ☰/OK and △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK and △/▽ to select **"DATE AND TIME"**.
- Press ☰/OK and △/▽ to select **"TIME FORMAT"**.
- Press ☰/OK and △/▽ to select your desired time format (12 HR or 24 HR).
- Press ☰/OK to confirm.

10.1.3 Set the time

- Press ☰/OK and △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK and △/▽ to select **"DATE AND TIME"**.
- Press ☰/OK and △/▽ to select **"SET TIME"**.

- Press ☰/OK and then enter the time information in 24 hour format.
- Press ☰/OK to confirm.

Note:
If a time was set previously, the current time is shown, otherwise "HH:MM" is shown.

10.1.4 Set the date

- Press ☰/OK and △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK and t△/▽ o select **"DATE AND TIME"**.
- Press ☰/OK and t△/▽ o select **"SET DATE"**.
- Press ☰/OK and then enter the date information in the format set in Section 10.1.1.
- Press ☰/OK to confirm.

Note:
If a date was set previously, the current date is shown, otherwise 01/01/13 is shown.

10.2 Alarm settings

You can set an alarm time on this phone. When an alarm is set, the ⏰ icon is shown on the handset display. When the alarm time is reached, the ⏰ icon and **"ALARM ON"** flash on the handset display, and the alarm tone rings for 45 seconds. You can press any key to disable the alarm. If the snooze function is activated, the alarm will sound again at the end of the snooze period of seven minutes. You can also press and hold ⏻ while the alarm is sounding, to stop the alarm and turn off the snooze function.

Note:

> A key press will still disable the alarm even if the handset keypad is locked when the alarm rings.

> The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **"VOLUME OFF"**, the alarm still sounds at **"VOLUME 1"** level.

> During an external call or internal call, if an alarm is set and the alarm time is reached, the icon ⏰ and **"ALARM ON"** will still flash. An alarm tone will be emitted the earpiece to alert the user the alarm time is reached. Once the user presses any key or presses

and holds ⏻ to disable the alarm, the display will revert to the call duration.

> During paging or ringing, the alarm will not sound when the alarm time is reached. However, if the snooze function is enabled and there is no paging or ringing the alarm will sound again at the end of the snooze period.

10.2.1 Turn on/off the alarm

- Press ☰/OK and then △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK to show **"ALARM"**.
- Press ☰/OK and then △/▽ to select **"ON"** or **"OFF"**.
- Press ☰/OK to confirm.

Note:
If ON is selected, you will be prompted to set the alarm time.

10.2.2 Set the alarm time

- Follow Steps 1 to 4 in Section 10.2.1.
- Enter the alarm time in 24 hour format.
- Press ☰/OK to display **"SNOOZE"**.
- Press △/▽ to select snooze **"ON"** or **"OFF"**.
- Press ☰/OK to confirm the alarm setting.

10.3 Handset settings

10.3.1 Set the Ringer Melody for Internal Calls

- Press ☰/OK and then △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK and then △/▽ to select **"RINGER"**.
- Press ☰/OK to show **"INTERNAL RING"**.
- Press ☰/OK and then △/▽ to select the melody you want to hear for internal calls.

Note:
The respective melody will play as you select each of the 10 ringtones.
5. Press ☰/OK to confirm your choice.

10.3.2 Set the ringer melody for external calls

- Press ☰/OK and then △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK and then △/▽ to select **"RINGER"**.
- Press ☰/OK and then △/▽ to select **"EXTERNAL RING"**.

• Press ☰/OK and then △/▽ to select the melody you want to hear for external calls.

Note:
The respective melody will play as you select each of the 10 ringtones.

• Press ☰/OK to confirm your choice.

10.3.3 Set the ringer melody for mobile calls

• Press ☰/OK and then △/▽ to select **"HS SETTINGS"**.
• Press ☰/OK and then △/▽ to select **"RINGER"**.
• Press ☰/OK and then △/▽ to select **"MOBILE RING"**.
• Press ☰/OK and then △/▽ to select the melody you want to hear for mobile calls.

Note:
The respective melody will play as you select each of the 10 ringtones.

• Press ☰/OK to confirm your choice.

10.3.4 Set the ringer volume

• Press ☰/OK and then △/▽ to select **"HS SETTINGS"**.
• Press ☰/OK and then △/▽ to select **"RINGER"**.
• Press ☰/OK and then △/▽ to select **"RING VOLUME"**.
• Press ☰/OK and then △/▽ to select the desired ringer volume from
• **VOLUME OFF** or Volumes 1 to 5.

Note:
The ringer volume plays for each selection. If Volume off is selected, the  icon will be displayed.

• Press ☰/OK to confirm your choice.

10.3.5 Set alert tones

Three different alert tones are set on by default, but can be turned off, if desired.
Key Tone - a single beep is emitted when you press a key.
Low Battery Tone - emitted while you are talking on the phone to alert you that you need to charge the handset batteries.
Out of Range Tone - emitted while you are talking on the phone to alert you to move closer to the base unit, before the call is lost.

- Press ☰/OK and then △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK and then △/▽ to select **"TONES"**.
- Press ☰/OK and then △/▽ to select **"KEY BEEPS"** / **"BATTERY LOW"** / **"OUT OF RANGE"**.
- Press ☰/OK and then △/▽ to turn on or off these tones.
- Press ☰/OK to confirm your choice.

10.3.6 Set the handset language

- Press ☰/OK and △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK and △/▽ to select **"LANGUAGE"**.
- Press ☰/OK and △/▽ to select the desired language.
- Press ☰/OK to confirm.

10.3.7 Rename the handset

- Press ☰/OK and △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK and △/▽ to select **"HANDSET NAME"**.
- Press ☰/OK and change the name of your handset, using to delete letters and the alphanumeric keys to enter up to 10 letters for the name.
- Press ☰/OK to confirm the new name to be shown on the idle screen.

10.3.8 Set the auto answer

If you turn on the Auto Answer, you can answer a call automatically by just lifting the handset off the base or charger, without having to press any key.

- Press ☰/OK and △/▽ to select **"HS SETTINGS"**.
- Press ☰/OK and △/▽ to select **"AUTO ANSWER"**.
- Press ☰/OK and △/▽ to turn on or off the auto answer feature.
- Press ☰/OK to confirm.

10.4 Base Settings

10.4.1 De-register a handset

This operation should only be necessary if one of your handsets becomes faulty or lost and needs to be replaced. You will need to enter the 4-digit System PIN (Default PIN is 0000) in order to de-register a handset from the base station. A de-registered handset will have Register handset on the display.

Note:
You cannot de-register the handset that you are currently using.

- Press ☰/OK and then △/▽ to select **"BS SETTINGS"**.
- Press ☰/OK to show **"DELETE HANDSET"**.
- Press ☰/OK and the display shows **"ENTER PIN"**.
- Enter the 4-digit system PIN.
- Press ☰/OK and the first handset number is displayed.
- Press △/▽ to scroll through the list of registered handsets and select the number of the handset you want to de-register.
- Press ☰/OK to confirm, and the chosen handset will be de-registered.

10.4.2 Change the Flash time

You may need to change the flash time if your phone is connected to a PBX (Private Exchange) that requires a different recall timing. The flash time options are **Short** (the default value of 100ms), **Mid** (300ms) or **Long** (600ms).

- Press ☰/OK and then △/▽ to select **"BS SETTINGS"**.
- Press ☰/OK and then △/▽ to select **"FLASH TIME"**.
- Press ☰/OK and then △/▽ to select your desired flash time (**SHORT**, **MID**, **LONG**, with the current setting indicated by an asterisk to the right).
- Press ☰/OK to confirm the setting.

10.4.3 Change the system PIN code

A 4-digit system PIN code is used for changing the system settings of the base station. It is used to protect your phone against unauthorised use. The default system PIN code is **0000**.

- Press ☰/OK and then △/▽ to select **"BS SETTINGS"**.
- Press ☰/OK and then △/▽ to select **"CHANGE PIN"**.
- Press ☰/OK to display **"OLD PIN?"**
- Enter the old system PIN.
- Press ☰/OK to show **"NEW PIN?"**, and enter your new system PIN.
- Press ☰/OK to show **"CONFIRM?"**, and enter your new system PIN again.
- Press ☰/OK to confirm your new PIN.

10.5 Registration

Important:
When you purchase your phone system, all handsets are already registered to your base, so you do not need to register them.
Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.
You can register additional handsets to have up to five handsets per base unit, with each handset's number (1 to 5) shown on its display.

Note:
Each handset can only be registered to one base.

To register a new handset to your base:
- Press and hold •)) on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
- Press ☰/OK and △/▽ to select **"REGISTRATION"**.
- Press ☰/OK to display **"ENTER PIN"**.
- Enter the 4-digit system PIN (default 0000).
- Press ☰/OK to confirm, and the display will flash **"PLEASE WAIT"**.

If the handset registration is successful, you will hear a confirmation tone and the display will go to idle mode with the new handset number shown. The handset will automatically be allocated the next available handset number.
- If the handset registration is unsuccessful, the display will return to show **"REGISTER HANDSET"**.

10.6 Reset your phone

You can reset your phone to the default settings . After a reset, all your personal settings, call list entries and redial list entries will be deleted but your phonebook remains unchanged.
- Press ☰/OK and △/▽ to select **"RESET"**.
- Press ☰/OK to display **"ENTER PIN"**.
- Enter the 4-digit system PIN (default 0000).
- Press ☰/OK to display **"CONFIRM?"**
- Press ☰/OK to confirm, and the phone will be reset to its default settings.

11 TROUBLESHOOTING

Problem	Causes	Solutions
No dialling tone when pressing (	• The connection cord of the base station is not plugged in. • The adapter cord is not plugged in correctly in the base station. • Another handset is using the base to make a call. • Wrong telephone line cord.	• Check the connections. Unplug and plug back in the mains. Check that the telephone cord has been plugged into the base station and the phone socket. • Check the base station plug and the 230V plug (remove and plug-in). • Wait until the line is unoccupied.
When connect to a PBX, no and/or wrong connection after dialling.	Dialling prefix is needed.	Insert the dialling prefix.
"OUT OF RANGE" is displayed.	• Base station out of range. • Base station not connected to mains.	• Reduce the range. • Connect base station to mains.
The call does not work.	Service not activated or wrong operator or wrong setting.	Check your subscription with network.
No Display	Empty Battery	Recharge Battery

12 GUARANTEE AND SERVICE

The phone is guaranteed for 24 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, faults on the telephone line, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

Please keep your sales (till) receipt this is your proof of guarantee.

12.1 While the unit is under Guarantee

- Disconnect the base unit from the telephone line and the mains electricity supply.
- Pack up all parts of your phone system, using the original package.
- Return the unit to the shop where you bought it, making sure you take your sales receipt.
- Remember to include the mains adapter.

12.2 After the Guarantee has expired

If the unit is no longer under Guarantee, contact us via
www.aegtelephones.eu

This product works with rechargeable batteries only. If you put nonrechargeable batteries in the handset and place it on the base, the handset will be damaged and this in NOT covered under the warranty conditions.

13 TECHNICAL DETAILS

Standard	Digital Enhanced Cordless (DECT)
Frequency range	1.88 to 1.9 GHz (bandwidth = 20 MHz)
Channel bandwidth	1.728 MHz
Operating range	Up to 300m outdoors; Up to 50m indoors
Operating time	Standby: 100 hours, Talking: 10 hours Battery charge time: 15 hours
Temperature range	Operating 0° C to 40° C, Storage -20° C to 60° C
Electrical power	Base: S003IB0600045 / S003IV0600045 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA VT04EEU06045 / VT04EUK06045 input 100-240VAC 50/60Hz 150mA, output 6VDC 450mA Battery information: Type Ni-MH (Rechargeable battery) Voltage Rating 400mAh, 2 X 1.2V AAA Size

Caution
Risk of explosion if batteries are replaced by an incorrect type
Dispose of used batteries according to the instructions.
Use only batteries and power adaptors listed above.

Port specifications:
The port (connected to the mains power supply) is a SELV port with respect to EN41003.
The port (connected to the telephone line) is a TNV port with respect to EN41003.

14 CE DECLARATION CE

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.
The Declaration of conformity can be found on:
www.aegtelephones.eu

15 DISPOSAL OF THE DEVICE (ENVIRONMENT)



At the end of the product lifecycle, you should not throw this product into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipments. The symbol on the product, user guide and/or box indicate this. Some of the product materials can be re-used if you bring them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area.
Batteries must be removed before disposing of the device. Dispose of the batteries in an environmental manner according to your country regulations.

16 CLEANING AND CARE

Do not clean any part of your phone with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the Guarantee.
When necessary, clean it with a damp cloth.
Keep your phone system away from **hot, humid conditions or strong sunlight,** and **don't let it get wet.**

© 2014 Binatone Electronics International Limited

All rights reserved
Subject to availability. Rights of modification reserved.
AEG is a registered trademark used under
license from AB Electrolux (publ)

www.aegtelephones.eu