
QUICK GUIDE

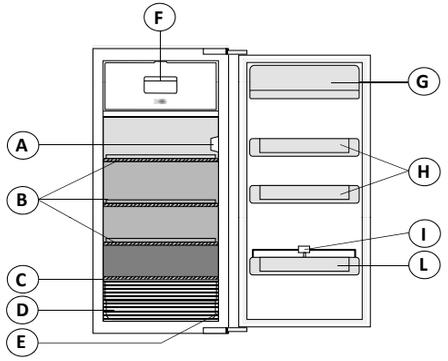

A. Thermostat unit with light
B. Shelves
C. Level covering the fruit and vegetable drawer
D. Fruit and vegetable drawer
E. Rating plate (placed on the side of the fruit and vegetable drawer)
F. Freezer compartment (if the refrigerator has one)
G and H. Door shelves
I. Bottle holder (if provided)
L. Bottle shelf

Least cold zone
Medium zone
Coldest zone
Fruit & vegetable zone


Note: The drawer, door shelves and shelves can be removed.

The ideal food storage temperatures are already factory-set.

Read the instructions supplied with the refrigerator carefully before using it. Features, technical data and images may vary according to the model.

Freezing fresh food
(if the refrigerator has a freezer compartment)
Place the fresh food to be frozen at the bottom of the freezer compartment.
The freezing will be complete after 24 hours.

Reference mark for the thermostat position

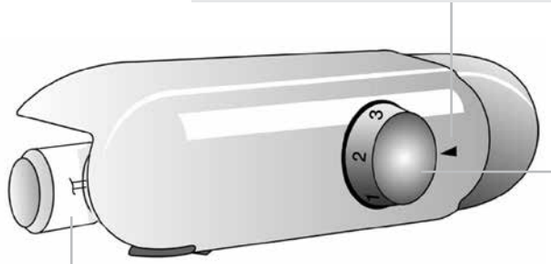

Light bulb/LED light bulb

Freezer and refrigerator compartment temperature
This refrigerator/freezer is operated using the thermostat unit situated inside the refrigerator compartment.

The temperature of both compartments is regulated by turning the thermostat control knob.

Thermostat on **1/2: the temperature is less cold**
Thermostat from **3/5: medium temperature**
Thermostat on **6/7: the temperature is colder**

If you position the thermostat control knob to • the whole refrigerator will turn off.

What to do if ...	Possible reasons	Solution
The appliance is not working.	There may be a problem with the power supply to the appliance.	Check that: • there is no power outage • the plug is correctly inserted into the socket and the double-pole mains power switch, if there is one, is in the correct position • the protective relays for the electrical system for the house are working • the power cable is not broken • the thermostat control knob is not in the "•" position
The inside light does not work.	It may be necessary to replace the light bulb.	Disconnect the appliance from the power supply, check the light bulb and replace it with a new one if necessary (see the section "Replacing the light bulb" in the instructions for use).
The internal temperature of the compartments is not cold enough.	There are various possible causes (see the "Solution" column).	Check that: • the doors are closed properly • the appliance is not installed near a heat source • the temperature is appropriately set • the circulation of air through the ventilation grilles on the base of the appliance is not obstructed (see the installation manual).
There is water on the bottom of the refrigerator compartment.	The defrosting water drain is blocked.	Clean the defrosting water drain hole (see the section "Maintaining and cleaning the appliance" in the instructions for use).
Excessive amount of frost in the freezer compartment.	The door to the freezer compartment is not closed properly.	- Check that there is nothing preventing the door from closing properly - Defrost the freezer compartment - Make sure the refrigerator has been correctly installed
The temperature of the refrigerator compartment is too cold.	- The set temperature is too cold. - A large amount of fresh food may have been placed in the freezer compartment.	- Try to set a less cold temperature - If fresh food has been put in the freezer compartment, wait until the freezing has been completed

Note: some noises, such as gurgles and hissing, caused by the refrigeration system, are normal.