在以下網站註冊并獲得支持
www.philips.com/welcome


BHC199



EN User manual

ZH-TW 使用手冊

PHILIPS

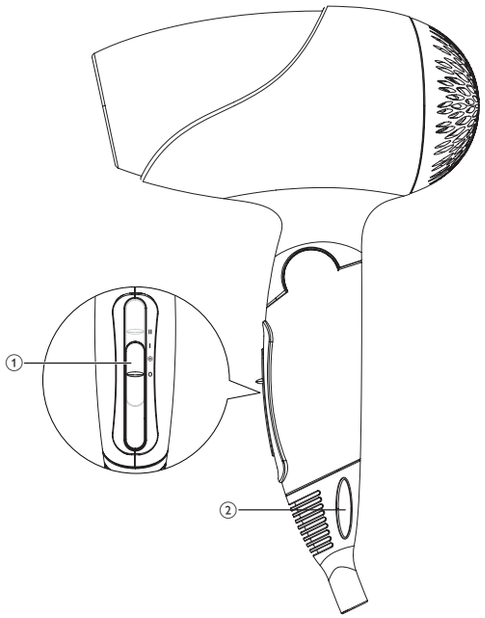

Specifications are subject to change without notice
© 2015 Koninklijke Philips N.V.
All rights reserved.

3140 035 41651

English

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

Read this user manual carefully before you use the appliance and keep it for future reference.

- WARNING: Do not use this appliance near water.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



- Always unplug the appliance after use.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Do not insert metal objects into the air grilles to avoid electric shock.
- Never block the air grilles.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- Do not use the appliance on artificial hair.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Electromagnetic fields (EMF)

This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.



2 Introduction

The new Philips KidCare hair dryer is specially designed for children over three years old to have reassuring scalp and hair drying. Thanks to ThermoProtect setting, super low EMF (Electromagnetic Field) and low noise only for kids, the dryer provides extra safe and more health. It also equips with 800W drying powers, ensure extra-soft airflow for really comfortable drying experience.


3 Dry your hair

1 Connect the plug to a power supply socket.
2 Adjust the airflow switch (①) according to your preference.

Setting	Temperature and speed	Good for:
II	Hot airflow	Fast drying for kids
I	Warm airflow ThermoProtect for Kids	Gentle and careful drying for kids
❄	Cool airflow with environment temperature	Comfortable drying in hot seasons

↳ When the appliance is powered on, ions are automatically and continuously dispensed, reducing frizz and providing additional shine.

3 Switch to ○ to switch off the appliance.

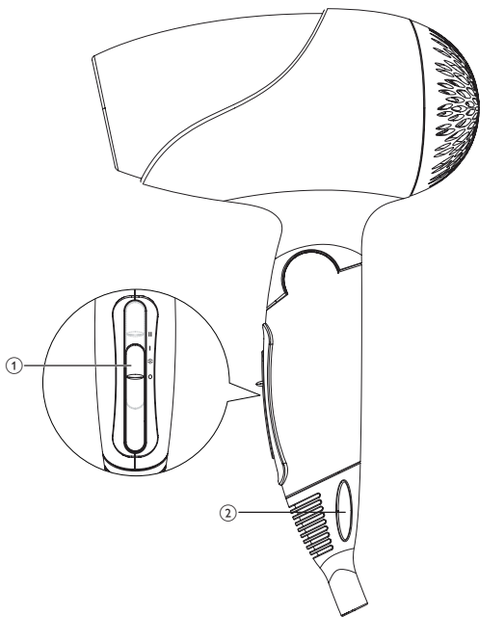

After use:

1 Switch off the appliance and unplug it.
2 Place it on a heat-resistant surface until it cools down.
3 Clean the appliance with damp cloth.
4 Keep it in a safe and dry place, free of dust. You can also hang it with the easy storage hook (②).

4 Guarantee and service

If you need information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com/support or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country, go to your local Philips dealer.

繁體中文

感謝您購買本產品。歡迎來到飛利浦的世界！
請至 www.philips.com/welcome 註冊您的產品，以獲得飛利浦提供的完整支援。

1 重要事項

使用本產品前，請先仔細閱讀本使用手冊，並保留說明以供日後參考。

- 警告：請勿在靠近水的地方使用本產品。
- 在浴室使用完本產品，請將插頭拔除，因為即使產品電源關閉，與水接觸還是可能發生危險。
- 警告：使用本產品時，切勿靠近浴缸、淋浴間、臉盆或其他盛水的容器。



- 用完本產品後，請務必將插頭拔掉。
- 本產品過熱時，會自動斷電。拔出產品插頭，待產品冷卻幾分鐘。在您重新開啟本產品前，請檢查進風柵口，確定沒有被毛絮或毛髮等阻塞。
- 如果電線損壞，則必須交由飛利浦、飛利浦授權之服務中心，或是具備相同資格的技師更換，以免發生危險。
- 本產品可供 8 歲以上孩童、身體官能或心智能力退化者，或是經驗與使用知識缺乏者使用，但需要有人在旁監督或適當指示如何安全使用本產品，以及可能遭受的危險。請勿讓孩童把玩本產品。若無人在旁監督，不得讓孩童清潔與維護產品。
- 為了加強安全，建議在通向浴室的電流迴路上 安裝 30 毫安培以下的漏電斷路器 (RCD)。請洽詢合格的水電技術人員。
- 請勿將金屬物品插入風口，以避免觸電。
- 不可阻塞進風柵口。
- 在您連接電源之前，請確認本地的電壓與產品所標示的電源電壓相符。
- 請勿將本產品用於本手冊所述之外的任何其他用途。
- 請勿在假髮上使用本產品。
- 在無人看管的情況下，請將本產品的插頭拔除。
- 請勿使用其他製造商的任何配件或零件，或非由飛利浦建議之配件或零件。如果您使用此類配件或零件，保固即會失效。
- 請勿將電線纏繞在本產品上。
- 在進行收納之前，請先等候本產品完全冷卻。
- 使用後切勿拉扯電源線。拔除產品插頭時請務必抓住插頭。

電磁波 (EMF)

本飛利浦產品符合所有電磁場暴露的相關適用標準和法規。

環境保護

本產品使用壽命結束時，請勿與一般家庭廢棄物一併丟棄。請將該產品送至政府指定的回收點進行回收。此舉能為環保盡一份心力。



2 簡介

全新飛利浦 KidCare 吹風機專為三歲以上兒童設計，吹乾頭髮的同時也保護頭皮健康。這款兒童專用吹風機配有 ThermoProtect 設定、超低 EMF (電磁波) 及低噪音設計，更加安全，格外健康。搭配 800W 吹整功率，確保超級柔護風力帶來真正舒適的吹整體驗。

3 吹乾頭髮

1 將插頭接上電源插座。
2 根據您的喜好調整風量開關 (①)。

設定	溫度和風速	適合：
II	熱風	迅速吹乾孩子的頭髮
I	適合孩子的溫控護髮暖風	溫柔吹整孩子的頭髮，加倍呵護
❄	室溫冷風	熱天的舒適吹整體驗

↳ 當產品電源開啟時，即會持續自動釋放負離子，減少毛躁並為秀髮增添更多光彩。

3 切換至 ○ 可關閉產品。

使用後：

1 關閉產品電源，並拔除插頭。
2 將本產品放在耐熱的平面上，直到冷卻為止。
3 用微濕的布清潔本產品。
4 將產品置於安全乾燥處，避免沾染灰塵。也可以使用簡易收納掛環 (②) 將產品掛起。

4 保固與服務

若您需要相關資訊 (如配件更換) 或有任何問題，請瀏覽飛利浦網站 www.philips.com/support，或聯絡您當地的飛利浦客戶服務中心 (您可以在全球保證書上找到聯絡電話)。若當地沒有客戶服務中心，請洽詢當地的飛利浦經銷商。