SAMSUNG

HW-J6000R
HW-J6001R

User manual

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at
www.samsung.com/register

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION **RISK OF ELECTRIC SHOCK. DO NOT OPEN.**	 This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.
	 This symbol indicates that important literature concerning operation and maintenance has been included with this product.

	Class II product : This symbol indicates that it does not require a safety connection to electrical earth (ground).
	AC voltage : This symbol indicates that the rated voltage marked with the symbol is AC voltage.
	DC voltage : This symbol indicates that the rated voltage marked with the symbol is DC voltage.
	Caution, Consult instructions for use : This symbol instructs the user to consult the user manual for further safety related information.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

PRECAUTIONS

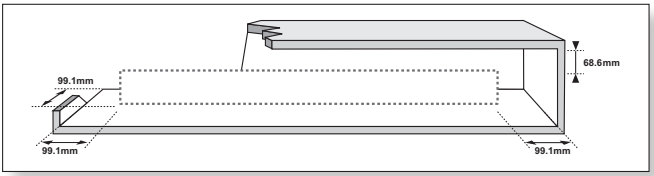

Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7~10 cm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

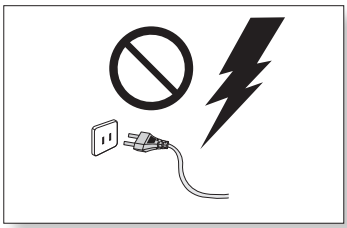

During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

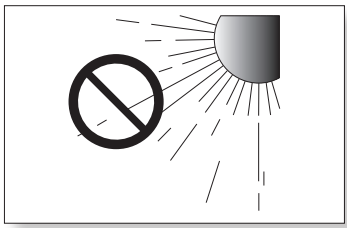

Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and cause the unit to malfunction.

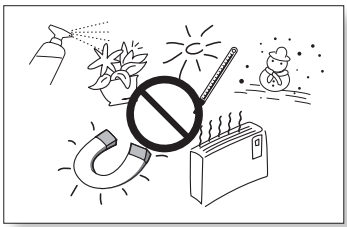

Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only. Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

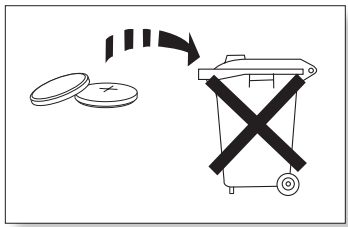

The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash. Do not dispose of batteries in a fire. Do not short circuit, disassemble, or overheat the batteries. There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING: DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD. The remote control supplied withthis product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CONTENTS

2 GETTING STARTED

2 Safety Information

5 What's Included

6 DESCRIPTIONS

6 Top / Front Panel

7 Rear / Bottom Panel

8 Remote Control

11 INSTALLATION

11 Installing the Soundbar

11 Installing the Wall Mount

14 Placing the Soundbar on a TV stand

14 Installing the Soundbar as a Free-Standing Unit

15 CONNECTIONS

15 Connecting the Subwoofer

17 Connecting the SWA-8000S (Sold Separately)

19 Connecting to a TV

19 Connecting to a TV Using an HDMI (Digital) Cable

20 Connecting to a TV Using a Digital Optical Cable

20 TV SoundConnect

22 Connecting to External Devices

22 HDMI Cable

22 Optical or Analogue Audio Cable

23 USB

25 FUNCTIONS

25 Input Mode

26 Bluetooth

29 Software Update

31 TROUBLESHOOTING

31 Troubleshooting

32 APPENDIX

32 Specifications

- Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.
- An administration fee may be charged if either
  (a) an engineer is called out at your request and there is no defect with the product (i.e. where the user manual has not been read).
  (b) you bring the unit to a repair centre and there is no defect with the product (i.e. where the user manual has not been read).
- You will be informed of the administration fee amount before a technician visits.

WHAT'S INCLUDED

BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

► Icons used in this manual

Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be cancelled.
	Note	Indicates tips or instructions on the page that help you operate a function.

Check for the supplied accessories shown below.



Remote Control / Lithium Battery (3V : CR2032)



Power Cord : 2 EA



AC/DC Adapter



HDMI Cable



Bracket-Wall : 2 EA



Wall Mount Guide



Holder-Fix Mount : 2 EA

- The appearance of the accessories may differ slightly from the illustrations above.

TOP / FRONT PANEL

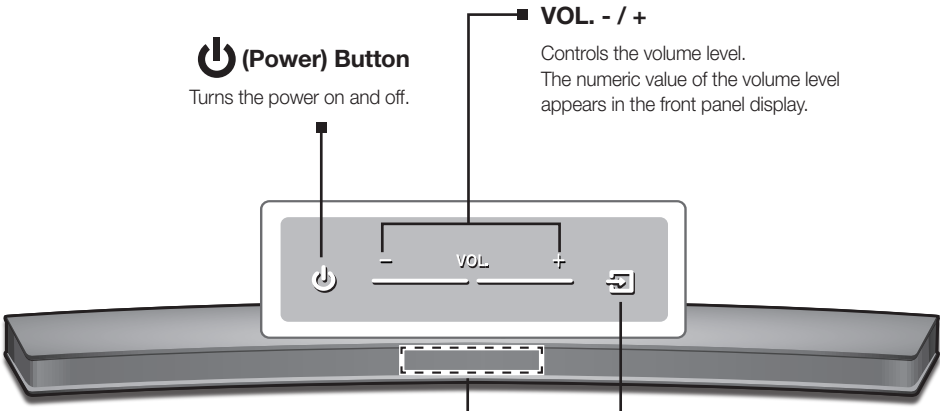

- When you plug in the AC cord, the power button will begin working in 4 to 6 seconds.
- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.
- If you want to enjoy sound only from the Soundbar, you must turn off the TV's speakers in the Audio Setup menu of your TV. Refer to the owner's manual supplied with your TV.

REAR / BOTTOM PANEL

AUX IN

Connect to the Analogue output of an external device.

HDMI IN

Inputs digital video and audio signals simultaneously using an HDMI cable. Use when connecting a supported external device.

OPTICAL IN (D.IN)

Connect to the digital (optical) output of an external device.

HDMI OUT (TV-ARC)

Outputs digital video and audio signals simultaneously using an HDMI cable.

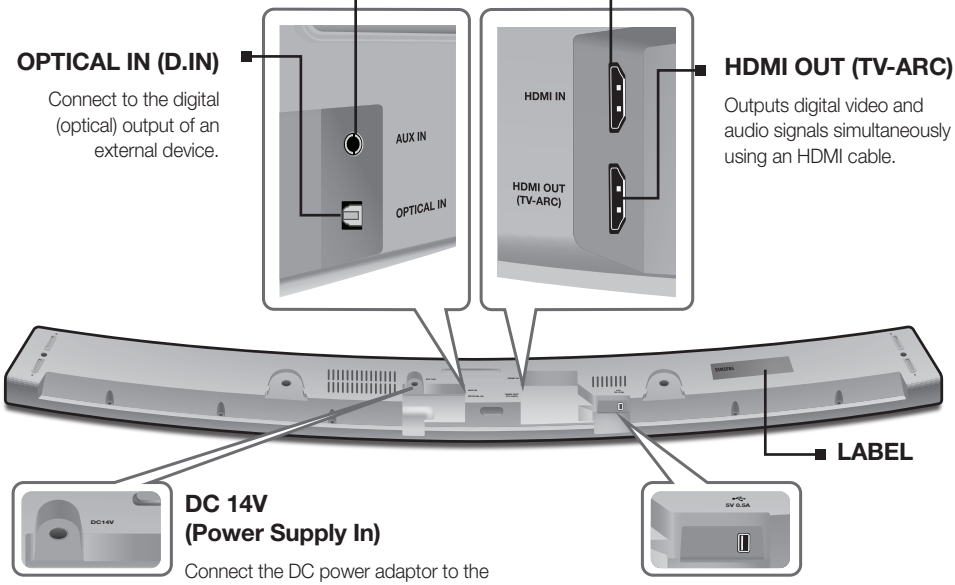

DC 14V (Power Supply In)

Connect the DC power adaptor to the power supply jack, and then connect the AC power adaptor plug to a wall outlet.

(USB Port)

Connect USB devices here to play files on the devices.

- When disconnecting the power cable of the AC power adaptor from a wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.
- Make sure to rest the AC/DC Adapter flat on a table or the floor. If you place the AC/DC Adapter so that it is hanging with the AC cord input facing upwards, water or other foreign substances could enter the Adapter and cause the Adapter to malfunction.

REMOTE CONTROL

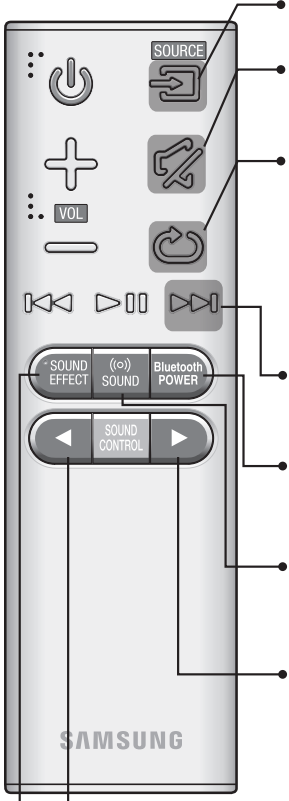

SOURCE

Press to select a source connected to the Soundbar.

Mute

You can turn the volume down to 0 with the push of a button.
Press again to restore the sound to the previous volume level.

Repeat

Press to set the Repeat function during music playback from a USB device.

OFF - REPEAT : Cancels Repeat Playback.

TRACK - REPEAT : Plays a track repeatedly.

ALL - REPEAT : Plays all tracks repeatedly.

RANDOM - REPEAT : Plays tracks in random order.
(A track that has already been played may be played again.)

Skip Forward

If there is more than one file on the device you are playing, and you press the ⏭ button, the next file is selected.

Bluetooth POWER

Press the **Bluetooth POWER** button on the remote to turn the Bluetooth POWER On function on and off. See pages 21 and 27 for details.

((o)) SOUND

Surround Sound adds depth and spaciousness to the sound. Pressing the **((o)) SOUND** button repeatedly cycles through the Surround Sound settings :
ON - SURROUND SOUND, **OFF - SURROUND SOUND**

Press and hold the ▶ button for about 5 seconds to turn the Anynet+ function on or off.

OFF - ANYNET+, ON - ANYNET+

The Anynet+ function lets you control the Soundbar with the remote from an Anynet+ compatible Samsung TV.
The Soundbar must be connected to the TV via an HDMI cable.

Press and hold the ◀ button for about 5 seconds to turn the Auto Power Link function on or off.

OFF - POWER LINK, ON - POWER LINK

* Auto Power Link
Synchronizes the Soundbar to a connected Optical source via the Optical jack so it turns on automatically when you turn on your TV. (See page 20)
Auto Power Link function is only available in the **D.IN** mode.

SOUND EFFECT

You can select from 6 different sound modes - **STANDARD (Original Sound), MUSIC, CLEAR VOICE, SPORTS, MOVIE**, and **NIGHT MODE** - depending on the content you want to listen to.

Select the **STANDARD** mode if you want to enjoy the original sound.

*** DRC (Dynamic Range Control)**

Lets you apply dynamic range control to Dolby Digital.
Press and hold the **SOUND EFFECT** button for about 5 seconds in STANDBY mode to turn the DRC (Dynamic Range Control) function on or off.

Power

Turns the Soundbar on and off.

Volume

Adjusts the volume level of the unit.

Play / Pause

Press the ▶II button to pause a file temporarily.
Press the ▶II button again to play the selected file.

Skip Back

If there is more than one file on the device you are playing, and you press the I◀◀ button, the previous file is selected.

SOUND CONTROL

Press to select **TREBLE**, **BASS**, **SUBWOOFER LEVEL**, **AUDIO SYNC**, **REAR SPEAKER**, or **REAR LEVEL**.

Then, use the ◀, ▶ buttons to adjust the **TREBLE** or **BASS** volume from -6 ~ +6, **SUBWOOFER LEVEL** volume from -12, -6 ~ +6.

Press and hold the **SOUND CONTROL** button for about 5 seconds to adjust the sound for each frequency band. 150Hz, 300Hz, 600Hz, 1.2KHz, 2.5KHz, 5KHz and 10KHz are selectable and each can be adjusted to a setting between -6 ~ +6.

If the Soundbar is connected to a digital TV and the video appears out of sync with the audio, press the **SOUND CONTROL** button to sync the audio with the video. Use the ◀, ▶ buttons to set the audio delay between 0 ms ~ 300 ms. In USB mode, TV mode, and BT mode, the Audio Sync function may not available.

To turn on or off of the rear speaker sound, select **REAR SPEAKER** in Sound Control, and then adjust the volume between OFF-RS and ON-RS by using the ◀, ▶ buttons.

To control the volume of the rear level sound, select **REAR LEVEL** in Sound Control, and then adjust the volume between RS -6~+6 by using the ◀, ▶ buttons.

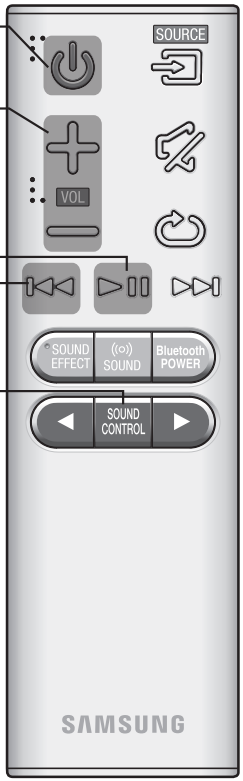

- The **REAR SPEAKER** and the **REAR LEVEL** mode are only available when you connect the SWA-8000S (sold separately).
  - If the SWA-8000S is disconnected, **REAR SPEAKER** and **REAR LEVEL** remain displayed but the functions are not available.
- Operate the TV using the TV's remote control.

► Controlling the Soundbar using Your TV Remote Control

1. Press and hold the ((○)) **SOUND** button for more than 5 seconds while the Soundbar is turned on.
2. "ON - TV REMOTE" appears on the Soundbar's display.
3. In the TV's menu, set the TV speaker to external speaker.

- Not available if the TV ARC function or **HDMI** mode is in use.
- All buttons are not available except the **VOL +/-** and the (Mute) buttons in this function.
- TV menus differ by manufacturer and model. Refer to the TV's user manual for further information.
- Manufacturers supporting this function:
  - VIZIO, LG, Sony, Sharp, PHILIPS, PANASONIC, TOSHIBA, GRUNDIG, Hisense, RCA
  - This function may not be compatible with your TV's remote depending on the remote control's manufacturer.
- To turn off this function, press the ((○)) **SOUND** button for 5 seconds.
  "OFF - TV REMOTE" appears on the Soundbar's display.

INSTALLING THE BATTERY IN THE REMOTE CONTROL

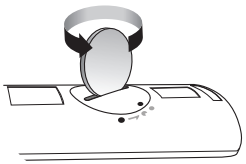

1. Use a suitable coin to turn the remote control's battery cover counterclockwise to remove it as shown in the figure above.

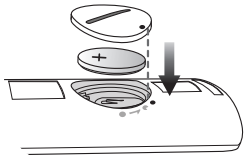

2. Insert a 3V lithium battery. Keep the positive (+) pole facing up when inserting the battery. Put the battery cover on and align the '●' marks side by side as shown in the figure above.

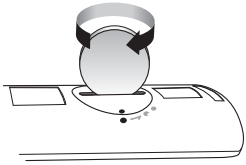

3. Use a suitable coin to turn the remote control battery cover clockwise as far as it will go to fix it in place.

INSTALLING THE SOUNDBAR

INSTALLING THE WALL MOUNT

► Installation Precautions

- Install on a vertical wall only.
- For the installation, avoid a location with high temperature or humidity, or a wall that cannot sustain the weight of the set.
- Check the strength of the wall. If the wall is not strong enough to support the unit, reinforce the wall or install the unit on a different wall that can support the unit's weight.
- Purchase and use the fixing screws or anchors appropriate for the kind of wall you have (plaster board, iron board, wood, etc.). If possible, fix the support screws into wall studs.
- Purchase wall mounting screws according to the type and thickness of the wall you will mount the Soundbar on.
  - Diameter : M5
  - Length: 35 mm or longer recommended.
- Connect cables from the unit to external devices before you install it on the wall.
- Make sure the unit is turned off and unplugged before you install it. Otherwise, it may cause an electric shock.

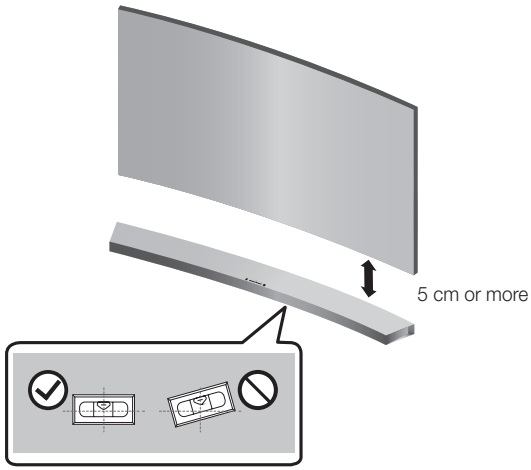

1. Place the installation guide against the wall surface.
   - The installation guide must be level.
   - If the TV is mounted on the wall, install the Soundbar at least 5 cm below the TV.

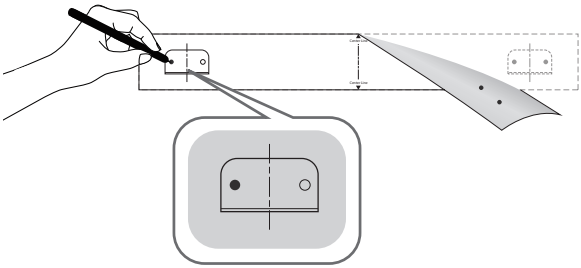

2. Mark the location where the screws will go through on the wall, and then remove the installation guide. Next, drill holes for the screws using an appropriately sized drill bit.

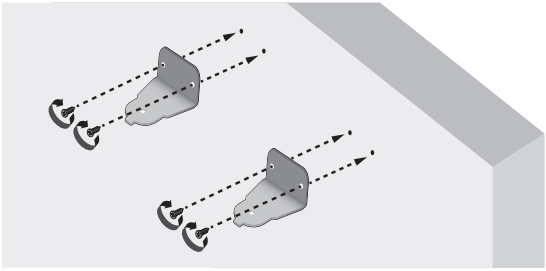

3. Fasten the 2 **Bracket-Wall** pieces firmly to the wall at the marked locations using the appropriate screws.

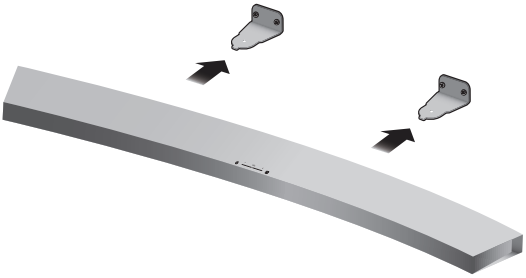

4. Attach the Soundbar to the 2 **Bracket-Wall** pieces as shown in the illustration.

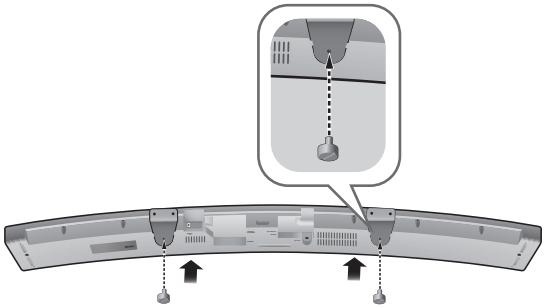

5. Insert a **Holder-Fix Mount** into each hole on the product's bottom side. Tighten each **Holder-Fix Mount** to fix the Soundbar to the 2 **Bracket-Wall** pieces.

- Do not hang onto the installed unit and avoid striking or dropping the unit.
- Secure the unit firmly to the wall so that it does not fall off. If the unit falls off, it may cause an injury or damage the product.
- When the unit is installed on a wall, please make sure that children do not pull any of the connecting cables, as this may cause it to fall.
- For the optimal performance of a wall mount installation, install the speaker system at least 5 cm below the TV, if the TV is mounted on the wall.
- For your safety, if you do not mount the unit on the wall, install it on a secure, flat surface where it is unlikely to fall.

PLACING THE SOUNDBAR ON A TV STAND

Place the Soundbar on a TV stand.



1. Align the Soundbar's centre with the centre of the base of the TV, and then carefully push it onto the stand as far as it will go, as shown in the illustration. Be careful not to unbalance the TV.

INSTALLING THE SOUNDBAR AS A FREE-STANDING UNIT



1. Centre the Soundbar on the flat area in front of the TV.

- Install it on a level and firm surface.

- Do not connect the power cord of this product or your TV to a wall outlet until all connections between components are complete.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord.

CONNECTING THE SUBWOOFER

CONNECTING TO THE SUBWOOFER AUTOMATICALLY

The Subwoofer's linking ID is preset at the factory and the main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on.

- When the subwoofer is completely connected, the blue LED Link Indicator on the subwoofer stops blinking and glows continuously.

CONNECTING TO THE SUBWOOFER MANUALLY

If the blue LED light does not stop blinking when the main unit and subwoofer are turned on, please set the ID by following the steps below.

- Important: Before you begin, put the battery into the remote. See page 10 for instructions.

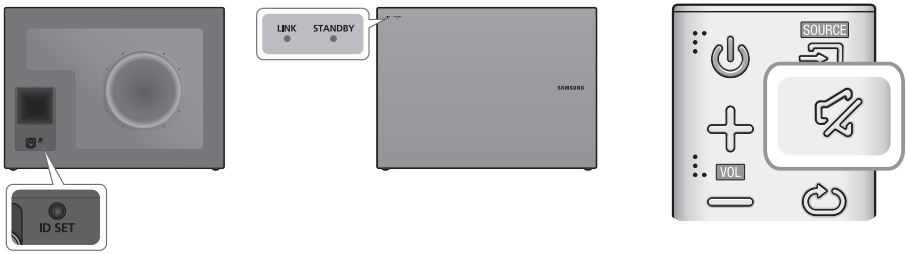

1. Plug the power cords of the main unit and subwoofer into an AC wall outlet.
2. Press the **ID SET** button on the back of the subwoofer with a small, pointed object for 5 seconds.
   - The STANDBY indicator turns off and the LINK indicator (Blue LED) blinks quickly.
3. While the main unit is powered off (in STANDBY mode), press and hold the (Mute) on the remote control for 5 seconds.
4. The **ID SET** message appears on the Soundbar's display.
5. To finalise the link, turn the main unit's power on while the subwoofer's Blue LED blinks.
   - The main unit and the subwoofer should now be linked (connected).
   - The LINK indicator (Blue LED) on the subwoofer should be glowing continuously and not blinking.
   - If the LINK indicator is not solid blue, the linking process has failed. Turn off the main unit and start again from Step 2.
   - You can enjoy better sound from the wireless subwoofer by selecting a Sound Effect. (See page 8)

- Before moving or installing the product, be sure to turn off the power and disconnect the power cord.
- If the main unit is powered off, the wireless subwoofer will in standy mode and the STANDBY LED on the front will blink Red directly. (no blue LED).
- If you use a device that uses the same frequency (2.4GHz) as the Soundbar near the Soundbar, interference may cause some sound interruption.
- The maximum transmission distance of the wireless signal between the main unit and subwoofer is about 10 meters, but may vary depending on your operating environment. If a steel-concrete or metallic wall is between the main unit and the wireless subwoofer, the system may not operate at all, because the wireless signal cannot penetrate metal.
- If the main unit doesn't make a wireless connection, follow steps 1-5 on the previous page to re-set the connection between the main unit and wireless subwoofer.

- The wireless receiving antenna is built into the wireless subwoofer. Keep the unit away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless subwoofer location is clear of any obstructions.

LED INDICATOR LAMP STATUS ON SUBWOOFER

LED	Status	Description	Resolution
Red	On	Standby (with the Soundbar main unit turned off)	Check the power supply to the Soundbar main unit
		Connection failed	Connect again (refer to the instructions on manual connection in the user manual)
Blue	On	Successfully connected (normal operation)	-
	Blinking	Standby (with the Soundbar main unit turned off)	Check the power supply to the Soundbar main unit
		Connection failed	Connect again (refer to the instructions on manual connection in the user manual)
Red and blue	Blinking	Malfunction	Contact the service centre.

CONNECTING THE SWA-8000S (SOLD SEPARATELY)

- Expand to true wireless surround sound by connecting the Samsung Wireless Rear Speaker Kit (SWA-8000S) to your Soundbar. (Sold separately)
- Before connecting to the Wireless Receiver Module, connect your subwoofer first.
- Use the speaker cable to connect the wireless receiver module to the speakers.
- Plug the power cable into a power outlet. The LED turns on.

1. While the main unit is powered off (in STANDBY mode), press and hold the (Mute) on the remote control for 5 seconds.
2. The **ID SET** message appears on the Soundbar's display.
3. Plug the power cord of the Wireless Receiver Module (SWA-8000S) into an AC wall outlet.
4. Turn on your Soundbar when the link indicator (Blue LED) on the SWA-8000S flickers fast.
5. When the link indicators (Blue LEDs) on your subwoofer and the SWA-8000S flash and then glow continuously, the SWA-8000S is completely connected.

- This may take a few minutes.
- Once connected, your Soundbar and the Wireless Receiver Module are automatically reconnected even after you turned them off and then on.

If the Wireless Receiver Module is not linked to your Soundbar (displaying the LED indicator in Red), connect them as follows.

1. Turn off your Soundbar.
2. Press the (Mute) button on your remote control for 5~6 seconds until the ID SET message appears on your Soundbar display.
3. Check the Wireless Receiver Module is in Standby status (displaying the LED indicator in Red).
4. Press the **ID SET** button on the back with a sharp pin for 5~6 seconds until the LINK LED indicator on the Wireless Receiver Module blinks (in Blue).
5. Turn on your Soundbar with the button on your remote control and wait for a while. They are completely connected to each other if you can see the LINK LED indicator is continuously lit (in Blue).

CONNECTING THE SURROUND SPEAKERS (SOLD SEPARATELY)

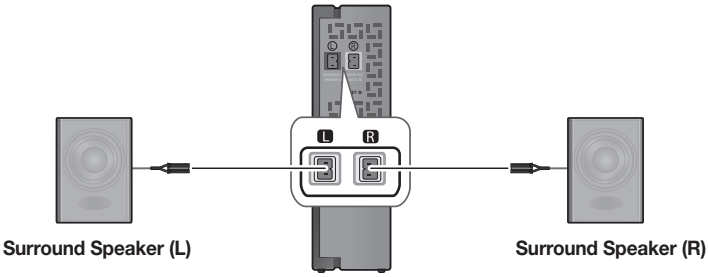

- Place these speakers to the side of your listening position. If there isn't enough room, place these speakers so they face each other. Position them about 60 to 90 cm above your ear, facing slightly downward.

- Use the speaker cable to connect the Wireless Receiver Module to the Surround Speakers.
- Each speaker has a coloured label on its back or underside. Each cable has a single coloured band near its end. Match the band on each cable to the speaker label by colour, and then connect the cable to the speaker.

CONNECTING TO A TV

- Important: Before you begin, put the battery into the remote. See page 10 for instructions.

CONNECTING TO A TV USING AN HDMI (DIGITAL) CABLE

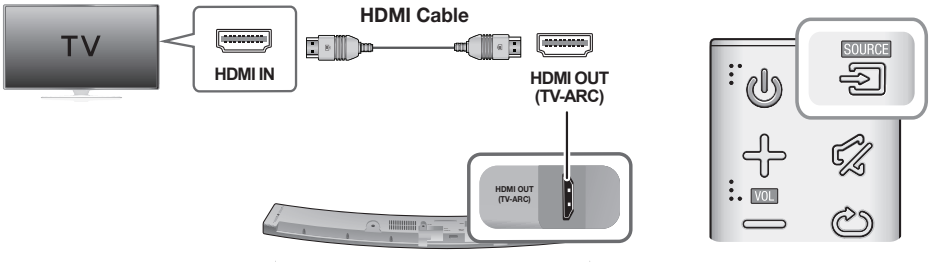

1. Connect an HDMI cable from the **HDMI OUT (TV-ARC)** jack on the back of the product to the HDMI IN jack on your TV.
2. Press the button on the top panel of the Soundbar or the **SOURCE** button on the remote control to select the **D.IN** mode.

- HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.
- If the TV provides an ARC port, connect the HDMI cable to the HDMI IN (ARC) port.
- We recommend you use a coreless HDMI cable if possible. If you use a cored HDMI cable, use one whose diameter is less than 14 mm.
- Anynet+ must be turned on.
- This function is not available if the HDMI cable does not support ARC.

CONNECTING TO A TV USING A DIGITAL OPTICAL CABLE

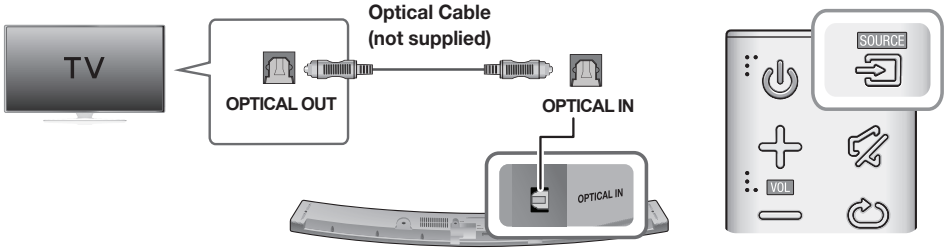

1. Connect the **OPTICAL IN** (Audio) jack on the Soundbar to the OPTICAL OUT jack of the TV with a digital optical cable.
2. Press the ⏎ button on the top panel of the Soundbar or the **SOURCE** button on the remote control to select the **D.IN** mode.

► Auto Power Link

If you have connected the main unit to a TV with a digital optical cable, you can set the Auto Power function ON to have the Soundbar turn on automatically when you turn the TV on.

1. Connect the Soundbar and a TV with a digital optical cable (not supplied).
2. Press the ⏎ button on the main unit's top panel or the **SOURCE** button on the remote control to select the **D.IN** mode.
3. Press the ◀ button on the remote control for 5 seconds to turn Auto Power Link on or off.

- Auto Power Link is set to ON by default.
- Depending on the connected device, Auto Power Link may not function.

TV SOUNDCONNECT

You can enjoy TV sound through your Soundbar when it is connected to a Samsung TV that supports the TV SoundConnect function.

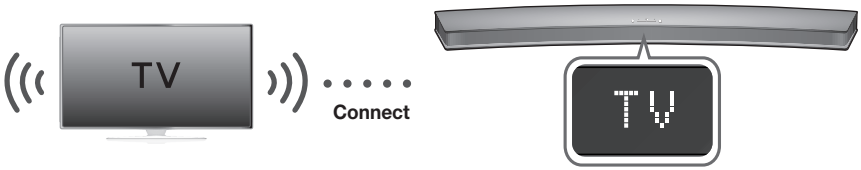

1. Turn on the TV and Soundbar.
2. Press the ⏎ button on the main unit's top panel or the **SOURCE** button on the remote control to select the **TV** mode.
3. On the TV, a message asking whether to enable the TV SoundConnect function appears.
4. Select **<Yes>** using the TV's remote control to finish connecting the TV and Soundbar.

- If the TV SoundConnect linking process fails, navigate to SoundConnect in the TV's Sound menu, select **Add New Device**, and set **Add New Device** to **ON**. Then, try again.
- Switching the Soundbar's mode from TV to another mode automatically terminates TV SoundConnect.
- To connect the Soundbar to another TV, the existing connection must be terminated.
- To terminate the existing connection, press and hold the ▶II button on the remote for 5 seconds or switch to another mode. To connect to the other TV, follow Steps 1 through 4 above.

- The TV SoundConnect (SoundShare) function is supported by some Samsung TVs released from 2012 on. Check whether your TV supports the TV SoundConnect (SoundShare) function before you begin. (For further information, refer to the TV's user manual.).
- If your Samsung TV was released before 2014, check the SoundShare setting menu.
- If the distance between the TV and Soundbar exceeds 10 meters, the connection may not be stable or the audio may stutter. If this occurs, relocate the TV or Soundbar so that they are within operational range, and then re-establish the TV SoundConnect connection.
- TV SoundConnect Operational Ranges:
  - Recommended pairing range: within 2 meters.
  - Recommended operational range: within 10 meters.
- The Play/Pause, Next, and Prev buttons on the Soundbar or Soundbar's remote do not control the TV.

► Using the Bluetooth POWER On function

The Bluetooth POWER On function is available after you have successfully connected the Soundbar to a Bluetooth compatible TV using TV SoundConnect. When the Bluetooth POWER On function is ON, turning the connected TV on or off will turn the Soundbar's power on and off as well.

1. Connect the TV to your Soundbar using the TV SoundConnect function.
2. Press the **Bluetooth POWER** button on the Soundbar remote. **ON - BLUETOOTH POWER** appears on the Soundbar's display.
   - **ON - BLUETOOTH POWER** : The Soundbar turns on and off when you turn the TV on or off.
   - **OFF - BLUETOOTH POWER** : The Soundbar only turns off when you turn the TV off.

- This function is supported by some Samsung TVs released from 2013 on.

CONNECTING TO EXTERNAL DEVICES

HDMI CABLE

HDMI is the standard digital interface for connecting to TVs, projectors, DVD players, Blu-ray players, set top boxes, and more. HDMI prevents any degradation to the signal due to conversion to analogue and maintains the video and audio quality of the original digital source.

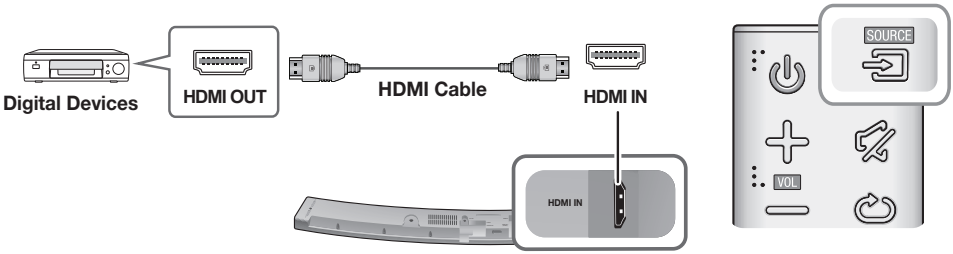

1. Connect an HDMI cable from the **HDMI IN** jack on the back of the product to the HDMI OUT jack on your digital device.
2. Press the button on the top panel of the Soundbar or the **SOURCE** button on the remote control to select the **HDMI** mode.

OPTICAL OR ANALOGUE AUDIO CABLE

This unit comes equipped with one digital optical in jack and one analogue audio (AUX) in jack, giving you two ways to connect it to external devices.

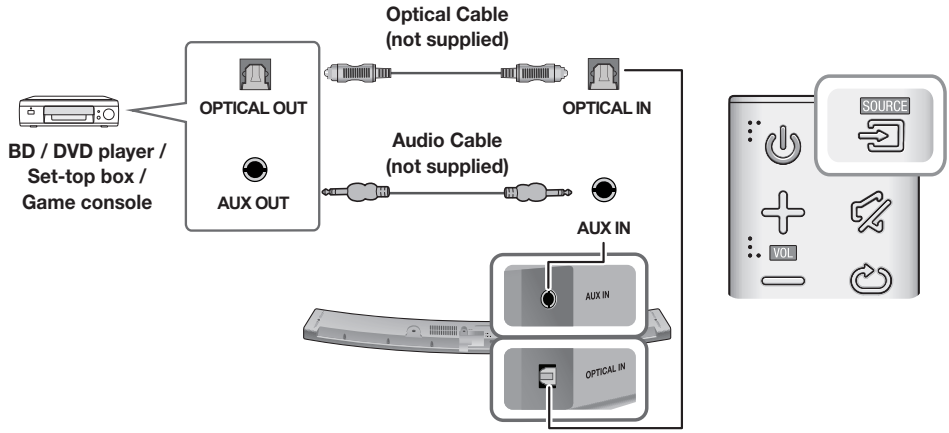

► AUX Cable

1. Connect **AUX IN** (Audio) on the main unit to the AUDIO OUT jack of the Source Device using an audio cable.
2. Press the button on the top panel of the Soundbar or the **SOURCE** button on the remote control to select the **AUX** mode.

► Optical Cable

1. Connect **OPTICAL IN** (Audio) on the main unit to the OPTICAL OUT jack of the Source Device using a digital optical cable.
2. Press the button on the top panel of the Soundbar or the **SOURCE** button on the remote control to select the **D.IN** mode.

USB

You can play music files located on USB storage devices through the Soundbar.

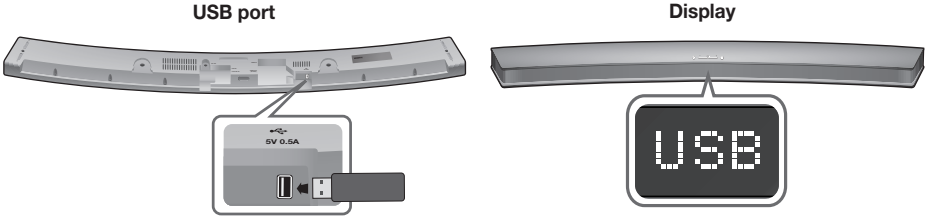

1. Connect the USB device to the USB port on the back of the product.
2. Press the button on the main unit's top panel or the **SOURCE** button on the remote control to select the **USB** mode.
3. **USB** appears on the display screen.
   - The Soundbar connection to the USB device is complete.
   - The Soundbar automatically turns off (Auto Power Off) if no USB device has been connected for more than 5 minutes.

► Before you connect a USB device

Be aware of the following:

- If the file name of a file on a USB device exceeds 10 characters, it is not displayed on the Soundbar's display.
- This product may not be compatible with certain types of USB storage media.
- The Soundbar supports the FAT16 and FAT32 file systems.
  - The NTFS file system is not supported.

- Connect USB devices directly to the USB port of the product. Otherwise, you may encounter a USB compatibility problem.
- Do not connect multiple storage devices to the product via a multi-card reader. It may not operate properly.
- Digital camera PTP protocols are not supported.
- Do not remove the USB device while it is transferring files.
- DRM-protected music files (MP3, WMA) from commercial web sites cannot be played.
- External HDDs are not supported.
- Mobile phone devices are not supported.
- File Format Type Compatibility list:

Extension	Codec	Sampling Rate	Bit Rate
***.mp3**	MPEG 1 Layer2	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 1 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2.5 Layer3	16KHz ~ 48KHz	80kbps~320kbps
***.wma**	Wave_Format_MSAudio1	16KHz ~ 48KHz	56kbps~128kbps
	Wave_Format_MSAudio2	16KHz ~ 48KHz	56kbps~128kbps
***.aac**	AAC	16KHz ~ 96KHz	48kbps~320kbps
	AAC-LC	16KHz ~ 96KHz	128kbps~192kbps 5.1ch 320kbps
	HE-AAC	24KHz ~ 96KHz	48kbps~64kbps 5.1ch 160kbps
***.wav**	-	16KHz ~ 48KHz	up to 3000kbps
***.ogg**	OGG 1.1.0	16KHz ~ 48KHz	50kbps~500kbps
***.flac**	FLAC 1.1.0, FLAC 1.2.1	16KHz ~ 96KHz	up to 3000kbps



- If there are too many folders and files stored on the USB device, it may take the Soundbar some time to access and play files.

INPUT MODE

Press the ⏎ button on the main unit's top panel or the **SOURCE** button on the remote control to select the mode you want.



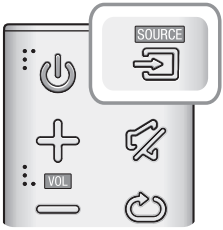

Input mode	Display
Optical Digital input ARC (HDMI OUT) input	**D.IN**
AUX input	**AUX**
HDMI input	**HDMI**
BLUETOOTH mode	**BT**
TV SoundConnect	**TV**
USB mode	**USB**

AUTO POWER DOWN FUNCTION

The unit turns off automatically in the following situations.

- D.IN / HDMI / BT / TV / USB Mode
  - If there is no audio signal for 5 minutes.
- AUX Mode
  - If the AUX cable is disconnected for 5 minutes.
  - If there is no KEY input for 8 hours when the AUX cable is connected. (Auto Power Down function can be turned off only in that case.)

To turn off Auto Power Down function, while in **AUX** mode, press and hold the ▶II button for 5 seconds. **ON - AUTO POWER DOWN** / **OFF - AUTO POWER DOWN** appears on the display.

BLUETOOTH

You can connect a Bluetooth device to the Soundbar and enjoy music with stereo sound, all without wires!

TO CONNECT THE SOUNDBAR TO A BLUETOOTH DEVICE

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

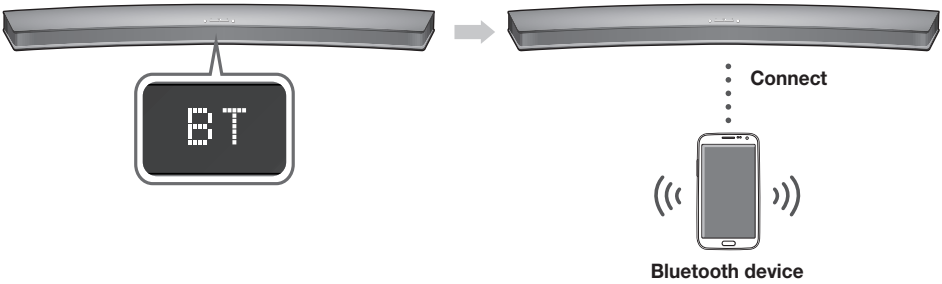

1. Press the button on the main unit's top panel or the **SOURCE** button on the remote control to select the **BT** mode.
   - You will see **BT READY** on the front display of the Soundbar.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select **"[Samsung] HW-Jxxxx J-Series"** from the list.
   - When the Soundbar is connected to the Bluetooth device, it will display [**Bluetooth device name**] → **BT** on the front display.
   - The device name can only be displayed in English. An underline " _ " will be displayed if the name is not in English.
   - If the Bluetooth device has failed to pair with the Soundbar, delete the previous "**[Samsung] HW-Jxxxx J-Series**" found by the Bluetooth device and have it search for the Soundbar again.
4. Play music on the connected device.
   - You can listen to the music playing on the connected Bluetooth device over the Soundbar.
   - In **BT** mode, the Play / Pause / Next / Prev functions are not available. However, these functions are available on Bluetooth devices supporting AVRCP.

- If asked for a PIN code when connecting a Bluetooth device, enter <0000>.
- Only one Bluetooth device can be paired at a time.
- The Bluetooth connection will be terminated when you turn the Soundbar off.
- The Soundbar may not perform Bluetooth search or connection correctly under the following circumstances:
  - If there is a strong electrical field around the Soundbar.
  - If several Bluetooth devices are simultaneously paired with the Soundbar.
  - If the Bluetooth device is turned off, not in place, or malfunctions.

- Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.
- The Soundbar supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the Soundbar to a Bluetooth device that supports only the HF (Hands Free) function.
- Once you have paired the Soundbar to a Bluetooth device, selecting "**[Samsung] HW-Jxxxx J-Series**" from the device's scanned devices list will automatically change the Soundbar to **BT** mode.
  - Available only if the Soundbar is listed among the Bluetooth device's paired devices. (The Bluetooth device and the Soundbar must have been previously paired at least once.)
- Soundbar will appear in the Bluetooth device's searched devices list only when the Soundbar is displaying **BT READY**.
- In the TV SoundConnect mode, the Soundbar cannot be paired to another Bluetooth device.

BLUETOOTH POWER ON (BLUETOOTH POWER)

If a previously paired Bluetooth device tries to pair with the Soundbar when the Bluetooth POWER On function is on and the Soundbar is turned off, the Soundbar turns on automatically.

1. Press the **Bluetooth POWER** button on the remote while the Soundbar is turned on.
2. **ON - BLUETOOTH POWER** appears on the Soundbar's display.

TO DISCONNECT THE BLUETOOTH DEVICE FROM A SOUNDBAR

You can disconnect a Bluetooth device from the Soundbar. For instructions, see the Bluetooth device's user manual.

- The Soundbar will be disconnected.
- When the Soundbar is disconnected from the Bluetooth device, the Soundbar will display **BT DISCONNECTED** on the front display.

TO DISCONNECT THE SOUNDBAR FROM A BLUETOOTH DEVICE

Press the **SOURCE** button on the remote control or the button on the product's top panel to switch from **BT** to another mode or turn off the Soundbar.

- The connected Bluetooth device will wait a certain amount of time for a response from the Soundbar before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)

- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Soundbar and the Bluetooth device exceeds 10 meters.
- The Soundbar automatically turns off after 5 minutes in the Ready state.

► More About Bluetooth

Bluetooth is a technology that enables Bluetooth-compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, if:
  - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Soundbar.
  - It is subject to electrical variation from obstructions caused by a wall, corner, or office partition.
  - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the Soundbar with the Bluetooth device while they are close together.
- The further the distance between the Soundbar and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the unit. The connection will be automatically cut off if the Bluetooth device is out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

USING THE SAMSUNG AUDIO REMOTE APP

► Installing the Samsung Audio Remote App

To control the Soundbar with your smart device and the Samsung Audio Remote app, download the Samsung Audio Remote app from the Google Play store.

Market search : Samsung Audio Remote

Get it on Google play

► Launching the Samsung Audio Remote App

To launch and use the Samsung Audio Remote app, touch the Audio Remote icon on your smart device, and then follow the directions on the screen.



- The Samsung Audio Remote app is only compatible with Android mobile phones and mobile devices running Android OS 3.0 or later.

SOFTWARE UPDATE

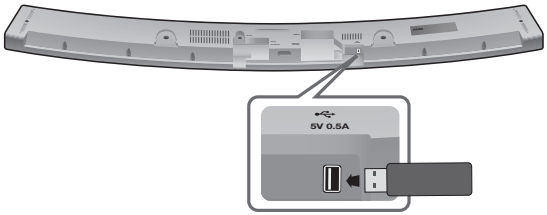

Samsung may offer updates for the Soundbar's system firmware in the future.

If an update is offered, you can update the firmware by connecting a USB device with the firmware update stored on it to the USB port on your Soundbar.

Note that if there are multiple update files, you must load them onto the USB device singly and use them to update the firmware one file at a time.

Please visit samsung.com or contact the Samsung call centre to receive more information about downloading update files.

UPDATING PROCEDURE

1. Follow the steps below to download the product software:
   Go to the Samsung website at (samsung.com/sec) → search for the model name - select the customer support option (the option name is subject to change)
2. Save the downloaded software to a USB stick and select "Extract Here" to unzip the folder.
3. Turn off the Soundbar and connect the USB stick containing the software update to the USB port.
4. Disconnect the power cord, reconnect it, and then turn on the Soundbar.
5. Turn on the Soundbar. Within 3 minutes, **UPDATE** is displayed and updating begins.
6. After completion, the power of Soundbar turns off. In this state, press the ▶II button on the remote control for 5 seconds.

IF UPDATE IS NOT DISPLAYED

1. Turn off the Soundbar, connect the USB storage device that contains update files to the Soundbar's USB port.
2. Disconnect the power cord, reconnect it, and then turn on the Soundbar.

- Insert a USB device containing the firmware update into the USB port on the main unit.
- Updating firmware may not work properly if audio files supported by the Soundbar are stored in the USB storage device.
- Do not disconnect the power or remove the USB device while updates are being applied. The main unit will turn off automatically after completing the firmware update.
- After update is completed, the user setup in Soundbar is initialised. We recommend you write down your settings so that you can easily reset them after the update. Note that updating firmware resets the subwoofer connection too.
  If the connection to the subwoofer is not re-established automatically after the update, refer to page 15.
  If the software update fails, check that the USB stick is not defective.
- Mac OS users should use MS-DOS (FAT) as the USB format.
- Depending on the manufacturer, some USB devices may not be supported.

TROUBLESHOOTING

Before requesting service, please check the following.

The unit will not turn on.	
• Is the power cord plugged into the outlet?	→ Connect the power plug to the outlet.

A function does not work when the button is pressed.	
• Is there static electricity in the air?	→ Disconnect the power plug and connect it again.

Sound is not produced.	
• Is the Mute function on?	→ Press the (Mute) button to cancel the Mute function.
• Is the volume set to minimum?	→ Adjust the volume.

The remote control does not work.	
• Are the batteries drained?	→ Replace with new batteries.
• Is the distance between the remote control and main unit too far?	→ Move closer to the unit.

The TV SoundConnect (TV pairing) failed.	
• Does your TV support TV SoundConnect?	→ TV SoundConnect is supported by some Samsung TVs released from 2012 on. Check your TV to see if it supports TV SoundConnect.
• Is your TV firmware the latest version?	→ Update your TV with the latest firmware.
• Does an error occur when connecting?	→ Contact the Samsung Call Centre.
	→ Reset TV SoundConnect and connect again. To reset the TV SoundConnect connection, press and hold the ▶II button for 5 seconds.

The red LED on the subwoofer blinks and the subwoofer is not producing sound.	
• Your subwoofer may not be connected to the main unit of the product.	→ Try to connect your subwoofer again. (See Page 15)

SPECIFICATIONS

GENERAL	**USB**		5V / 0.5A
	Weight	**Main Unit**	2.7 kg
		Subwoofer (PS-WJ6000R/PS-WJ6001R)	6.8 kg
	Dimensions (W x H x D)	**Main Unit**	1078.0 x 47.5 x 129.0 mm
		Subwoofer (PS-WJ6000R/PS-WJ6001R)	452.0 x 335.0 x 154.0 mm
	Operating Temperature Range		+5°C to +35°C
	Operating Humidity Range		10 % to 75 %
AMPLIFIER	**Rated Output Power**	**Main Unit**	22W x 6, 4 ohm, THD≦10%
		Subwoofer (PS-WJ6000R/PS-WJ6001R)	168W, 3 ohm, THD≦10%

* Design and specifications are subject to change without prior notice.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For more information about the power supply and power consumption, refer to the label attached to the product.

※ **Open Source Licence Notice**

- To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

LICENCES

Manufactured under licence from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

For DTS patents, see http://patents.dts.com. Manufactured under licence from DTS Licencing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc.
© DTS, Inc. All Rights Reserved.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licencing LLC in the United States and other countries.

Wireless Models (including the frequency of 5.15GHz-5.35GHz)

Hereby, Samsung Electronics, declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
The original Declaration of Conformity may be found at http://www.samsung.com, go to Support > Search Product Support and enter the model name.
This equipment may be operated in all EU countries.
This equipment may only be used indoors.

Wireless Models (excluding the frequency of 5.15GHz-5.35GHz)

Hereby, Samsung Electronics, declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
The original Declaration of Conformity may be found at http://www.samsung.com, go to Support > Search Product Support and enter the model name.
This equipment may be operated in all EU countries.

SAMSUNG

© 2016 Samsung Electronics Co., Ltd. All rights reserved.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Country	Contact Centre ☎	Web Site
TURKEY	444 77 11	www.samsung.com/tr/support



[Correct disposal of batteries in this product]

(Applicable in countries with separate collection systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

SAMSUNG

HW-J6000R
HW-J6001R

Kullanım kılavuzu

Olanakları hayal edin

Bir Samsung ürünü aldığınız için teşekkür ederiz.
Daha eksiksiz bir hizmet alabilmek için lütfen ürününüzü
www.samsung.com/register
adresinden kaydettirin.

GÜVENLIK BILGILERI

GÜVENLIK UYARILARI

ELEKTRİK ÇARPMA RİSKİNİ AZLATMAK İÇİN KAPAĞI (YA DA ARKA KISMI) SÖKMEYİN.
ÜRÜN İÇİNDE KULLANICI TARAFINDAN TAMİR EDİLEBİLECEK BİR PARÇA BULUNMAMAKTADIR. SERVİS İŞLEMLERİNİ, YETKİN SERVİS PERSONELİNE BIRAKIN.

DİKKAT **ELEKTRİK ÇARPMA RİSKİ AÇMAYIN**	Bu sembol, cihazın içinde yüksek voltaj bulunduğunu belirtir. Bu ürünün içindeki herhangi bir parça ile temas edilmesi tehlike teşkil eder.
	Bu sembol, kullanım ve bakımla ilgili önemli talimatların cihazla birlikte verildiğini belirtir.

	Sınıf II ürün: Bu sembol, elektrik topraklamasına (toprak) bir güvenlik bağlantısı gerekmediğini gösterir.
~	AC voltajı: Bu sembol, sembolle işaretlenen nominal voltajın AC voltajı olduğunu gösterir.
⎓	DC voltajı: Bu sembol, sembolle işaretlenen nominal voltajın DC voltajı olduğunu gösterir.
	Dikkat, Kullanım talimatlarına bakın: Bu sembol, kullanıcıya güvenlikle ilgili daha fazla bilgi için kullanıcı kılavuzuna başvurmasını söyler.

UYARI : Yangın ya da elektrik çarpması riskini azaltmak için cihazın, su veya neme maruz kalmasına izin vermeyin.

DİKKAT : ELEKTRİK ÇARPMASINI ENGELLEMEK İÇİN FİŞİN GENİŞ UCUNU YUVAYLA EŞLEŞTİRİN VE YERİNE TAM OTURTUN.

- Bu cihaz, koruyucu topraklama bağlantısına sahip bir AC prizine takılmalıdır.
- Cihazın şebeke bağlantısını kesmek için, fişi şebeke soketinden çekilmelidir; dolayısıyla şebeke fişi uygun bir yerde olmalıdır.

DİKKAT

- Bu cihaza sıvı damlatılmamalı veya dökülmemelidir. Vazo gibi sıvı dolu nesneler cihazın üstüne konulmamalıdır.
- Bu cihazı tamamen kapatmak için güç fişini duvardaki prizden çıkarmanız gerekir. Dolayısıyla, güç fişi her zaman hızla ve kolayca erişilebilir bir noktada olmalıdır.

ÖNLEMLER

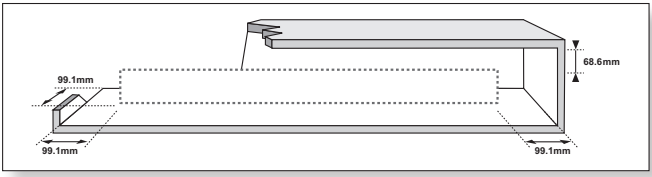

Evinizdeki AC güç kaynağının, ürünün arkasında yer alan tanımlama etiketiyle uyumlu olduğundan emin olun. Ürünü, havalandırma için yeterli boşluk 7-10 cm olacak şekilde, uygun bir kaide (mobilya) üzerine yatay biçimde yerleştirin. Havalandırma deliklerinin kapatılmadığından emin olun. Ürünü amplifikatörlerin veya ısınma yapabilecek diğer ekipmanların üzerine koymayın. Bu ünite çalar sürekli kullanım için tasarlanmıştır.
Üniteyi tamamen kapatmak için AC fişini duvardaki prizden çıkarın. Eğer üniteyi uzun bir süre kullanmayacaksanız fişini prizden çıkarın.

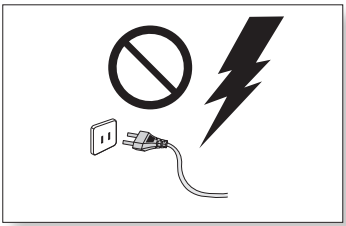

Fırtınalı havalarda AC ana fişi, prizden çıkarın. Yıldırım nedeniyle oluşan gerilim tepe değerleri üniteye zarar verebilir.

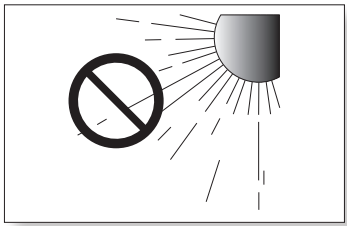

Üniteyi doğrudan güneş ışığı ya da diğer ısı kaynaklarına maruz bırakmayın. Bu, cihazın aşırı ısınmasına ve arızalanmasına yol açabilir.

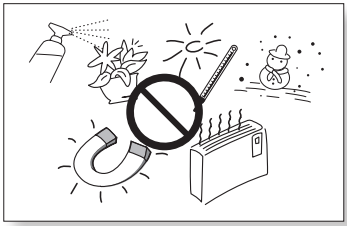

Ürünü, neme (örneğin, vazo) ve aşırı ısınmaya (örneğin, şömine) ya da güçlü manyetik ya da elektriksel alan oluşturan ekipmanlara karşı koruyun. Ünitenin hatalı çalışması durumunda güç kablosunu AC kaynağından çıkarın. Bu ürün, endüstriyel kullanım için tasarlanmamıştır. Bu ürün sadece kişisel kullanım içindir. Ürün veya diskini, soğuk sıcaklıklarda depolanmışsa yoğuşma meydana gelebilir. Kış şartlarında ünitenin taşınması durumunda kullanmadan önce ünite oda sıcaklığına gelene kadar yaklaşık 2 saat bekleyin.

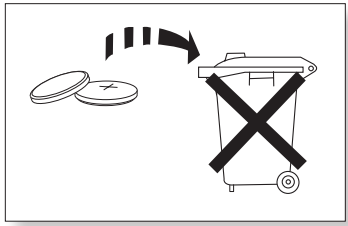

Bu ürünle kullanılan piller, çevreye zarar veren kimyasal maddeler içermektedir. Pilleri, normal ev çöpüne atmayın. Pilleri ateşe atmayın. Pillere kısa devre yaptırmayın, içini açmayın veya aşırı ısıtmayın. Pil düzgün şekilde değiştirilmediği takdirde patlama riski. Yalnızca aynı tiple veya eşdeğer tiple değiştirin.

DİKKAT, PİLİ YUTMAYIN, KİMYASAL YANIK TEHLİKESİ,
Bu ürün [birlikte verilen uzaktan kumanda] bir düğme pil içermektedir.
Düğme pil yutulursa yalnızca 2 saat içinde şiddetli iç yanıklara neden olup ölüme yol açabilir. Yeni ve kullanılmış pilleri çocuklardan uzak tutun. Pil bölmesi güvenli bir biçimde kapanmıyorsa ürünü kullanmayı bırakıp çocuklardan uzak tutun. Pillerin yutulmuş veya vücudun herhangi bir bölümünün içine yerleştirilmiş olabileceğini düşünüyorsanız derhal tıbbi yardıma başvurun.

IÇINDEKILER

2 BAŞLANGIÇ

2 Güvenlik bilgileri

5 Birlikte Verilenler

6 AÇIKLAMALAR

6 Üst/Ön Panel

7 Arka/Alt Panel

8 Uzaktan kumanda

11 KURULUM

11 Soundbar'ın Kurulumu

11 Duvara montaj tertîbatinin monte edîlmesî

14 Soundbar'ı TV sehpası üzerine yerleştirme

14 Soundbar'ın Bağımsız Ünite olarak Kurulması

15 BAĞLANTILAR

15 Subwoofer'ın Bağlanması

17 SWA-8000S'yi Bağlama (Ayrıca Satılır)

19 Bir TV'ye Bağlanma

19 HDMI (Dijital) Kablosu Kullanarak TV ile Bağlanma

20 TV'yi Dijital Optik Kablo Kullanarak Bağlama

20 TV SoundConnect

22 Harici Cihazlara Bağlanma

22 HDMI Kablosu

22 Optik veya Analog Ses Kablosu

23 USB

25 FONKSIYONLAR

25 Giriş Modu

26 Bluetooth

29 Yazilim güncelleme

31 SORUN GIDERME

31 Sorun giderme

32 EK

32 Spesifikasyonlar

- Bu Kullanma Kılavuzundaki şekiller ve çizimler yalnızca referans amaçlı olarak verilmiştir ve gerçek ürün görünümünden farklı olabilir.
- Aşağıdaki durumlarda servis ücreti alınabilir
  (a) talebiniz üzerine bir mühendis geldiğinde ama üründe hiçbir arıza olmadığında (yani bu kullanım kılavuzunu okumadıysanız).
  (b) üniteyi bir onarım merkezine getirdiğinizde ama üründe hiçbir arıza olmadığında (yani bu kullanım kılavuzunu okumadıysanız).
- Evinize onarım için gelinmeden veya herhangi bir onarım yapılmadan önce servis ücreti size bildirilir.

BIRLIKTE VERILENLER

KULLANIM KILAVUZUNU OKUMADAN ÖNCE

Kullanım kılavuzunu okumadan önce aşağıdaki terimlere göz atın.

► Kılavuzda kullanılacak simgeler

Simge	Terim	Tanım
	Dikkat	Bir işlevin çalışmadığı veya ayarların iptal edilebileceği bir durumu gösterir.
	Not	Bu, her fonksiyonun çalışmasına ilişkin ipuçları ve talimatları içermektedir.

Aşağıda gösterilen aksesuarların sağlanıp sağlanmadığını kontrol edin.



Uzaktan Kumanda / Lityum Pil (3V : CR2032)



Güç Kablosu : 2 AD



AC/DC Adaptörü



HDMI Kablosu



Braket-Duvar : 2 AD



Duvara Montaj Kılavuzu



Tutucu Duvar Sabitleyici : 2 AD

- Aksesuarların görünümü yukarıdaki çizimlerde görünenden biraz farklı olabilir.

ÜST/ÖN PANEL

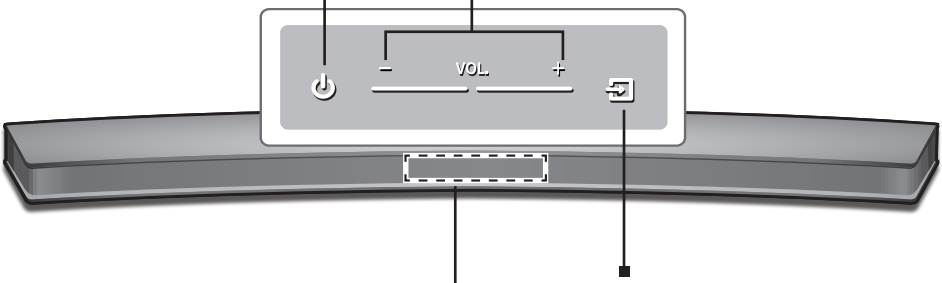

- AC kablosunu taktığınızda, güç düğmesi 4 ila 6 saniye içinde çalışacaktır.
- Bu ünitenin gücünü açtığınızda, ses gelmeden önce 4 ila 5 saniyelik bir gecikme olur.
- Sadece Soundbar sesini duymak istiyorsanız, televizyonunuzun Ses Ayarları menüsündeki TV hoparlörlerini kapatmalısınız. Televizyonunuzla birlikte gelen kullanım kılavuzuna başvurun.

ARKA/ALT PANEL

AUX IN

Harici bir cihazın Analog çıkışına bağlayın.

HDMI IN

Bir HDMI kablosu kullanarak dijital video ve ses sinyallerini eş zamanlı olarak alır. Desteklenen bir harici cihaza bağlarken kullanın.

OPTICAL IN (D.IN)

Bir harici cihazın dijital (optik) çıkışına bağlayın.

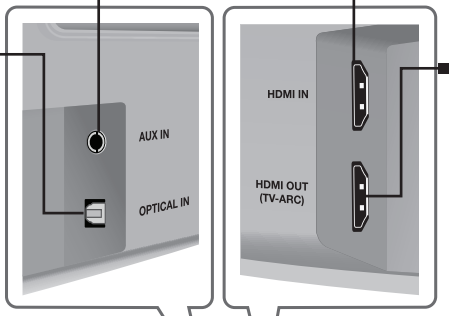

HDMI OUT (TV-ARC)

Bir HDMI kablosu kullanarak dijital video ve ses sinyallerini eş zamanlı olarak iletir.



ETİKET

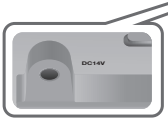

DC 14V
(Güç Kaynağı Girişi)

DC güç adaptörünü güç kaynağı jakına bağlayın ve AC güç adaptörü fişini prize takın.



(USB bağlanti noktasi)

USB cihazlarını buraya takarak cihazlardaki dosyaları çalabilirsiniz.

- AC güç adaptörünün güç kablosunu prizden çıkarırken fişten tutarak çekin. Kablodan tutarak çekmeyin.
- Bileşenler arasındaki tüm bağlantılar tamamlanmadan bu üniteyi veya diğer bileşenleri AC prizine takmayın.
- AC/DC Adaptörünü bir masa üstünde veya zeminde düz tuttuğunuzdan emin olun. AC/DC Adaptörünü AC kablosu giriş yüzü yukarı bakacak şekilde yerleştirirseniz, su veya diğer yabancı maddeler Adaptöre girebilir ve Adaptörün arızalanmasına neden olabilir.

UZAKTAN KUMANDA

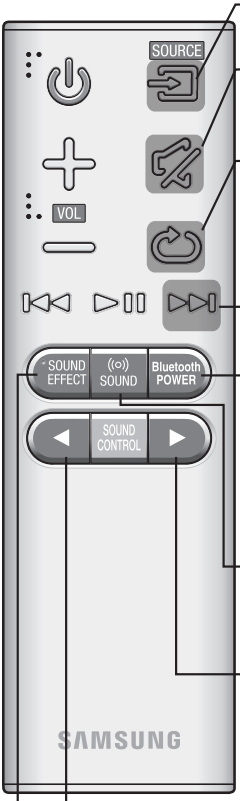

SOURCE

Soundbar'e bağlı bir kaynak seçmek için basın.

Sessiz

Ses seviyesini tek bir düğmeye basarak 0'a düşürebilirsiniz.
Sesi, önceki seviyeye geri getirmek için tekrar basın.

Tekrar

Bir USB cihazından müzik çalma sırasında Tekrar işlevini ayarlamak için basın.

OFF - REPEAT : Tekrar Oynatma işlemini iptal eder.

TRACK - REPEAT : Bir parçayı tekrar çalar.

ALL - REPEAT : Tüm parçaları tekrar çalar.

RANDOM - REPEAT : Parçaları rasgele çalar.
(Zaten çalınmış olan bir parça tekrar çalınabilir.)

İleri Sar

Oynattığınız cihazda iki veya daha fazla dosya varken ▶▶I düğmesine basarsanız, bir sonraki dosya seçilir.

Bluetooth POWER

Bluetooth POWER On işlevini açık ve kapalı konuma getirmek için, uzaktan kumanda üzerindeki **Bluetooth POWER** düğmesine basın.
Ayrıntılar için bkz. 21-27.

((o)) **SOUND**

Surround Ses sese derinlik ve açıklık katar. ((o)) **SOUND** düğmesine art arda basıldığında Surround Ses ayarları arasında geçiş yaparsınız:
ON - SURROUND SOUND, **OFF - SURROUND SOUND**

Anynet+ işlevini açmak veya kapatmak için ▶ düğmesini 5 saniye kadar basılı tutun.

OFF - ANYNET+, ON - ANYNET+

Anynet+ işlevi, Anynet+ uyumlu bir Samsung TV'den Soundbar'ı uzaktan kumandayla kontrol etmenizi sağlar.
Soundbar TV'ye bir HDMI kablosu yoluyla bağlanmalıdır.

Auto Power Link işlevini açmak veya kapatmak için ◀ düğmesini yaklaşık 5 saniye kadar basılı tutun.

OFF - POWER LINK, ON - POWER LINK

* Auto Power Link
Soundbar'ı bağlı bir Optik kaynağa, Optik soket üzerinden senkronize eder, böylece TV'nizi açtığınızda o da otomatik olarak açılır. (Bkz. sayfa 20)
Auto Power Link işlevi yalnızca **D.IN** modunda kullanılabilir.

SOUND EFFECT

6 ses modu arasından seçim yapabilirsiniz - **STANDARD (Orijinal Ses)**, **MUSIC**, **CLEAR VOICE**, **SPORTS**, **MOVIE** ve **NIGHT MODE** birini seçebilirsiniz.

Orijinal sesi dinlemek istiyorsanız **STANDARD** modunu seçin.

*** DRC (Dinamik Aralık Denetimi)**
Dolby Digital'a dinamik aralık denetimi uygulamanıza izin verir.
DRC (Dinamik Aralık Denetimi) işlevini açmak veya kapatmak için STANDBY modundayken **SOUND EFFECT** düğmesini yaklaşık 5 saniye boyunca basılı tutun.

Güç

Soundbar'i açar veya kapatır.

Ses

Ünitenin ses seviyesini ayarlar.

Çalma/Duraklatma

Dosya oynatma işlemini geçici olarak duraklatmak için ▶II düğmesine basın. Seçilen dosyayı oynatmak için tekrar ▶II düğmesine basın.

Geri Atla

USB cihazında birden fazla dosya varsa ve I◀◀ düğmesine basarsanız, bir önceki dosya seçilir.

SOUND CONTROL

TREBLE, **BASS**, **SUBWOOFER LEVEL**, **AUDIO SYNC**, **REAR SPEAKER** veya **REAR LEVEL** arasından seçim yapmak için basın. Sonra, ◀, ▶ düğmelerini kullanarak **TREBLE** veya **BASS** ses düzeyini -6 ~ +6 arasında, **SUBWOOFER LEVEL** ses düzeyini -12, -6 ~ +6 arasında ayarlayın.

Her frekans bandının sesini ayarlamak için **SOUND CONTROL** düğmesine yaklaşık 5 saniye basılı tutun. 150Hz, 300Hz, 600Hz, 1.2KHz, 2.5KHz, 5KHz ve 10KHz seçilebilir ve her biri -6 ~ +6 arasında bir ayara getirilebilir.

Soundbar bir dijital TV'ye bağlandıysa, video ile ses arasındaki senkronizasyon bozuk olabilir, ses ve video arasındaki senkronizasyonu sağlamak için **SOUND CONTROL** düğmelerini kullanın. Ses gecikme süresini 0 ms ~ 300 ms arasında bir değere ayarlamak için ◀, ▶ düğmelerini kullanın. USB modunda, TV modunda ve BT modunda, Audio Sync işlevi çalışmayabilir.

Arka hoparlör sesini açmak veya kapatmak için, Ses Denetimi içinde **REAR SPEAKER** öğesini seçin ve sonra ◀, ▶ düğmelerini kullanarak OFF-RS ile ON-RS arasından ses düzeyini ayarlayın.

Arka ses düzeyini kontrol etmek için, Ses Denetimi içinde **REAR LEVEL** öğesini seçin ve sonra ◀, ▶ düğmelerini kullanarak RS -6~+6 arasından ses düzeyini ayarlayın.

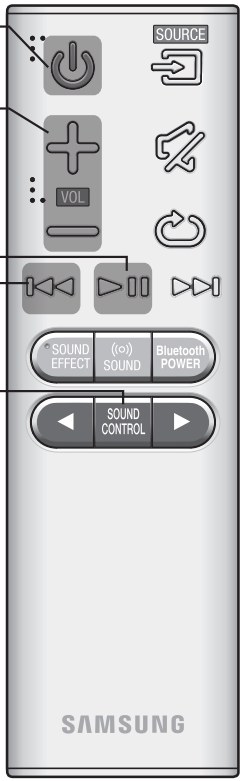

- **REAR SPEAKER** ile **REAR LEVEL** modu yalnızca SWA-8000S'yi (ayrı satılır) bağladığınızda kullanılabilir.
  - SWA-8000S'nin bağlantısı kesilirse, **REAR SPEAKER** ile **REAR LEVEL** gösterilmeye devam eder ancak işlevler kullanılamaz.
- TV uzaktan kumandasını kullanarak TV çalıştırın.

► TV'nizin Uzaktan Kumandasını kullanarak Soundbar'ı kontrol etme

1. Soundbar açıkken (((○))) **SOUND** düğmesini 5 saniyeden uzun süre basılı tutun.
2. Soundbar'ın ekranında "ON - TV REMOTE" görünür.
3. TV'nin menüsünde, TV hoparlörünü harici hoparlör olarak ayarlayın.

- TV ARC işlevi veya **HDMI** modu kullanımdayken kullanılamaz.
- Bu işlevde **VOL +/-** ve (Sessiz) düğmeleri hariç tüm düğmeler kullanılmaz durumdadır.
- TV menüleri üreticiye ve modele göre değişir. Daha fazla bilgi için TV'nin kullanım kılavuzuna bakın.
- Bu işlevi destekleyen üreticiler:
  - VIZIO, LG, Sony, Sharp, PHILIPS, PANASONIC, TOSHIBA, GRUNDIG, Hisense, RCA
  - Uzaktan kumandanızın üreticisine bağlı olarak bu işlev TV'nizin uzaktan kumandasıyla uyumlu olmayabilir.
- Bu işlevi kapatmak için, (((○))) **SOUND** düğmesine 5 saniye kadar basın.
  Soundbar'ın ekranında "OFF - TV REMOTE" görünür.

PILLERIN UZAKTAN KUMANDAYA TAKILMASI

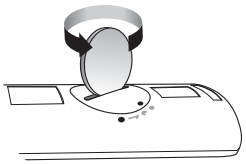

1. Uzaktan kumandanın pil kapağını yukarıdaki şekilde gösterildiği gibi saatin aksi yönünde çevirip çıkarmak için uygun bir bozuk para kullanın.

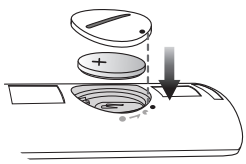

2. 3V Lityum pil takın. Pili takarken pozitif (+) kutup yukarı bakmalıdır. Pil kapağını yerleştirin ve yukarıdaki şekilde gösterildiği gibi '●' işaretlerini yan yana getirin.

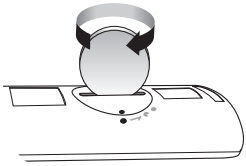

3. Uzaktan kumandanın pil kapağını yerine oturturken sonuna kadar saat yönünde çevirmek için uygun bir bozuk para kullanın.

SOUNDBAR'IN KURULUMU

DUVARA MONTAJ TERTİBATININ MONTE EDİLMESİ

► Montaj Önlemleri

- Yalnızca dik bir duvara monte edin.
- Kurulum için yüksek sıcaklık veya neme sahip yerleri veya setin ağırlığını taşıyamayacak bir duvarı kullanmayın.
- Duvarın direncini kontrol edin. Duvar ürünü destekleyecek kadar güçlü değilse duvarı güçlendirin veya cihazı, ağırlığını taşıyabilecek başka bir duvara monte edin.
- Duvarınızın türüne (alçı, demir levha, ahşap vs.) uygun sabitleme vidaları veya ankrajları alıp kullanın. Mümkünse, destekleyici vidaları duvar dikmelerine sabitleyin.
- Soundbar'ı monte edeceğiniz duvarın türüne ve kalınlığına uygun montaj vidaları alın.
  - Çapı : M5
  - Uzunluk: 35 mm veya daha uzun vidalar tavsiye edilir.
- Üniteyi duvara monte etmeden önce ünitenin kablo çıkışlarını harici cihazlara bağlayın.
- Kurulumdan önce üniteyi kapattığınızdan ve prizden çıkardığınızdan emin olun. Aksi takdirde elektrik çarpabilir.

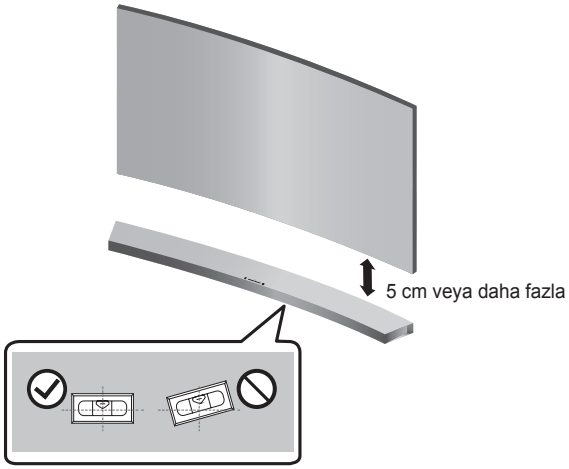

1. Kurulum kılavuzunu duvar yüzeyine yerleştirin.
- Kurulum kılavuzu aynı hizada olmalıdır.
- TV duvara monte edilmişse, Soundbar'ı TV'den en az 5 cm aşağıya kurun.

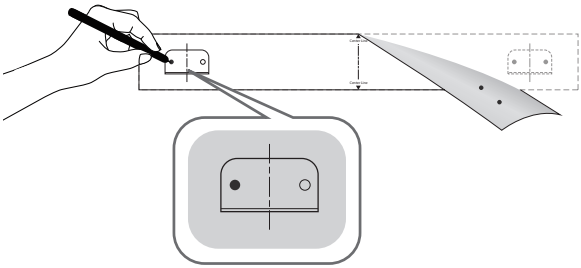

2. Bir kalem kullanarak vidaların duvarda hangi noktalara geleceğini işaretleyin, daha sonra kurulum kılavuzunu çıkarın. Ardından, uygun boyuttaki bir matkap ucu kullanarak vidalar için delikler açın.

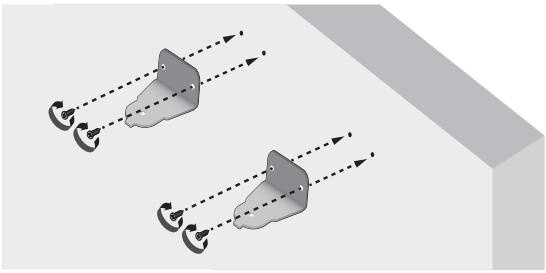

3. Uygun vidaları kullanarak 2 **Braket-Duvar** parçasını işaretli konumlardan duvara iyice sıkın.

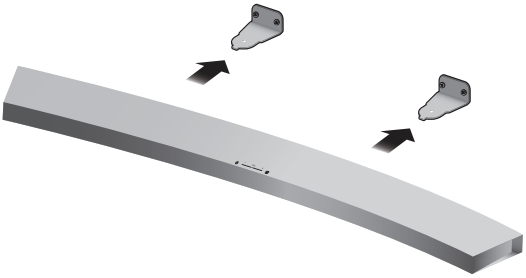

4. Soundbar'ı 2 **Braket-Duvar** parçasına şekilde gösterildiği gibi takın.

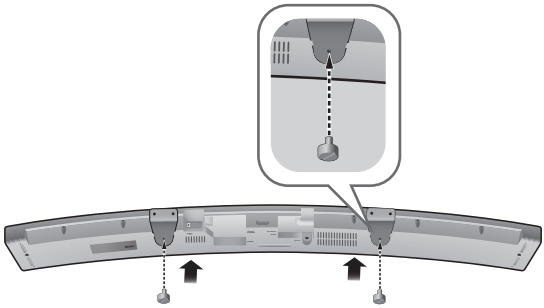

5. Bir **Tutucu Duvar Sabitleyici** öğesini ürünün alt tarafındaki her deliğe takın. Her **Tutucu Duvar Sabitleyici** öğesini sıkarak Soundbar'ı 2 **Braket-Duvar** parçasına sabitleyin.

- Kurulu üniteye asılmayın ve ünitenin darbelere maruz kalmamasına veya düşürülmemesine dikkat edin.
- Üniteyi düşmemesi için duvara sıkıca sabitleyin. Ünite düşerse, yaralanmaya veya ürünün zarar görmesine neden olabilir.
- Üniteyi, bir çocuğun bağlantı kablolarını çekmemesini sağlayacak şekilde duvara monte edin; aksi takdirde ürün düşebilir.
- Duvara montaj tertibatından en iyi performansı almak için, televizyon duvara monte edilmişse, hoparlör sistemini TV'den en az 5 cm aşağıya kurun.
- Güvenliğiniz için, üniteyi duvara monte etmeyecekseniz, düşmeyeceği sağlam, düz bir yüzeye kurun.

SOUNDBAR'I TV SEHPASI ÜZERINE YERLEŞTIRME

Soundbar'ı TV sehpası üzerine yerleştirin.



1. Soundbar'ın ortasını TV'nin alt tarafının ortasıyla hizalayarak şekilde gösterildiği gibi standın üzerine olabildiğince itin. TV dengesini bozmamaya özen gösterin.

SOUNDBAR'IN BAĞIMSIZ ÜNITE OLARAK KURULMASI



1. Soundbar'ı TV'nin önündeki düz alanın ortasına yerleştirin.

- Kurulumu düz bir zeminde yapın.

- Bileşenler arasındaki tüm bağlantılar tamamlanana kadar bu ürünün veya TV'nizin güç kablosunu prize takmayın.
- Bu ürünü taşımadan veya kurmadan önce gücü kapattığınızdan ve güç kablosunu çıkardığınızdan emin olun.

SUBWOOFER'IN BAĞLANMASI

SUBWOOFER'A OTOMATIK BAĞLANMA

Subwoofer'ın bağlantı kimliği fabrikada ayarlanmıştır ve ana ünite ve subwoofer açıldığında ana ünite ve subwoofer otomatik bağlanmalıdır (kablosuz bağlantı).

- Subwoofer tam olarak bağlandığında, subwoofer'daki mavi LED Link Göstergesinin yanıp sönmesi durur ve sürekli olarak yanar.

SUBWOOFER'A MANUEL BAĞLANMA

Ana ünite ve subwoofer açıldığında mavi LED ışığın yanıp sönmesi durmazsa, lütfen aşağıdaki adımları izleyerek kimliği ayarlayın.

- Önemli: Başlamadan önce, pili uzaktan kumandaya yerleştirin. Talimatlar için bkz. sayfa 10.

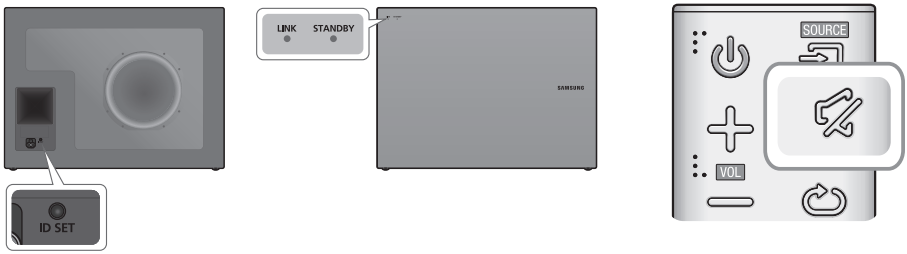

1. Ana ünite ile subwoofer'ın güç kablolarını bir AC prizine takın.
2. Küçük, ince uçlu bir nesneyle subwoofer'ın arkasındaki **ID SET** düğmesini 5 saniye basılı tutun.
   - STANDBY göstergesi kapanır ve LINK göstergesi (Mavi LED) hızla yanıp sönmeye başlar.
3. Ana ünite kapalı konumdayken (STANDBY modundayken), uzaktan kumandadaki (Sessiz) düğmesini 5 saniye basılı tutun.
4. Soundbar ekranında **ID SET** mesajı görünür.
5. Bağlantıyı tamamlamak için subwoofer üzerindeki Mavi LED yanıp sönerken ana üniteyi açın.
   - Ana ünite ve subwoofer bağlanmış olmalıdır (birbirine bağlanır).
   - Subwoofer'daki LINK göstergesi (Mavi LED) sürekli yanıyor olmalı ve yanıp sönmemelidir.
   - LINK göstergesi sürekli mavi değilse, bağlantı işlemi başarısız olmuştur. Ana üniteyi kapatın ve Adım 2'den yeniden başlayın.
   - Ses efektini seçerek kablosuz subwoofer'dan daha iyi ses elde edebilirsiniz. (Bkz. sayfa 8)

- Ürünü taşımadan veya kurmadan önce gücü kapattığınızdan ve güç kablosunu çıkardığınızdan emin olun.
- Ana ünite kapatılırsa, kablosuz subwoofer bekleme moduna girecek ve öndeki STANDBY LED'i doğrudan Kırmızı renkte yanıp sönecektir. (Mavi LED değil).
- Soundbar'ın yakınında Soundbar ile aynı frekansta (2,4GHz) çalışan bir cihaz kullandığınızda, meydana gelen girişim seste kesilmelere neden olabilir.
- Kablosuz sinyalin ana ünite ile subwoofer arasındaki iletim mesafesi yaklaşık 10 m'dir fakat çalıştırma ortamına bağlı olarak farklılık gösterebilir. Ana ünite ile kablosuz subwoofer arasında çelik-betonarme veya metal duvar varsa, kablosuz sinyali metalin içinden geçemeyeceği için sistem hiç çalışmayabilir.
- Ana ünite bir kablosuz bağlantı kuramıyorsa, bir önceki sayfada açıklanan 1-5 arası adımları izleyerek ana ünite ile kablosuz subwoofer arasındaki bağlantıyı kurmayı yeniden deneyin.

- Kablosuz alıcı anten, kablosuz subwoofer'ın içine yerleştirilmiştir. Üniteyi su ve nemden koruyun.
- En iyi dinleme deneyimi için, kablosuz subwoofer'ın bulunduğu yerin etrafındaki alanda herhangi bir engel olmamasına dikkat edin.

DERIN BAS HOPARLÖR ÜZERINDE LED GÖSTERGE LAMBASI DURUMU

LED	Durum	Açıklama	Çözüm
Kırmızı	Yanıyor	Beklemede (Soundbar ana ünitesi kapalı halde)	Soundbar ana ünitesine güç sağlanmasını kontrol edin
		Bağlantı başarısız	Yeniden bağlayın (kullanıcı el kitabındaki manuel bağlantı talimatlarına başvurun)
Mavi	Yanıyor	Bağlantı başarılı (normal çalışma)	-
	Yanıp sönüyor	Beklemede (Soundbar ana ünitesi kapalı halde)	Soundbar ana ünitesine güç sağlanmasını kontrol edin
		Bağlantı başarısız	Yeniden bağlayın (kullanıcı el kitabındaki manuel bağlantı talimatlarına başvurun)
Kırmızı ve mavi	Yanıp sönüyor	Arıza	Servis merkezi ile irtibat kurun.

SWA-8000S'YI BAĞLAMA (AYRICA SATILIR)

- Samsung Kablosuz Arka Hoparlör Kitini (SWA-8000S) Soundbar'ınıza bağlayarak doğru kablosuz surround sesi genişletin. (Ayrıca satılır)
- Kablosuz Alıcı Modülünü bağlamadan önce subwoofer'ınızı bağlayın.
- Kablosuz alıcı modülünü hoparlörlere bağlamak için hoparlör kablosunu kullanın.
- Güç kablosunu bir prize takın. LED yanar.

1. Ana ünite kapandığında (STANDBY modunda), uzaktan kumandadaki (Sessiz) düğmesini 5 saniye kadar basılı tutun.
2. Soundbar'ın ekranında **ID SET** mesajı görünür.
3. Kablosuz Alıcı Modülünün (SWA-8000S) güç kablosunu bir AC prizine takın.
4. SWA-8000S üzerindeki bağlantı göstergesi (Mavi LED) hızlı yanıp söndüğünde soundbar'ınızı açın.
5. Subwoofer'ınızda ve SWA-8000S'de bağlantı göstergeleri (Mavi LED'ler) yanıp söndüğünde ve sonra sürekli yandığında, SWA-8000S tamamen bağlanır.

- Bu, birkaç dakika sürebilir.
- Bağlandığında, kapatıp açtıktan sonra bile Soundbar'ınız ve Kablosuz Alıcı Modülü otomatik olarak yeniden bağlanır.

Kablosuz Alıcı Modülü Soundbar'ınıza bağlanmazsa (LED göstergesi Kırmızı görüntülenirken), şu şekilde bağlayın.

1. Soundbar'ınızı kapatın.
2. Soundbar ekranınızda ID SET mesajı görünene kadar uzaktan kumandanızda 5~6 saniye (Sessiz) düğmesine basın.
3. Kablosuz Alıcı Modülünün Bekleme durumunda (LED göstergesi Kırmızı görüntülenirken) olduğunu kontrol edin.
4. Kablosuz Alıcı Modülündeki LINK LED göstergesi yanıp sönene kadar (Mavi) sivri bir iğneyle 5~6 saniye boyunca arkadaki **ID SET** düğmesine basın.
5. Soundbar'ınızı uzaktan kumandadaki düğmesiyle açın ve bir süre bekleyin. LINK LED göstergesinin sürekli yandığını (Mavi) görürseniz birbirlerine tamamen bağlanmışlardır.

SURROUND HOPARLÖRLERINI BAĞLAMA (AYRICA SATILIR)

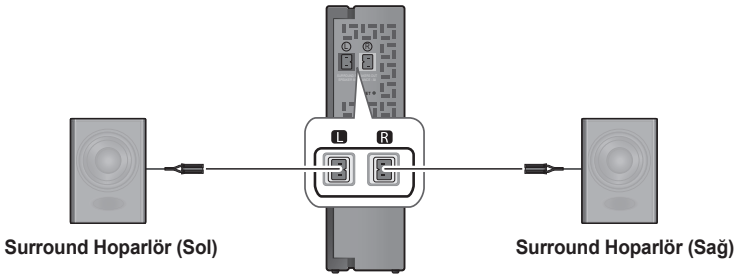

- Bu hoparlörleri dinleme konumunuzun sağına yerleştirin. Yeterince yer yoksa bu hoparlörleri birbirine bakacak şekilde yerleştirin. Kulağınızın yaklaşık 60 ila 90 cm yukarısına biraz aşağı bakacak şekilde koyun.

- Kablosuz Alıcı Modülünü Surround Hoparlörlere bağlamak için hoparlör kablosunu kullanın.
- Her hoparlörün arkasında veya altında renkli bir etiket bulunur. Her kablonun ucunda tek bir renkli bandı bulunur. Her kablodaki bandı hoparlör etiketiyle rengine göre eşleştirin ve sonra kabloyu hoparlöre bağlayın.

BIR TV'YE BAĞLANMA

● Önemli: Başlamadan önce, pili uzaktan kumandaya yerleştirin. Talimatlar için bkz. sayfa 10.

HDMI (DIJITAL) KABLOSU KULLANARAK TV ILE BAĞLANMA

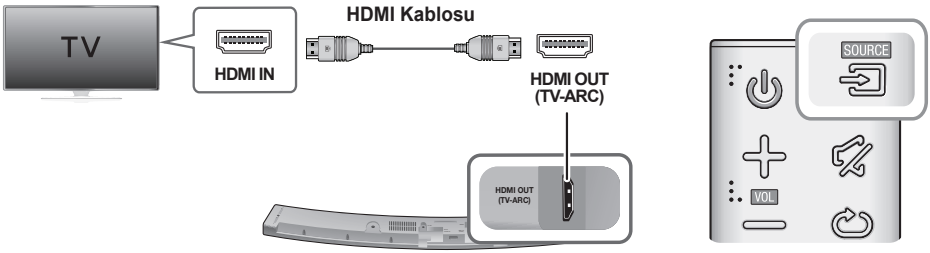

1. Bir HDMI kablosunu kullanarak ürünün arkasındaki **HDMI OUT (TV-ARC)** jakını TV'nizin HDMI IN jakına bağlayın.
2. **D.IN** modunu seçmek için ana ünitenin üst panelindeki ⏎ düğmesine veya uzaktan kumandadaki **SOURCE** düğmesine basın.

- HDMI, video ve ses verilerinin tek bir konnektör üzerinden dijital olarak aktarılmasını sağlayan bir arabirimdir.
- TV'de bir ARC (Ses Dönüş Kanalı) bağlantı noktası bulunuyorsa, HDMI kablosunu HDMI IN (ARC) bağlantı noktasına bağlayın.
- Mümkünse çekirdeksiz bir HDMI kablosu kullanılması önerilir. Çekirdekli bir HDMI kablosu kullanılıyorsa, çapı 14 mm'den az bir kablo kullanın.
- Anynet+ özelliğinin açık olması gerekir.
- HDMI kablosu ARC'yi desteklemiyorsa, bu işlev kullanılamaz.

TV'YI DIJITAL OPTIK KABLO KULLANARAK BAĞLAMA

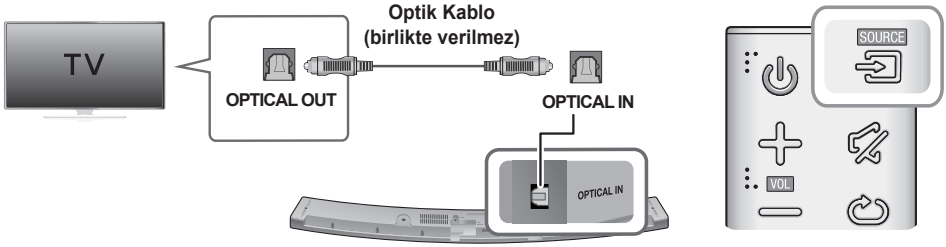

1. Soundbar üzerindeki **OPTICAL IN**'i (Ses) TV'nin OPTICAL OUT jakına bağlayın.
2. **D.IN** modunu seçmek için ana ünitenin üst panelindeki ⏎ düğmesine veya uzaktan kumandadaki **SOURCE** düğmesine basın.

► Auto Power Link

Ana üniteyi dijital bir optik kablo ile bir TV'ye bağlarsanız, TV'yi açtığınızda Soundbar'ın otomatik olarak açılması için Auto Power işlevini ON olarak ayarlayın.

1. Soundbar ve TV'yi bir Optik kablo (ayrı satılır) ile bağlayın.
2. **D.IN** modunu seçmek için ana ünitenin üst panelindeki ⏎ düğmesine veya uzaktan kumandadaki **SOURCE** düğmesine basın.
3. Auto Power Link öğesini açmak veya kapatmak için uzaktan kumandadaki ◀ düğmesine 5 saniye kadar basın.

- Auto Power Link varsayılan olarak AÇIK değerine ayarlanmıştır.
- Her bağlı cihazda Otomatik Güç Bağlantısı fonksiyonu çalışmayabilir.

TV SOUNDCONNECT

TV sesini, TV SoundConnect işlevini destekleyen bir Samsung TV'ye bağlı Soundbar aracılığıyla dinleyebilirsiniz.

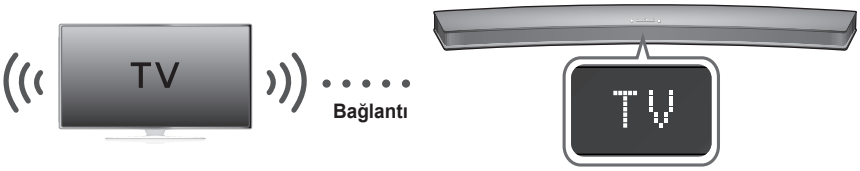

1. TV'yi ve Soundbar sistemini açın.
2. **TV** modunu seçmek için ana ünitenin üst panelindeki ⏎ düğmesine veya uzaktan kumandadaki **SOURCE** düğmesine basın.
3. TV'de, TV'nin SoundConnect işlevinin etkinleştirilip etkinleştirilmeyeceğini soran bir mesaj belirir.
4. Televizyon ve Soundbarı'ı bağlamayı tamamlamak için, televizyon kumandasından **<Evet>** seçin.

- TV SoundConnect bağlantısı işlemi başarısız olursa, TV'nin Ses menüsünde SoundConnect'e gidin, **Yeni Cihaz Ekle** öğesini seçin ve **Yeni Cihaz Ekle** öğesini **AÇIK** olarak ayarlayın. Sonra yeniden deneyin.
- Soundbar'ın modunu TV'den başka bir moda geçirmek TV SoundConnect'i otomatik olarak sona erdirir.
- Soundbar'i başka bir TV'ye bağlamak için mevcut bağlantının sonlandırılması gerekir.
- Varolan bağlantıyı sonlandırmak için, uzaktan kumandadaki ►II düğmesini 5 saniye kadar basılı tutun veya başka bir moda geçin. Başka bir TV'ye bağlanmak için, yukarıdaki Adım 1 ila 4 arasını izleyin.

- TV SoundConnect (SoundShare) işlevi 2012'de satışa çıkarılan bazı Samsung TV'lerde desteklenir. Başlamadan önce TV'nizin TV SoundConnect (SoundShare) işlevini destekleyip desteklemediğini kontrol edin. (Daha fazla bilgi için, TV'nin kullanım kılavuzuna bakın.)
- Samsung TV'niz 2014'ten önce satışa sunulmuşsa SoundShare ayar menüsünü kontrol edin.
- TV ve Soundbar arasındaki mesafe, 10 m üzerindeyse bağlantı düzgün olmayabilir veya ses takılabilir. Böyle bir durumda, televizyonun veya Soundbar'in yerini çalışma aralığında olacak şekilde değiştirin ve TV SoundConnect bağlantısını tekrar kurun.
- TV SoundConnect Çalışma Aralığı:
  - Önerilen eşleştirme aralığı: 2 m dahilinde
  - Önerilen çalışma aralığı: 10 m dahilinde
- Soundbar veya Soundbar uzaktan kumandası üzerindeki Oynatma/Duraklatma, Sonraki ve Önceki düğmeleri TV'yi kontrol etmez.

► Bluetooth POWER On işlevinin kullanılması

Bluetooth POWER On işlevi, Soundbar'ın TV SoundConnect kullanılarak Bluetooth uyumlu bir televizyona başarıyla bağlanmasından sonra kullanılabilir. Bluetooth POWER On işlevi AÇIK konumdayken, bağlı televizyonu açmak veya kapatmak Soundbar'ı da açıp kapatacaktır.

1. TV SoundConnect işlevini kullanarak televizyonu Soundbar'a bağlayın.
2. Soundbar ve uzaktan kumandanızın **Bluetooth POWER** düğmelerine basın.
   Soundbar ekranında, **ON - BLUETOOTH POWER** mesajı görünür.
   - **ON - BLUETOOTH POWER** : Televizyonu açtığınızda veya kapattığınızda Soundbar de açılır ve kapanır.
   - **OFF - BLUETOOTH POWER** : Soundbar yalnızca televizyonu kapattığınızda kapanır.

- Bu işlev, sadece 2013'ten itibaren satışa sunulan Samsung TV'lerde desteklenir.

HARICI CIHAZLARA BAĞLANMA

HDMI KABLOSU

HDMI; TV'ler, projektörler, DVD oynatıcıları, Blu-ray oynatıcıları, set üstü kutuları gibi cihazlara bağlantı kurmak için kullanılan standart bir dijital arabirimdir.

HDMI en yüksek kalitede dijital sinyal ilettiği için, aynen dijital kaynakta ilk oluşturulduğundaki gibi, üstün ses ve görüntü kalitesi elde edebilirsiniz.

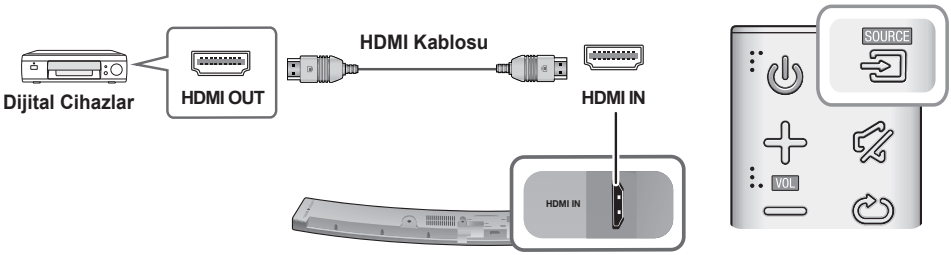

1. Bir HDMI kablosu kullanarak ürünün arkasındaki **HDMI IN** jakını dijital cihazlarınızın HDMI OUT jakına bağlayın.
2. **HDMI** modunu seçmek için ana ünitenin üst panelindeki ⏎ düğmesine veya uzaktan kumandadaki **SOURCE** düğmesine basın.

OPTIK VEYA ANALOG SES KABLOSU

Bu ünite jakta bir dijital optik ve jakta bir analog ses (AUX) ile gelir, böylece harici cihazlara bağlamak için iki yolunuz vardır.

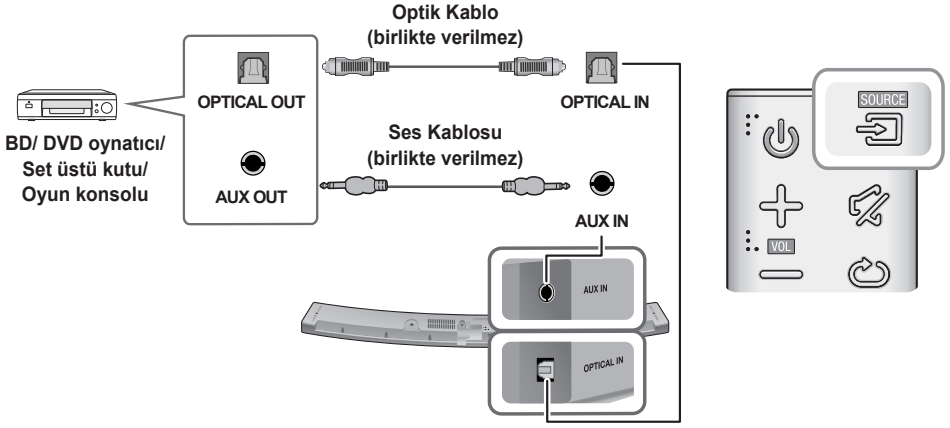

► AUX Kablosu

1. Bir ses kablosu kullanarak ana ünitedeki **AUX IN** (Ses) öğesini Kaynak Aygıtın AUDIO OUT jakına bağlayın.
2. **AUX** modunu seçmek için ana ünitenin üst panelindeki ⏎ düğmesine veya uzaktan kumandadaki **SOURCE** düğmesine basın.

► Optik Kablo

1. Dijital optik kablo kullanarak ana ünitedeki **OPTICAL IN** (Ses) öğesini Kaynak Cihazın OPTICAL OUT jakına bağlayın.
2. **D.IN** modunu seçmek için ana ünitenin üst panelindeki ⏎ düğmesine veya uzaktan kumandadaki **SOURCE** düğmesine basın.

USB

USB depolama aygıtlarında bulunan müzik dosyalarını Soundbar aracılığıyla oynatabilirsiniz.

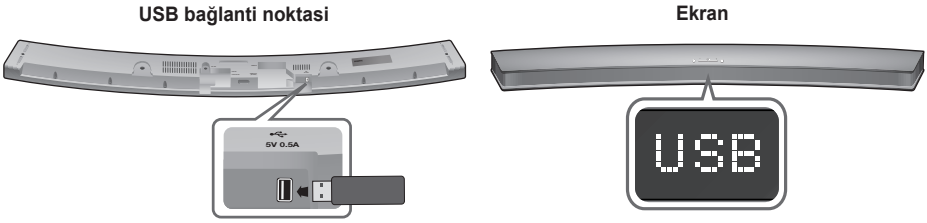

1. USB cihazını ürünün USB bağlantı noktasına bağlayın.
2. **USB** modunu seçmek için ana ünitenin üst panelindeki ⏎ düğmesine veya uzaktan kumandadaki **SOURCE** düğmesine basın.
3. Ekranda **USB** görünür.
   - Soundbar ve USB aygıtı bağlantısı tamamlandı.
   - 5 dakikadan uzun süreyle hiçbir USB cihazı bağlanmazsa otomatik olarak kapanır (Auto Power Off).

► USB cihazını bağlamadan önce

Aşağıdaki maddelere dikkat edin :

- USB cihazındaki bir klasörün veya dosyanın adı 10 karakterden daha uzunsa, Soundbar ekranında görüntülenmez.
- Bu ürün belirli USB depolama ortamlarıyla uyumlu olmayabilir.
- FAT16 ve FAT32 dosya sistemleri desteklenir.
  - NTFS dosya sistemi desteklenmemektedir.

- USB cihazını doğrudan ürünün USB bağlantı noktasına bağlayın. Aksi takdirde, USB uyumluluk sorunuyla karşılaşabilirsiniz.
- Çoklu kart okuyucu kullanarak ürüne birden çok depolama cihazı bağlamayın. Ürün düzgün çalışmayabilir.
- Dijital kamera PTP protokolleri desteklenmemektedir.
- USB cihazını dosya aktarımı yaparken çıkarmayın.
- Ticari bir web sitesinden indirilmiş DRM korumalı müzik dosyaları (MP3, WMA) oynatılmayacaktır.
- Harici HDD'ler desteklenmemektedir.
- Cep telefonları desteklenmez.
- Uyumluluk listesi:

Uzantı	Codec	Örnekleme Hızı	Bit oranı
***.mp3**	MPEG 1 Layer2	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 1 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2.5 Layer3	16KHz ~ 48KHz	80kbps~320kbps
***.wma**	Wave_Format_MSAudio1	16KHz ~ 48KHz	56kbps~128kbps
	Wave_Format_MSAudio2	16KHz ~ 48KHz	56kbps~128kbps
***.aac**	AAC	16KHz ~ 96KHz	48kbps~320kbps
	AAC-LC	16KHz ~ 96KHz	128kbps~192kbps 5.1ch 320kbps
	HE-AAC	24KHz ~ 96KHz	48kbps~64kbps 5.1ch 160kbps
***.wav**	-	16KHz ~ 48KHz	3000kbps'ye kadar
***.ogg**	OGG 1.1.0	16KHz ~ 48KHz	50kbps~500kbps
***.flac**	FLAC 1.1.0, FLAC 1.2.1	16KHz ~ 96KHz	3000kbps'ye kadar



- USB cihazında saklanan çok fazla klasör ve dosya varsa, okunması zaman alabilir.

GIRIŞ MODU

İstediğiniz modu seçmek için ana ünitenin üst panelindeki ⏎ düğmesine veya uzaktan kumandadaki **SOURCE** düğmesine basın.



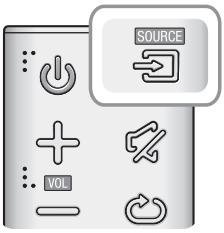

Giriş modu	Ekran
Optik Dijital Giriş ARC (HDMI OUT) girişi	**D.IN**
AUX girişi	**AUX**
HDMI girişi	**HDMI**
BLUETOOTH modu	**BT**
TV SoundConnect	**TV**
USB modu	**USB**

AUTO POWER DOWN İŞLEVI

Ünite aşağıdaki durumlarda otomatik olarak kapanır:

- D.IN/HDMI/BT/TV/USB Modu
  - 5 dakika boyunca ses sinyali olmadığında.
- AUX Modu
  - AUX kablosu 5 dakika boyunca bağlı olmadığında.
  - AUX kablosu bağlandığında 8 saat süreyle TUŞ girişi yapılmazsa. (Auto Power Down işlevi yalnızca bu durumda kapatılabilir.)

  Auto Power Down işlevini kapatmak için **AUX** modundayken **►II** düğmesini 5 saniye basılı tutun.
  Ekranda **ON - AUTO POWER DOWN** / **OFF - AUTO POWER DOWN** görüntülenir.

BLUETOOTH

Soundbar'a bir Bluetooth cihazı bağlayabilir ve stereo sesin keyfini kablosuz olarak çıkarabilirsiniz!

SOUNDBAR'I BIR BLUETOOTH CIHAZINA BAĞLAMAK IÇIN

Bluetooth cihazının Bluetooth uyumlu stereo kulaklık işlevini destekleyip desteklemediğini kontrol edin.

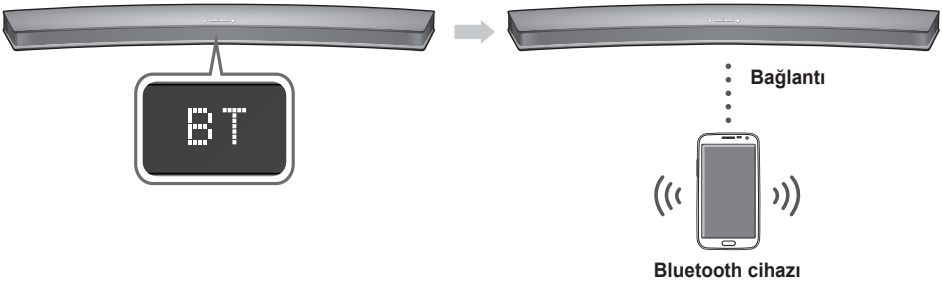

1. **BT** modunu seçmek için ana ünitenin üst panelindeki ⏎ düğmesine veya uzaktan kumandadaki **SOURCE** düğmesine basın.
   - Soundbar'ın ön ekranında **BT READY** seçeneğini göreceksiniz.
2. Bağlanmak istediğiniz Bluetooth cihazındaki Bluetooth menüsünü açın. (Bluetooth cihazının kullanım kılavuzuna bakın.)
3. Listeden "**[Samsung] HW-Jxxxx J-Series**" seçeneğini seçin.
   - Soundbar Bluetooth cihazına bağlandığında, ön kısımda [**Bluetooth cihaz adı**] → **BT** görüntülenecektir.
   - Cihaz adı sadece İngilizce görüntülenebilir. Ad İngilizce değilse bir alt çizgi " _ " görüntülenir.
   - Bluetooth cihazı Soundbar ile eşleştirilemezse, Bluetooth cihazı tarafından bulunan önceki "**[Samsung] HW-Jxxxx J-Series**" öğesini silin ve cihazın Soundbar'i tekrar aramasını sağlayın.
4. Bağlanan cihazda müzik çalın.
   - Bağlı Bluetooth cihazında çalınan müziği Soundbar sisteminden dinleyebilirsiniz.
   - **BT** modunda Oynat/Duraklat/Sonraki/Önceki işlevleri mevcut değildir. Ancak bu işlevler AVRCP'yi destekleyen Bluetooth cihazlarında bulunur.

- Bir Bluetooth cihazını bağlarken PIN kodu istenirse <0000> girin.
- Bir defada sadece bir Bluetooth cihazı eşleştirilebilir.
- Soundbar kapalı konumuna getirildiğinde Bluetooth bağlantısı sona erdirilir.
- Soundbar, aşağıda belirtilen durumlarda Bluetooth aramasını ve bağlantısını doğru şekilde gerçekleştirmeyebilir:
  - Soundbar'in çevresinde güçlü bir elektrik alanı olduğunda.
  - Birden çok Bluetooth cihazı Soundbar ile eşzamanlı olarak eşleştirildiğinde.
  - Bluetooth cihazı kapalı olduğunda, yerinde değilse veya arızalı olduğunda.

- Mikrodalga fırın, kablosuz LAN adaptör, fl oresan lamba ve gazlı fırın gibi cihazların Bluetooth cihazıyla aynı frekans aralığını kullandığını ve bu durumun elektrik geçirgenliğine neden olabileceğini unutmayın.
- Soundbar, SBC verilerini (44,1kHz, 48kHz) destekler.
- Yalnızca A2DP (AV) işlevini destekleyen bir Bluetooth cihazını bağlayın.
- Soundbar'i yalnızca HF (Eller Serbest) işlevini destekleyen bir Bluetooth cihazına bağlayamazsınız.
- Soundbar ile Bluetooth cihazını eşleştirdiğinizde, cihazın taranmış cihazlar listesinden "**[Samsung] HW-Jxxxx J-Series**" seçeneğini seçerseniz Soundbar otomatik olarak **BT** moduna geçer.
  - Sadece Soundbar, Bluetooth cihazının eşlenen cihazları listesinde bulunuyorsa kullanılabilir. (Bluetooth cihazı ve Soundbar en az bir kere önceden eşleştirilmiş olmalıdır.)
- Soundbar, ancak Soundbar **BT READY** görüntülediğinde Bluetooth cihazının aranan cihazlar listesinde görüntülenir.
- TV SoundConnect modunda Soundbar, başka bir Bluetooth cihazıyla eşleştirilemez.

BLUETOOTH POWER ON (BLUETOOTH POWER)

Bluetooth POWER On işlevi açıkken ve Soundbar kapalıyken önceden eşlenen Bluetooth cihazı Soundbar ile eşleşmeye çalışırsa Soundbar otomatik açılır.

1. Soundbar açıkken uzaktan kumandadaki Bluetooth POWER (Bluetooth GÜÇ) düğmesine basın.
2. Soundbar'ın ekranında **ON - BLUETOOTH POWER** görünür.

BLUETOOTH CIHAZININ SOUNDBAR BAĞLANTISINI KESMEK IÇIN

Bluetooth cihazının Soundbar bağlantısını kesebilirsiniz. Talimatlar için Bluetooth cihazının kullanım kılavuzuna bakın.

- Soundbar bağlantısı kesilecektir.
- Soundbar sisteminin Bluetooth cihazıyla bağlantısı kesildiğinde, Soundbar'in ön panelinde **BT DISCONNECTED** mesajı görüntülenir.

SOUNDBAR SISTEMININ BLUETOOTH CIHAZI BAĞLANTISINI KESMEK IÇIN

BT'den başka bir moda geçmek veya Soundbar'ı kapatmak için uzaktan kumandadaki **SOURCE** düğmesine veya ürünün üst panelindeki ⏎ düğmesine basın.

- Bağlı Bluetooth cihazı bağlantıyı sonlandırmadan önce belli bir süre boyunca Soundbar'den yanıt gelmesini bekleyecektir. (Bağlantı kesme süresi Bluetooth cihazına bağlı olarak farlılık gösterebilir)

- Bluetooth bağlantısı modunda, Soundbar ile Bluetooth cihazı arasındaki mesafe 10 m aştığında Bluetooth bağlantısı kaybolur.
- Soundbar, Hazır durumdayken 5 dakika sonra otomatik olarak kapanır.

► Bluetooth Hakkında Daha Fazla Bilgi

Bluetooth, Bluetooth uyumlu cihazların kısa mesafeli bir kablosuz bağlantı kullanarak birbirine kolayca bağlanmasını sağlayan bir teknolojidir.

- Aşağıdaki durumlarda, kullanıma bağlı olarak Bluetooth cihazı parazite veya arızaya neden olabilir:
  - Vücudunuz Bluetooth cihazının ya da Soundbar'in alıcı/verici sistemiyle temas halinde olduğunda.
  - Duvar, köşe veya ofi s bölmeleri gibi engellerden kaynaklanan elektrik dalgalanmalarına maruz kaldığında.
  - Tıbbi ekipman, mikrodalga fırın ve kablosuz LAN dahil olmak üzere aynı frekans bandını kullanan cihazların neden olduğu elektrik girişimine maruz kaldığında.
- Soundbar sistemini yakın mesafe içerisinde tutulan Bluetooth cihazıyla eşleştirin.
- Soundbar ile Bluetooth cihazı arasındaki mesafe ne kadar artarsa kalite de o denli düşecektir. Bu mesafe Bluetooth'un çalışma aralığını aştığında bağlantı kaybolur.
- Sinyal alım hassasiyetinin düşük olduğu alanlarda Bluetooth bağlantısı düzgün çalışmayabilir.
- Bluetooth bağlantısı yalnızca sete yakın olduğunda çalışır. Mesafe bu aralığın dışına çıktığında bağlantı otomatik olarak kesilir. Bu aralık içinde bile, duvar veya kapı gibi engeller ses kalitesini düşürebilir.
- Bu kablosuz cihaz, çalışması sırasında elektrik etkileşimine neden olabilir.

SAMSUNG AUDIO REMOTE UYGULAMASINI KULLANMA

► Samsung Audio Remote Uygulamasını Yükleme

Akıllı cihazınızla ve Samsung Audio Remote uygulamasıyla Soundbar'ı kontrol etmek için, Samsung Audio Remote uygulamasını Google Play store'dan indirin.

Pazar arama : Samsung Audio Remote



► Samsung Audio Remote Uygulamasını Başlatma

Samsung Audio Remote uygulamasını başlatmak ve kullanmak için, akıllı cihazınızda Audio Remote simgesine dokunun ve sonra ekrandaki talimatları izleyin.



- Samsung Audio Remote uygulaması yalnızca Android OS 3.0 veya üstünü çalıştıran Android cep telefonları ve mobil cihazlarıyla uyumludur.

YAZILIM GÜNCELLEME

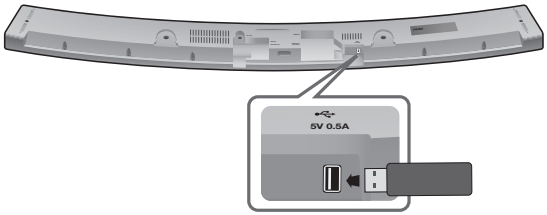

Samsung ileride Soundbar sistem yazılımı için güncellemeler sunabilir.

Bir yazılım güncellemesi sunulduğunda, yazılım güncellemesini kaydettiğiniz bir USB cihazını Soundbar sisteminizin USB bağlantı noktasına takarak cihaz yazılımını güncelleyebilirsiniz.

Birden çok güncelleme dosyası varsa, bunları USB cihazına tek tek yüklemeniz ve cihaz yazılımını güncellemek üzere tek tek kullanmanız gerektiğini unutmayın.

Güncelleme dosyalarının indirilmesi hakkında daha fazla bilgi almak için lütfen Samsung.com'u ziyaret edin veya Samsung müşteri hizmetleriyle irtibat kurun.

GÜNCELLEME PROSEDÜRÜ

1. Ürün yazılımını indirmek için aşağıdaki adımları izleyin:
   Samsung web sitesine gidin (samsung.com/sec) → model adını arayın - müşteri destek seçeneğini seçin (seçeneğin adı değişebilir)
2. İndirilen yazılımı bir USB çubuğuna kaydedin ve "Buraya Çıkart" öğesini seçerek klasörün sıkıştırmasını açın.
3. Soundbar'ı kapatın ve yazılım güncellemesini içeren USB çubuğu USB bağlantı noktasına takın.
4. Güç kablosunun bağlantısını kesin, yeniden bağlayın ve sonra Soundbar'ı açın.
5. Soundbar'ı açın. 3 dakika içinde, **UPDATE** görüntülenir ve güncelleme başlar.
6. Tamamlandıktan sonra Soundbar'ın gücü kapatılır. Bu durumdayken, uzaktan kumandadaki ►II düğmesini 5 saniye süresince basılı tutun.

UPDATE GÖRÜNTÜLENMIYORSA

1. Soundbar'ı kapatın ve güncelleme dosyalarını içeren USB depolama aygıtını Soundbar'ın USB bağlantı noktasına takın.
2. Güç kablosunu çıkarın, yeniden takın ve açın.

- Yazılım yükseltmesini içeren bir USB cihazını ana ünitedeki USB bağlantı noktasına takın.
- Soundbar tarafından desteklenen ses dosyaları USB depolama aygıtında kayıtlıysa, güncelleme yazılımı düzgün çalışmayabilir.
- Güncellemeler uygulanırken gücü kapatmayın veya USB cihazını çıkarmayın. Ana ünite, cihaz yazılımı güncellemesini tamamladıktan sonra otomatik olarak kapanır.
- Güncelleme tamamlandıktan sonra Soundbar'da kullanıcı kurulumu başlatılır. Güncellemeden sonra kolaylıkla tekrar ayarlayabilmeniz için, ayarlarınızı bir yere not etmenizi öneririz.
  Güncelleme yazılımının subwoofer bağlantısını da sıfırladığını unutmayın. Güncelleme sonrasında subwoofer bağlantısı otomatik olarak tekrar kurulmazsa, sayfa 15'e bakın. Yazılım güncellenmezse, USB çubuğun arızalı olup olmadığını kontrol edin.
- Mac OS kullanıcıları USB formatı olarak MS-DOS (FAT) kullanmalıdır.
- Üreticisine bağlı olarak bazı USB depolama cihazları desteklenmeyebilir.

SORUN GIDERME

Servis talep etmeden önce aşağıdakileri kontrol edin.

Ünite artık açılacaktır.	
• Güç kablosu prize takılı mı?	→ Güç fişini prize takın.

Düğmeye basıldığında fonksiyon çalışmıyor.	
• Havada statik elektrik var mı?	→ Güç fişini çıkarın ve tekrar takın.

Ses üretilmiyor.	
• Sessiz fonksiyonu açık mı?	→ İşlevi iptal etmek için (Sessiz) düğmesine basın.
• Ses minimuma mı getirilmiş?	→ Sesi açın.

Uzaktan kumanda çalışmıyor.	
• Piller bitmiş mi?	→ Yeni pillerle değiştirin.
• Uzaktan kumanda ile ana cihaz arasındaki mesafe çok mu fazla?	→ Cihaza daha yaklaştırın.

TV SoundConnect (TV eşleşmesi) başarısız.	
• TV'niz TV SoundConnect işlevini destekliyor mu?	→ TV SoundConnect, 2012'den sonra satışa sunulan bazı Samsung TV'ler tarafından desteklenir. TV'nizin TV SoundConnect'i destekleyip desteklemediğini kontrol edin.
• TV'nizin yazılımı en son sürüm mü?	→ TV'nizi en son sürümüne güncelleyin.
• Bağlantı sırasında bir hata oluşuyor mu?	→ Samsung çağrı merkeziyle iletişim kurun.
	→ TV SoundConnect'i sıfırlayın ve yeniden bağlayın. TV SoundConnect bağlantısını sıfırlamak için, ⏯ düğmesini 5 saniye kadar basılı tutun.

Subwoofer üzerindeki kırmızı LED yanıp sönüyor ve subwooferdan ses çıkmıyor.	
• Subwooferınız ürünün ana gövdesine bağlanmamış olabilir.	→ Subwooferınızı yeniden bağlamayı deneyin. (Bkz. sayfa 15)

SPESIFIKASYONLAR

GENEL	**USB**		5V / 0,5A
	Ağırlık	**Ana Ünite**	2,7 kg
		Subwoofer (PS-WJ6000R / PS-WJ6001R)	6,8 kg
	Ebatlar (G x Y x D)	**Ana Ünite**	1078,0 x 47,5 x 129,0 mm
		Subwoofer (PS-WJ6000R / PS-WJ6001R)	452,0 x 335,0 x 154,0 mm
	Çalışma sıcaklığı aralığı		+5°C ila +35°C
	Çalışma nem aralığı		10 % ila 75 %
AMPLİFİKATÖR	**Nominal çıkış gücü**	**Ana Ünite**	22W x 6, 4 OHM, THD≦10%
		Subwoofer (PS-WJ6000R / PS-WJ6001R)	168W, 3 OHM, THD≦10%

* Tasarım ve teknik özellikler önceden haber verilemeksizin değiştirilebilir.

* Nominal özellikler

- Samsung Electronics Co., Ltd, önceden bildirimde bulunmaksızın özellikleri değiştirme hakkını saklı tutmaktadır.
- Ağırlık ve boyutlar yaklaşık değerlerdir.
- Güç kaynağı ve Güç Tüketimi için, ürüne yapıştırılan etikete bakın.

※ **Açık Kaynak Lisans Bildirimi**

- Açık kaynaklarla ilgili soru ve talepleriniz için E-posta yoluyla Samsung'a başvurun (oss.request@samsung.com).

PATENTLERI

Manufactured under licence from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

DTS patentleri için bkz: http://patents.dts.com. DTS Licensing Limited lisansı ile üretilmiştir. DTS, Sembol ve DTS ile Sembol birlikte tescilli ticari markalardır ve DTS 2.0 Channel, DTS, Inc. © DTS, Inc.'in ticari markasıdır.
Bütün Hakları Saklıdır.

HDMI ve HDMI High-Definition Multimedia Interface (Yüksek Tanımlı Multimedya Arabirimi) terimleri ve HDMI Logosu HDMI Licensing LLC'nin ABD ve diğer ülkelerdeki ticari markaları veya tescilli ticari markalarıdır.

Kablosuz Modeller (5,15 GHz-5,35 GHz frekansı dahil)

İşbu belge ile, Samsung Electronics bu ekipmanın 1999/5/EC Direktifinin esas gerekliliklerine ve diğer ilgili hükümlerine uygun olduğunu beyan eder.
Orijinal Uyumluluk Beyanı http://www.samsung.com adresinde bulunabilir,
Destek > Ürün Desteği Ara bölümüne gidin ve model adını girin.
Bu cihaz tüm AB ülkelerinde kullanılabilir.
Bu cihaz yalnızca iç mekanlarda kullanılabilir.

Kablosuz Modeller (5,15 GHz-5,35 GHz frekansı hariç)

İşbu belge ile, Samsung Electronics bu ekipmanın 1999/5/EC Direktifinin esas gerekliliklerine ve diğer ilgili hükümlerine uygun olduğunu beyan eder.
Orijinal Uyumluluk Beyanı http://www.samsung.com adresinde bulunabilir,
Destek > Ürün Desteği Ara bölümüne gidin ve model adını girin.
Bu cihaz tüm AB ülkelerinde kullanılabilir.

SAMSUNG

İthalatçı Firma

SAMSUNG

SAMSUNG Electronics İstanbul Pazarlama ve Ticaret LTD. ŞTİ
Flatofis İstanbul İş Merkezi, Otakçılar Cad. Bina
No: 78, Kat:3, No: B3, 34050, Eyüp, İstanbul / Türkiye
Tel: (0212) 467 06 00

Bu ürünün ortalama yaşam süresi 10 yıldır

İmalatçı : (Maetan dong) 129, Samsung-ro, Yeongtong-Gu, Suwon Si.
Gyeonggi-Do 16677 Korea

L V D : Korea Testing Laboratory (KTL)
87, Digital-ro 26-gil, Guro-gu, Seoul, 08389, KOREA, REPUBLIC OF
Tel : +82 2 8601 114 / Fax : +82 2 8601 285

E M C : SEC EMC Laboratory
(Maetan dong) 129, Samsung-ro, Yeongtong-Gu, Suwon Si.
Gyeonggi-Do 16677 Korea
CTK Co.,Ltd.
(Ho-dong), 113, Yejik-ro, Cheoin-gu, Yongin-si, Gyeonggi-do, Korea

© 2016 Samsung Electronics Co., Ltd. Tüm hakları saklıdır.

SAMSUNG WORLD WIDE ile iletişim

Samsung ürünleri ile ilgili soru ve taleplerinizde lütfen Samsung Çağrı Merkezi ile iletişime geçiniz.

Country	Contact Centre ☎	Web Site
TURKEY	444 77 11	www.samsung.com/tr/support

[Bu üründeki pillerin doğru atılması]

(Ayrı toplama sistemlerine sahip ülkeler içindir)

Pildeki, kılavuzdaki veya ambalajdaki bu işaret bu üründeki pillerin kullanım ömürlerinin sonunda diğer ev atıkları ile birlikte atılmaması gerektiğini belirtir. Hg, Cd veya Pb kimyasal sembolleri pilin EC Yönetmeliği 2006/66'da belirtilen referans değerlerin üstünde cıva, kadmiyum veya kurşun içerdiğini gösterir. Piller düzgün atılmazsa, bu maddeler insan sağlığına veya ortama zarar verebilir.

Doğal kaynakları korumak ve malzemelerin yeniden kullanılmasını özendirmek için pilleri diğer atık türlerinden ayırıp bölgenizdeki ücretsiz pil iade sistemiyle geri dönüştürülmesini sağlayın.

Bu Ürünün Doğru Şekilde Atılması (Atık Elektrikli ve Elektronik Cihazlar)

(Ayrı toplama sistemlerine sahip ülkeler içindir)

Ürünün, aksesuarların veya ilgili belgelerin üzerinde bulunan bu işaret, ürünün ve elektronik aksesuarlarının (örn. şarj cihazı, kulaklık, USB kablo) kullanım ömrü sonunda diğer ev atıklarıyla birlikte atılmaması gerektiğini belirtir. Atıkların kontrolsüz olarak imha edilmesinin çevre ve insan sağlığı üzerindeki zararlı etkisini engellemek için lütfen bunu diğer atık türlerinden ayırın ve malzeme kaynaklarının sürdürülebilir şekilde yeniden kullanılabilmesi için geri dönüştürülmesini sağlayın.
Ev kullanıcıları, bu ürünü çevresel açıdan güvenli bir geri dönüştürme işlemi için nereye ve nasıl ulaştıracakları hakkında ayrıntılı bilgi için ürünü satın aldıkları bayi ile veya yerel resmi makamla irtibat kurmalıdır.
İş kullanıcıları tedarikçileri ile irtibat kurup satın alma sözleşmesinin hüküm ve koşullarına bakmalıdır. Bu ürün ve ürünün elektronik aksesuarları, imha için diğer ticari atıklarla karıştırılmamalıdır.

AEEE Yönetmeliğine Uygundur