SAMSUNG

HW-J6000R
HW-J6001R

User manual

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at
www.samsung.com/register

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION **RISK OF ELECTRIC SHOCK. DO NOT OPEN.**	 This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.
	 This symbol indicates that important literature concerning operation and maintenance has been included with this product.

	Class II product : This symbol indicates that it does not require a safety connection to electrical earth (ground).
	AC voltage : This symbol indicates that the rated voltage marked with the symbol is AC voltage.
	DC voltage : This symbol indicates that the rated voltage marked with the symbol is DC voltage.
	Caution, Consult instructions for use : This symbol instructs the user to consult the user manual for further safety related information.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

PRECAUTIONS

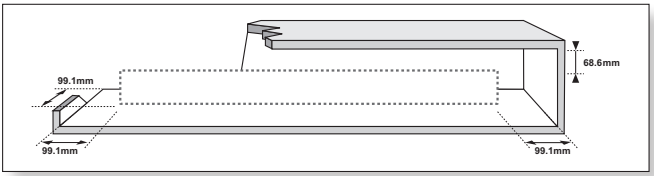

Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7~10 cm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

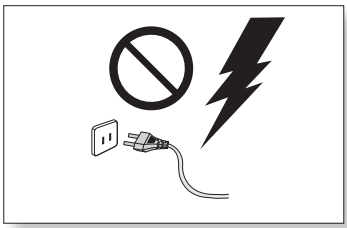

During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

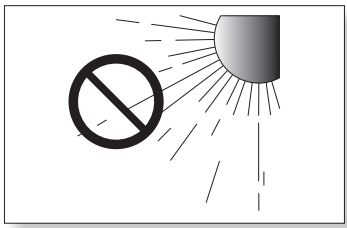

Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and cause the unit to malfunction.

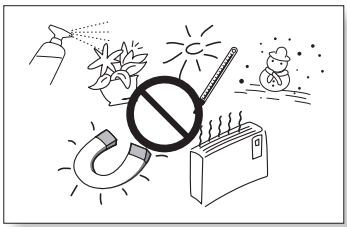

Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only. Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

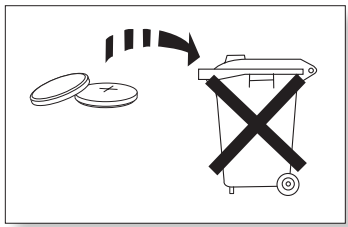

The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash. Do not dispose of batteries in a fire. Do not short circuit, disassemble, or overheat the batteries. There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING: DO NOT INGEST BATTERY. CHEMICAL BURN HAZARD. The remote control supplied withthis product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CONTENTS

2 GETTING STARTED

2 Safety Information

5 What's Included

6 DESCRIPTIONS

6 Top / Front Panel

7 Rear / Bottom Panel

8 Remote Control

11 INSTALLATION

11 Installing the Soundbar

11 Installing the Wall Mount

14 Placing the Soundbar on a TV stand

14 Installing the Soundbar as a Free-Standing Unit

15 CONNECTIONS

15 Connecting the Subwoofer

17 Connecting the SWA-8000S (Sold Separately)

19 Connecting to a TV

19 Connecting to a TV Using an HDMI (Digital) Cable

20 Connecting to a TV Using a Digital Optical Cable

20 TV SoundConnect

22 Connecting to External Devices

22 HDMI Cable

22 Optical or Analogue Audio Cable

23 USB

25 FUNCTIONS

25 Input Mode

26 Bluetooth

29 Software Update

31 TROUBLESHOOTING

31 Troubleshooting

32 APPENDIX

32 Specifications

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

WHAT'S INCLUDED

BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

► Icons used in this manual

Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be cancelled.
	Note	Indicates tips or instructions on the page that help you operate a function.

Check for the supplied accessories shown below.



Remote Control / Lithium Battery (3V : CR2032)



Power Cord : 2 EA



AC/DC Adapter



HDMI Cable



Bracket-Wall : 2 EA



Wall Mount Guide



Holder-Fix Mount : 2 EA

- The appearance of the accessories may differ slightly from the illustrations above.

TOP / FRONT PANEL

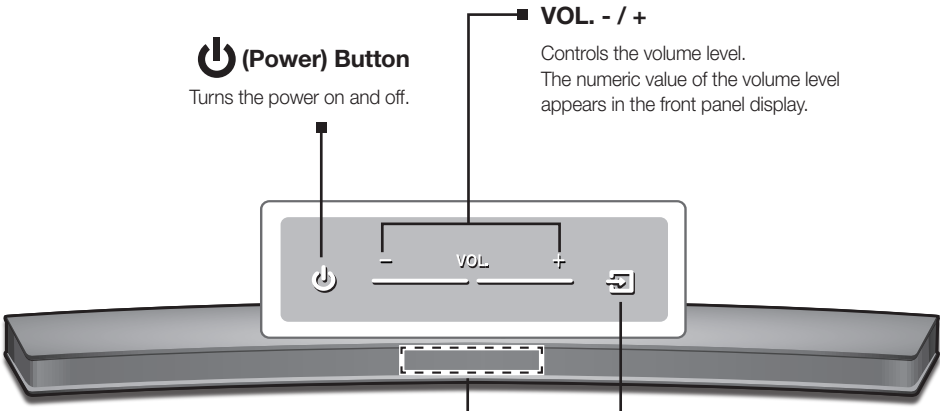

- When you plug in the AC cord, the power button will begin working in 4 to 6 seconds.
- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.
- If you want to enjoy sound only from the Soundbar, you must turn off the TV's speakers in the Audio Setup menu of your TV. Refer to the owner's manual supplied with your TV.

REAR / BOTTOM PANEL

AUX IN

Connect to the Analogue output of an external device.

HDMI IN

Inputs digital video and audio signals simultaneously using an HDMI cable. Use when connecting a supported external device.

OPTICAL IN (D.IN)

Connect to the digital (optical) output of an external device.

HDMI OUT (TV-ARC)

Outputs digital video and audio signals simultaneously using an HDMI cable.

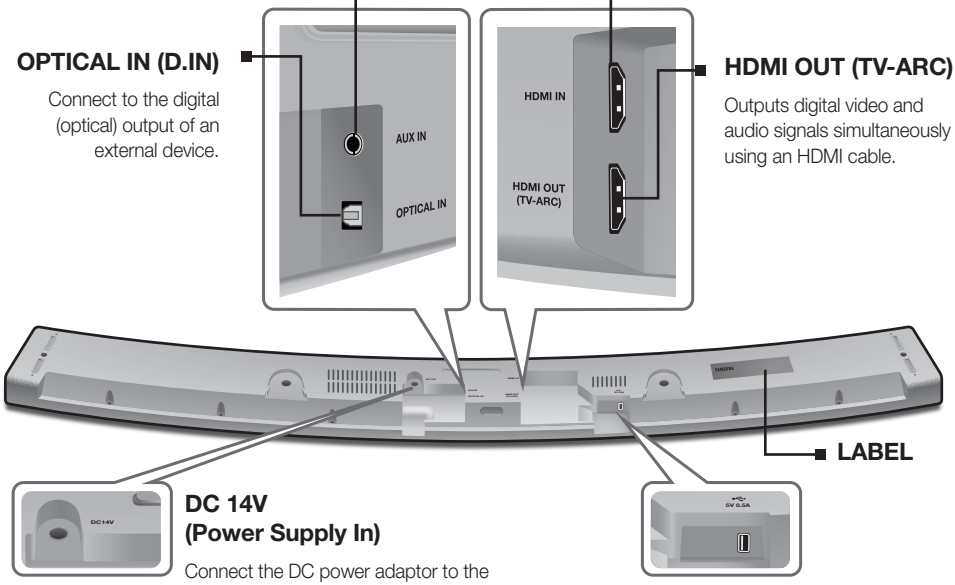

DC 14V (Power Supply In)

Connect the DC power adaptor to the power supply jack, and then connect the AC power adaptor plug to a wall outlet.

(USB Port)

Connect USB devices here to play files on the devices.

- When disconnecting the power cable of the AC power adaptor from a wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.
- Make sure to rest the AC/DC Adapter flat on a table or the floor. If you place the AC/DC Adapter so that it is hanging with the AC cord input facing upwards, water or other foreign substances could enter the Adapter and cause the Adapter to malfunction.

REMOTE CONTROL

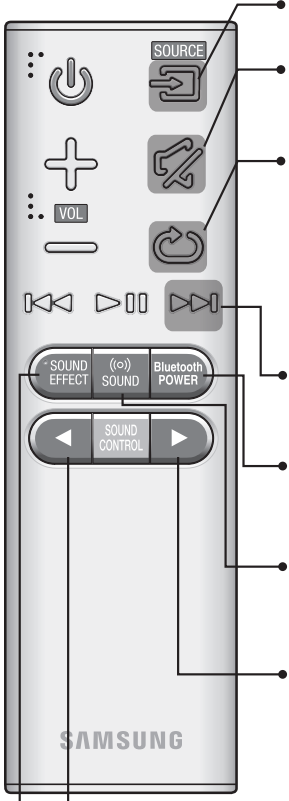

SOURCE

Press to select a source connected to the Soundbar.

Mute

You can turn the volume down to 0 with the push of a button.
Press again to restore the sound to the previous volume level.

Repeat

Press to set the Repeat function during music playback from a USB device.

OFF - REPEAT : Cancels Repeat Playback.

TRACK - REPEAT : Plays a track repeatedly.

ALL - REPEAT : Plays all tracks repeatedly.

RANDOM - REPEAT : Plays tracks in random order.
(A track that has already been played may be played again.)

Skip Forward

If there is more than one file on the device you are playing, and you press the ⏭ button, the next file is selected.

Bluetooth POWER

Press the **Bluetooth POWER** button on the remote to turn the Bluetooth POWER On function on and off. See pages 21 and 27 for details.

((o)) SOUND

Surround Sound adds depth and spaciousness to the sound. Pressing the **((o)) SOUND** button repeatedly cycles through the Surround Sound settings :
ON - SURROUND SOUND, **OFF - SURROUND SOUND**

Press and hold the ▶ button for about 5 seconds to turn the Anynet+ function on or off.

OFF - ANYNET+, ON - ANYNET+

The Anynet+ function lets you control the Soundbar with the remote from an Anynet+ compatible Samsung TV.
The Soundbar must be connected to the TV via an HDMI cable.

Press and hold the ◀ button for about 5 seconds to turn the Auto Power Link function on or off.

OFF - POWER LINK, ON - POWER LINK

* Auto Power Link
Synchronizes the Soundbar to a connected Optical source via the Optical jack so it turns on automatically when you turn on your TV. (See page 20)
Auto Power Link function is only available in the **D.IN** mode.

SOUND EFFECT

You can select from 6 different sound modes - **STANDARD (Original Sound), MUSIC, CLEAR VOICE, SPORTS, MOVIE**, and **NIGHT MODE** - depending on the content you want to listen to.

Select the **STANDARD** mode if you want to enjoy the original sound.

*** DRC (Dynamic Range Control)**

Lets you apply dynamic range control to Dolby Digital.
Press and hold the **SOUND EFFECT** button for about 5 seconds in STANDBY mode to turn the DRC (Dynamic Range Control) function on or off.

Power

Turns the Soundbar on and off.

Volume

Adjusts the volume level of the unit.

Play / Pause

Press the ▶II button to pause a file temporarily.
Press the ▶II button again to play the selected file.

Skip Back

If there is more than one file on the device you are playing, and you press the I◀◀ button, the previous file is selected.

SOUND CONTROL

Press to select **TREBLE**, **BASS**, **SUBWOOFER LEVEL**, **AUDIO SYNC**, **REAR SPEAKER**, or **REAR LEVEL**.

Then, use the ◀, ▶ buttons to adjust the **TREBLE** or **BASS** volume from -6 ~ +6, **SUBWOOFER LEVEL** volume from -12, -6 ~ +6.

Press and hold the **SOUND CONTROL** button for about 5 seconds to adjust the sound for each frequency band. 150Hz, 300Hz, 600Hz, 1.2KHz, 2.5KHz, 5KHz and 10KHz are selectable and each can be adjusted to a setting between -6 ~ +6.

If the Soundbar is connected to a digital TV and the video appears out of sync with the audio, press the **SOUND CONTROL** button to sync the audio with the video. Use the ◀, ▶ buttons to set the audio delay between 0 ms ~ 300 ms. In USB mode, TV mode, and BT mode, the Audio Sync function may not available.

To turn on or off of the rear speaker sound, select **REAR SPEAKER** in Sound Control, and then adjust the volume between OFF-RS and ON-RS by using the ◀, ▶ buttons.

To control the volume of the rear level sound, select **REAR LEVEL** in Sound Control, and then adjust the volume between RS -6~+6 by using the ◀, ▶ buttons.

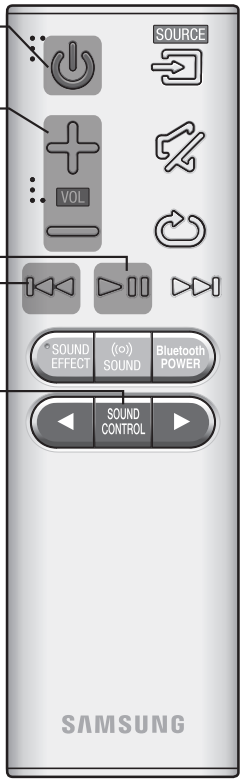

- The **REAR SPEAKER** and the **REAR LEVEL** mode are only available when you connect the SWA-8000S (sold separately).
  - If the SWA-8000S is disconnected, **REAR SPEAKER** and **REAR LEVEL** remain displayed but the functions are not available.
- Operate the TV using the TV's remote control.

► Controlling the Soundbar using Your TV Remote Control

1. Press and hold the ((○)) **SOUND** button for more than 5 seconds while the Soundbar is turned on.
2. "ON - TV REMOTE" appears on the Soundbar's display.
3. In the TV's menu, set the TV speaker to external speaker.

- Not available if the TV ARC function or **HDMI** mode is in use.
- All buttons are not available except the **VOL +/-** and the (Mute) buttons in this function.
- TV menus differ by manufacturer and model. Refer to the TV's user manual for further information.
- Manufacturers supporting this function:
  - VIZIO, LG, Sony, Sharp, PHILIPS, PANASONIC, TOSHIBA, GRUNDIG, Hisense, RCA
  - This function may not be compatible with your TV's remote depending on the remote control's manufacturer.
- To turn off this function, press the ((○)) **SOUND** button for 5 seconds.
  "OFF - TV REMOTE" appears on the Soundbar's display.

INSTALLING THE BATTERY IN THE REMOTE CONTROL

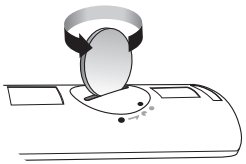

1. Use a suitable coin to turn the remote control's battery cover counterclockwise to remove it as shown in the figure above.

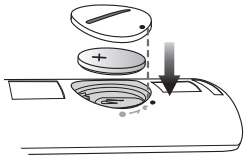

2. Insert a 3V lithium battery. Keep the positive (+) pole facing up when inserting the battery. Put the battery cover on and align the '●' marks side by side as shown in the figure above.

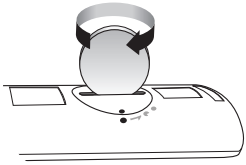

3. Use a suitable coin to turn the remote control battery cover clockwise as far as it will go to fix it in place.

INSTALLING THE SOUNDBAR

INSTALLING THE WALL MOUNT

► Installation Precautions

- Install on a vertical wall only.
- For the installation, avoid a location with high temperature or humidity, or a wall that cannot sustain the weight of the set.
- Check the strength of the wall. If the wall is not strong enough to support the unit, reinforce the wall or install the unit on a different wall that can support the unit's weight.
- Purchase and use the fixing screws or anchors appropriate for the kind of wall you have (plaster board, iron board, wood, etc.). If possible, fix the support screws into wall studs.
- Purchase wall mounting screws according to the type and thickness of the wall you will mount the Soundbar on.
  - Diameter : M5
  - Length: 35 mm or longer recommended.
- Connect cables from the unit to external devices before you install it on the wall.
- Make sure the unit is turned off and unplugged before you install it. Otherwise, it may cause an electric shock.

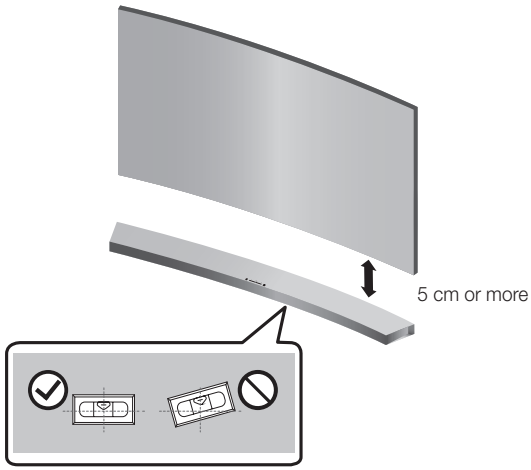

1. Place the installation guide against the wall surface.
   - The installation guide must be level.
   - If the TV is mounted on the wall, install the Soundbar at least 5 cm below the TV.

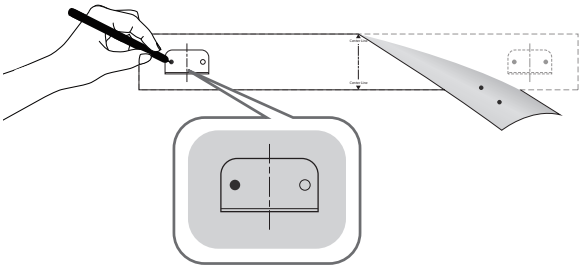

2. Mark the location where the screws will go through on the wall, and then remove the installation guide. Next, drill holes for the screws using an appropriately sized drill bit.

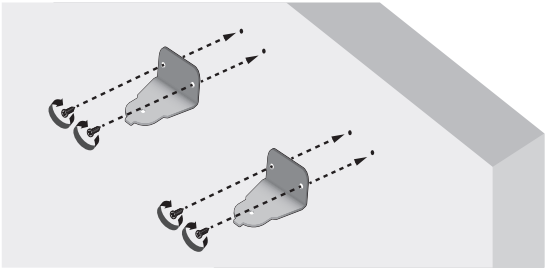

3. Fasten the 2 **Bracket-Wall** pieces firmly to the wall at the marked locations using the appropriate screws.

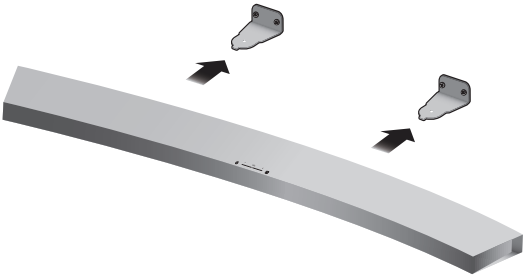

4. Attach the Soundbar to the 2 **Bracket-Wall** pieces as shown in the illustration.

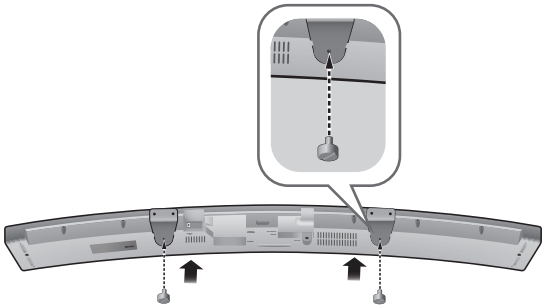

5. Insert a **Holder-Fix Mount** into each hole on the product's bottom side. Tighten each **Holder-Fix Mount** to fix the Soundbar to the 2 **Bracket-Wall** pieces.

- Do not hang onto the installed unit and avoid striking or dropping the unit.
- Secure the unit firmly to the wall so that it does not fall off. If the unit falls off, it may cause an injury or damage the product.
- When the unit is installed on a wall, please make sure that children do not pull any of the connecting cables, as this may cause it to fall.
- For the optimal performance of a wall mount installation, install the speaker system at least 5 cm below the TV, if the TV is mounted on the wall.
- For your safety, if you do not mount the unit on the wall, install it on a secure, flat surface where it is unlikely to fall.

PLACING THE SOUNDBAR ON A TV STAND

Place the Soundbar on a TV stand.



1. Align the Soundbar's centre with the centre of the base of the TV, and then carefully push it onto the stand as far as it will go, as shown in the illustration. Be careful not to unbalance the TV.

INSTALLING THE SOUNDBAR AS A FREE-STANDING UNIT



1. Centre the Soundbar on the flat area in front of the TV.

- Install it on a level and firm surface.

- Do not connect the power cord of this product or your TV to a wall outlet until all connections between components are complete.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord.

CONNECTING THE SUBWOOFER

CONNECTING TO THE SUBWOOFER AUTOMATICALLY

The Subwoofer's linking ID is preset at the factory and the main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on.

- When the subwoofer is completely connected, the blue LED Link Indicator on the subwoofer stops blinking and glows continuously.

CONNECTING TO THE SUBWOOFER MANUALLY

If the blue LED light does not stop blinking when the main unit and subwoofer are turned on, please set the ID by following the steps below.

- Important: Before you begin, put the battery into the remote. See page 10 for instructions.

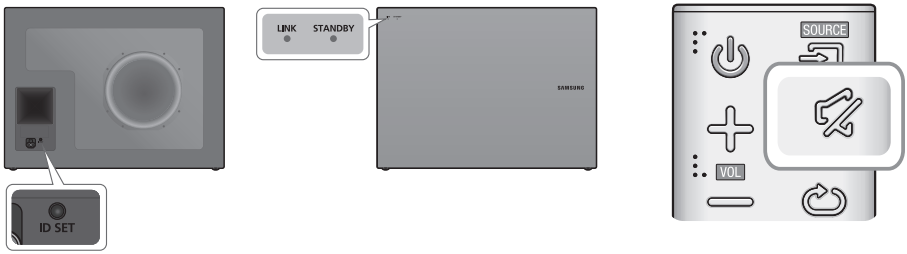

1. Plug the power cords of the main unit and subwoofer into an AC wall outlet.
2. Press the **ID SET** button on the back of the subwoofer with a small, pointed object for 5 seconds.
   - The STANDBY indicator turns off and the LINK indicator (Blue LED) blinks quickly.
3. While the main unit is powered off (in STANDBY mode), press and hold the (Mute) on the remote control for 5 seconds.
4. The **ID SET** message appears on the Soundbar's display.
5. To finalise the link, turn the main unit's power on while the subwoofer's Blue LED blinks.
   - The main unit and the subwoofer should now be linked (connected).
   - The LINK indicator (Blue LED) on the subwoofer should be glowing continuously and not blinking.
   - If the LINK indicator is not solid blue, the linking process has failed. Turn off the main unit and start again from Step 2.
   - You can enjoy better sound from the wireless subwoofer by selecting a Sound Effect. (See page 8)

- Before moving or installing the product, be sure to turn off the power and disconnect the power cord.
- If the main unit is powered off, the wireless subwoofer will in standy mode and the STANDBY LED on the front will blink Red directly. (no blue LED).
- If you use a device that uses the same frequency (2.4GHz) as the Soundbar near the Soundbar, interference may cause some sound interruption.
- The maximum transmission distance of the wireless signal between the main unit and subwoofer is about 10 meters, but may vary depending on your operating environment. If a steel-concrete or metallic wall is between the main unit and the wireless subwoofer, the system may not operate at all, because the wireless signal cannot penetrate metal.
- If the main unit doesn't make a wireless connection, follow steps 1-5 on the previous page to re-set the connection between the main unit and wireless subwoofer.

- The wireless receiving antenna is built into the wireless subwoofer. Keep the unit away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless subwoofer location is clear of any obstructions.

LED INDICATOR LAMP STATUS ON SUBWOOFER

LED	Status	Description	Resolution
Red	On	Standby (with the Soundbar main unit turned off)	Check the power supply to the Soundbar main unit
		Connection failed	Connect again (refer to the instructions on manual connection in the user manual)
Blue	On	Successfully connected (normal operation)	-
	Blinking	Standby (with the Soundbar main unit turned off)	Check the power supply to the Soundbar main unit
		Connection failed	Connect again (refer to the instructions on manual connection in the user manual)
Red and blue	Blinking	Malfunction	Contact the service centre.

CONNECTING THE SWA-8000S (SOLD SEPARATELY)

- Expand to true wireless surround sound by connecting the Samsung Wireless Rear Speaker Kit (SWA-8000S) to your Soundbar. (Sold separately)
- Before connecting to the Wireless Receiver Module, connect your subwoofer first.
- Use the speaker cable to connect the wireless receiver module to the speakers.
- Plug the power cable into a power outlet. The LED turns on.

1. While the main unit is powered off (in STANDBY mode), press and hold the (Mute) on the remote control for 5 seconds.
2. The **ID SET** message appears on the Soundbar's display.
3. Plug the power cord of the Wireless Receiver Module (SWA-8000S) into an AC wall outlet.
4. Turn on your Soundbar when the link indicator (Blue LED) on the SWA-8000S flickers fast.
5. When the link indicators (Blue LEDs) on your subwoofer and the SWA-8000S flash and then glow continuously, the SWA-8000S is completely connected.

- This may take a few minutes.
- Once connected, your Soundbar and the Wireless Receiver Module are automatically reconnected even after you turned them off and then on.

If the Wireless Receiver Module is not linked to your Soundbar (displaying the LED indicator in Red), connect them as follows.

1. Turn off your Soundbar.
2. Press the (Mute) button on your remote control for 5~6 seconds until the ID SET message appears on your Soundbar display.
3. Check the Wireless Receiver Module is in Standby status (displaying the LED indicator in Red).
4. Press the **ID SET** button on the back with a sharp pin for 5~6 seconds until the LINK LED indicator on the Wireless Receiver Module blinks (in Blue).
5. Turn on your Soundbar with the button on your remote control and wait for a while. They are completely connected to each other if you can see the LINK LED indicator is continuously lit (in Blue).

CONNECTING THE SURROUND SPEAKERS (SOLD SEPARATELY)

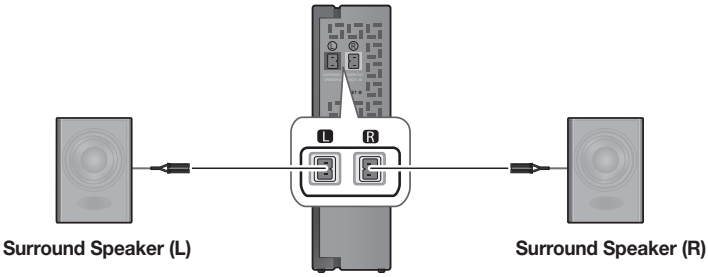

- Place these speakers to the side of your listening position. If there isn't enough room, place these speakers so they face each other. Position them about 60 to 90 cm above your ear, facing slightly downward.

- Use the speaker cable to connect the Wireless Receiver Module to the Surround Speakers.
- Each speaker has a coloured label on its back or underside. Each cable has a single coloured band near its end. Match the band on each cable to the speaker label by colour, and then connect the cable to the speaker.

CONNECTING TO A TV

- Important: Before you begin, put the battery into the remote. See page 10 for instructions.

CONNECTING TO A TV USING AN HDMI (DIGITAL) CABLE

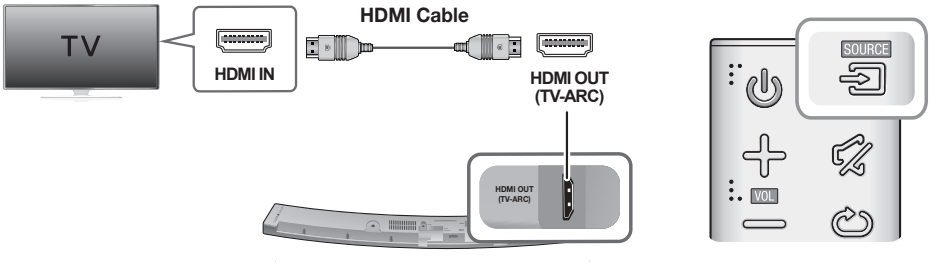

1. Connect an HDMI cable from the **HDMI OUT (TV-ARC)** jack on the back of the product to the HDMI IN jack on your TV.
2. Press the button on the top panel of the Soundbar or the **SOURCE** button on the remote control to select the **D.IN** mode.

- HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.
- If the TV provides an ARC port, connect the HDMI cable to the HDMI IN (ARC) port.
- We recommend you use a coreless HDMI cable if possible. If you use a cored HDMI cable, use one whose diameter is less than 14 mm.
- Anynet+ must be turned on.
- This function is not available if the HDMI cable does not support ARC.

CONNECTING TO A TV USING A DIGITAL OPTICAL CABLE

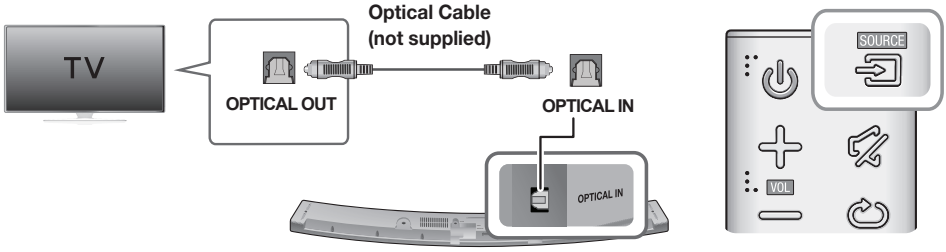

1. Connect the **OPTICAL IN** (Audio) jack on the Soundbar to the OPTICAL OUT jack of the TV with a digital optical cable.
2. Press the ⏎ button on the top panel of the Soundbar or the **SOURCE** button on the remote control to select the **D.IN** mode.

► Auto Power Link

If you have connected the main unit to a TV with a digital optical cable, you can set the Auto Power function ON to have the Soundbar turn on automatically when you turn the TV on.

1. Connect the Soundbar and a TV with a digital optical cable (not supplied).
2. Press the ⏎ button on the main unit's top panel or the **SOURCE** button on the remote control to select the **D.IN** mode.
3. Press the ◀ button on the remote control for 5 seconds to turn Auto Power Link on or off.

- Auto Power Link is set to ON by default.
- Depending on the connected device, Auto Power Link may not function.

TV SOUNDCONNECT

You can enjoy TV sound through your Soundbar when it is connected to a Samsung TV that supports the TV SoundConnect function.

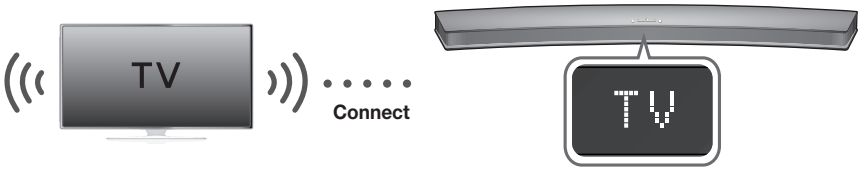

1. Turn on the TV and Soundbar.
2. Press the ⏎ button on the main unit's top panel or the **SOURCE** button on the remote control to select the **TV** mode.
3. On the TV, a message asking whether to enable the TV SoundConnect function appears.
4. Select **<Yes>** using the TV's remote control to finish connecting the TV and Soundbar.

- If the TV SoundConnect linking process fails, navigate to SoundConnect in the TV's Sound menu, select **Add New Device**, and set **Add New Device** to **ON**. Then, try again.
- Switching the Soundbar's mode from TV to another mode automatically terminates TV SoundConnect.
- To connect the Soundbar to another TV, the existing connection must be terminated.
- To terminate the existing connection, press and hold the ▶II button on the remote for 5 seconds or switch to another mode. To connect to the other TV, follow Steps 1 through 4 above.

- The TV SoundConnect (SoundShare) function is supported by some Samsung TVs released from 2012 on. Check whether your TV supports the TV SoundConnect (SoundShare) function before you begin. (For further information, refer to the TV's user manual.).
- If your Samsung TV was released before 2014, check the SoundShare setting menu.
- If the distance between the TV and Soundbar exceeds 10 meters, the connection may not be stable or the audio may stutter. If this occurs, relocate the TV or Soundbar so that they are within operational range, and then re-establish the TV SoundConnect connection.
- TV SoundConnect Operational Ranges:
  - Recommended pairing range: within 2 meters.
  - Recommended operational range: within 10 meters.
- The Play/Pause, Next, and Prev buttons on the Soundbar or Soundbar's remote do not control the TV.

► Using the Bluetooth POWER On function

The Bluetooth POWER On function is available after you have successfully connected the Soundbar to a Bluetooth compatible TV using TV SoundConnect. When the Bluetooth POWER On function is ON, turning the connected TV on or off will turn the Soundbar's power on and off as well.

1. Connect the TV to your Soundbar using the TV SoundConnect function.
2. Press the **Bluetooth POWER** button on the Soundbar remote. **ON - BLUETOOTH POWER** appears on the Soundbar's display.
   - **ON - BLUETOOTH POWER** : The Soundbar turns on and off when you turn the TV on or off.
   - **OFF - BLUETOOTH POWER** : The Soundbar only turns off when you turn the TV off.

- This function is supported by some Samsung TVs released from 2013 on.

CONNECTING TO EXTERNAL DEVICES

HDMI CABLE

HDMI is the standard digital interface for connecting to TVs, projectors, DVD players, Blu-ray players, set top boxes, and more. HDMI prevents any degradation to the signal due to conversion to analogue and maintains the video and audio quality of the original digital source.

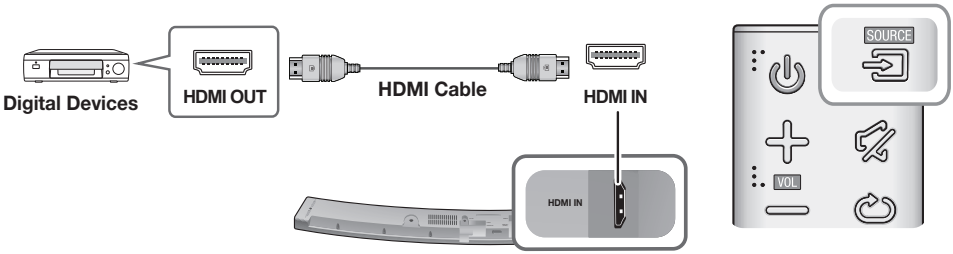

1. Connect an HDMI cable from the **HDMI IN** jack on the back of the product to the HDMI OUT jack on your digital device.
2. Press the button on the top panel of the Soundbar or the **SOURCE** button on the remote control to select the **HDMI** mode.

OPTICAL OR ANALOGUE AUDIO CABLE

This unit comes equipped with one digital optical in jack and one analogue audio (AUX) in jack, giving you two ways to connect it to external devices.

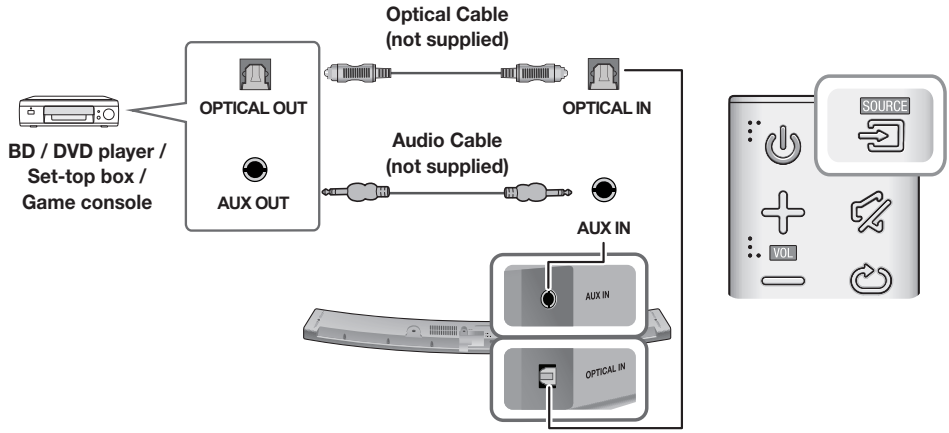

► AUX Cable

1. Connect **AUX IN** (Audio) on the main unit to the AUDIO OUT jack of the Source Device using an audio cable.
2. Press the button on the top panel of the Soundbar or the **SOURCE** button on the remote control to select the **AUX** mode.

► Optical Cable

1. Connect **OPTICAL IN** (Audio) on the main unit to the OPTICAL OUT jack of the Source Device using a digital optical cable.
2. Press the button on the top panel of the Soundbar or the **SOURCE** button on the remote control to select the **D.IN** mode.

USB

You can play music files located on USB storage devices through the Soundbar.

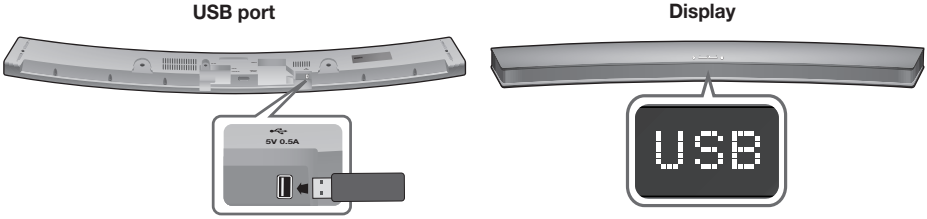

1. Connect the USB device to the USB port on the back of the product.
2. Press the button on the main unit's top panel or the **SOURCE** button on the remote control to select the **USB** mode.
3. **USB** appears on the display screen.
   - The Soundbar connection to the USB device is complete.
   - The Soundbar automatically turns off (Auto Power Off) if no USB device has been connected for more than 5 minutes.

► Before you connect a USB device

Be aware of the following:

- If the file name of a file on a USB device exceeds 10 characters, it is not displayed on the Soundbar's display.
- This product may not be compatible with certain types of USB storage media.
- The Soundbar supports the FAT16 and FAT32 file systems.
  - The NTFS file system is not supported.

- Connect USB devices directly to the USB port of the product. Otherwise, you may encounter a USB compatibility problem.
- Do not connect multiple storage devices to the product via a multi-card reader. It may not operate properly.
- Digital camera PTP protocols are not supported.
- Do not remove the USB device while it is transferring files.
- DRM-protected music files (MP3, WMA) from commercial web sites cannot be played.
- External HDDs are not supported.
- Mobile phone devices are not supported.
- File Format Type Compatibility list:

Extension	Codec	Sampling Rate	Bit Rate
***.mp3**	MPEG 1 Layer2	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 1 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2.5 Layer3	16KHz ~ 48KHz	80kbps~320kbps
***.wma**	Wave_Format_MSAudio1	16KHz ~ 48KHz	56kbps~128kbps
	Wave_Format_MSAudio2	16KHz ~ 48KHz	56kbps~128kbps
***.aac**	AAC	16KHz ~ 96KHz	48kbps~320kbps
	AAC-LC	16KHz ~ 96KHz	128kbps~192kbps 5.1ch 320kbps
	HE-AAC	24KHz ~ 96KHz	48kbps~64kbps 5.1ch 160kbps
***.wav**	-	16KHz ~ 48KHz	up to 3000kbps
***.ogg**	OGG 1.1.0	16KHz ~ 48KHz	50kbps~500kbps
***.flac**	FLAC 1.1.0, FLAC 1.2.1	16KHz ~ 96KHz	up to 3000kbps



- If there are too many folders and files stored on the USB device, it may take the Soundbar some time to access and play files.

INPUT MODE

Press the ⏎ button on the main unit's top panel or the **SOURCE** button on the remote control to select the mode you want.



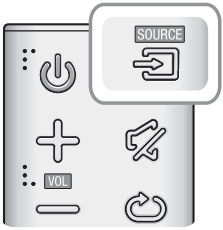

Input mode	Display
Optical Digital input ARC (HDMI OUT) input	**D.IN**
AUX input	**AUX**
HDMI input	**HDMI**
BLUETOOTH mode	**BT**
TV SoundConnect	**TV**
USB mode	**USB**

AUTO POWER DOWN FUNCTION

The unit turns off automatically in the following situations.

- D.IN / HDMI / BT / TV / USB Mode
  - If there is no audio signal for 5 minutes.
- AUX Mode
  - If the AUX cable is disconnected for 5 minutes.
  - If there is no KEY input for 8 hours when the AUX cable is connected. (Auto Power Down function can be turned off only in that case.)

To turn off Auto Power Down function, while in **AUX** mode, press and hold the ▶II button for 5 seconds. **ON - AUTO POWER DOWN** / **OFF - AUTO POWER DOWN** appears on the display.

BLUETOOTH

You can connect a Bluetooth device to the Soundbar and enjoy music with stereo sound, all without wires!

TO CONNECT THE SOUNDBAR TO A BLUETOOTH DEVICE

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

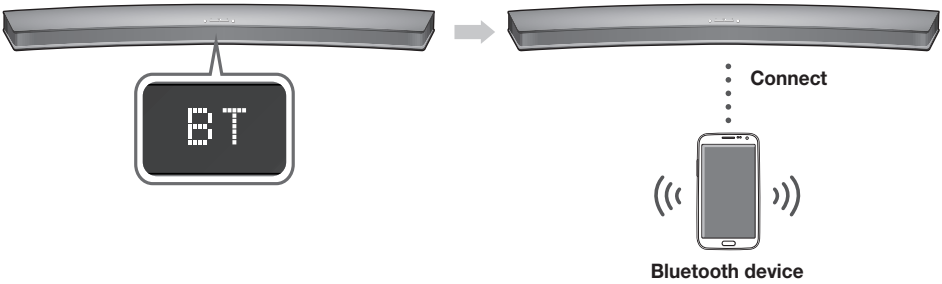

1. Press the button on the main unit's top panel or the **SOURCE** button on the remote control to select the **BT** mode.
   - You will see **BT READY** on the front display of the Soundbar.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select **"[Samsung] HW-Jxxxx J-Series"** from the list.
   - When the Soundbar is connected to the Bluetooth device, it will display [**Bluetooth device name**] → **BT** on the front display.
   - The device name can only be displayed in English. An underline " _ " will be displayed if the name is not in English.
   - If the Bluetooth device has failed to pair with the Soundbar, delete the previous "**[Samsung] HW-Jxxxx J-Series**" found by the Bluetooth device and have it search for the Soundbar again.
4. Play music on the connected device.
   - You can listen to the music playing on the connected Bluetooth device over the Soundbar.
   - In **BT** mode, the Play / Pause / Next / Prev functions are not available. However, these functions are available on Bluetooth devices supporting AVRCP.

- If asked for a PIN code when connecting a Bluetooth device, enter <0000>.
- Only one Bluetooth device can be paired at a time.
- The Bluetooth connection will be terminated when you turn the Soundbar off.
- The Soundbar may not perform Bluetooth search or connection correctly under the following circumstances:
  - If there is a strong electrical field around the Soundbar.
  - If several Bluetooth devices are simultaneously paired with the Soundbar.
  - If the Bluetooth device is turned off, not in place, or malfunctions.

- Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.
- The Soundbar supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the Soundbar to a Bluetooth device that supports only the HF (Hands Free) function.
- Once you have paired the Soundbar to a Bluetooth device, selecting "**[Samsung] HW-Jxxxx J-Series**" from the device's scanned devices list will automatically change the Soundbar to **BT** mode.
  - Available only if the Soundbar is listed among the Bluetooth device's paired devices. (The Bluetooth device and the Soundbar must have been previously paired at least once.)
- Soundbar will appear in the Bluetooth device's searched devices list only when the Soundbar is displaying **BT READY**.
- In the TV SoundConnect mode, the Soundbar cannot be paired to another Bluetooth device.

BLUETOOTH POWER ON (BLUETOOTH POWER)

If a previously paired Bluetooth device tries to pair with the Soundbar when the Bluetooth POWER On function is on and the Soundbar is turned off, the Soundbar turns on automatically.

1. Press the **Bluetooth POWER** button on the remote while the Soundbar is turned on.
2. **ON - BLUETOOTH POWER** appears on the Soundbar's display.

TO DISCONNECT THE BLUETOOTH DEVICE FROM A SOUNDBAR

You can disconnect a Bluetooth device from the Soundbar. For instructions, see the Bluetooth device's user manual.

- The Soundbar will be disconnected.
- When the Soundbar is disconnected from the Bluetooth device, the Soundbar will display **BT DISCONNECTED** on the front display.

TO DISCONNECT THE SOUNDBAR FROM A BLUETOOTH DEVICE

Press the **SOURCE** button on the remote control or the button on the product's top panel to switch from **BT** to another mode or turn off the Soundbar.

- The connected Bluetooth device will wait a certain amount of time for a response from the Soundbar before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)

- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Soundbar and the Bluetooth device exceeds 10 meters.
- The Soundbar automatically turns off after 5 minutes in the Ready state.

► More About Bluetooth

Bluetooth is a technology that enables Bluetooth-compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, if:
  - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Soundbar.
  - It is subject to electrical variation from obstructions caused by a wall, corner, or office partition.
  - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the Soundbar with the Bluetooth device while they are close together.
- The further the distance between the Soundbar and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the unit. The connection will be automatically cut off if the Bluetooth device is out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

USING THE SAMSUNG AUDIO REMOTE APP

► Installing the Samsung Audio Remote App

To control the Soundbar with your smart device and the Samsung Audio Remote app, download the Samsung Audio Remote app from the Google Play store.

Market search : Samsung Audio Remote

Get it on Google play

► Launching the Samsung Audio Remote App

To launch and use the Samsung Audio Remote app, touch the Audio Remote icon on your smart device, and then follow the directions on the screen.



- The Samsung Audio Remote app is only compatible with Android mobile phones and mobile devices running Android OS 3.0 or later.

SOFTWARE UPDATE

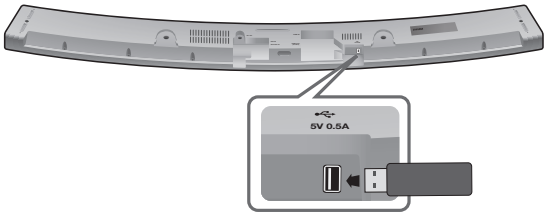

Samsung may offer updates for the Soundbar's system firmware in the future.

If an update is offered, you can update the firmware by connecting a USB device with the firmware update stored on it to the USB port on your Soundbar.

Note that if there are multiple update files, you must load them onto the USB device singly and use them to update the firmware one file at a time.

Please visit samsung.com or contact the Samsung call centre to receive more information about downloading update files.

UPDATING PROCEDURE

1. Follow the steps below to download the product software:
   Go to the Samsung website at (samsung.com/sec) → search for the model name - select the customer support option (the option name is subject to change)
2. Save the downloaded software to a USB stick and select "Extract Here" to unzip the folder.
3. Turn off the Soundbar and connect the USB stick containing the software update to the USB port.
4. Disconnect the power cord, reconnect it, and then turn on the Soundbar.
5. Turn on the Soundbar. Within 3 minutes, **UPDATE** is displayed and updating begins.
6. After completion, the power of Soundbar turns off. In this state, press the ▶II button on the remote control for 5 seconds.

IF UPDATE IS NOT DISPLAYED

1. Turn off the Soundbar, connect the USB storage device that contains update files to the Soundbar's USB port.
2. Disconnect the power cord, reconnect it, and then turn on the Soundbar.

- Insert a USB device containing the firmware update into the USB port on the main unit.
- Updating firmware may not work properly if audio files supported by the Soundbar are stored in the USB storage device.
- Do not disconnect the power or remove the USB device while updates are being applied. The main unit will turn off automatically after completing the firmware update.
- After update is completed, the user setup in Soundbar is initialised. We recommend you write down your settings so that you can easily reset them after the update. Note that updating firmware resets the subwoofer connection too.
  If the connection to the subwoofer is not re-established automatically after the update, refer to page 15.
  If the software update fails, check that the USB stick is not defective.
- Mac OS users should use MS-DOS (FAT) as the USB format.
- Depending on the manufacturer, some USB devices may not be supported.

TROUBLESHOOTING

Before requesting service, please check the following.

The unit will not turn on.	
• Is the power cord plugged into the outlet?	→ Connect the power plug to the outlet.

A function does not work when the button is pressed.	
• Is there static electricity in the air?	→ Disconnect the power plug and connect it again.

Sound is not produced.	
• Is the Mute function on?	→ Press the (Mute) button to cancel the Mute function.
• Is the volume set to minimum?	→ Adjust the volume.

The remote control does not work.	
• Are the batteries drained?	→ Replace with new batteries.
• Is the distance between the remote control and main unit too far?	→ Move closer to the unit.

The TV SoundConnect (TV pairing) failed.	
• Does your TV support TV SoundConnect?	→ TV SoundConnect is supported by some Samsung TVs released from 2012 on. Check your TV to see if it supports TV SoundConnect.
• Is your TV firmware the latest version?	→ Update your TV with the latest firmware.
• Does an error occur when connecting?	→ Contact the Samsung Call Centre.
	→ Reset TV SoundConnect and connect again. To reset the TV SoundConnect connection, press and hold the ▶II button for 5 seconds.

The red LED on the subwoofer blinks and the subwoofer is not producing sound.	
• Your subwoofer may not be connected to the main unit of the product.	→ Try to connect your subwoofer again. (See Page 15)

SPECIFICATIONS

GENERAL	USB		5V / 0.5A
	Weight	Main Unit	2.7 kg
		Subwoofer (PS-WJ6000R/PS-WJ6001R)	6.8 kg
	Dimensions (W x H x D)	Main Unit	1078.0 x 47.5 x 129.0 mm
		Subwoofer (PS-WJ6000R/PS-WJ6001R)	452.0 x 335.0 x 154.0 mm
	Operating Temperature Range		+5°C to +35°C
	Operating Humidity Range		10 % to 75 %
AMPLIFIER	Rated Output Power	Main Unit	22W x 6, 4 ohm, THD≦10%
		Subwoofer (PS-WJ6000R/PS-WJ6001R)	168W, 3 ohm, THD≦10%

* Design and specifications are subject to change without prior notice.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For more information about the power supply and power consumption, refer to the label attached to the product.

※ **Open Source Licence Notice**

- To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

LICENCES

DOLBY AUDIO

Manufactured under licence from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

dts 2.0 Channel

For DTS patents, see http://patents.dts.com. Manufactured under licence from DTS Licencing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licencing LLC in the United States and other countries.

SAMSUNG

HW-J6000R
HW-J6001R

מדריך למשתמש

דמיינו את האפשרויות

תודה שרכשתם מוצר זה מתוצרת Samsung.
לקבלת שירות מלא יותר, רשמו את המוצר שברשותכם באתר
www.samsung.com/register

מידע אודות בטיחות

הוראות בטיחות

לצמצום הסיכון להתחשמלות, אין להוריד את המכסה (או הדופן האחורית).
המכשיר אינו כולל חלקים שניתנים לתיקון על-ידי המשתמש. לתיקון ושירות, פנו לטכנאי שירות מוסמך.

	**זהירות** **סכנת התחשמלות לא לפתוח**		 סמל זה מציין הימצאות מתח גבוה בתוך המוצר. מגע כלשהו עם חלק פנימי כלשהו במוצר הזה הוא מסוכן.  סמל זה מציין שלמוצר מצורף תיעוד חשוב בנוגע להפעלה ולתחזוקה שלו.

	מוצר Class II: סמל זה מציין שהמוצר אינו דורש חיבור בטוח להארקה.
	מתח AC: סמל זה מציין שהמתח המדורג שמסומן בסמל הוא מתח AC.
	מתח DC: סמל זה מציין שהמתח המדורג שמסומן בסמל הוא מתח DC.
	זהירות, עיין בהוראות לשימוש: סמל זה מפנה את המשתמש לעיין במדריך המשתמש לקבלת מידע בטיחות קשור.

אזהרה : לצמצום הסיכון לשריפה או להתחשמלות, אין לחשוף מכשיר זה לגשם או ללחות.

זהירות : למניעת התחשמלות, יש להתאים את הפין הרחב של התקע לחריץ הרחב בשקע ולהכניסו עד הסוף.

- יש לוודא כי מתקן זה יחובר כל העת לשקע זרם חליפין עם הגנת חיבור הארקה.
- כדי לנתק את המכשיר מהחשמל, יש לשלוף את התקע משקע החשמל, לכן על שקע החשמל להיות זמין לשימוש בכל עת.

זהירות

- אין לחשוף את המכשיר לטפטוף או להתזה של נוזלים. אין להניח על המכשיר כלים מלאים בנוזלים, כגון אגרטלים.
- לכיבוי מוחלט של המכשיר, עליכם להוציא את התקע שלו משקע החשמל. לכן, על התקע להיות זמין ונגיש בכל זמן.

אמצעי זהירות

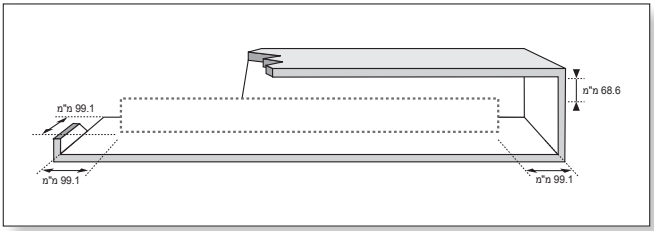

ודאו כי מקור זרם החשמל בביתכם עונה על דרישות המתח שמצוינות במדבקת הזיהוי שבגב המכשיר. התקינו את המכשיר בצורה אופקית על בסיס מתאים (רהיט), כשיש מספיק רווח סביבו לאוורר 7~10 ס"מ. יש לוודא כי פתחי האוורור אינם חסומים. אין להניח את המכשיר על גבי מגברים או מוצרים אחרים שעשויים להתחמם. מכשיר זה מיועד לשימוש ממושך. כדי לכבות את המכשיר לחלוטין, נתקו את כבל החשמל מתקע החשמל. נתקו את המכשיר מהחשמל אם אתם מתכוונים לא להשתמש בו למשך תקופה ארוכה.

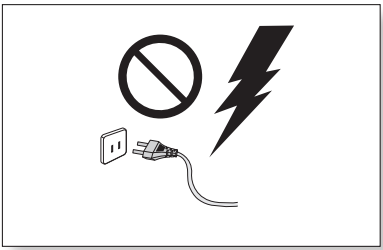

יש להוציא את תקע זרם החילופין מהשקע. קפיצות מתח כתוצאה מברקים עלולות לגרום נזק למכשיר.

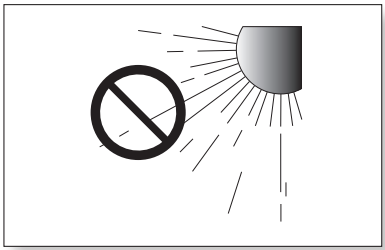

אין לחשוף את המכשיר באופן ישיר לאור יום או למקורות חום אחרים. חשיפה כזו עלולה לגרום להתחממות יתר ולתקלות במכשיר.

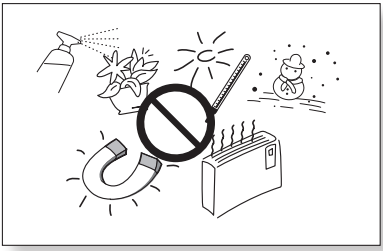

הגנו על המכשיר מפני נוזלים (למשל, אל תקרבו אליו אגרטלים), חום גבוה (מאח בוערת, למשל) או ציוד היוצר שדה מגנטי או חשמלי חזק. נתקו את כבל החשמל משקע החשמל אם המכשיר ניזוק. המוצר שלכם לא נועד לשימוש תעשייתי. מוצר זה נועד לשימוש אישי בלבד.עיבוי עלול להיווצר במידה והמכשיר אוחסן בטמפרטורה נמוכה. אם מובילים את המכשיר בחורף, יש להמתין כשעתיים עד שטמפרטורת המכשיר תגיע לטמפרטורת החדר לפני השימוש.

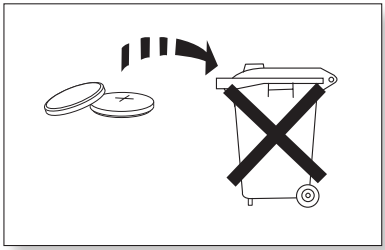

הסוללות המשמשות במכשיר זה מכילות כימיקלים מזיקים לסביבה. אין להשליכן יחד עם האשפה הביתית.
אין להשליך סוללות לאש. אין לקצר או לפרק את הסוללות או לגרום להן להתחממות יתר. קיימת סכנת התפוצצות אם הסוללה מוחלפת באופן שגוי. החלף את הסוללה באותו סוג או בסוג שווה ערך בלבד.



אזהרה, אין לבלוע את הסוללה, סכנת כוויה כימית [השלט רחוק שהגיע עם] מוצר זה מכיל סוללת כפתור. במקרה של בליעת סוללת הכפתור, היא עלולה לגרום לכוויות פנימיות תוך שעתיים ולהוביל למוות. יש לשמור סוללות חדשות וישנות הרחק מהישג ידם של ילדים. אם תא הסוללה לא נסגר כהלכה, הפסק להשתמש במוצר ושמור אותו הרחק מילדים. אם אתה סבור שייתכן שסוללות נבלעו או הושמו בתוך חלק כלשהו של הגוף, פנה מיד לקבלת טיפול רפואי.

תוכן עניינים

2 התחלה

2 מידע אודות בטיחות

5 מה כולל המכשיר

6 תיאור

6 לוח עליון/קדמי

7 לוח אחורי/תחתון

8 שלט רחוק

11 התקנה

11 התקנת Soundbar

11 התקנת מתקן התלייה

14 מיקום ה-Soundbar על גבי מעמד לטלוויזיה

14 התקנת ה-Soundbar כיחידה עצמאית

15 חיבורים

15 חיבור הסאבוופר

17 חיבור ה-SWA-8000S (נמכר בנפרד)

19 התחברות לטלוויזיה

19 חיבורים לטלוויזיה באמצעות כבל HDMI (דיגיטלי)

20 התחברות אל טלוויזיה בכבל אופטי דיגיטלי

20 TV SoundConnect

22 חיבור אל מכשירים חיצוניים

22 כבל HDMI

22 כבל שמע אופטי או אנלוגי

23 USB

25 פונקציות

25 מצב כניסה

26 Bluetooth

29 עדכון תוכנה

31 פתרון בעיות

31 פתרון בעיות

32 נספח

32 מפרטים

תרשימים ואיורים במדריך למשתמש זה ניתנים לצורכי עיון בלבד וייתכן שיהיו שונים ממראה המוצר בפועל.

מה כולל המכשיר

לפני העיון במדריך למשתמש

קראו את המושגים שלהלן לפני קריאת המדריך למשתמש.

◄ סמלים הנמצאים בשימוש במדריך

סמל	מונח	הגדרה
	זהירות	מציין מקרים שבהם הפונקציה אינה פועלת או שההגדרות בוטלו.
	הערה	מציין המלצות או הוראות בעמוד שעוזרות לתפעול כל פונקציה.

בדקו אם האביזרים שלהלן מצורפים למכשיר.



שלט רחוק / סוללת ליתיום (3V : CR2032)



כבל חשמל : 2 כ"א



מתאם AC/DC



כבל HDMI



מתלה קיר : 2 כ"א



מדריך להתקנה על הקיר



תושבת קיבוע מחזיק : 2 כ"א

- עיצוב האביזרים עשוי להיות שונה מהאביזרים המוצגים באיורים שלעיל.

לוח עליון/קדמי

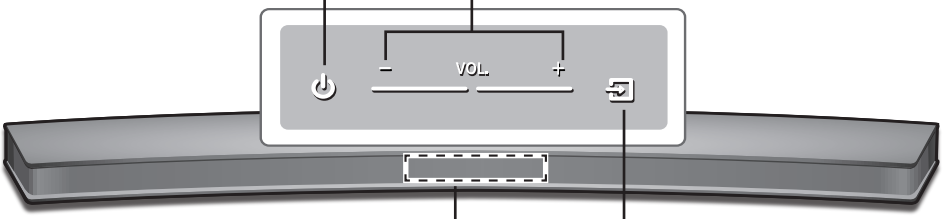

- לאחר חיבור כבל המתח, לחצן ההפעלה יעבוד תוך ארבע עד שש שניות.
- לאחר שתפעילו את המכשיר, ההשמעה תשתהה למשך 4 עד 5 שניות לפני שיושמעו צלילים.
- אם ברצונך לשמוע צליל מה-Soundbar בלבד, עליך לכבות את הרמקולים של הטלוויזיה דרך התפריט הגדרות שמע. עיינו בהוראות השימוש המסופקות עם הטלוויזיה שלכם.

לוח אחורי/תחתון

AUX IN

חיבור אל היציאה האנלוגית של התקן חיצוני.

HDMI IN

מקבל אותות שמע ווידאו דיגיטליים בו-זמנית באמצעות כבל HDMI. השתמש לחיבור התקן חיצוני נתמך.

OPTICAL IN (D.IN)

מחבר ליציאה הדיגיטלית (אופטית) של התקן חיצוני.

HDMI OUT (TV-ARC)

שולח אותות שמע ווידאו דיגיטליים בו-זמנית באמצעות כבל HDMI.

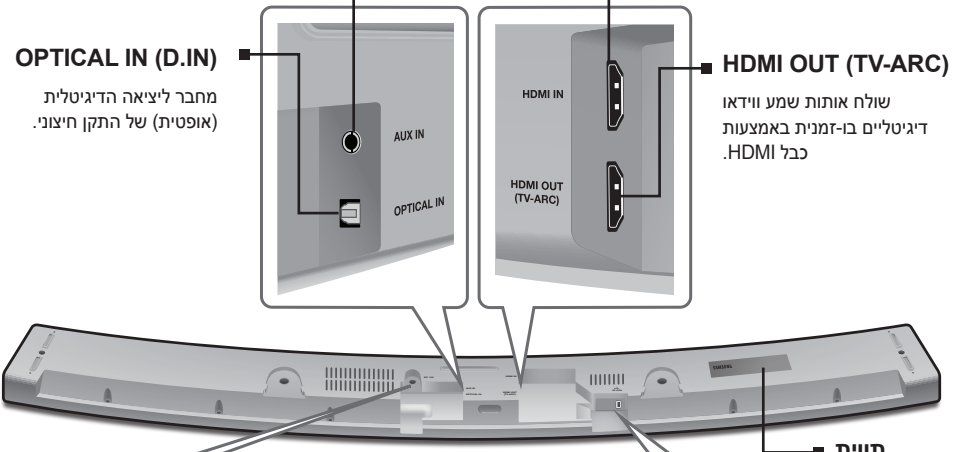

תווית

DC 14V
(כניסת אספקת חשמל)

חבר את מתאם החשמל לשקע אספקת החשמל, ולאחר מכן חבר את תקע מתאם החשמל לשקע בקיר.

(יציאת USB)

חברו התקני USB כאן לצורך השמעת קבצים שעל ההתקנים.

- בעת ניתוק כבל החשמל של מתאם החשמל מהשקע בקיר, אחזו בתקע עצמו. אין למשוך את הכבל כדי לנתקו.
- אין לחבר מכשיר זה או רכיבים אחרים שלו אל שקע החשמל עד להשלמת כל החיבורים בין הרכיבים.
- הקפד להניח את מתאם ה-AC/DC בצורה ישרה על שולחן או על הרצפה. אם תמקם את מתאם ה-AC/DC כך שיהיה תלוי ומבוא כבל ה-AC יפנה כלפי מעלה, מים או גופים זרים אחרים עלולים לחדור למתאם ולגרום בו לתקלה.

שלט רחוק

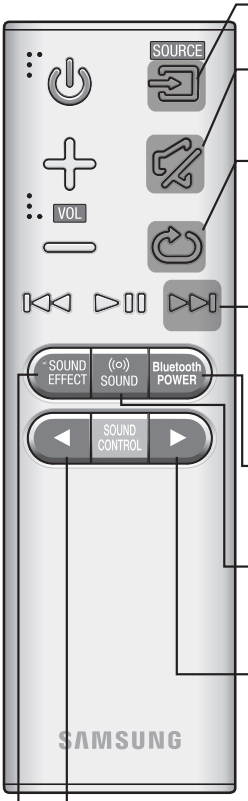

SOURCE

לחץ כדי לבחור מקור המחובר ל-Soundbar.

השתק

ניתן להנמיך את עוצמת הקול לאפס בלחיצת כפתור.
לחצו שנית כדי לחזור אל עוצמת הקול הקודמת שהושמעה.

חזור

לחץ כדי להגדיר את הפונקציה 'חזרה' במהלך השמעת מוסיקה מהתקן USB.
OFF - REPEAT : מבטל את ההשמעה החוזרת.
TRACK - REPEAT : השמעת הרצועה שוב ושוב.
ALL - REPEAT : השמעת כל הרצועות שוב ושוב.
RANDOM - REPEAT : השמעת הרצועות בסדר אקראי.
(ניתן להשמיע שוב רצועה שכבר הושמעה.)

דילוג קדימה

אם יש יותר מקובץ אחד על ההתקן שממנו אתה משמיע ואתה לוחץ על הלחצן ⏭, הקובץ הבא ייבחר.

Bluetooth POWER

לחץ על הלחצן **Bluetooth POWER** בשלט רחוק כדי להפעיל ולכבות את הפונקציה Bluetooth POWER On. ראו עמוד 21 כמו כן 27.

SOUND (((o)))

צליל סראונד מוסיף עומק ורוחב לצליל. לחיצה על הלחצן (((o))) **SOUND** שוב ושוב תביא למעבר בסבב בהגדרות צליל סראונד:
OFF - SURROUND SOUND ,**ON - SURROUND SOUND**

לחץ לחיצה ארוכה על לחצן ▶ (כ5 שניות) כדי להפעיל או להשבית את הפונקציה +Anynet.
ON - ANYNET+ ,**OFF - ANYNET+**
בעזרת הפונקציה +Anynet תוכל לשלוט ב-Soundbar באמצעות השלט רחוק של טלוויזיית Samsung התומכת ב-+Anynet.
חובה לחבר את ה-Soundbar אל הטלוויזיה בכבל HDMI.

לחץ לחיצה ארוכה (כ-5 שניות) על לחצן ◀ כדי להפעיל או להשבית את הפונקציה Auto Power Link.
ON - POWER LINK ,**OFF - POWER LINK**

Auto Power Link *
מסנכרן את ה-Soundbar למקור אופטי מחובר באמצעות השקע האופטי כדי שהוא יופעל באופן אוטומטי כשתפעיל את הטלוויזיה. (ראו עמוד 20)
הפונקציה Auto Power Link זמין במצב **D.IN** בלבד.

SOUND EFFECT

ניתן לבחור מבין 6 מצבי צליל - **STANDARD (צליל מקורי)**, **MUSIC**, **CLEAR VOICE**, **SPORTS**, **MOVIE**, ו-**NIGHT MODE** - בהתאם לסוג המקור שממנו תרצה ליהנות.
בחרו את המצב **STANDARD** אם ברצונכם ליהנות מהצליל המקורי.

*** DRC (בקרת טווח דינמי)**

מאפשר לך להחיל בקרת טווח דינמי על Dolby Digital.
לחץ והחזק את הלחצן **SOUND EFFECT** למשך 5 שניות במצב STANDBY כדי להפעיל או להשבית את הפונקציה DRC (בקרת טווח דינמי).

HEB

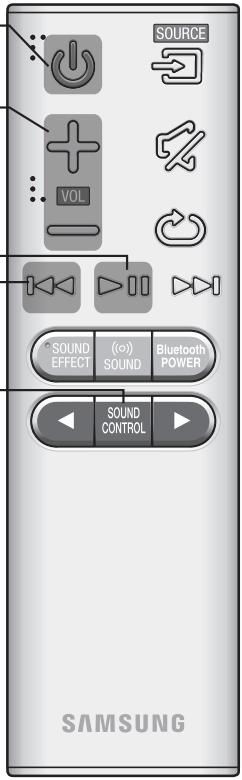

הפעלה

מפעיל ומכבה את Soundbar.

עוצמת קול

ויסות עוצמת הקול של המכשיר.

הפעלה/השהיה

לחץ על הלחצן ⏯ כדי להשהות זמנית את השמעת הקובץ.
לחץ שוב על הלחצן ⏯ כדי להשמיע את הקובץ שנבחר.

דילוג לאחור

אם יש יותר מקובץ אחד על ההתקן שממנו אתה משמיע ואתה לוחץ על הלחצן ⏮,
הקובץ הקודם ייבחר.

SOUND CONTROL

לחץ כדי לבחור **TREBLE**, **BASS**, **SUBWOOFER LEVEL**, **AUDIO SYNC**, **REAR SPEAKER** או **REAR LEVEL**.
לאחר מכן, השתמש בלחצנים ◀, ▶ כדי לכוונן את עוצמת הקול של ה-**TREBLE** או ה-**BASS** מ-6- ~ 6+ ואת עוצמת הקול של ה-**SUBWOOFER LEVEL** מ-12-, 6- ~ 6+.
לחץ והחזק את הלחצן **SOUND CONTROL** למשך כחמש שניות כדי לכוונן את הצליל עבור כל פס תדרים. 150 Hz, 300 Hz, 600 Hz, 1.2 KHz, 2.5 KHz, 5 KHz, ו-10 KHz ניתנים לבחירה וניתן לכוונן כל אחד מהם אלו בין 6- ~ 6+.
אם Soundbar מחובר לטלוויזיה דיגיטלית והווידאו לא מסונכרן עם השמע, לחץ על לחצני ה-**SOUND CONTROL** גדי לסנכרן את השמע עם הווידאו. השתמש בלחצני ◀, ▶ כדי להגדיר את זמן השהיית השמע בין 0 אלפיות שנייה ל-300 אלפיות שנייה.
במצב USB, מצב טלוויזיה ומצב BT, ייתכן שהפונקצייה Audio Sync לא תפעל.
כדי להפעיל או להשבית את צליל הרמקול האחורי, בחר ב-**REAR SPEAKER** דרך בקרת צליל, ולאחר מכן כוונן את עוצמת הקול בערכים שבין OFF-RS ו-ON-RS בעזרת הלחצנים ◀, ▶.
כדי לשלוט בעוצמת הקול של צליל הרמה האחורית, בחר ב-**REAR LEVEL** דרך בקרת צליל, ולאחר מכן כוונן את עוצמת הקול בין 6- ~ 6+ RS בעזרת הלחצנים ◀, ▶.

- המצבים **REAR SPEAKER** ו-**REAR LEVEL** זמינים רק כאשר ה-SWA-8000S (נמכר בנפרד) מחובר.
  - אם ה-SWA-8000S מנותק, **REAR SPEAKER** ו-**REAR LEVEL** ימשיכו להיות מוצגים, אך הפונקציות לא יהיו זמינות.
- הפעל את הטלוויזיה באמצעות השלט רחוק שלה.

◄ שליטה ב-Soundbar באמצעות השלט רחוק של הטלוויזיה

1. לחץ לחיצה ארוכה על הלחצן (○) **SOUND** למשך יותר מחמש שניות כשה-Soundbar מופעל.
2. "ON - TV REMOTE" מופיע בתצוגת ה-Soundbar.
3. בתפריט הטלוויזיה, הגדר את רמקול הטלוויזיה לרמקול חיצוני.

- לא זמין אם פונקציית TV ARC או מצב **HDMI** נמצאים בשימוש.
- כל הלחצנים אינם זמינים מלבד **VOL +/-** והלחצנים (השתק) בפונקציה זו.
- קיים שוני בין תפריטי טלוויזיה, בהתאם ליצרן ולדגם. לקבלת מידע נוסף, עיין במדריך למשתמש של הטלוויזיה.
- יצרנים התומכים בפונקציה זו:
  - VIZIO, LG, Sony, Sharp, PHILIPS, PANASONIC, TOSHIBA, GRUNDIG, Hisense, RCA
  - פונקציה זו עשויה לא להיות תואמת לשלט הטלוויזיה, לפי יצרן השלט רחוק.
- כדי לכבות פונקציה זו, לחץ על הלחצן (○) **SOUND** למשך 5 שניות.
  "OFF - TV REMOTE" מופיע בתצוגת ה-Soundbar.

התקנת סוללות בשלט הרחוק

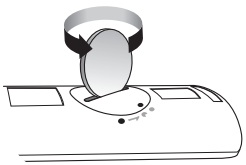

1. השתמש במטבע כמתאים די לסובב את מכסה השלט רחוק נגד כיוון תנועת מחוגי השעון על-מנת להסירו כמתואר באיור למעלה.

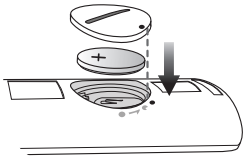

2. בכנס סוללת ליתיום 3V. הקפד שהקוטב החיובי (+) יפנה כלפי מעלה בעת הכנסת הסוללה. החזר את מכסה הסוללה ויישר את הסימנים '●' אלא מול אלא כמתואר באיור למעלה.

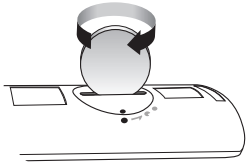

3. השתמש במטבע מתאים כדי לסובב את מכסה הסוללות של השלט רחוק עם כיוון תנועת מחוגי השעון עד שיתקבע במקומו.

התקנת SOUNDBAR

התקנת מתקן התלייה

◄ אמצעי זהירות בעת ההתקנה

- התקינו על קיר אנכי בלבד.
- הימנע מהתקנה במיקום בעל טמפרטורה או לחות גבוהים, או על קיר שאינו יכול לשאת את משקל המכשיר.
- בדקו את חוזק הקיר. אם הקיר אינו חזק מספיק לצורך תליית המכשיר, חזקו את הקיר או התקינו את המכשיר על קיר אחר המסוגל לתמוך במשקל המכשיר.
- רכוש והשתמש בבורגי קיבוע המתאימים לסוג הקיר שעליו אתה רוצה לתלות את המכשיר (גבס, מתכת, עץ וכו'). אם ניתן, הבריגו את בורגי הקיבוע לדיבלים בקיר.
- קנה ברגים להרכבה על הקיר בהתאם לסוג ועובי הקיר שעליו תתקין את ה-Soundbar.
  - קוטר: M5
  - אורך: מומלץ 35 L מ"מ ומעלה
- חברו כבלים מהמכשיר להתקנים חיצוניים לפני התקנתו על הקיר.
- ודאו שהמכשיר כבוי ומנותק מהחשמל לפני שאתם מתקינים אותו. הדבר עלול לגרום להתחשמלות.

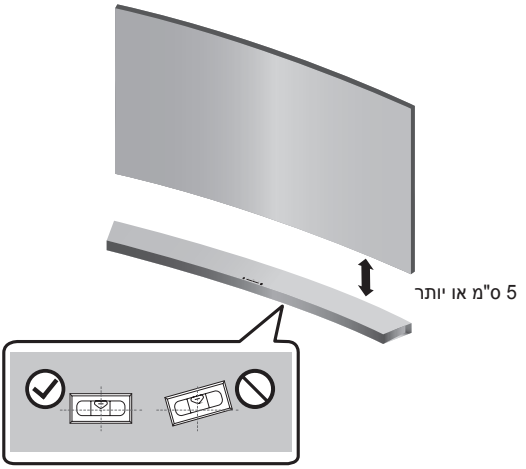

1. מקם את מנחה ההתקנה על הקיר.

- על מחה ההתקנה להיות מפולס.
- אם הטלוויזיה מותקנת על הקיר, התקן את ה-Soundbar לפחות 5 ס"מ מתחת לטלוויזיה.

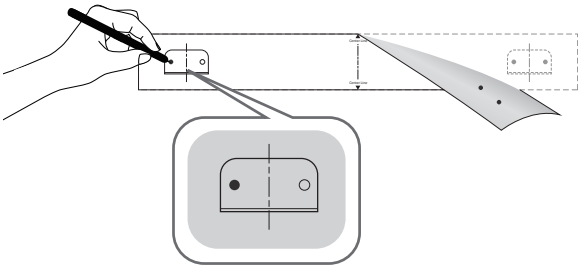

2. סמן בעט על הקיר את מיקום מעבר הברגים, ולאחר מכן הסר את מנחה ההתקנה. לאחר מכן, קדח חורים עבור הברגים באמצעות מקדח בקוטר המתאים.

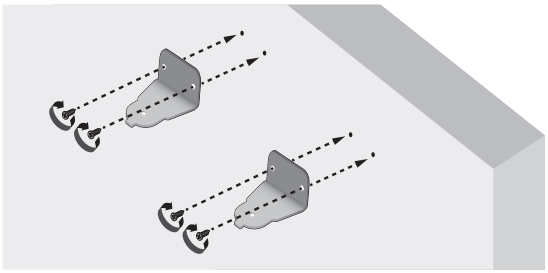

3. הדק את שני חלקי ה-**מתלה קיר** בחוזקה אל הקיר במקומות המסומנים, באמצעות הברגים המתאימים

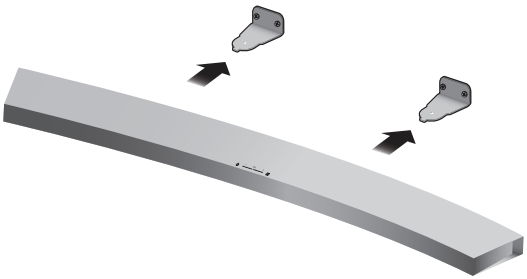

4. חבר את ה-Soundbar אל שני חלקי ה-**מתלה קיר** כפי שמוצג באיור.

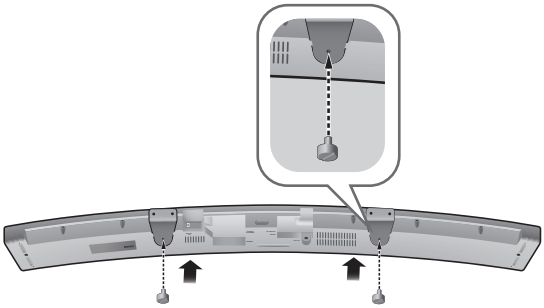

5. הכנס **תושבת קיבוע מחזיק** לכל חור בתחתית המוצר. הדק כל **תושבת קיבוע מחזיק** כדי להדק את ה-Soundbar לשני חלקי ה-**מתלה קיר**.

- אין להיתלות על היחידה המותקנת ויש להיזהר שלא תקבל מכה או תיפול.
- יש לחבר את היחידה היטב לקיר כדי שלא תיפול. נפילת היחידה עלולה לגרום לפציעה או לנזק למוצר.
- אם המכשיר מותקן על קיר, הקפידו שילדים לא ימשכו בכבלים המחוברים אליו מכיוון שהדבר עלול לגרום לנפילת המכשיר.
- לביצועים אופטימליים של התקנה על הקיר, אם הטלוויזיה מותקנת על הקיר, התקן את מערכת הרמקולים לפחות 5 ס"מ מתחת לטלוויזיה.
- לבטיחותך, אם אינך מתקין את היחידה על הקיר, התקן אותה על משוח ישר שהיא לא עשויה ליפול ממנו.

מיקום ה-SOUNDBAR על גבי מעמד לטלוויזיה

מקם את ה-Soundbar על גבי מעמד לטלוויזיה.



1. יישר את מרכז ה-Soundbar עם המרכז של הבסיס של הטלוויזיה, ולאחר מכן דחוף אותו על על המעמד עד הסוף כמתואר באיור. היזהר שהטלוויזיה לא תיפול.

התקנת ה-SOUNDBAR כיחידה עצמאית



1. מרכז את ה-Soundbar באזור השטוח שבחזית הטלוויזיה.

- התקן אותו על משטח ישר ויציב

- אין לחבר את כבל החשמל של מוצר זה או של הטלוויזיה לשקע החשמל עד להשלמת כל החיבורים בין הרכיבים.
- לפני העברה או התקנה של מוצר זה, יש להקפיד לכבות אותו ולנתק את כבל המתח.

חיבור הסאבוופר

חיבור אוטומטי לסאבוופר

מזהה הקישור של הסאב-וופר נקבע בעת הייצור והיחידה הראשית והסאב-וופר אמורים להתחבר אוטומטית (באופן אלחוטי) כאשר מפעילים את היחידה הראשית ואת הסאב-וופר.

- כאשר הסאב-וופר מחובר באופן מלא, נורית החיווי הכחולה של הקישור בסאב-וופר מפסיקה להבהב ודולקת באור יציב.

חיבור ידני לסאבוופר

אם נורית החיווי הכחולה ממשיכה להבהב כאשר היחידה הראשית והסאב-וופר מופעלים, הגדר את המזהה באמצעות הפעולות הבאות.

- חשוב: לפני שתתחיל, הכנס סוללה לשלט רחוק. ראה הנחיות בעמ' 10.

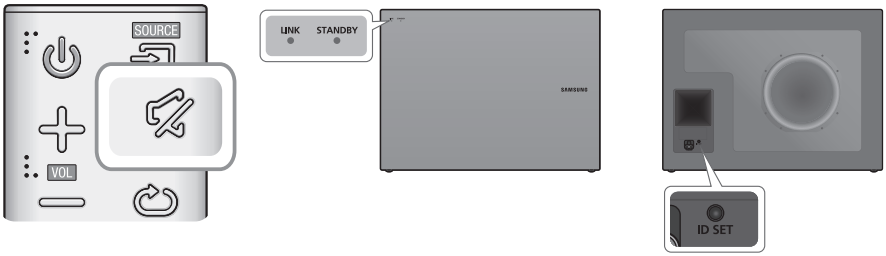

1. חברו את המכשיר ואת הסאבוופר לחשמל.
2. לחצו על הלחצן **ID SET** בגב הסאבוופר בעזרת חפץ קטן וחד למשך 5 שניות.
   - המחוון STANDBY יכבה והמחוון LINK (נורית כחולה) יהבהב במהירות.
3. כאשר היחידה הראשית כבויה (במצב STANDBY), לחץ והחזק את (השתק) בשלט רחוק למשך חמש שניות.
4. ההודעה **ID SET** תופיע על תצוגת ה-Soundbar.
5. כדי לסיים את הקישור, הפעל את היחידה הראשית כאשר הנורית הכחולה של הסאבוופר מהבהבת.
   - כעת היחידה הראשית והסאבוופר אמורים להיות מקושרים (מחוברים).
   - מחוון LINK (נורית כחולה) בסאב-וופר אמורה לדלוק באור יציב ולא להבהב.
   - אם מחוון LINK אינו דולק באור יציב, סימן שיש תקלה בתהליך הקישור. כבה את היחידה הראשית והתחל שוב, משלב 2.
   - תוכלו ליהנות מצליל משופר מהסאבוופר האלחוטי על-ידי בחירת אפקט הצליל. (ראו עמוד 8)

- לפני העברה או התקנה של המוצר, יש להקפיד לכבות אותו ולנתק את כבל המתח.
- אם היחידה הראשית כבויה, הסאבוופר האלחוטי יהיה במצב המתנה, ונורית החיווי למצב המתנה בקדמת המכשיר תהבהב באדום מיד. (אין נורית חיווי כחולה).
- אם אתה משתמש בהתקן העושה שימוש באותו התדר (2.4GHz) של ה-Soundbar בקרבת ה-Soundbar, עלולה להיווצר הפרעה.
- מרחק השידור של האות האלחוטי בין היחידה הראשית לסאבוופר הוא בערך 10 מטר אבל עשוי להשתנות בהתאם לסביבת ההפעלה.

אם יש קיר בטון-פלדה או קיר מתכת בין המכשיר לבין הסאבוופר האלחוטי, המערכת עשויה לא לפעול בכלל מכיוון שהאות האלחוטי לא יכול לחדור דרך מתכת.

- אם היחידה המרכזית אינה מייצרת חיבור אלחוטי, עקוב אחר שלבים 1-5 בדף הקודם על מנת להגדיר מחדש את החיבור בין היחידה המרכזית והסאבוופר האלחוטי.

- אנטנת הקליטה האלחוטית מובנית בתוך הסאבוופר האלחוטי. יש להרחיק את המכשיר ממים ומלחות.
- למיטוב חוויית ההאזנה, ודאו שהאזור שמסביב לסאבוופר האלחוטי נקי ממכשולים.

מצב נורית חיווי בסאבוופר

נורית חיווי	מצב	תיאור	רזולוציה
אדום	פועל	המתנה (כשהיחידה הראשית של ה-Soundbar כבויה)	בדוק את אספקת החשמל ליחידה הראשית של ה-Soundbar
		החיבור נכשל	חבר שוב (עיין בהוראות לחיבור ידני במדריך למשתמש)
כחול	פועל	חובר בהצלחה (פעולה רגילה)	-
	מהבהב	המתנה (כשהיחידה הראשית של ה-Soundbar כבויה)	בדוק את אספקת החשמל ליחידה הראשית של ה-Soundbar
		החיבור נכשל	חבר שוב (עיין בהוראות לחיבור ידני במדריך למשתמש)
אדום וכחול	מהבהב	כשל	פנה למרכז השירות.

חיבור ה-SWA-8000S (נמכר בנפרד)

- הרחב לצליל סראונד אלחוטי אמיתי באמצעות חיבור ערכת הרמקולים האחוריים האלחוטיים של סמסונג (SWA-8000S) אל ה-Soundbar. (נמכר בנפרד)
- לפני החיבור למודול המקלט האלחוטי, חבר את הסאבוופר תחילה.
- השתמש בכבל הרמקול כדי לחבר את מודול המקלט האלחוטי לרמקולים.
- חבר את כבל החשמל לשקע חשמל. נורית החיווי תידלק.

1. כאשר היחידה הראשית כבויה (במצב STANDBY), לחץ לחיצה ארוכה (5 שניות) על (השתק) בשלט רחוק.
2. כעת יופיע בתצוגת ה-Soundbar הכיתוב **ID SET**.
3. 3. חבר את כבל החשמל של מודול המקלט האלחוטי (SWA-8000S) לשקע חשמל (ז"ח).
4. הפעל את ה-Soundbar כאשר מחוון הקישור (הנורית הכחולה) ב-SWA-8000S תעבור להבהוב מהיר.
5. כאשר מחווני הקישור (הנוריות הכחולות(בסאב-וופר וב-SWA-8000S יהבהבו ויעברו לדלוק באור יציב, סימן שחיבור ה-SWA-8000S מלא ושלם.

- תהליך זה עשוי להימשך מספר דקות
- ברגע שה-Soundbar ומודול המקלט האלחוטי יהיו מחוברים, הם יתחברו מחדש באופן אוטומטי גם לאחר שתכבה ותפעיל אותם שוב.

אם מודול המקלט האלחוטי אינו מקושר ל-Soundbar (מציג את נורית החיווי באדום), חבר אותם באופן הבא.

1. כבה את ה-Soundbar.
2. לחץ לחיצה ארוכה (5 ~ 6 שניות) על לחצן (השתק) בשלט רחוק עד שיופיע בתצוגת ה-Soundbar הכיתוב ID SET.
3. ודא שמודול המקלט האלחוטי במצב המתנה (מציג את נורית החיווי באדום).
4. לחץ על הלחצן **ID SET** שנמצא מאחור בעזרת סיכה חדה למשך 5~6 שניות, עד אשר נורית החיווי של LINK במודול המקלט האלחוטי תהבהב (בכחול).
5. הפעל את ה-Soundbar בעזרת לחצן בשלט רחוק והמתן זמן מה. הסימן שהם מחוברים לחלוטין זה לזה הוא שאתה יכול לראות שנורית החיווי של LINK דולקת ברצף (בכחול).

חיבור רמקולי סראונד (למכירה בנפרד)

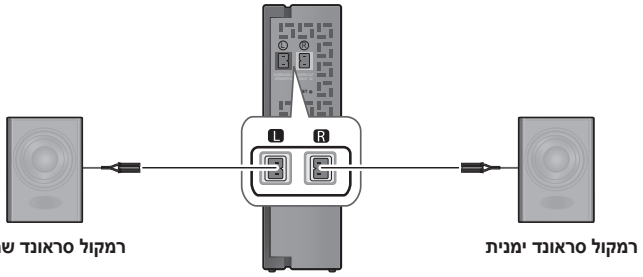

- הנח את הרמקולים הללו בצדדים, ביחס לנקודת ההאזנה שלך. אם אין די מקום, הנח אותם זה מול זה. מקם אותם 60 עד 90 ס"מ מעל לאוזניים, בהטיה קלה כלפי מטה.

- השתמש בכבל הרמקול כדי לחבר את מודול המקלט האלחוטי לרמקולי הסראונד.
- כל רמקול נושא מדבקה צבעונית בחלק האחורי או התחתון שלו. לכל כבל פס צבעוני בודד סמוך לקצהו. התאם את הפס הצבעוני בקצה הכבל למדבקה שעל הרמקול וחבר את הכבל לרמקול.

התחברות לטלוויזיה

- חשוב: לפני שתתחיל, הכנס סוללה לשלט רחוק. ראה הנחיות בעמ' 10.

חיבורים לטלוויזיה באמצעות כבל HDMI (דיגיטלי)

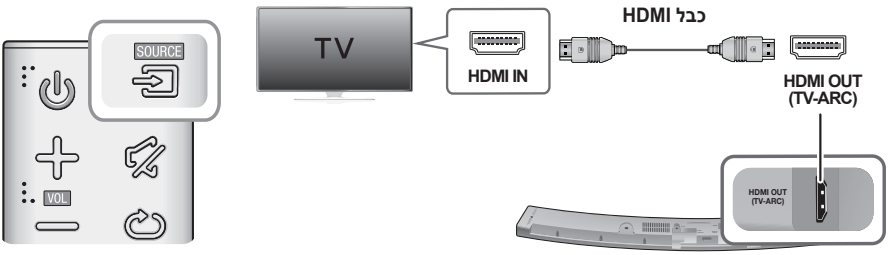

1. חבר כבל HDMI מהכניסה **HDMI OUT (TV-ARC)** שבגב המוצר ליציאה HDMI IN שבטלוויזיה שלך.
2. לחץ על הלחצן בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.

- HDMI הנו ממשק המאפשר את השידור הדיגיטלי של וידאו וקבצי שמע באמצעות חיבור אחד בלבד.
- אם יש לטלוויזיה יציאת ARC, חבר את כבל ה-HDMI ליציאה HDMI IN (ARC).
- מומלץ במידת האפשר להשתמש בכבל HDMI ללא ליבה. אם נעשה שימוש בכבל HDMI עם ליבה, השתמש באחד בעל ליבה של פחות מ-14 מ"מ.
- יש להפעיל את Anynet+.
- פונקציה זו אינה זמינה אם כבל ה-HDMI לא תומך ב-ARC.

התחברות אל טלוויזיה בכבל אופטי דיגיטלי

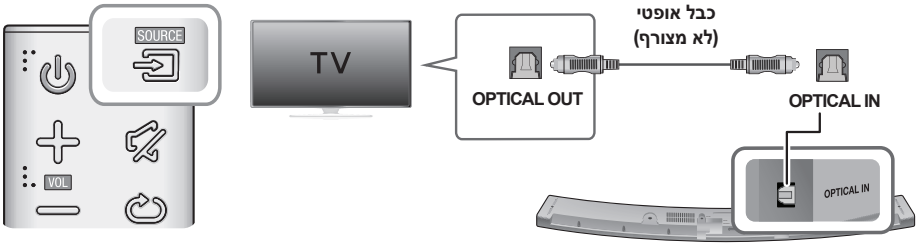

1. חבר את **OPTICAL IN** (שמע) ב-Soundbar לשקע OPTICAL OUT של הטלוויזיה.
2. לחץ על הלחצן בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.

◄ Auto Power Link

אם חיברת את היחידה הראשית לטלוויזיה באמצעות כבל אופטי, הגדר את הפונקציה Auto Power להיות מופעלת על-מנת שה-Soundbar יופעל באופן אוטומטי כאשר מפעילים את הטלוויזיה.

1. חבר את ה-Soundbar והטלוויזיה בכבל 'אופטי'. (לא מצורף)
2. לחץ על הלחצן בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.
3. לחץ על הלחצן ◄ בשלט רחוק למשך 5 שניות כדי להפעיל או לכבות את Auto Power Link.

- Auto Power Link מוגדר לערך מופעל כברירת מחדל.
- בהתאם להתקן המחובר, ייתכן ש-Auto Power Link לא תפעל.

TV SOUNDCONNECT

ניתן ליהנות מצליל הטלוויזיה דרך ה-Soundbar שמחובר לטלוויזיית Samsung שתומכת בפונקציה TV SoundConnect.

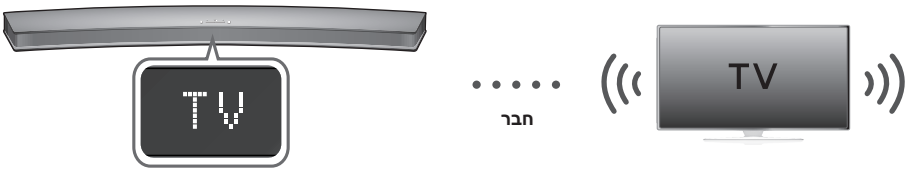

1. הפעל את הטלוויזיה ואת ה-Soundbar.
2. לחץ על הלחצן בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **TV**.
3. בטלוויזיה תופיע הודעה השואלת אם להפעיל את הפונקציה TV SoundConnect.
4. בחר **<כן>** כדי לסיים את חבור הטלוויזיה וה-Soundbar באמצעות השלט רחוק של הטלוויזיה.

- אם תהליך הקישור של הטלוויזיה (SoundConnect) נכשל, עבור אל SoundConnect בתפריט צליל בטלוויזיה, בחר **הוסף מכשיר חדש**, ובהגדרה **הוסף מכשיר חדש** בחר **מופעל**. כעת נסה שוב.
- העברת המצב של Soundbar מטלוויזיה למצב אחר תסיים באופן אוטומטי את SoundConnect TV.
- כדי לחבר את ה-Soundbar לטלוויזיה אחרת, יש לסיים את החיבור הקיים.
- כדי לנתק את החיבור הקיים, לחץ לחיצה ארוכה (5 שניות) על לחצן ►II בשלט רחוק או עבור למצב אחר. כדי להתחבר אל הטלוויזיה השנייה, בצע את שלבים 1 עד 4 לעיל.

- הפונקציה SoundConnect TV (SoundShare) נתמכת על-ידי חלק מטלוויזיות Samsung שהושקו משנת 2012. בדוק אם הטלוויזיה שלך תומכת בפונקציה SoundConnect TV (SoundShare) לפני שאתה מתחיל. (למידע נוסף, עיין במדריך למשתמש של הטלוויזיה.)
- אם טלוויזיית Samsung הושקה לפני 2014, בדוק בתפריט ההדרות של SoundShare.
- אם המרחק בין הטלוויזיה לבין Soundbar עולה על 10 מטר, ייתכן שהחיבור לא יהיה יציב או השמע עלול לגמגם. במקרה כזה, מקם מחדש את הטלוויזיה או ה-Soundbar כך שהם יימצאו בטווח הפעולה, ולאחר מקן הקם מחדש את החיבור של SoundConnect TV.
- טווח פעולה של SoundConnect TV:
  - טווח ההפעלה המומלץ לצימוד: עד 2 מטר
  - טווח פעולה מומלץ: עד 10 מטר
- הלחצנים 'הפעל/השהה', 'הבא' ו'הקודם' ב-Soundbar או בשלט רחוק של ה-Soundbar לא שולטים על הטלוויזיה.

◄ שימוש בפונקציה Bluetooth POWER On

הפונקציה Bluetooth POWER On זמינה אחרי חיבור מוצלח של ה-Soundbar לטלוויזיה תואמת Bluetooth באמצעות TV SoundConnect. כאשר הפונקציה Bluetooth POWER On מופעלת, הפעלה או כיבוי של הטלוויזיה תפעיל או תכבה גם את ה-Soundbar.

1. חבר את הטלוויזיה ל-Soundbar באמצעות הפונקציה SoundConnect TV.

2. לחץ על לחצן **Bluetooth POWER** בשלט רחוק של ה-Soundbar. " **ON - BLUETOOTH POWER** " יופיע בתצוגה של ה-Soundbar.

- **ON - BLUETOOTH POWER** : Soundbar יופעל ויכובה יחד עם הטלוויזיה.
- **OFF - BLUETOOTH POWER** : Soundbar ייכבה רק כשתכבה את הטלוויזיה.

- פונקציה זו נתמכת על-ידי חלק מטלוויזיות Samsung שהושקו משנת 2013 ואילך.

חיבור אל מכשירים חיצוניים

כבל HDMI

HDMI הוא ממשק דיגיטלי סטנדרטי לחיבור מכשירים כגון טלוויזיות, מקרנים, נגני DVD, נגני Blu-ray, ממירים ועוד.
בגלל ש-HDMI משדר את איכות האות הדיגיטלי המקסימלי, ניתן ליהנות מווידאו ושמע מעולים כפי שנוצרו במקור הדיגיטלי.

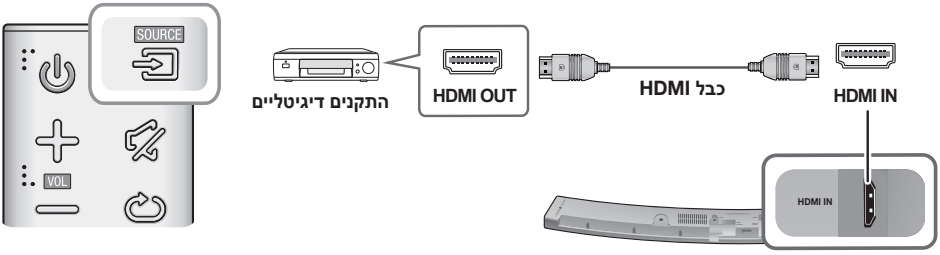

1. חבר כבל HDMI מהכניסה **HDMI IN** שבגב המוצר ליציאה HDMI OUT שבמכשיר החשמלי שלך.
2. לחץ על הלחצן ⏎ בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **HDMI**.

כבל שמע אופטי או אנלוגי

יחידה זו מצוידת בשקע כניסה אופטי דיגיטלי ובשקע שמע אנלוגי (AUX), דבר המאפשר לך לחבר אותה אל מכשירים חיצוניים בשתי דרכים.

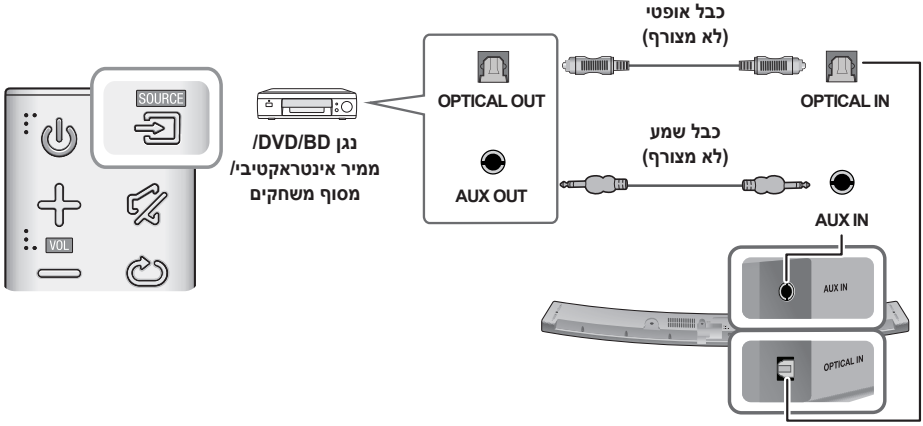

◄ כבל AUX

1. בעזרת כבל שמע, חבר את שקע **AUX IN** (לשמע) שביחידה הראשית אל שקע AUDIO OUT במכשיר המקור.
2. לחץ על הלחצן ⏎ בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **AUX**.

◄ כבל אופטי

1. בעזרת כבל אופטי דיגיטלי, חבר את שקע **OPTICAL IN** (שמע) ביחידה הראשית אל שקע OPTICAL OUT במכשיר המקור.
2. לחץ על הלחצן ⏎ בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **D.IN**.

USB

ניתן להשמיע קובצי מוזיקה השמורים על התקני אחסון USB דרך ה-Soundbar.

יציאת USB **תצוגה**

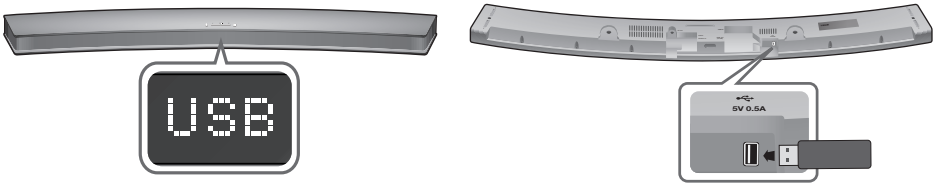

1. חבר את התקן ה-USB ליציאת ה-USB של המוצר.
2. לחץ על הלחצן ⏎ בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **USB**.
3. **USB** יופיע במסך.
   - חיבור ה-Soundbar להתקן ה-USB הושלם.
   - המערכת נכבית באופן אוטומטי (Auto Power Off) אם לא מחובר אליה התקן USB במשך יותר מ-5 דקות.

◄ לפני חיבור התקן USB

שימו לב לנתונים הבאים:

- אם שם הקובץ בהתקן ה-USB ארוך מ-10 תווים, הוא לא מוצג ב-Soundbar.
- ייתכן שמכשיר זה לא יהיה תואם לסוגים מסוימים של התקני אחסון USB.
- המכשיר תומך במערכות קבצים מסוג FAT16 ו-FAT32.
  - מערכת הקבצים NTFS אינה נתמכת.

- חברו את התקן ה-USB ישירות אל כניסת ה-USB שבמכשיר. אחרת, ייתכן שתיווצר בעיית תאימות של התקן ה-USB.
- אין לחבר אל המוצר התקני אחסון מרובים באמצעות קורא כרטיסים משולב. הוא עשוי שלא לפעול כהלכה.
- המכשיר אינו תומך בפרוטוקולי PTP של מצלמות דיגיטליות.
- אין לנתק את התקן ה-USB בזמן שהוא מעביר קבצים.
- המכשיר אינו מנגן קובצי מוסיקה בהגנת DRM (MP3, WMA) שהתקבלו מאתר מסחרי.
- המכשיר אינו תומך בכוננים קשיחים חיצוניים.
- המכשיר אינו תומך בטלפונים ניידים.
- רשימת תאימות:

הרחבה	קודק	טווח דגימה	קצב סיבית
*.mp3	MPEG 1 Layer2	16 KHz ~ 48 KHz	80 kbps ~ 320 kbps
	MPEG 1 Layer3	16 KHz ~ 48 KHz	80 kbps ~ 320 kbps
	MPEG 2 Layer3	16 KHz ~ 48 KHz	80 kbps ~ 320 kbps
	MPEG 2.5 Layer3	16 KHz ~ 48 KHz	80 kbps ~ 320 kbps
*.wma	Wave_Format_MSAudio1	16 KHz ~ 48 KHz	56 kbps ~ 128 kbps
	Wave_Format_MSAudio2	16 KHz ~ 48 KHz	56 kbps ~ 128 kbps
*.aac	AAC	16 KHz ~ 96 KHz	48 kbps ~ 320 kbps
	AAC-LC	16 KHz ~ 96 KHz	128 kbps ~ 192 kbps 320 ch 5.1 kbps
	HE-AAC	24 KHz ~ 96 KHz	48 kbps ~ 64 kbps 160 ch 5.1 kbps
*.wav	-	16 KHz ~ 48 KHz	עד 3000 kbps
*.ogg	OGG 1.1.0	16 KHz ~ 48 KHz	50 kbps ~ 500 kbps
*.flac	FLAC 1.1.0, FLAC 1.2.1	16 KHz ~ 96 KHz	עד 3000 kbps

- אם יש יותר מדי תיקיות וקבצים שמורים בהתקן ה-USB, הקריאה עשויה להימשך זמן מה.

מצב כניסה

לחץ על הלחצן ⮕ שבלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את המצב שאתה רוצה.

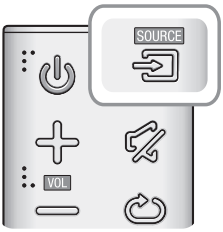



מצב כניסה	תצוגה
כניסה דיגיטלית אופטית קלט ARC (HDMI OUT)	**D.IN**
כניסת AUX	**AUX**
כניסת HDMI	**HDMI**
מצב BLUETOOTH	**BT**
TV SoundConnect	**TV**
מצב USB	**USB**

הפונקציה AUTO POWER DOWN

המכשיר נכבה באופן אוטומטי במקרים הבאים:

- מצב USB/TV/BT/HDMI/D.IN
  - אם אין אות שמע במשך 5 דקות.
- מצב AUX
  - אם כבל ה-AUX מנותק למשך 5 דקות.
  - אם לא מתקבל קלט KEY במשך שמונה שעות בזמן שכבל AUX מחובר. (ניתן לכבות את הפונקציה Auto Power Down רק במקרה הנתון.)

כדי לכבות את הפונקציה Auto Power Down, במצב **AUX** לחץ לחיצה ארוכה על לחצן ⏯ במשך 5 שניות.
ON - AUTO POWER DOWN / **OFF - AUTO POWER DOWN** יופיע בתצוגה.

BLUETOOTH

באפשרותך לחבר התקן Bluetooth ל-Soundbar וליהנות ממוסיקה עם צליל סטריאו, והכול ללא חוטים!

לחיבור ה-SOUNDBAR להתקן BLUETOOTH

בדקו אם התקן ה-Bluetooth תומך בפונקציית אוזניות הסטריאו תואמת ה-Bluetooth.

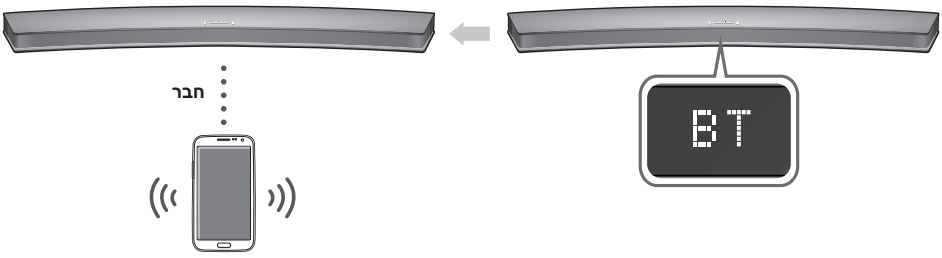

התקן Bluetooth

1. לחץ על הלחצן ⏎ בלוח העליון של היחידה הראשית או על הלחצן **SOURCE** בשלט רחוק כדי לבחור את מצב **BT**.
   - תוצג ההודעה **BT READY** בתצוגה הקדמית של ה-Soundbar.
2. בחרו בתפריט Bluetooth שבהתקן ה-Bluetooth שאותו תרצו לחבר. (עיינו במדריך למשתמש של התקן ה-Bluetooth)
3. בחרו באפשרות "**[Samsung] HW-Jxxxx J-Series**" מתוך הרשימה.
   - כאשר ה-Soundbar מחובר למכשיר Bluetooth, הוא יציג [**שם מכשיר Bluetooth**] ← **BT** בלוח הקדמי.
   - ניתן להציג את שם המוצר רק באנגלית. יוצג קו תחתון " _ " אם השם אינו באנגלית.
   - אם צימוד התקן ה-Bluetooth ל-Soundbar נכשל, מחקו את ה-"**[Samsung] HW-Jxxxx J-Series**" הקודם שמצא התקן ה-Bluetooth ובצעו חיפוש חדש עבור Soundbar.
4. השמיעו מוסיקה בהתקן המחובר.
   - באפשרותכם להאזין למוסיקה המושמעת בהתקן ה-Bluetooth המחובר על גבי המערכת Soundbar.
   - במצב **BT**, הפונקציות הפעלה/השהייה/הבא/הקודם אינן זמינות. אולם, פונקציות אלה זמינות במכשירי Bluetooth התומכים ב-AVRCP.

- אם תופיע בקשה לקוד PIN בעת חיבור מכשיר Bluetooth, הזן <0000>.
- ניתן לצמד התקן Bluetooth אחד בלבד בכל פעם.
- חיבור Bluetooth יסתיים כאשר Soundbar יועבר למצב כבוי.
- ייתכן שה-Soundbar לא יבצע חיפוש או חיבור Bluetooth כהלכה בתנאים הבאים:
  - אם קיים שדה חשמלי חזק מסביב ל-Soundbar.
  - אם מספר התקני Bluetooth מוצמדים בו-זמנית ל-Soundbar.
  - אם התקן ה-Bluetooth כבוי, אינו נמצא במקומו או שיש בו תקלה.

- שימו לב שישנם התקנים כגון מיקרוגלים, מתאמי LAN אלחוטיים, מנורות פלואורסנט ותנורי גז המשתמשים באותו טווח תדרים שבו משתמש התקן ה-Bluetooth, והעשויים לגרום להפרעות חשמליות.
- ה-Soundbar תומך בנתוני SBC (44.1 kHz, 48 kHz).
- יש לחבר התקן Bluetooth התומך בפונקציית A2DP (AV) בלבד.
- לא ניתן לחבר את ה-Soundbar להתקן Bluetooth התומך בפונקציית HF (ללא התערבות המשתמש) בלבד.
- לאחר צימוד ה-Soundbar להתקן Bluetooth, בחירה של **'HW-Jxxxx J-Series [Samsung]'** מרשימת ההתקנים הסרוקים של ההתקן תשנה באופן אוטומטי את ה- Soundbar למצב **BT**.
  - זמין רק אם Soundbar מופיע ברשימת המכשירים המוצמדים של מכשיר ה-Bluetooth. (על מכשיר ה-Bluetooth וה-Soundbar לבצע הצמדה מראש לפחות פעם אחד).
- Soundbar יופיע ברשימת המכשירים שנסרקו של מכשיר ה-Bluetooth רק כאשר Soundbar מציג **BT READY**.
- במצב SoundConnect TV, לא ניתן להצמיד את ה-Soundbar למכשיר Bluetooth אחר.

BLUETOOTH POWER ON (BLUETOOTH POWER)

אם מכשיר Bluetooth ששויך קודם לכן ינסה ליצור שיוך עם ה-Soundbar כאשר הפונקציה Bluetooth POWER On מופעלת וה-Soundbar כבוי, ה-Soundbar יופעל באופן אוטומטי.

1. לחץ על לחצן **Bluetooth POWER** בשלט רחוק כאשר ה-Soundbar מופעל.
2. הכיתוב **ON - BLUETOOTH POWER** יופיע בתצוגת ה-Soundbar.

לניתוק התקן ה-BLUETOOTH מה-SOUNDBAR

באפשרותכם לנתק את התקן ה-Bluetooth מ-Soundbar. לקבלת הוראות יש לעיין במדריך למשתמש של התקן ה-Bluetooth.

- Soundbar ינותק.
- כאשר Soundbar מנותק מהתקן ה-Bluetooth device, בתצוגה הקדמית של Soundbar יופיע **BT DISCONNECTED**.

לניתוק SOUNDBAR מהתקן ה-BLUETOOTH

לחץ על הלחצן **SOURCE** שבשלט רחוק או על הלחצן ⏎ בלוח העליון של המוצר כדי לעבור ממצב **BT** למצב אחר או כדי לכבות את ה-Soundbar.

- התקן ה-Bluetooth המחובר ימתין זמן מסוים לתגובה מ-Soundbar לפני סיום החיבור. (זמן הניתוק עשוי להשתנות בהתאם להתקן ה-Bluetooth)

- במצב חיבור Bluetooth, חיבור ה-Bluetooth יאבד אם המרחק בין ה-Soundbar והתקן ה-Bluetooth עולה על הטווח האפשרי 10 מטר.
- Soundbar ייכבה באופן אוטומטי לאחר 5 דקות במצב מוכן.

◄ עוד על Bluetooth

Bluetooth היא טכנולוגיה שמאפשרת להתקנים תואמי Bluetooth להתחבר בקלות אלה עם אלה באמצעות חיבורים אלחוטיים קצרים.

- התקן Bluetooth עשוי לגרום לרעשים או לתקלות, בהתאם לאופן השימוש, כאשר:
  - חלק מגופכם נוגע במערכת הקליטה/שידור של התקן ה-Bluetooth או ה-Soundbar.
  - השידורים מההתקן נחסמים על-ידי מכשולים כגון קיר, פינה או מחיצות משרדיות.
  - שידורי ההתקן משובשים על-ידי הפרעות חשמליות מהתקנים המשדרים באותו טווח תדרים, כגון מכשירים רפואיים, מיקרו-גלים ו-LAN אלחוטי.
- צמדו את ה-Soundbar עם התקן ה-Bluetooth תוך שמירת מרחק קצר.
- ככל שהמרחק בין ה-Soundbar לבין התקן ה-Bluetooth גדול יותר, איכות הקליטה תהיה גרועה יותר. אם המרחק יהיה גדול מטווח הפעולה של התקן ה-Bluetooth, החיבור יתנתק.
- באזורים בעלי איכות קליטה ירודה, ייתכן שחיבור ה-Bluetooth לא יפעל כהלכה.
- חיבור ה-Bluetooth פועל כהלכה רק כאשר הוא נמצא בקרבת המערכת. החיבור יתנתק באופן אוטומטי כאשר ההתקן יוצב מחוץ לטווח הפעולה. גם בתוך טווח הפעולה, ייתכן שאיכות הקול תיפגע בשל מכשולים כגון קירות או דלתות.
- מכשיר אלחוטי זה עלול לגרום להפרעות אלקטרוניות כאשר הוא פעיל.

שימוש ביישום SAMSUNG AUDIO REMOTE

◄ התקנת אפליקציית Audio Remote של סמסונג

כדי לשלוט ב-Soundbar באמצעות המכשיר החכם שלך ואפליקציית Audio Remote (שלט השמע) של סמסונג, הורד את אפליקציית Audio Remote של סמסונג מחנות Google Play.

חיפוש שוק : Samsung Audio Remote



◄ הפעלת אפליקציית Samsung Audio Remote

כדי להפעיל ולהשתמש באפליקציית Samsung Audio Remote, גע בסמל השלט רחוק במכשיר החכם, ואז בצע את ההנחיות המופיעות במסך.



- אפליקציית Samsung Audio Remote תואמת רק לטלפונים ניידים של Android ולמכשירים ניידים שבהם פועלת מערכת הפעלה Android OS 3.0 ואילך.

עדכון תוכנה

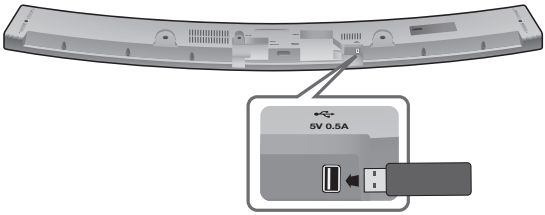

Samsung עשויה להציע בעתיד עדכונים לקושחת המערכת של Soundbar.

במידה ומוצע עדכון, ניתן לעדכן את הקושחה על-ידי חיבור התקן USB עם עדכון הקושחה ליציאת ה-USB של ה-Soundbar.

שימו לב שאם קיימים קובצי עדכון מרובים, עליך לטעון כל אחד בנפרד להתקן ה-USB ולהשתמש בו.

בקר באתר Samsung.com או צור קשר עם מרכז התמיכה של Samsung כדי לקבל מידע נוסף על הורדת קובצי עדכונים.

נוהל העדכון

1. בצע את השלבים הבאים כדי להוריד את תוכנת המוצר:
עבור אל אתר האינטרנט של Samsung בכתובת (samsung.com/sec) ← חפש את שם הדגם - בחר באפשרות התמיכה בלקוחות (שם האפשרות נתון לשינוי)
2. שמור את התוכנה שהורדה במקל USB ובחר באפשרות חלץ לכאן כדי לבטל את דחיסת התיקייה.
3. כבה את ה-Soundbar וחבר את מקל ה-USB המכיל את עדכון התוכנה ליציאת ה-USB.
4. נתק את כבל החשמל, חבר אותו מחדש והפעל את ה-Soundbar.
5. הפעל את ה-Soundbar. בתוך 3 דקות, המילה **UPDATE** תוצג והעדכון יתחיל.
6. לאחר השלמת הפעולה, אספקת המתח ל-Soundbar תכבה. במצב זה, לחץ על הלחצן **▶II** בשלט רחוק למשך 5 שניות.

אם לא הוצג UPDATE

1. כבה את ה-Soundbar, חבר התקן אחסון USB שמכיל קובצי עדכון ליציאת ה-USB של ה-Soundbar.
2. נתק את כבל המתח, חבר אותו שוב והפעל אותו.

- הכנס התקן USB המכיל את שדרוג הקושחה ליציאת ה-USB ביחידה הראשית.
- ייתכן ששדרוג הקושחה לא יפעל כהלכה אם קובצי שמע הנתמכים על-ידי ה-Soundbar שמורים בהתקן אחסון ה-USB.
- אין לכבות את המכשיר או לנתק את התקן ה-USB בעת החלת עדכונים. היחידה הראשית תכבה באופן אוטומטי לאחר שעדכון הקושחה יסתיים.
- לאחר השלמת העדכון, הגדרת המשתמש ב-Soundbar תאותחל. היחידה הראשית תכבה באופן אוטומטי לאחר שעדכון הקושחה יסתיים. שים לב שעדכון הקושחה מאפס גם את חיבור הסאבוופר. אם החיבור לסאבוופר לא מתבצע באופן אוטומטי לאחר העדכון, עיין בעמוד 15. אם עדכון התוכנה נכשל, ודא שמקל ה-USB אינו פגום.
- על משתמשי Mac OS להשתמש ב-MS-DOS (FAT) בתור פורמט ה-USB.
- ייתכן שהתקן ה-USB אינו נתמך, בהתאם ליצרן.

פתרון בעיות

בטרם תפנו לקבלת שירות, בדקו את הפרטים שלהלן.

המכשיר אינו נדלק.	
• האם כבל החשמל מחובר לשקע?	← חברו את כבל החשמל לשקע.

פונקציה מסוימת אינה פועלת בעת לחיצה על הלחצן.	
• האם ישנו חשמל סטטי באוויר?	← נתקו את כבל החשמל וחברו אותו שוב.

לא נשמעים צלילים.	
• האם פונקציית ה-השתק פועלת?	← לחצו על הלחצן (השתק) כדי לבטל את הפונקציה.
• האם עוצמת הקול מוגדרת לעוצמה הנמוכה ביותר?	← כוונן את עוצמת השמע.

השלט רחוק אינו פועל.	
• האם הסוללות מרוקנות?	← החליפו את הסוללות בסוללות חדשות.
• האם המרחק בין השלט רחוק לבין המכשיר גדול מדי?	← התקרבו למכשיר.

צימוד TV SoundConnect (צימוד לטלוויזיה) נכשל.	
• האם הטלוויזיה שלך תומכת ב-TV SoundConnect?	← TV SoundConnect נתמך בחלק מטלוויזיות Samsung שהושקו אחרי 2012. בדוק אם הטלוויזיה שלך תומכת ב-TV SoundConnect.
• האם הקושחה של הטלוויזיה מהגרסה האחרונה?	← עדכנו את הטלוויזיה לגרסת הקושחה העדכנית ביותר.
• האם אירעה תקלה בעת ההתחברות?	← צור קשר עם מרכז התמיכה של Samsung.
	← אפס את TV SoundConnect וחבר מחדש. כדי לאפס את חיבור TV SoundConnect, לחץ לחיצה ארוכה (5 שניות) על לחצן ▶II.

נורית ה-LED האדומה בסאבוופר מהבהבת והסאבוופר אינו משמיע צליל.	
• ייתכן שהסאבוופר אינו מחובר ליחידה הראשית של המוצר.	← נסה לחבר שוב את הסאבוופר. (ראו עמוד 15)

מפרטים

כללי	USB		5 V / 0.5 A
	משקל	המכשיר	2.7 ק"ג
		סאבוופר (PS-WJ6001R / PS-WJ6000R)	6.8 ק"ג
	מידות (רוחב x גובה x עומק)	המכשיר	1078.0 x 47.5 x 129.0 מ"מ
		סאבוופר (PS-WJ6001R / PS-WJ6000R)	452.0 x 335.0 x 154.0 מ"מ
	טווח הטמפרטורה בפעולה		5 °C + דע 35 °C +
	טווח אחוזי הלחות בפעולה		10 % עד 75 %
מגבר	דירוג צריכת חשמל	המכשיר	22 ואט x 6, 4 OHM, THD ≧ 10 %
		סאבוופר (PS-WJ6001R / PS-WJ6000R)	168 ואט, 3 OHM, THD ≧ 10 %

* התכנון והמפרטים כפופים לשינוי ללא הודעה מוקדמת.
* מפרט נומינלי
- Samsung Electronics Co., Ltd שומרת את הזכות לשנות את המפרטים ללא התרעה.
- המשקל והמידות המצוינים הם משוערים.
- לקבלת מידע אודות אספקה וצריכת חשמל, עיינו בתווית המודבקת על-גבי המכשיר.

※ **הודעת רשיון קוד פתוח**

- לשאלות ובקשות בנוגע למקור פתוח, צור קשר עם Samsung בדוא"ל (oss.request@samsung.com).

רישיון

Manufactured under licence from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

לפטנטים של DTS, ראה http://patents.dts.com. מיוצר תחת רישיון מ-DTS Licensing Limited. DTS, הסמל, ו-DTS והסמל יחדיו, הם סימנים מסחריים רשומים, ו-DTS 2.0 Channel הוא סימן מסחרי של DTS, Inc. © DTS, Inc. כל הזכויות שמורות.

המונחים HDMI ו-HDMI High-Definition Multimedia Interface, וכן הלוגו של HDMI, הם סימנים מסחריים או סימנים מסחריים רשומים של HDMI Licensing LLC בארצות הברית ובמדינות אחרות.

SAMSUNG

ENERGY STAR

© 2016 Samsung Electronics Co., Ltd. All rights reserved.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

© 2016 Samsung Electronics Co.,Ltd כל הזכויות שמורות.

יצירת קשר עם SAMSUNG WORLD WIDE

אם יש לכם שאלות או הערות הנוגעות למוצרי Samsung, אנא צרו קשר עם מרכז שירות הלקוחות של SAMSUNG.

Web Site	Contact Centre ☎	Country
		Africa ▪
www.samsung.com/support	0860 SAMSUNG (726 7864)	SOUTH AFRICA
	8007260000	BOTSWANA
	08 197 267 864	NAMIBIA
	0211 350370	ZAMBIA
	800 2550	MAURITIUS
	0262 50 88 80	REUNION
	917 267 864	ANGOLA
	847267864 / 827267864	MOZAMBIQUE
www.samsung.com/africa_en/support	0800-726-7864	NIGERIA
	0800-10077 0302-200077	GHANA
www.samsung.com/africa_fr/support	8000 0077	COTE D'IVOIRE
	800-00-0077	SENEGAL
	67095-0077	CAMEROON
www.samsung.com/support	0800 545 545	KENYA
	0800 300 300	UGANDA
	0685 889 900	TANZANIA
	9999	RWANDA
	200	BURUNDI
	499999	DRC
	1969	SUDAN

Web Site	Contact Centre ☎	Country
		Middle East ▪
www.samsung.com/eg/support	08000-7267864 16580	EGYPT
www.samsung.com/n_africa/support	3004	ALGERIA
www.samsung.com/iran/support	021-8255	IRAN
www.samsung.com/sa/home www.samsung.com/sa_en	800 247 3457 (800 24/7 HELP)	SAUDI ARABIA
www.samsung.com/pk/support	0800-SAMSUNG (72678)	PAKISTAN
www.samsung.com/n_africa/support	80 1000 12	TUNISIA
www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)	800-SAMSUNG (800 - 726 7864)	U.A.E
	800-SAMSUNG (800 - 726 7864)	OMAN
	183-CALL (183-2255)	KUWAIT
	8000-GSAM (8000-4726)	BAHRAIN
	800-CALL (800-2255)	QATAR
www.samsung.com/tr/support	444 77 11	TURKEY
www.samsung.com/levant	0800-22273 06 5777444	JORDAN
	962 5777444	SYRIA
	961 1484 999	LEBANON
	964 77 261 72220 964 75 118 92525	IRAQ
www.samsung.com/n_africa/support	080 100 22 55	MOROCCO