
Detergent drawer guidelines

DC68-03704R-02

Auto dispenser

The automatic dispenser models provide a three-compartment dispenser: two compartments for auto dispensing and another part for manual input. With Auto Detergent and Auto Softener enabled, the washing machine dispenses an adequate amount of detergent or fabric softener for each load. See below for details:

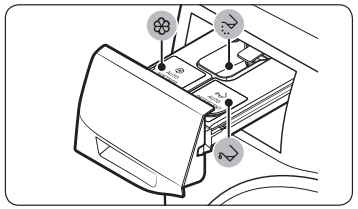

- **Auto Detergent:** Use liquid detergent only.
- **Auto Softener:** Use fabric softener only.
- **Detergent:** If necessary, add manually as instructed by the detergent manufacturer.




NOTE

- To use the manual dispenser, make sure the auto dispenser is turned off. Keep pressing **Dose per Wash** until the Auto dispense indicators are off.

Settings

If necessary, you can change the default settings as follows.

Detergent (default: Standard)

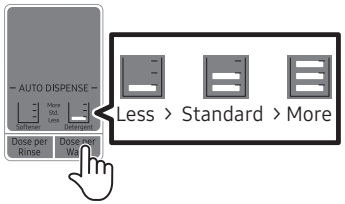


To select an input level, press **Dose per Wash** to cycle through the settings: Less › Standard › More.

NOTE


- If you choose **More**, the rinse process will be added once more.

Water hardness (default: 2)

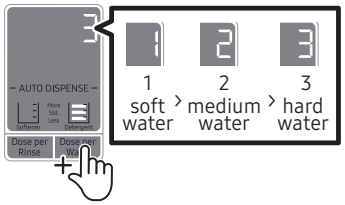


1. To select a water hardness level, press and hold **Dose per Wash** to cycle through the settings: 1 (soft water) › 2 (medium water) › 3 (hard water).
2. When complete, press and hold **Dose per Wash** for 3 seconds to confirm your changes.

Softener (default: Standard)

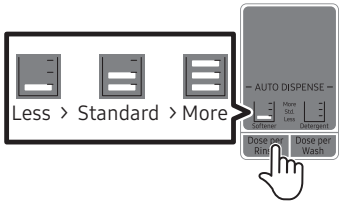

To select an input level, press **Dose per Rinse** to cycle through the settings: Less › Standard › More.

Concentration level (default: 1)

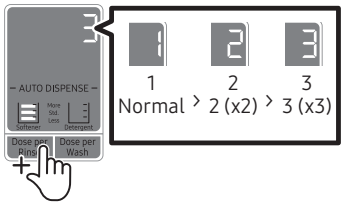


1. To select a concentration level, press and hold **Dose per Rinse** to cycle through the settings: 1 (Normal) › 2 (x2) › 3 (x3).
2. When complete, press and hold **Dose per Rinse** for 3 seconds to confirm your changes.

NOTE

- If you select **WOOL**, the **Dose per Wash** and **Dose per Rinse** buttons will be disabled automatically. However, you can enable the function(s) manually after selecting a cycle.
- If the refill indicator continues to turn on after refilling the detergent/softener, press **Start/Pause (Hold to Start)**. The indicator turns off about 10 seconds later.
- **The Refill indicator turns on because it is designed to remind you of the necessity for replenishment of detergent. This is not a system failure.**


※ For details, refer to the user manual.

About the refill indicator

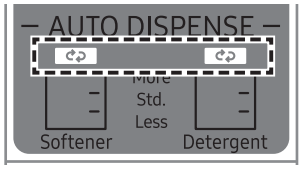

- If the indicator on the auto dispenser section lights up, immediately refill the corresponding compartment. A later refill may cause the input level of the agent to decrease.
- The input or refill level of the detergent or softener depends on the type or the remaining amount of agents.
- Once you refill the auto dispenser, the remaining level of the detergent starts to be sensed upon the press of the **Start/Pause (Hold to Start)** button. However, the indicator may turn off later, depending on the detergent type.

To refill the detergent or fabric softener

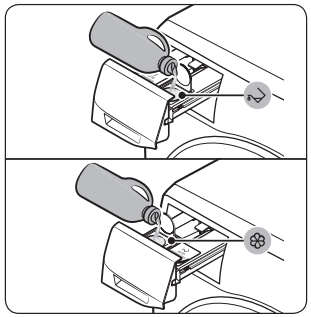

1. Slide open the detergent drawer.
2. Apply an appropriate amount of detergent to the **Auto Detergent compartment ( )**.
3. If necessary, apply an appropriate amount of fabric softener to the **Auto Softener compartment ( )**.
4. Slide the detergent drawer inward.

⚠ CAUTION

Make sure both the auto and manual dispensers are empty before moving the washing machine.


NOTE

- If the refill indicator continues to turn on after refilling the detergent/softener, press **Start/Pause (Hold to Start)**. The indicator turns off about 10 seconds later.
- **The Refill indicator turns on because it is designed to remind you of the necessity for replenishment of detergent. This is not a system failure.**

Troubleshooting

Symptom	Action
The auto dispenser indicators blink. (applicable models only)	• Check if the detergent drawer is closed properly. – Open the detergent drawer and close it again. Make sure it's closed properly. • This may happen if liquid detergent has hardened inside the detergent compartment. – Clean and unclog the detergent compartment.

Cleaning

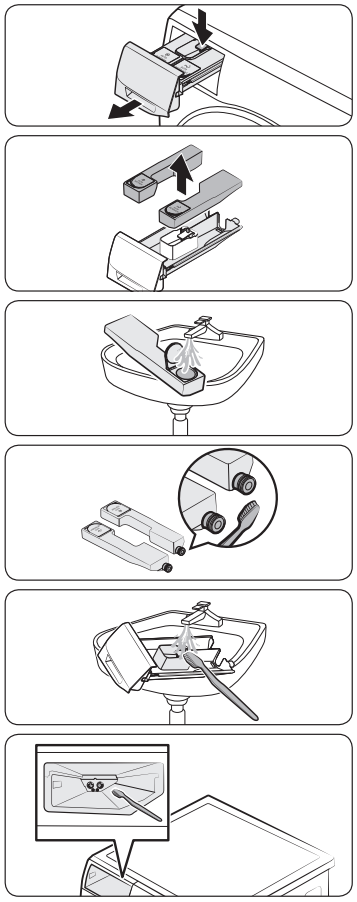

1. While holding down the release lever on the inner of the drawer, slide open the drawer.
2. Remove both the **detergent compartment** and the **softener compartment** as shown.
3. Open the lids of both compartments, and then put water in them and shake.
4. Clean the cap valves of both compartments with a soft brush.
5. Clean the drawer components in flowing water using a soft brush.
6. Clean the drawer recess using a soft brush. Make sure to clean the cap valves to prevent clogging.
7. Assemble the compartment cover firmly with the detergent drawer.
8. Slide the drawer inward to close it.

※ For details, refer to the user manual.