INSTALLATION INSTRUCTIONS

SNE SERIES

CAGE-NUT ADAPTOR

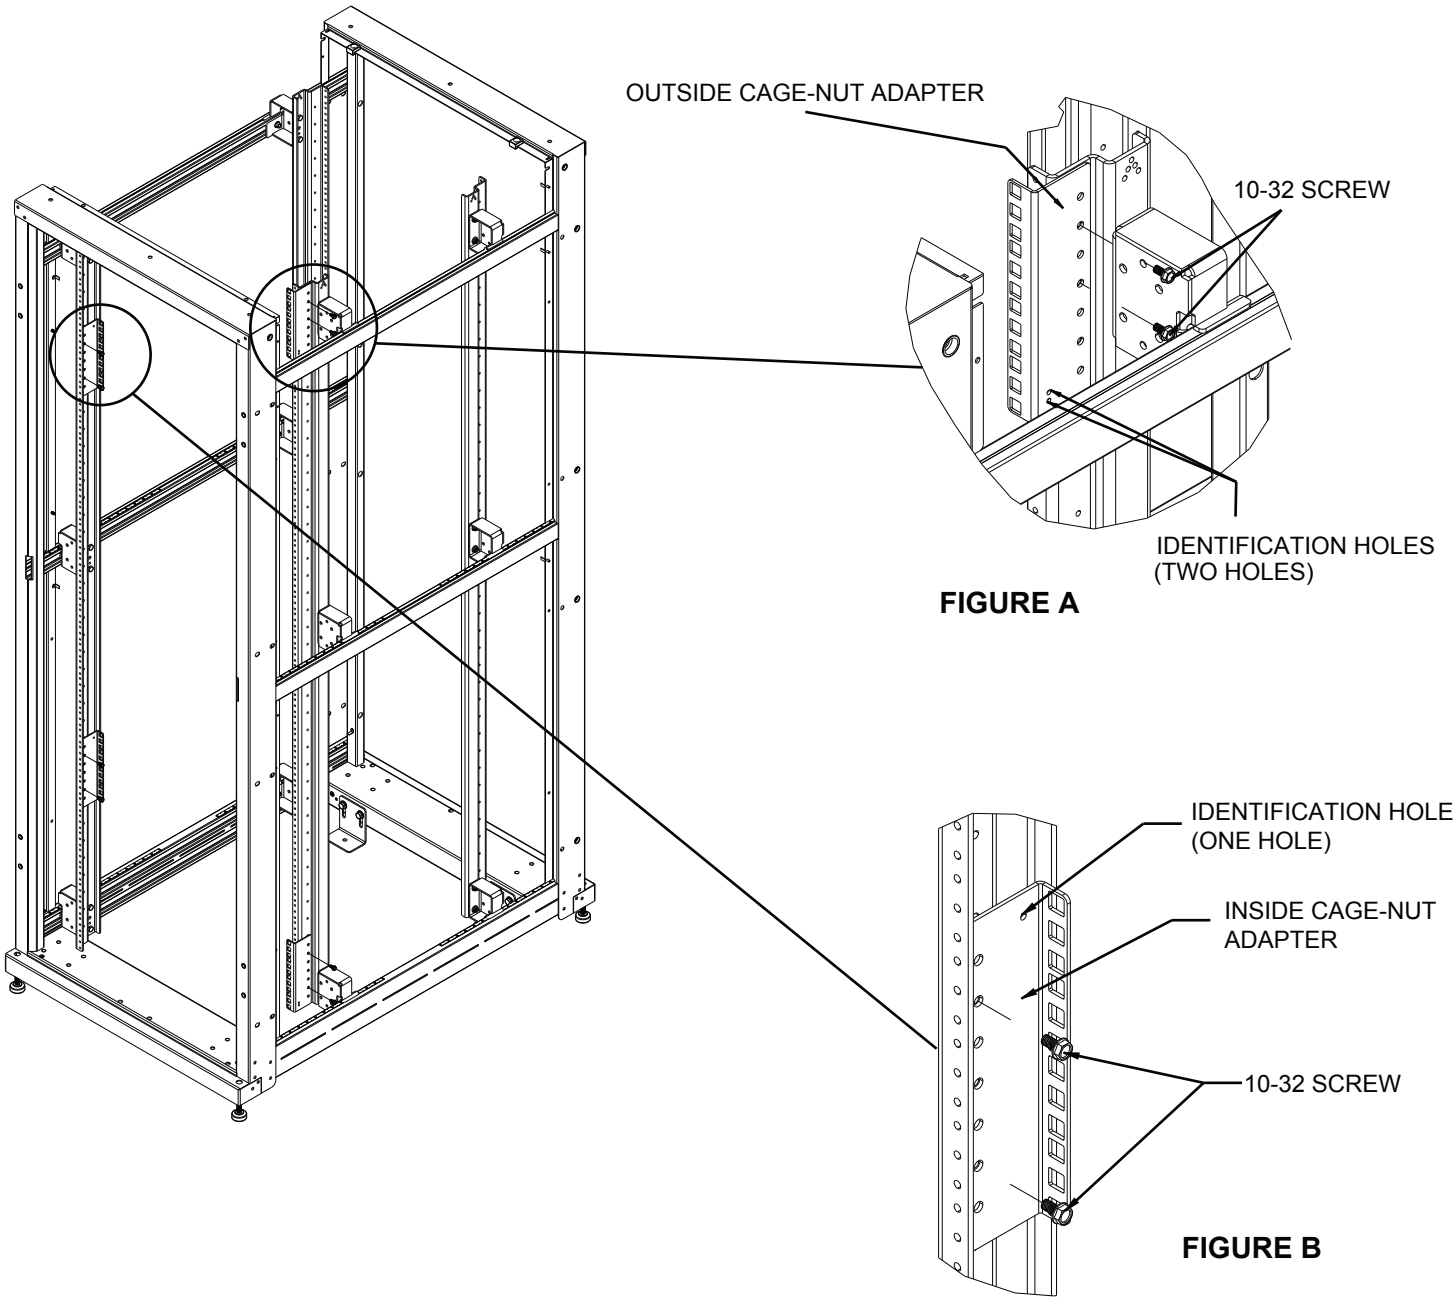


FIGURE A

FIGURE B

INSTALLATION OF OUTSIDE CAGE-NUT ADAPTOR

1) Install outside cage-nut adaptor to rackrail using provided screws. To install the outside adaptor, the rackrail must be removed and slid toward the center of the rack. **FIGURE A**

NOTE: The outside cage-nut adaptor is identified by two holes towards the front of the adaptor.

INSTALLATION OF INSIDE CAGE-NUT ADAPTOR

1) Install inside cage-nut adaptor to rackrail using provided screws. **FIGURE B**

NOTE: The inside cage-nut adaptor is identified by one hole towards the front of the adaptor.