
T8DEA866C

EN **User Manual**
Tumble Dryer

USER MANUAL

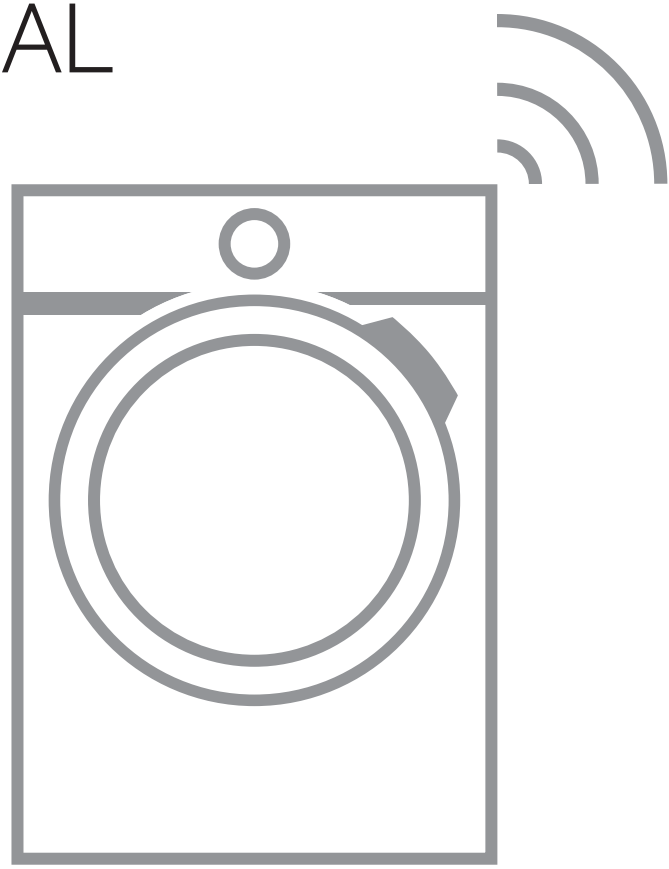

AEG

CONTENTS

1. SAFETY INFORMATION....3
2. SAFETY INSTRUCTIONS....6
3. PRODUCT DESCRIPTION....8
4. CONTROL PANEL....9
5. FIRST TIME START-UP....9
6. USING THE TOUCH SCREEN....11
7. WI-FI - CONNECTIVITY SETUP....12
8. BEFORE FIRST USE....14
9. PROGRAMMES....14
10. OPTIONS....16
11. DAILY USE....17
12. MACHINE SETTINGS....21
13. HINTS AND TIPS....24
14. CARE AND CLEANING....24
15. TROUBLESHOOTING....27
16. TECHNICAL DATA....29
17. ACCESSORIES....31
18. QUICK GUIDE....32
19. PRODUCT INFORMATION SHEET IN REFERENCE TO E.U. REGULATION 1369/2017....34



FOR PERFECT RESULTS

Thank you for choosing this AEG product. We have created it to give you impeccable performance for many years, with innovative technologies that help make life simpler - features you might not find on ordinary appliances. Please spend a few minutes reading to get the very best from it.
Visit our website for:



Get usage advice, brochures, trouble shooter, service information:
www.aeg.com/webselfservice



Register your product for better service:
www.registeraeg.com



Buy Accessories, Consumables and Original spare parts for your appliance:
www.aeg.com/shop

CUSTOMER CARE AND SERVICE

Always use original spare parts.
When contacting our Authorised Service Centre, ensure that you have the following data available: Model, PNC, Serial Number.
The information can be found on the rating plate.

⚠ Warning / Caution-Safety information

ⓘ General information and tips

Environmental information

Subject to change without notice.

1. ⚠ SAFETY INFORMATION

Before beginning the installation and use of this appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.



- Read the supplied instructions.

1.1 Children and vulnerable people safety



WARNING!
Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions supplied with the accessory. Read it carefully before installation (refer to the Installation leaflet).
- The appliance can be installed as freestanding or below a kitchen counter with correct space (refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.

- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- CAUTION: The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Do not exceed the maximum load of 8 kg (refer to the "Programme chart" chapter).
- Do not use the appliance if items have been soiled with industrial chemicals.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer’s instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly

removed and spread out so that the heat is dissipated.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

2. SAFETY INSTRUCTIONS

2.1 Installation

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature can be lower than 5°C or higher than 35°C.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always keep the appliance vertical when it is being moved.
- The rear surface of the appliance must be put against a wall.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.

2.2 Electrical connection

WARNING!
Risk of fire and electric shock.

- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.

2.3 Use

WARNING!
Risk of injury, electric shock, fire, burns or damage to the appliance.

- This appliance is for household use only.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Dry only fabrics that are suitable to dry in the appliance. Follow the cleaning instruction on the item label.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door of the appliance.
- Do not dry dripping wet clothes in the appliance.

2.4 Internal lighting

WARNING!
Risk of injury.

- Visible LED radiation, do not look directly into the beam.
- The LED lamp is dedicated to drum lighting. This lamp cannot be reused for other lighting purposes.

- To replace the internal lighting, contact the Authorised Service Centre.

2.5 Care and cleaning

WARNING!
Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Be careful when you clean the appliance to prevent damage to the cooling system.

2.6 Compressor

WARNING!
Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with a special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. The damage of the system can cause a leakage.

2.7 Service


- To repair the appliance contact the Authorised Service Centre.
- Use original spare parts only.

2.8 Disposal

WARNING!
Risk of injury or suffocation.

- Disconnect the appliance from the mains electrical and water supplies.
- Cut off the mains electrical cable close to the appliance and dispose of it.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).


3. PRODUCT DESCRIPTION

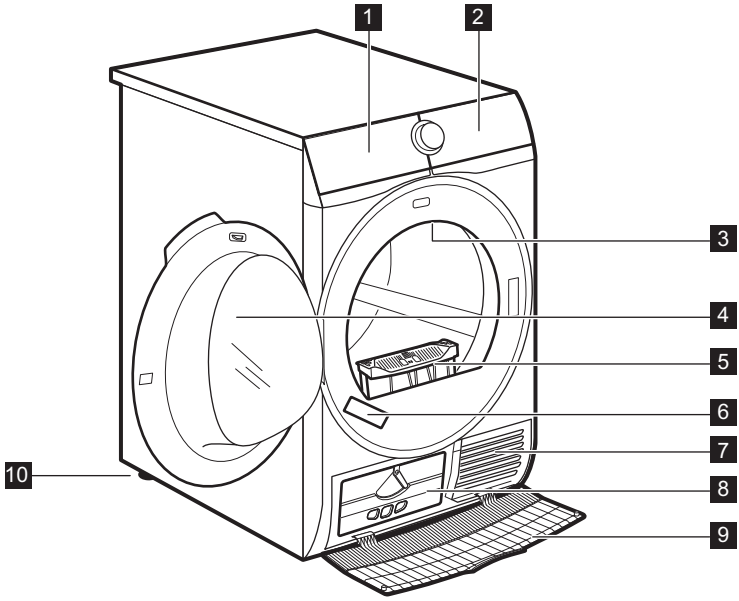

1 Water container
2 Control panel
3 Internal lighting
4 Appliance door
5 Filter
6 Rating plate
7 Airflow slots
8 Condenser lid
9 Condenser cover
10 Adjustable feet

For ease of loading laundry or ease of installation the door is reversible. (see separate leaflet).

4. CONTROL PANEL

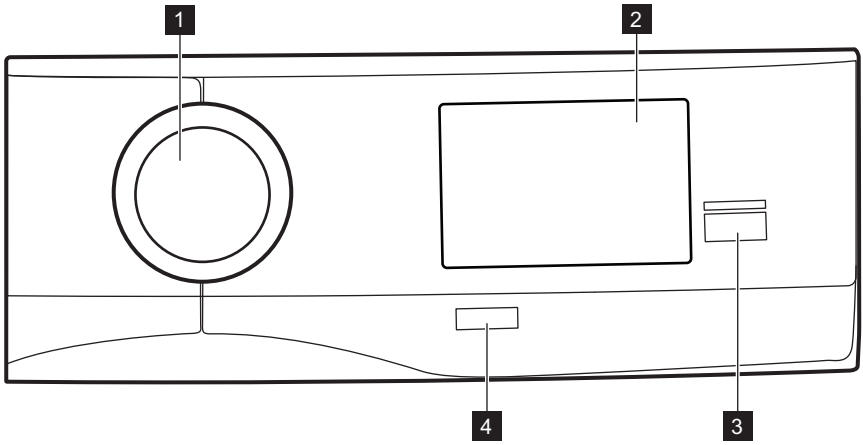


1 Program dial
2 Touch screen
3 Start/Pause button
4 On/Off button with *Auto Off* function

5. FIRST TIME START-UP

When you turn on your dryer for the first time, the Start-up Screen (shows the AEG logo and the time) appears on the touch screen and plays each time you turn on the dryer.

After the animation plays, you are guided through the initial setup procedure.

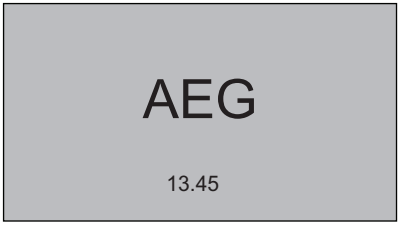

5.1 Language setup

1. Scroll the list of languages up or down to find the language you want to use and press it.




2. To accept the language tap on **OK**, if you want to change it tap on**Change**.




5.2 Time setup


1. Scroll the bar of hours and minutes to the right or left to set the current time.

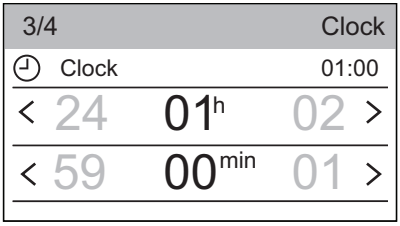

2. To select the time tap on the clock bar.

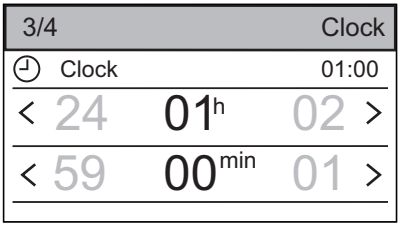


3. To accept the time tap on **OK**, if you want to change it tap on**Change**.

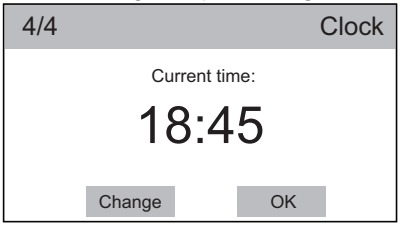



5.3 More Settings

After you accept the current time, the More Settings screen pop-up.

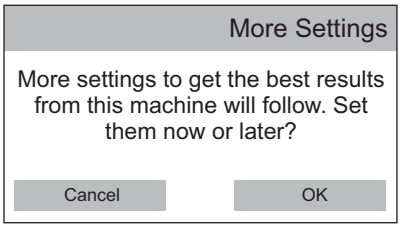

If you tap on **Cancel**, the program list appears and in a few seconds it will change in to the summary screen. The dryer is ready to use.

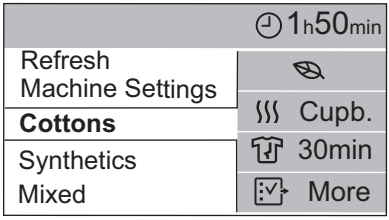

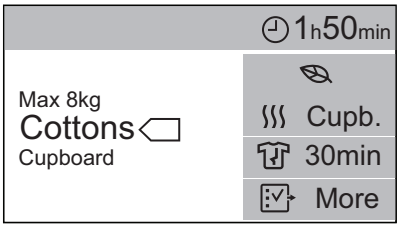


If you tap on **OK**, proceed to next settings.


Water Hardness

To set the proper water hardness level, read the "*MACHINE SETTINGS: Water Hardness* " chapter carefully.


1. For optimal performance set the water hardness by pressing **Change** or press **OK** to leave the default **Medium** water hardness.

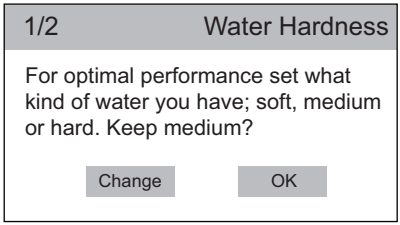


2. To change default value scroll the bar to the right or left, to set the water hardness: **Hard**, **Medium** or **Soft**.

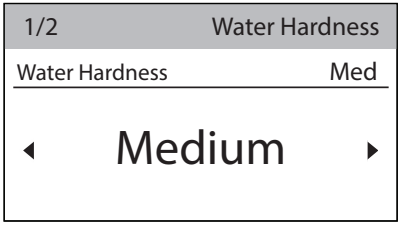

3. To select the value press the Water Hardness bar.

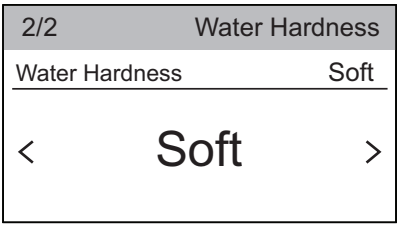


4. To accept the water hardness level press **OK**, if you want to change it press **Change**.

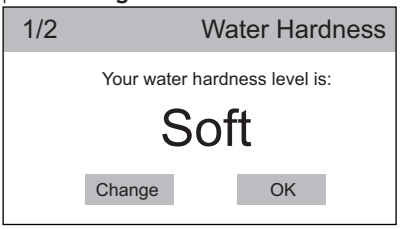



Water Tank Warning

1. If the external kit for water discharge is installed (additional accessory), the appliance automatically drains the water from the water tank. In this condition you are able to deactivate the warnings of the water tank.

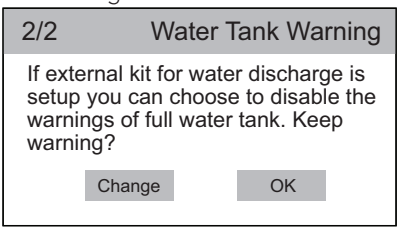


If you press **OK**, the warnings of full water tank is still enabled. The program list appears and in a few seconds it will change in to the summary screen.

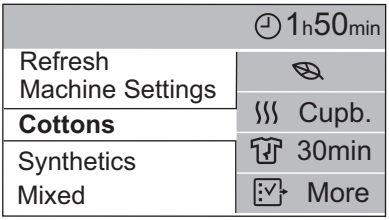

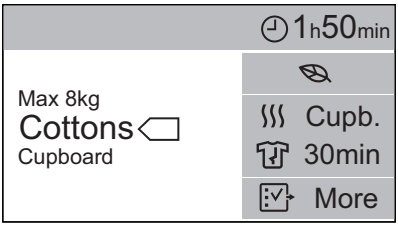


If you press **Change**, proceed to next step.

2. To confirm that the Full water tank warning is disabled press **OK**, if you want to change it press **Change**.

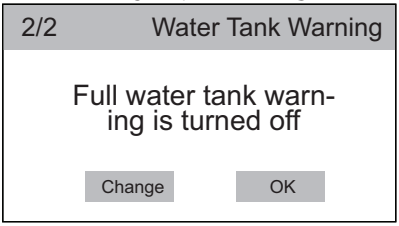


6. USING THE TOUCH SCREEN

Every time you turn on your dryer, the Start-up Screen (shows the logo and the time) appears on the touch screen.

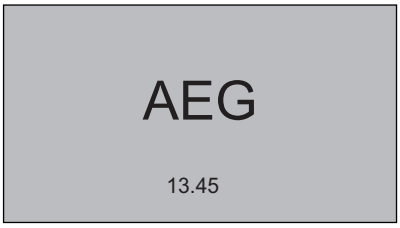


After the Start-up animation plays, the program summary screen appears on the touch screen.

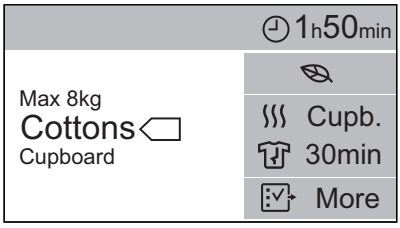


The Summary Screen is divided into four areas, where you can find:


- Max weight for cycle, program name, dryness level.

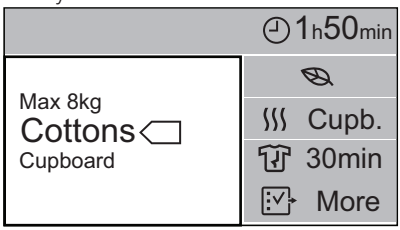


- Time to end of the program or time delay (if selected).

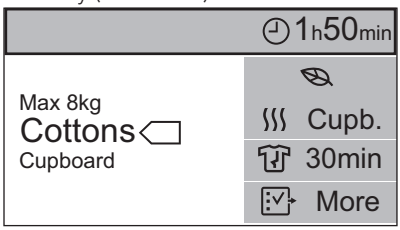

- The currently selected options for the selected cycle.

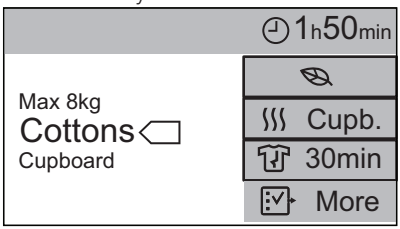

- More options.

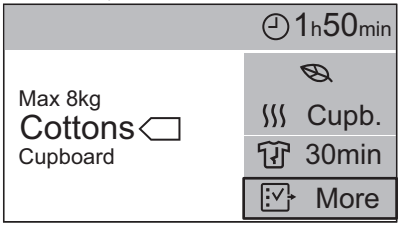

7. WI-FI - CONNECTIVITY SETUP

This chapter describes how to connect the smart appliance to the Wi-Fi network and to link it to a mobile devices.

By this functionality you can receive notifications, monitor and control your tumble dryer from your mobile devices.

To connect the appliance to enjoy the full range of features and services you need:

- Wireless network at home with internet connection enabled.
- Mobile device connected to wireless network.

Frequency	2.412 - 2.472 GHz for European market
Protocol	IEEE 802.11b/g/n two stream radio
Max power	< 20dBm

7.1 Installing and configuring My AEG

When connecting the tumble dryer to the application, stand near it with Your smart device.

Make sure that your smart device is connected to the wireless network.

1. Go to the App Store on your smart device.
2. Download and install App My AEG .
3. Make sure you started a Wi-fi connection in the dryer. If not go to the section below.
4. Start the application. Select the country and language and login with Your email and password. If you do not have an account, create a new one following the instructions in My AEG.
5. Follow the instructions on the App for the appliance registration and configuration.


A message appears on the appliance display to confirm that the configuration was successful.

7.2 Configuring the dryer wireless connection


Have My AEG downloaded and installed on your smart device.

1. Tap on the **Wi-Fi** bar to switch the connection on .

A pop-up message will appear, the icon starts flashing and wireless module begins starting up. It may take about 2 minute before it is ready.

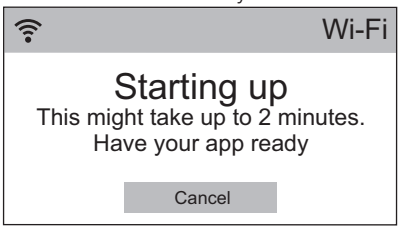

When the wireless module is ready, pop-up message will appear to inform you, that the access point will be open for about 3 minute.

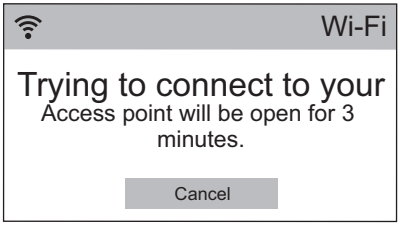

2. Configure the My AEG app on your smart device.
3. If the connectivity is configured, a message appears on the dryer display to confirm that the configuration was successful.



4. Tap on **OK** to get back to the machine settings list.

7.3 Remote Start Mode


You can start and stop a drying programme remotely.

When the App is installed and the wireless connection is complete, the **Remote Start Mode** option will appear among the available options.

To activate the remote start:

1. In the programme summery screen, tap **More** to enter the option list.
2. Tap on **Remote Start Mode** bar (**ON** status).

The following message pops up:

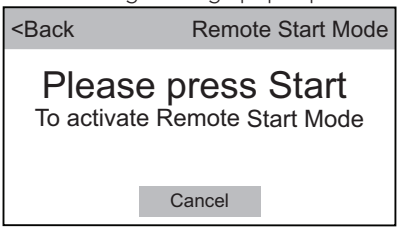

3. Press the **Start/Pause** button to activate the **Remote Start Mode**.

The indicator appears on the programme summary screen.

If the door is open, the **Remote Start Mode** is deactivated.

7.4 Over-the-air update

The App may propose an update for downloading new features.

The update is accepted via App only.

If a programme is running, the App notifies that the update will start at the end of the programme.

During the update, the appliance shows a message telling that update is running.

The appliance will usable again at the end of the update, without any notification about successful update.

If an error occurs, the appliance warns that update has failed: just press any buttons or turn the knob to return to normal use.

8. BEFORE FIRST USE

Rear drum locks are removed automatically when dryer is activated for the first time. Possible to hear some noise.

To unlock the rear drum locks:

1. Switch on the appliance.
2. Set any programme.
3. Press the Start/Pause button.

Drum starts to rotate. Rear drum locks are deactivated.

Before you use the appliance to dry items:

- Clean the tumble dryer drum with a moist cloth.
- Start a 1 hour programme with moist laundry.

At the beginning of the drying cycle (first 3-5 min) there could be a slightly higher sound level. This is due to the compressor starting up. This is normal for compressor powered appliances such as refrigerators and freezers.

9. PROGRAMMES

Programmes	Load [1]	Properties / Fabric mark
[2] Cottons **Eco**	**8 kg**	Cycle to be used to dry cotton with "cotton cupboard" dryness level, with maximum energy saving. /
Cottons	**8 kg**	Cycle defined to dry cottons items of different size / different weaving altogether. /
Synthetics	**3,5 kg**	Synthetic and mixed fabrics. /
Wool	**1 kg**	Woollen fabrics. Gentle drying for hand-washable woollens. Remove items immediately when the programme is completed.
Silks	**1 kg**	Gentle drying of hand-washable silks. /
Outdoor	**2 kg**	Outdoor clothing, technical, sports fabrics, waterproof and breathable jackets, shell jackets with a removable fleece or inner insulation. Suitable for drying in tumble dryer. /
Sports	**2 kg**	Sportswear, thin and light fabrics, microfiber, polyester. /
Jeans	**8 kg**	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams). /

Programmes	Load [1]	Properties / Fabric mark
Business Shirts	**1,5kg (or 7 shirts)/**	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, Immediately remove the items and put them on a hanger. /
Refresh	**1kg**	Refreshing textiles that were in storage.
Easy Iron	**1 kg (or 5 shirts)**	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to another. Shake the items before putting them in the appliance. When the programme has ended, immediately remove the items and put them on a hanger. /
Duvet	**3 kg**	Single or double duvets and pillows (with feather, down or synthetic fillings). /
Bed Linen	**3 kg**	Bed linen such as single and double sheets, pillowcases, duvet cover. /
Mixed	**3 kg**	Cotton and synthetic fabrics. /

1) The maximum weight refers to dry items.

2) The Cottons ECO programme in combination with the *cupboard dry* Dryness Level selection is the "Standard cotton programme" according to Commission Regulation EU No. 392/2012. It is suitable for drying normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

9.1 Woolmark Apparel Care - Blue



The wool drying cycle of this machine has been approved by The Woolmark Company for the drying of wool garments labelled as "hand wash" provided that the garments are dried according to the instructions issued by the manufacturer of this machine. Follow the garment care label for other laundry instructions. M1641 The Woolmark symbol is a Certification mark in many countries.

9.2 Programs and options selection

	Options					
Programs [1]	**Extra Silent**	**Eco**	**Dryness Level**	**Time Dry**	**Anti-crease**	**Load**
Cottons **Eco**		■			■	
Cottons	■	■	■	■	■	
Synthetics	■	■	■	■	■	
Wool		■				■
Silks		■			■	
Outdoor		■				
Sports		■			■	
Jeans		■			■	
Business Shirts		■			■	
Refresh		■			■	
Easy Iron		■			■	
Duvet		■				
Bed Linen		■			■	
Mixed		■		■	■	

[1] Together with the program you can set 1 or more options.

10. OPTIONS

10.1 Extra Silent

The appliance operates with low noise without effect on the drying quality. The appliance operates slowly with longer cycle time.

10.2 Eco

This option is on by default with all programs.

The power consumption is at the minimum level.

10.3 Dryness Level

This function helps to get the laundry more dried. There are 4 possible selections:

- Extra Dry
- Cupboard Dry+ (for Cotton only)
- Cupboard Dry
- Iron Dry

10.4 Time Dry

For cottons, synthetics and mixed. Lets the user to set drying time from minimum 10 min to maximum of 2 hours (in 10 min steps). When this option is maximum, load indicator disappears.

10.5 Anti-crease

Extends up to 120 minutes the anticrease phase (30 minutes) at the end of the drying cycle. After drying phase drum rotates time to time what prevents the clothes from creases. Laundry can be removed during the anti-crease phase.

10.6 Load

This option is applicable only to the Wool programme to get laundry more dried. There are 3 possible selections:


- Heavy
- Normal
- Light

10.7 Delay Start

Lets to delay the start of a drying program from minimum of 10 minutes to maximum of 24 hours.

1. Set the drying program and options.
2. In the option menu tap on the **Delay Start** bar to enter the submenu.
3. Scroll left or right the hour and minute bars to set the desired delay start.
4. To activate **Delay Start** option, touch the **Start/Pause** button.

After touching the Start/Pause button, the appliance begins the countdown.

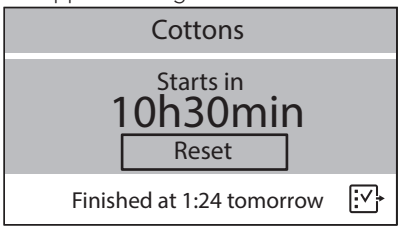

Any time you can stop the countdown of the delay time by pressing the **Reset** button.

10.8 ☆ Memory

Lets you memorise up to 2 of your favorite configurations of programmes and options in the appliance memory. After memorising configurations you are able to choose them from the program list.

Your favorite configurations are marked in the program list as **M1** and **M2**.

11. DAILY USE

11.1 Preparing the laundry

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.
- Turn items with the internal layer made of cotton inside out. Cotton layer must be faced outwards.
- Always set the programme suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable programme for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in the programmes chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.


Fabric label	Description
	Laundry is suitable for tumble drying.
	Laundry is suitable for tumble drying at higher temperatures.
	Laundry is suitable for tumble drying at low temperatures only.
	Laundry is not suitable for tumble drying.

11.2 Loading the laundry

CAUTION!
Ensure the laundry is not trapped between the appliance door and the rubber seal.

1. Pull open the appliance door.
2. Load the laundry one item at a time.
3. Close the appliance door.

11.3 Turning on the appliance

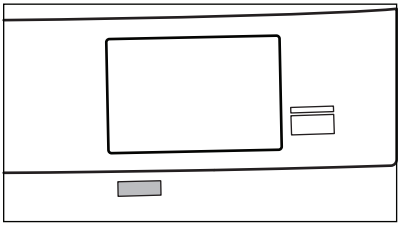

To turn on the appliance:

Push the On/Off button.
If the appliance is on the display lights up.

11.4 Auto Off function


To decrease the energy consumption, the Auto Off function turns off the appliance automatically:

- if no selection was done in the last 5 minutes.
- after 5 minutes from the program end.


Push the On/Off button to turn on the appliance.
If the appliance is on the display lights up.


11.5 Setting a program

- Use the program dial to set the program.

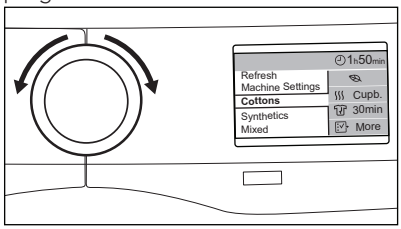



- You can also set the program, by using the touch screen.
  If the summary screen is on, tap on it once to see the program list.

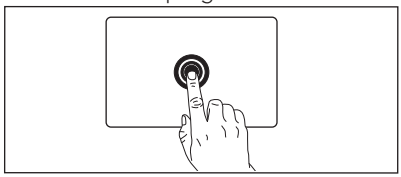

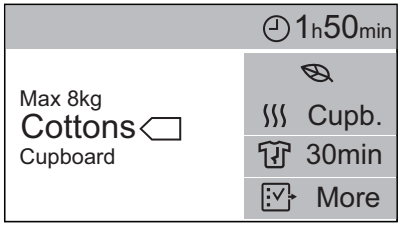

Scroll the program list up or down to set the program.

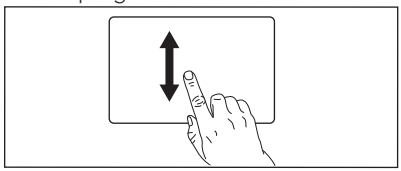

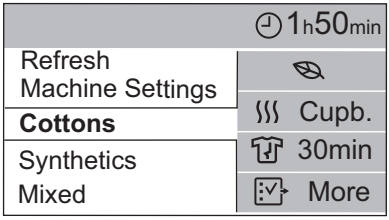


The possible time to complete the program comes into the time bar.

Real drying time will depend on type of the load (quantity and composition), the room temperature and the humidity of your laundry after spin drying phase.

11.6 Options


Together with the program you can set 1 or more special options.

If you want to change the parameters of the options currently selected, tap on the option you want to edit.

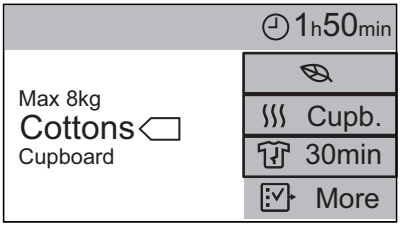



To select additional options:

1. Tap on **More** to see list of the options dedicated for the selected program.

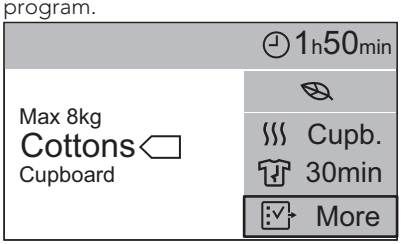

2. Scroll the options list up or down to browse it.

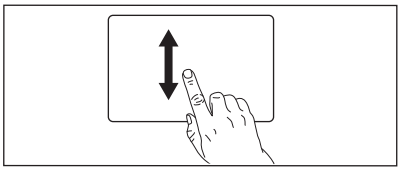


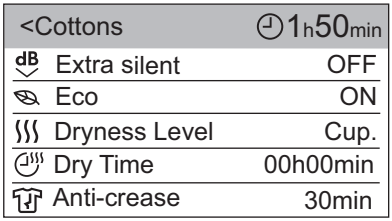


3. Tap the option to select it.


There are two types of options:

- with the status **ON** or **OFF** (eg. Eco).
- with the editable parameters (eg. Dryness Level).
  To change the parameter scroll the parameter bar to the right or left.

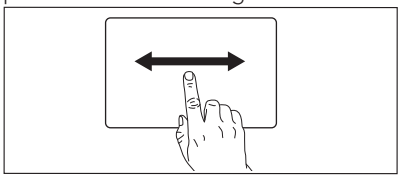


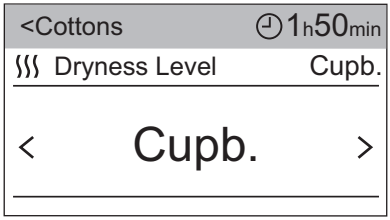


Tap on the previously selected option to go back to the option list.

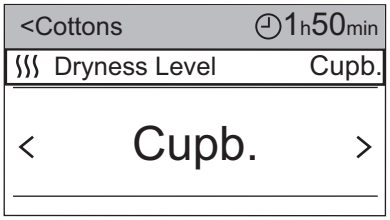


Any time, you can get directly to the summary screen, if you tap on left part of the top bar with the name of the program.

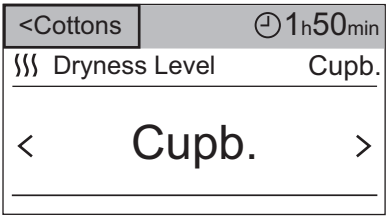

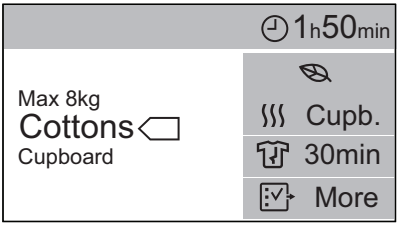

11.7 Starting a program

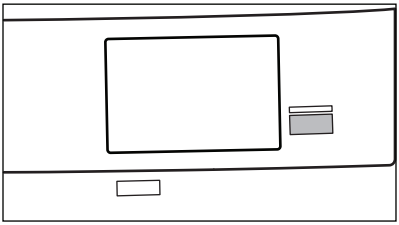


To start the program, Touch the **Start/ Pause** button.

The appliance starts and the LED above the button stops flashing and stays on.

On the screen you can find:

- the name of the program.
- the remaining drying time.
- the progress bar.
- the phase of a cycle (drying, anticrease, cooling).
- the possible end time of the program.

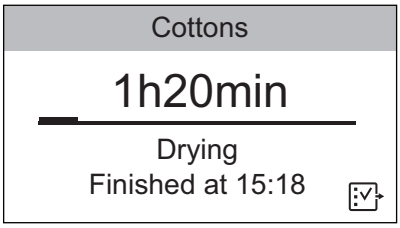


Child lock option activation:

At any time during the drying you can activate the child lock option.

1. Tap on the option icon to get to the option list.
2. Tap on the child lock option.

The option icon will change into the child lock icon.

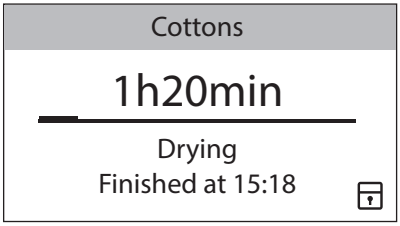

To deactivate the child lock option tap on and hold the child lock icon a few seconds.

11.8 Program change

To change a program:

1. Push the On/Off button to turn the appliance off.
2. Push the On/Off button again to turn on the appliance.
3. Set a new program.

11.9 Program end

Clean the filter and drain the water container after each drying cycle. (See chapter CARE AND CLEANING.)

If the drying cycle is finished, the symbol **0** appears on the display. If the Cycle End Buzzer option is activated, the acoustic signal sounds intermittently for 1 minute.


If you do not turn off the appliance, the anti-crease phase starts (not active with all programs). Laundry can be removed during this phase.
At the end of the anti-crease phase the display tells that the anti-crease phase is finished and shows **0h00min**


To remove the laundry:

1. Push the On/Off button for 2 seconds to turn the appliance off.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

12. MACHINE SETTINGS

In the programs screen scroll up or down to find machine settings, and tap on the icon to get to the settings list.

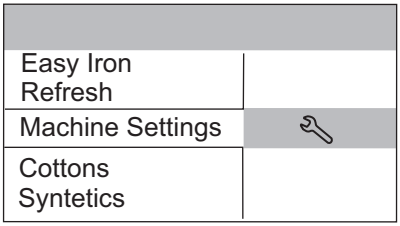

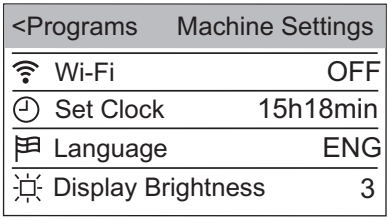


12.1 Set Clock

You can change the clock each time you want.

To change the time:

1. Tap on the **Set Clock** bar.
2. Scroll the bar of hours and minutes to the right or left to set the current time.

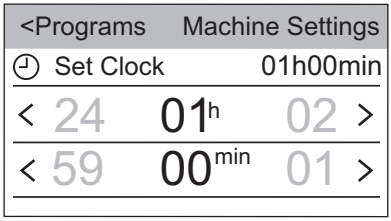

3. Tap on the **Set Clock** bar to get back to the machine settings list or tap on the **<Programmes** bar to get to the summary screen.

12.2 Language

To change the language:

1. Tap on the **Language** bar.
2. Scroll the list of languages up or down to find the language you want to use and tap on it.




12.3 Display Brightness

You can control the brightness level of the Display. There are 6 brightness levels.

To improve readability of the display when a dryer is stacked over a washing machine set the 6th level of the display brightness. When the dryer is not stacked level 1 to 5 are suggested.

To change the display brightness:

1. Tap on **Display Brightness** bar.
2. Scroll the bar to the right or left to set the level of the brightness.

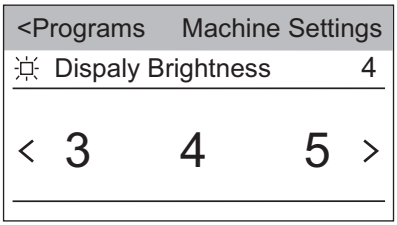

3. Tap on **Display Brightness** bar to get back to the machine settings list or tap on **<Programmes** bar to get to the summary screen.


12.4 Cycle End Buzzer

The sound is heard at the:
- cycle end
- start and end of crease guard phase

You can use this option to deactivate the buzzer or control the duration of the buzzer . There are 3 levels of sound duration (Short, Mid and Long).

To deactivate the buzzer or set the new duration of the sound:

1. Tap on **Cycle End Buzzer** bar.
2. Scroll the bar to the right or left to set the desired value.

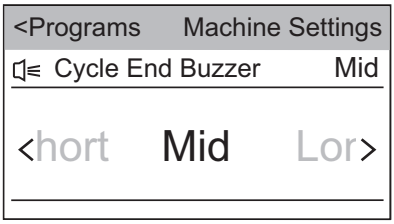

3. Tap on **Cycle End Buzzer** bar to get back to the machine settings list or tap on **<Programmes** bar to get to the summary screen.

12.5 Water Hardness


The appliance allows you to chose between 3 levels (Hard, Medium, Soft) corresponding to different ranges of water hardness.

Depending on the country, the water hardness is expressed in equivalent scales: e.g. French degrees (°f), German degrees (°d), English degrees (°e) and mmol/l.

If necessary, please contact your local water authority to check the water hardness in your area.

To change the default water hardness level:

1. Tap on **Water Hardness** bar.
2. Scroll the bar to the right or left to set the desired level.

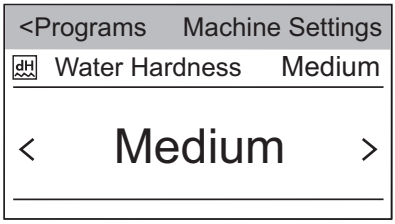


3. Tap on **Water Hardness** bar to get back to the machine settings list or tap on **<Programmes** bar to get to the summary screen.

12.6 Washing Spin Speed


This option helps to set the best condition to dry the laundry. If you know the initial spin speed when you washed you can use this option. Higher spin speed causes that the laundry contains less water.


To change the washing spin speed:

1. Tap on the **Washing Spin Speed** bar to expand the list of programmes for which you can change the spin speed.
2. Tap on the **Cottons** bar or **Other programmes** bar.

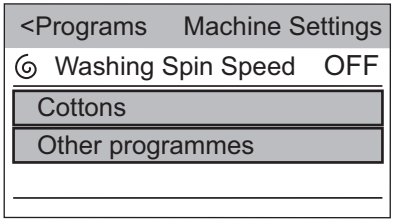

3. Scroll the bar to the right or left to set the desired value of a spin speed for .

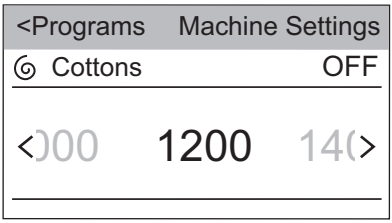

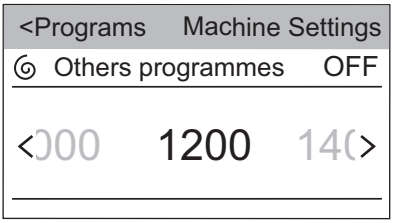

4. Tap on the **Cottons** bar or **Other programmes** bar to close the choice.
5. Tap on the **Washing Spin Speed** bar to get back to the machine settings list or tap on **<Programs** bar to get to the summary screen.

12.7 Water Tank Warning

The water container indicator illuminates at the end of the drying cycle or during the cycle if the water reservoir is full. If the draining kit is installed the water container is drained automatically and the indicator can be deactivated.


To deactivate or activate the indicator tap on the **Water Tank Warning** bar.

One of 2 configurations is possible:

- The indicator is activated (status is **ON**)
- The indicator is deactivated (status is **OFF**)

12.8 Service


These settings are dedicated only for a authorized service.

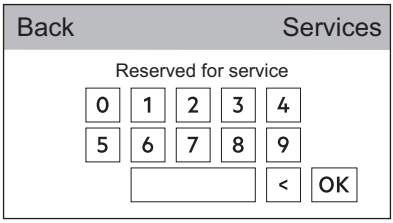

12.9 Shortcuts


To activate the desirable shortcuts:

1. Tap on the **Shortcuts** bar to expand the list of available shortcuts.

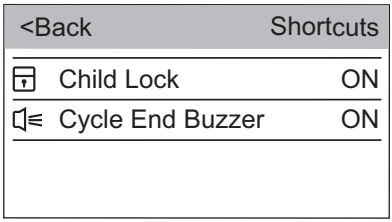

2. Tap on these shortcuts which you want to activate by changing the status to **ON**.
3. Tap on the **<Back** bar to get back to the machine settings list.

The shortcuts shows up in the left corner of the summary screen.

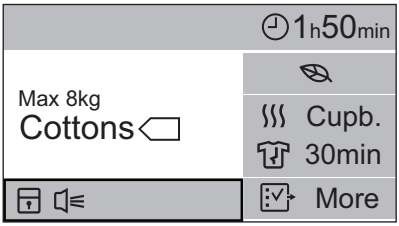

12.10 Machine Information

Here you can find a short description about all programmes, options and settings.

To find the desired description, e.g.:

1. Tap on the **Machine Information** bar.
2. Tap on **1. Programmes** bar.
3. Tap on **Cottons** bar and the relevant description will appear.


12.11 DEFAULT Factory Reset

Factory Reset restores the settings to the state where it was made out in the factory.

To activate the factory reset :

1. Tap on the **Factory Reset** bar.

The dialog window pops up.

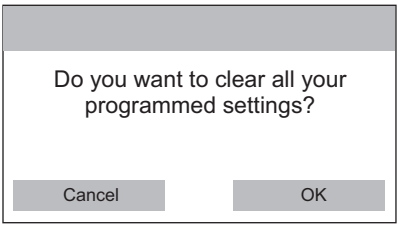

2. To confirm the factory reset tap on **OK** or **Cancel** to leave the current settings.

13. HINTS AND TIPS

13.1 Ecological hints

- Spin the laundry well before drying.
- Do not exceed the load sizes which are specified in the programs chapter.
- Clean the filter after each drying cycle.
- Do not use fabric softener to wash and then dry. In the tumble dryer laundry becomes soft automatically.
- Use distilled water like that used for steam ironing. If it is necessary, clean the distilled water before (e.g. with a coffee filter) to remove any particles.
- Always keep the airflow slots at the bottom of the appliance clear.
- Make sure there is good airflow where the appliance is to be installed.

14. CARE AND CLEANING

14.1 Cleaning the filter


At the end of each cycle the message **Clean the lint filter** comes on the display and you must clean the filter.

The filter collects the fluff during the drying cycle.


To achieve the best drying performances clean the filter regularly , clogged filter lead to longer cycles and energy consumption increase.
Use your hand to clean the filter , and if necessary , a vacuum cleaner .

CAUTION!
Avoid the use of water to clean the filter. Instead throw away lint in the dustbin (avoid dispersion of plastic fiber in water ambient).


1. Open the door. Pull the filter up.

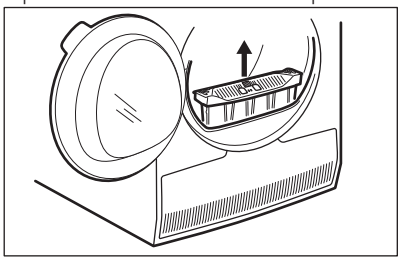


2. Push the hook to open the filter.

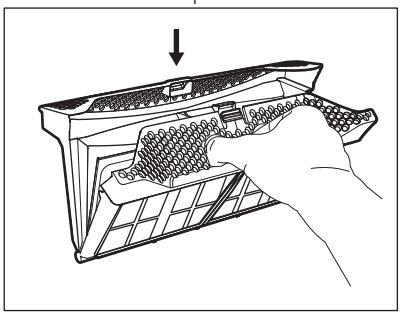

3. Use a moist hand to clean both parts of the filter.

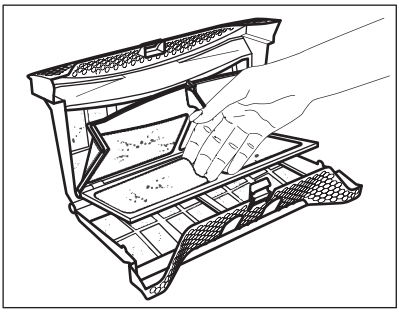

4. If necessary, clean the filter with a vacuum cleaner. Close the filter.
5. If necessary, remove fluff from the filter socket and gasket. You can use a vacuum cleaner. Place the filter back inside the filter socket.

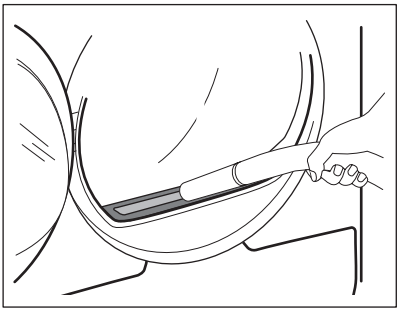


14.2 Emptying the water container

Empty the condensed water container after each drying cycle.


If the condensed water container is full, the programme stops automatically. The message **Water Tank Warning** comes on the display and you must empty the water container.

To empty the water container:

1. Pull the water container out keeping it in a horizontal position.

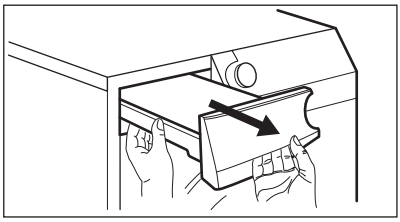

2. Pull the plastic connection out and drain the water into a basin or equivalent receptacle.

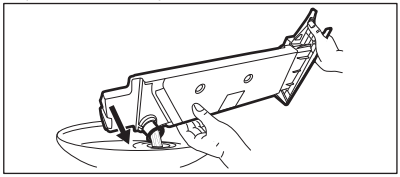

3. Push the plastic connection back in and place the water container back into position.
4. To continue the programme press the Start/Pause button.


14.3 Cleaning the condenser

If the message **Clean the heat exchanger area** comes on the display, inspect the condenser and its compartment. If it is dirty, clean it. Do the check not less than once a 6 months.


WARNING!
Do not touch the metal surface with bare hands. Risk of injury. Wear protective gloves. Clean carefully to avoid damaging the metal surface.

To inspect:


1. Open the door. Pull the filter up.

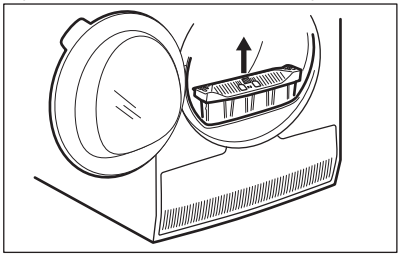


2. Open the condenser cover.

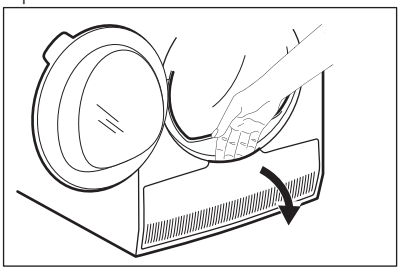


3. Turn the lever to unlock the condenser lid.

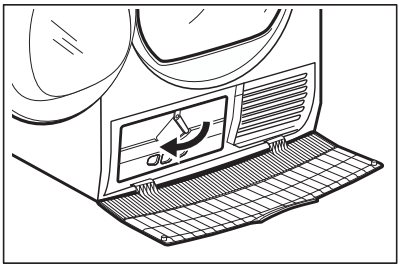

4. Lower the condenser lid.

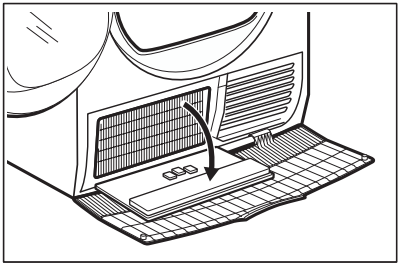

5. If necessary, remove the fluff from the condenser and its compartment. You can use a wet cloth and/or a vacuum cleaner with a brush attachment.

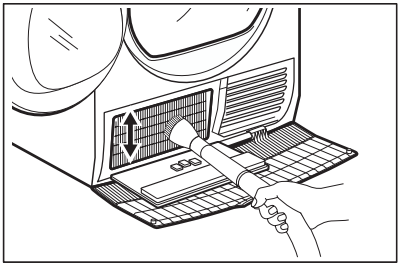

6. Close the condenser lid.
7. Turn the lever until it clicks into position.
8. Put the filter back.

14.4 Cleaning the drum

WARNING!
Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.

CAUTION!
Do not use abrasive materials or steel wool to clean the drum.

14.5 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.

CAUTION!
Do not use furniture cleaning agents or cleaning agents which can cause corrosion.

14.6 Cleaning the airflow slots

Use a vacuum cleaner to remove fluff from the airflow slots.

15. TROUBLESHOOTING

Problem [1]	Possible cause	Remedy
The tumble dryer does not operate.	The tumble dryer is not connected to the mains supply.	Connect to the mains socket. Check fuse in fuse box (domestic installation).
	The door is open.	Close the door.
	The On/Off button was not pushed.	Push the On/Off button.
	The Start/Pause button was not touched.	Touch the Start/Pause button.
	The appliance is in standby mode.	Push the On/Off button.
Unsatisfactory drying result.	Incorrect program selection.	Select a suitable program. [2]
	The filter is clogged.	Clean the filter. [3]
	Dryness Level option was set to *Iron Dry*.	Change Dryness Level option to higher level.
	The load was too large.	Do not exceed the maximum load size.
	The airflow slots are clogged.	Clean the airflow slots at the bottom of the appliance.
	Dirt on the humidity sensor in the drum.	Clean the front surface of the drum.
	Dryness level not set to desired level.	Adjust the dryness level. [4]
	The condenser is clogged.	Clean the condenser. [3]
The loading door does not close	The filter is not locked into position.	Put the filter in the correct position.
	Laundry is trapped between the door and the seal.	Remove trapped items and close the door.
Not possible to change the program or option.	After cycle start it is not possible to change the program or option.	Turn the tumble dryer off and on. Change the program or option as required.
Not possible to select an option. Acoustic signal is emitted.	The option you tried to select is not available for the selected program.	Turn the tumble dryer off and on. Change the program or option as required.
No drum light	Defective drum lamp.	Contact the service centre to replace the drum lamp.

Problem [1]	Possible cause	Remedy
Unexpected duration time on the display.	The drying duration is calculated according to load size and dampness.	This is automated — the appliance is working correctly.
Program inactive.	The water container is full.	Drain the water container, push the Start/Pause button. [3]
Drying cycle too short.	Load size is small.	Select time program. The time value must be related to the load. To dry 1 item or a small amount of laundry we recommend short drying times.
	The laundry is too dry.	Select time program or higher dryness level (e.g. *Extra Dry*)
Drying cycle too long [5]	The filter is clogged.	Clean the filter.
	The load is too large.	Do not exceed the maximum load size.
	The laundry was not spun sufficiently.	Spin the laundry well.
	Too low or too high room temperature - this is not the appliance malfunction.	Ensure a room temperature higher than +5°C and lower than +35°C. Optimal room temperature to achieve best drying results is between 19°-24°C.
A message**Failed to connect to your WiFi** appears on the dryer screen	Disrupted wireless signal.	Check Your home network and router. Restart the router. Contact your wireless service provider if there are further problems with the wireless network.
The App cannot connect to the dryer.	Disrupted wireless signal.	Check if your smart device is connected to the wireless network. Check your home network and router. Restart the router. Contact your wireless service provider if there are problems with the wireless network.
	A new home router has been installed or the router configuration has been changed.	The dryer, the smart device, or both, need to be configured again.

Problem [1]	Possible cause	Remedy
The App frequently cannot connect to the dryer.	The wireless signal does not reach the dryer.	Try to move the home router as near the dryer as possible or consider purchasing a wireless range extender.
	The wireless signal is disrupted by microwave.	Turn the microwave off. Avoid using the microwave and the Remote Control of the oven at the same time. The microwaves disrupt the Wi-Fi signal.

1) If there is an error message on the display (e.g. **E51**): Turn the tumble dryer off and on. Select a new program. Push the Start/Pause button. If the appliance does not operate contact the service centre and provide the error code.

2) Follow the program description — see PROGRAMS chapter

3) See chapter CARE AND CLEANING

4) See HINTS AND TIPS chapter

5) Note: After a maximum of 5 hours the drying cycle ends automatically.

16. TECHNICAL DATA

Height x Width x Depth	850 x 596 x 638 mm (maximal 663 mm)
Max. depth with the appliance door open	1108 mm
Max. width with the appliance door open	958 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	118 l
Maximum load volume	**8** kg
Voltage	230-240 V
Frequency	50 Hz
Sound power level	65 dB
Necessary fuse	13 A
Total power	700 W
Energy efficiency class	**A+++**
Energy consumption on the standard cotton programme with the full load. [1]	**1,47** kWh
Energy consumption on the standard cotton programme with the partial load. [2]	**0,83** kWh
Annual energy consumption[3]	176,50 kWh

Left-on mode power absorption [4]	0,05 W
Off mode power absorption [4]	0,05 W
Power consumption in networked standby[4]	2,0 W
Time to networked standby[4]	15 min.
Type of use	Household
Allowed ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	**IPX4**
This product contains fluorinated greenhouse gases, hermetically sealed	
Gas designation	R134a
Weight	0,28 kg
Global-warming potential (GWP)	1430

[1] With reference to EN 61121. 8 kg of cotton centrifuged at 1000 rpm.

[2] With reference to EN 61121. 4 kg of cotton centrifuged at 1000 rpm.

[3] Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (REGULATION (EU) No. 392/2012).

[4] With reference to EN 61121.

The information given in the chart above is compliant with the EU Commission regulation 392/2012 implementing directive 2009/125/EC.

16.1 Consumption data

Programme	Spun at / residual humidity	Drying time[1]	Energy consumption[2]
Cottons **Eco** 8 kg			
Cupboard Dry	1400 rpm / 50%	156 min.	1,31 kWh
	1000 rpm / 60%	173 min.	1,47 kWh
Cottons 8 kg			
Iron Dry	1400 rpm / 50%	120 min.	0,94 kWh
	1000 rpm / 60%	137 min.	1,12 kWh
Cottons **Eco** 4 kg			


Programme	Spun at / residual humidity	Drying time[1)]	Energy consumption[2)]
Cupboard Dry	1400 rpm / 50%	93 min.	0,72 kWh
	1000 rpm / 60%	105 min.	0,83 kWh
	Synthetics 3,5 kg		
Cupboard Dry	1200 rpm / 40%	65 min.	0,47 kWh
	800 rpm / 50%	80 min.	0,60 kWh

1) For partial loads, the cycle time is shorter and appliance uses less energy.

2) Improper ambient temperature and/or poorly centrifuged laundry can prolong cycle time and increase the energy consumption.

17. ACCESSORIES

17.1 Stacking kit

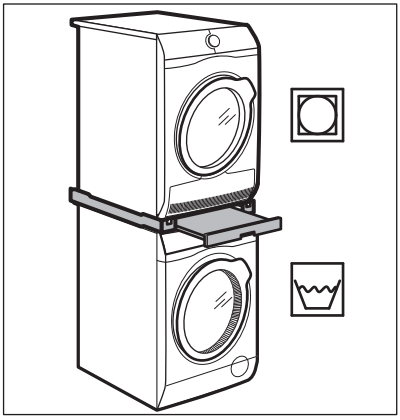


Accessory name: SKP11GW, STA9GW

Available from your authorised vendor.

Stacking kit can be used only between washing machines and tumble dryers specified in the leaflet. See the leaflet attached.

Read carefully the instructions supplied with the accessory.

17.2 Draining kit

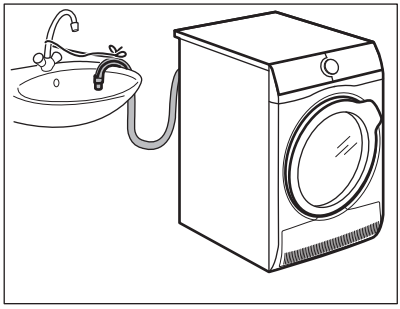

Accessory name: DK11.


Available from your authorised vendor (can be attached to some types of tumble dryer)

For thorough draining of the condensed water into a basin, siphon, gully, etc. After installation, the water container is drained automatically. The water container must stay in the appliance.

The installed hose must be minimum 50 cm to maximum 100 cm from floor level. The hose cannot be in a loop. Decrease the length of the hose if necessary.

Read carefully the instructions supplied with the accessory.

17.3 Pedestal with drawer

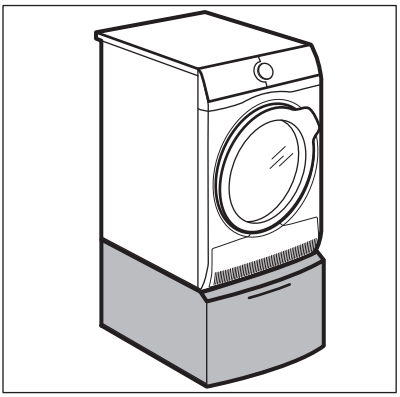

Accessory name: PDSTP10, E6WHPED2.

Available from your authorised vendor.


For increasing the height of the appliance in order to ease loading and unloading of laundry.

The drawer can be used for laundry storage e.g. : towels, cleaning products etc.

Read carefully the instructions supplied with the accessory.


18. QUICK GUIDE

18.1 Daily use

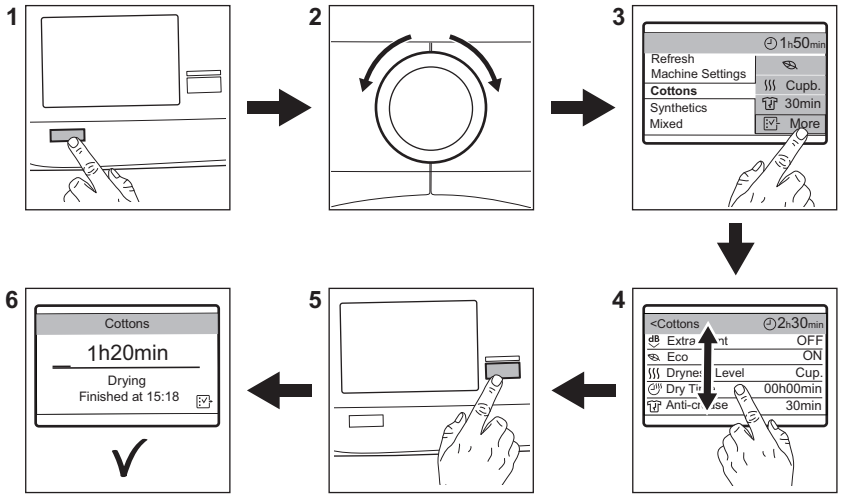

1. Push the On/Off button to turn on the appliance.
2. Use the program dial to set the program.
3. Press **More** to see list of the options dedicated for the selected program.
4. Scroll the options list up or down to browse it. Press the option to select it.
5. To start the program, Touch the **Start/Pause** button.
6. The appliance starts.

18.2 Cleaning the filter

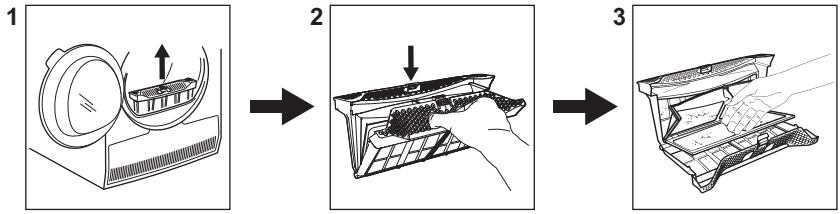

At the end of each cycle the message **Clean the lint filter** comes on the display and you must clean the filter.

18.3 Programmes

Programmes	Load [1]	Properties / Fabric mark
Cottons	**8 kg**	Cotton fabrics.
Synthetics	**3,5 kg**	Synthetic and mixed fabrics.
Wool	**1 kg**	Woollen fabrics. Gentle drying for hand-washable woollens. Remove items immediately when the programme is completed.
Silks	**1 kg**	Gentle drying of hand-washable silks.
Outdoor	**2 kg**	Outdoor clothing, technical, sports fabrics, waterproof and breathable jackets, shell jackets with a removable fleece or inner insulation. Suitable for drying in tumble dryer.
Sports	**2 kg**	Sportswear, thin and light fabrics, microfiber, polyester.
Jeans	**8 kg**	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams).
Business Shirts	**1,5kg (or 7 shirts)/**	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, Immediately remove the items and put them on a hanger.
Refresh	**1kg**	Refreshing textiles that were in storage.

Programmes	Load [1]	Properties / Fabric mark
Easy Iron	**1 kg (or 5 shirts)**	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to another. Shake the items before putting them in the appliance. When the programme has ended, immediately remove the items and put them on a hanger.
Duvet	**3 kg**	Single or double duvets and pillows (with feather, down or synthetic fillings).
Bed Linen	**3 kg**	Bed linen such as single and double sheets, pillowcases, duvet cover.
Mixed	**3 kg**	Cotton and synthetic fabrics.

[1] The maximum weight refers to dry items.

19. PRODUCT INFORMATION SHEET IN REFERENCE TO E.U. REGULATION 1369/2017

Product Information Sheet	
Trade Mark	AEG
Model	T8DEA866C PNC916098107
Rated capacity in kg	8
Air vented or condenser tumble dryer	Condenser
Energy efficiency class	A+++
Energy consumption in kWh per year, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.	176,50
Automatic tumble drier or non-automatic tumble drier	Automatic
Energy consumption of the standard cotton programme at full load in kWh	1,47
Energy consumption of the standard cotton programme at partial load in kWh	0,83
Power consumption of the off-mode in W	0,05
Power consumption in left-on mode in W	0,05
Duration of the left on mode in minutes	10

The 'standard cotton programme' used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, this programme is suitable for drying normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for cotton.	
Weighted programme time of the 'standard cotton programme at full and partial load' in minutes	134
Programme time of the 'standard cotton programme at full load' in minutes	173
Programme time of the 'standard cotton programme at partial load' in minutes	105
Condensation efficiency class on a scale from G (least efficient) to A (most efficient)	B
Average condensation efficiency of the standard cotton programme at full load as a percentage	86
Average condensation efficiency of the standard cotton programme at partial load as a percentage	86
Weighted condensation efficiency for the 'standard cotton programme at full and partial load'	86
Sound power level in dB	65
Built in appliance Y/N	No

The information given in the chart above is compliant with the EU Commission regulation 392/2012 implementing directive 2009/125/EC.

20. ENVIRONMENTAL CONCERNS


Recycle materials with the symbol ♺. Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.

www.aeg.com/shop



136949163-A-402019

CE

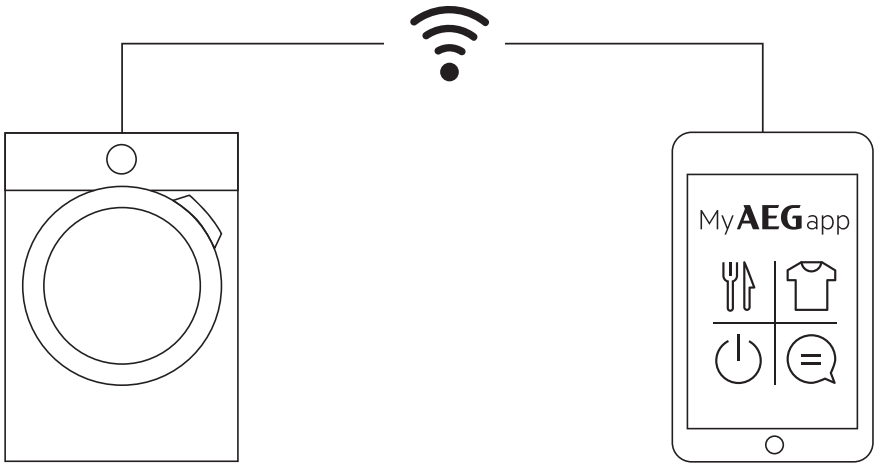



aeg.com/app

vailable on the App Store

GET IT ON Google Play

The software included in this product contains copyrighted software that is licensed under the BSD, GPL-2.0, LGPL-2.0, LGPL-2.1, zLib, MIT, ISC, Apache 2.0 and others. It is possible to display the complete copy of the licenses in the AEG App that can be downloaded from the corresponding App store from the License menu section. It is possible to download the source code of the open source software used in the product by searching for Wi-Fi Module Software version in NIUX subfolder at the following website: **http://aeg.opensoftwarerepository.com**.

AEG