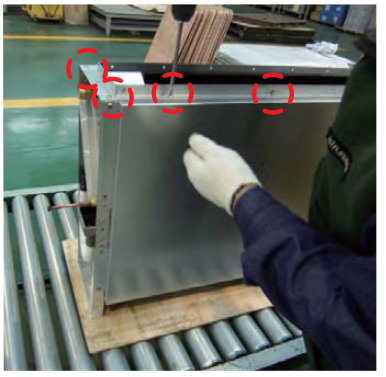
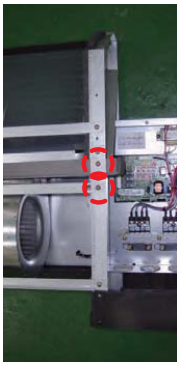
Disassembly and Reassembly



Repairs must be carreid out by trained professional. For any repairs, please contact our service provider or independent qualified professional.

No	Parts	Procedure	Remark
1	Cabinnet	1) Unscrew fixed screw of the upper part cabinet, and please separate	
		2) Please separate front cabinet.	
			

No	Parts	Procedure	Remark
2	Heat Exchanger	1) Unscrew two fixed screws, and please separate heat exchanger cover. 2) Unscrew fixed screw on both side of heat exchanger plate. And then pulls heat exchanger to the right side, and please separate.	   
3	Drain Pan	1) Please remove PLATE for fixation of DRAIN PAN located in the side.	 

Disassembly and Reassembly

No	Parts	Procedure	Remark
4	Motor & Fan	1) Process hopes for DRAIN PAN isolation work in this work earlier. 2) Unscrew MOTOR BRACKET fixation screw located in the front surface, and please separate. 3) Unscrew MOTOR BRACKET fixation screw located in the side, and please separate. 4) Separate out MOTOR BRACKET for front side.	    

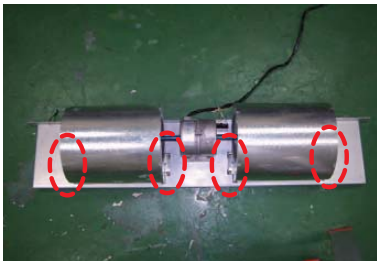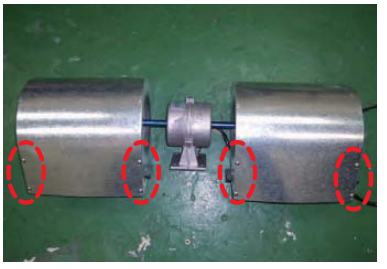No	Parts	Procedure	Remark
4	Motor & Fan	5) Unscrew fixed screw of MOTOR BRACKET and FAN CASING, and please separate.	
			
		6) Unscrew fixed screw of FAN CASING, and please separate.	
		7) Unscrew FAN and the fixed screw of the MOTOR axis, and please separate. (use Wrench)	