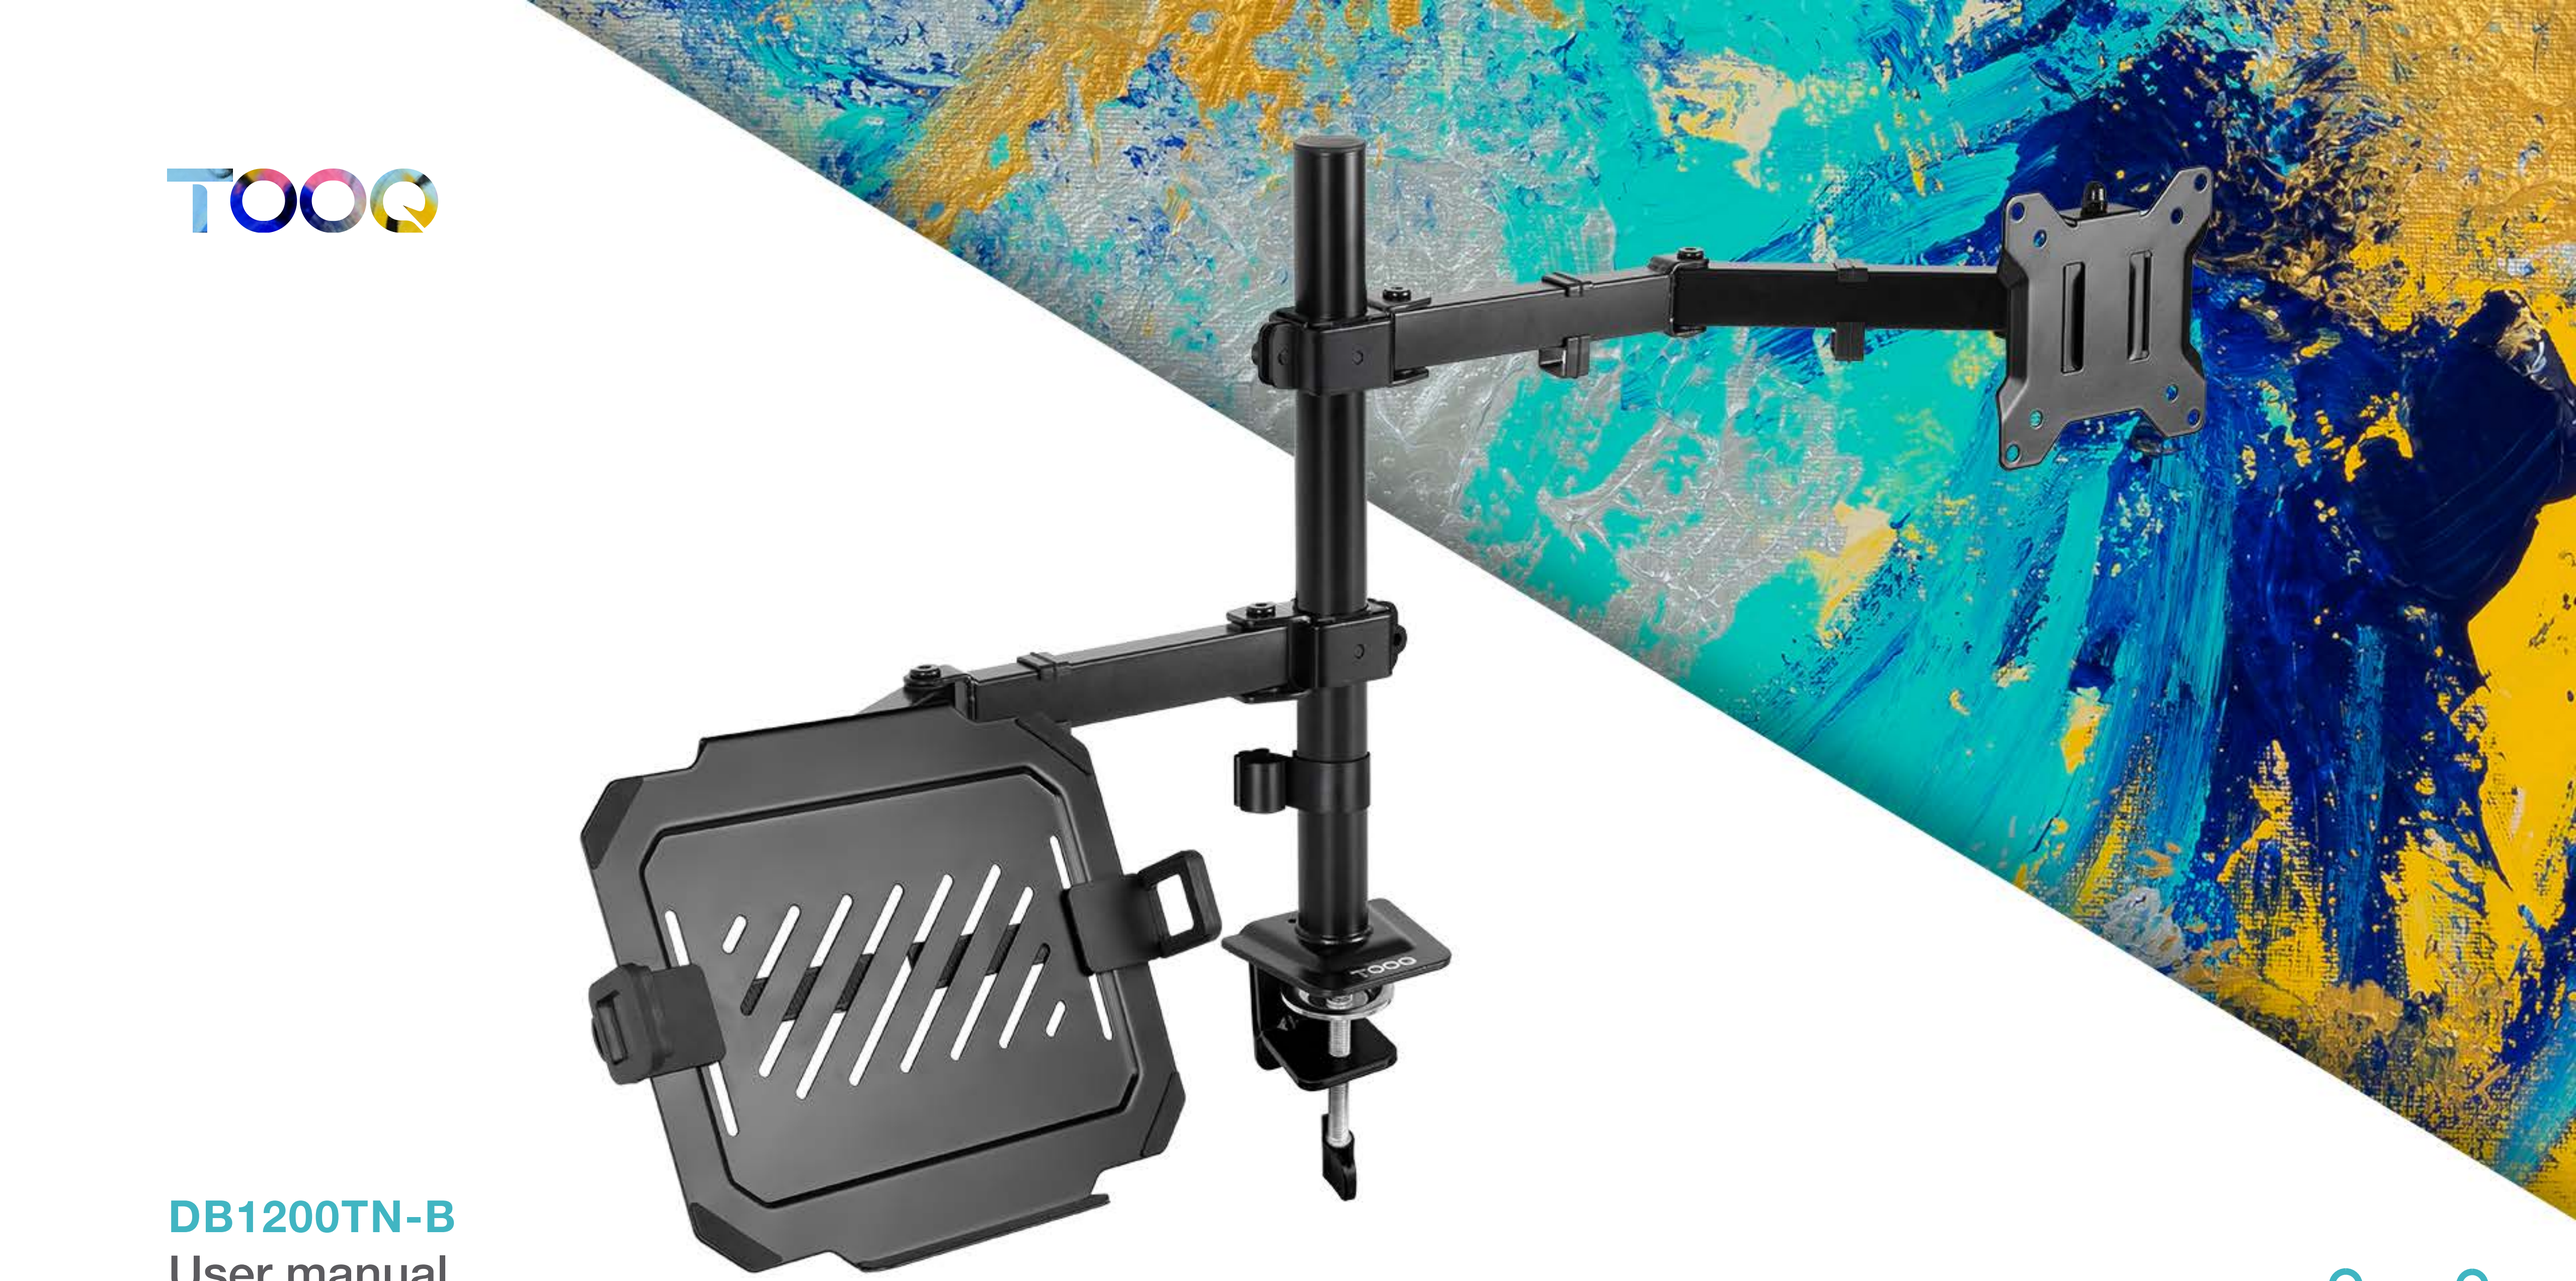


DB1200TN-B

User manual

DESK MOUNT FOR SCREENS AND LAPTOP


VESA: 75x75, 100x100

Screens 32”
Laptop 12”-17”


TV 10kg

Laptop 9kg


Content

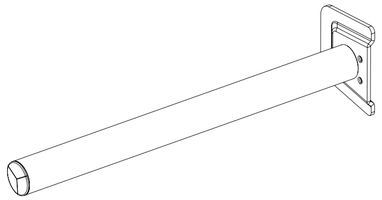


A (x1)

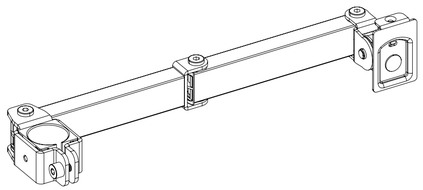


B (x2)

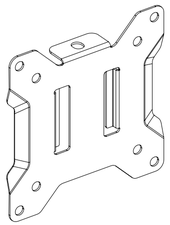


C (x2)




D (x1)

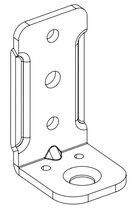

E (x2)

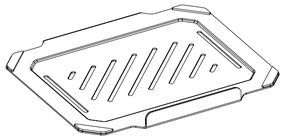


F (x1)



G (x2)



H (x1)



I (x4)



J (x2)



K (x8)
D5



L (x8)
M4x12



M (x2)
M6x10



N (x2)
M8x10




O (x1)
M10x20




P (x1)
5 mm


Necessary tools

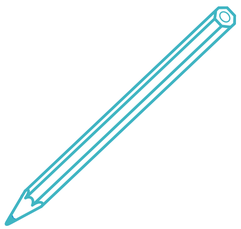


Pencil

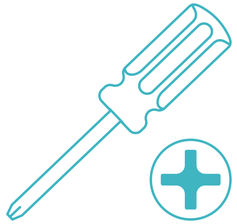

Screwdriver

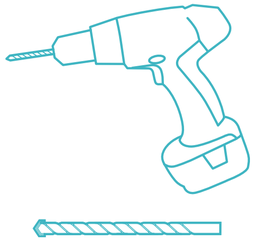

Drill

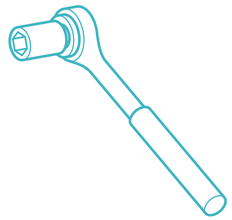

Ratchet wrench

*Required tools (not included)

Before starting installation


- Read the user manual, if you have any questions regarding instructions or warnings, please contact your local distributor.
- Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.



- Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Mounts must be attached as specified in assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This products should only be installed by professionals.
- This product is designed to be installed on wood stud walls, solid concrete walls or brick walls.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and DO NOT OVER-TIGHTEN.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
- Please refer to the product warranty here.


Clamp installation

For 10-85 mm thickness desks

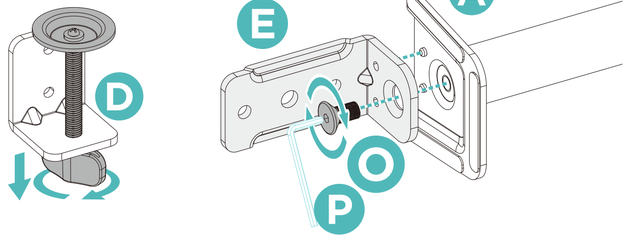

For 10-55mm thickness desks

For 55-85mm thickness desks

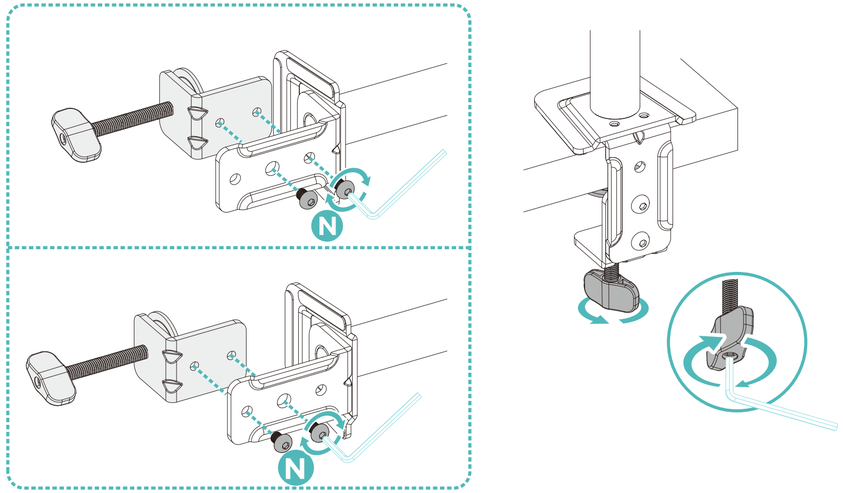


Note: If the base remains unstable after tightening the knob, use the Allen Key to further tighten the screw inside the knob.

1a

Grommet installation


For 10-45mm thickness desks with Ø10-60mm installation holes

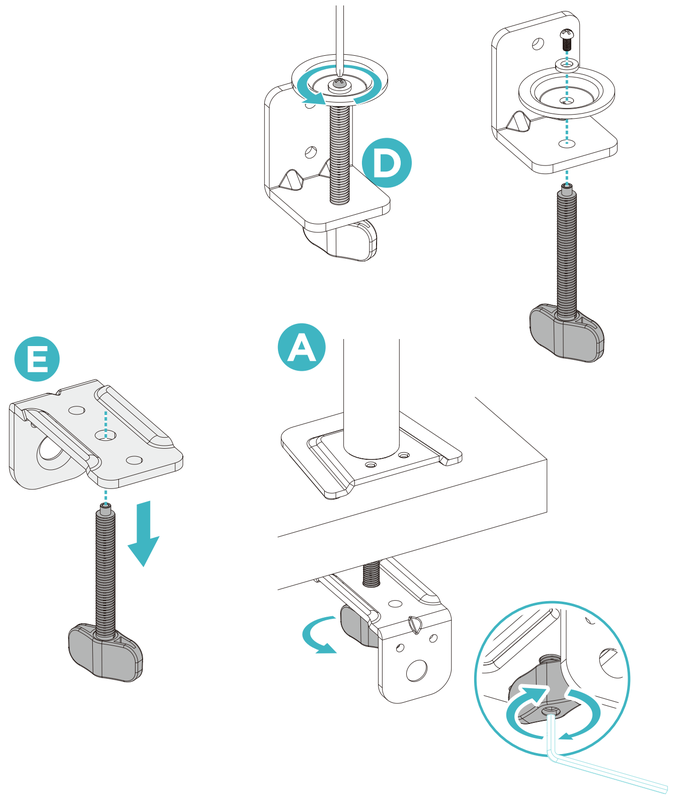

Note: If the base remains unstable after tightening the knob, use the Allen Key to further tighten the screw inside the knob.

1b


Installation

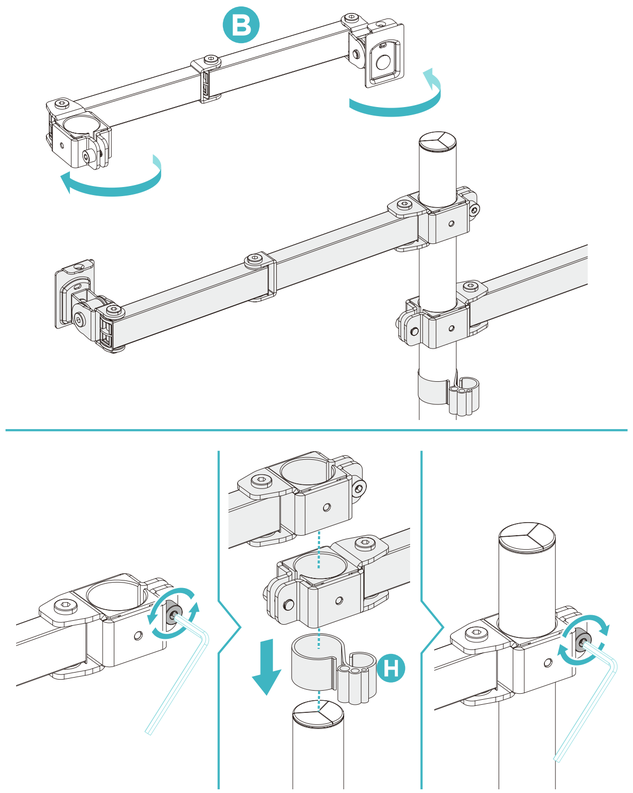


2


EN

Installation

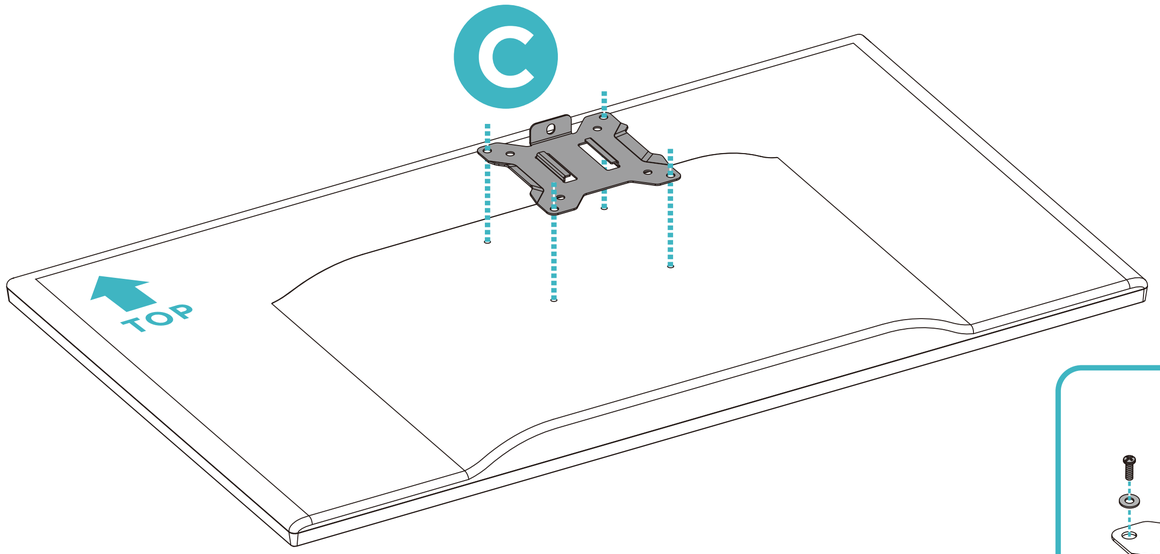

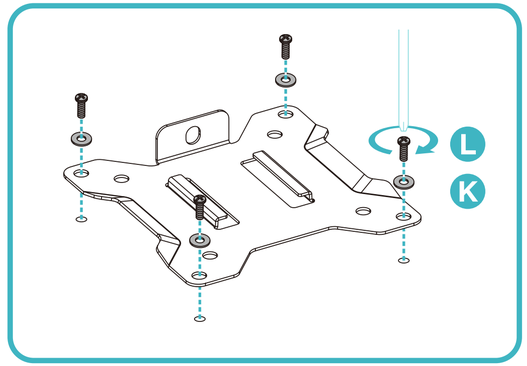


Installation

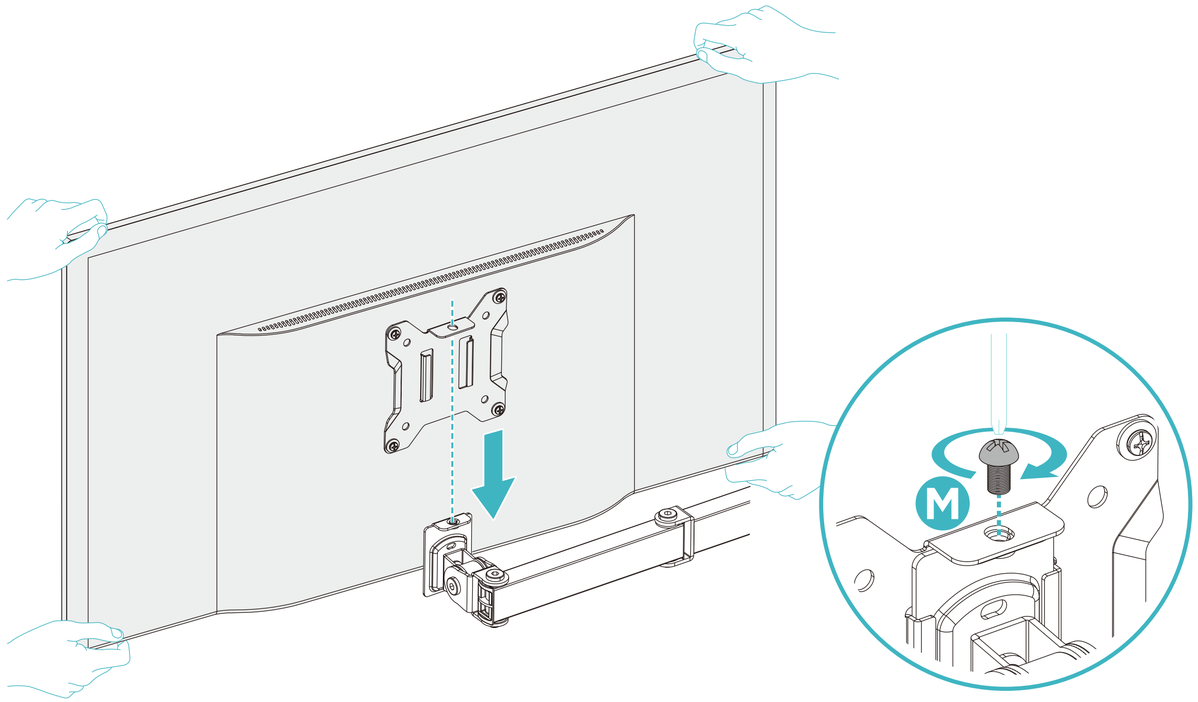


4


Installation

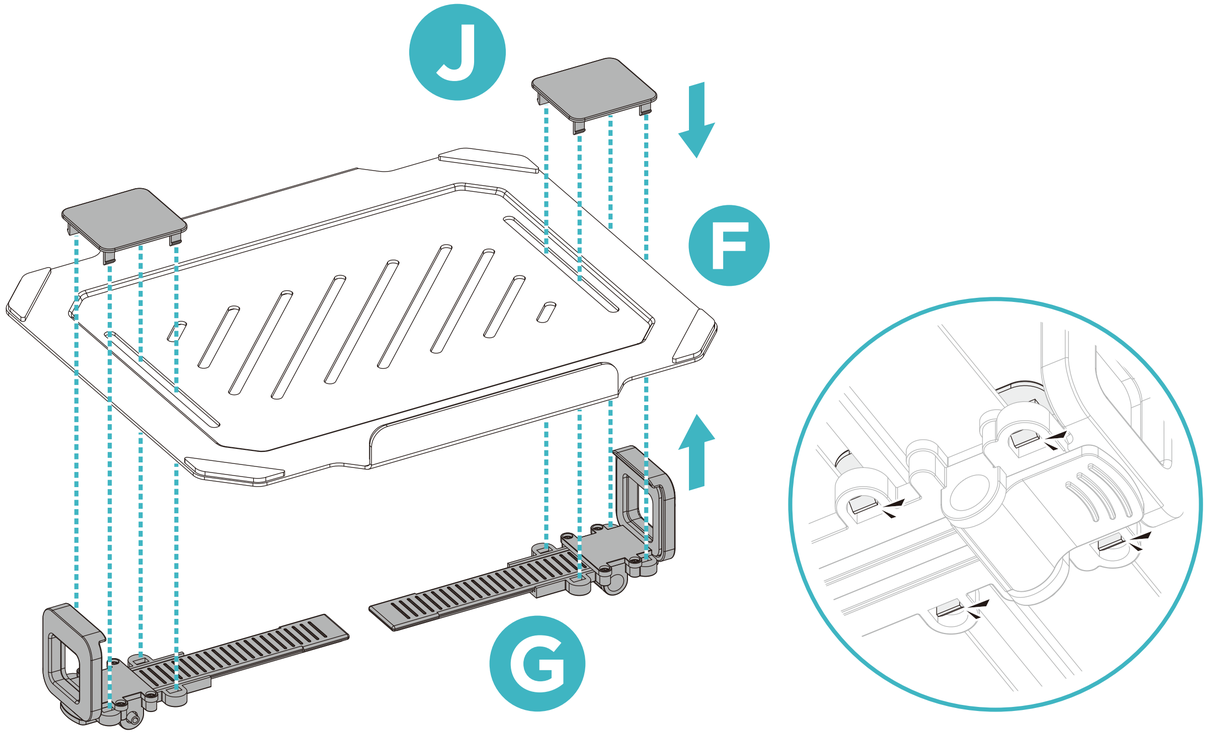


5

Installation

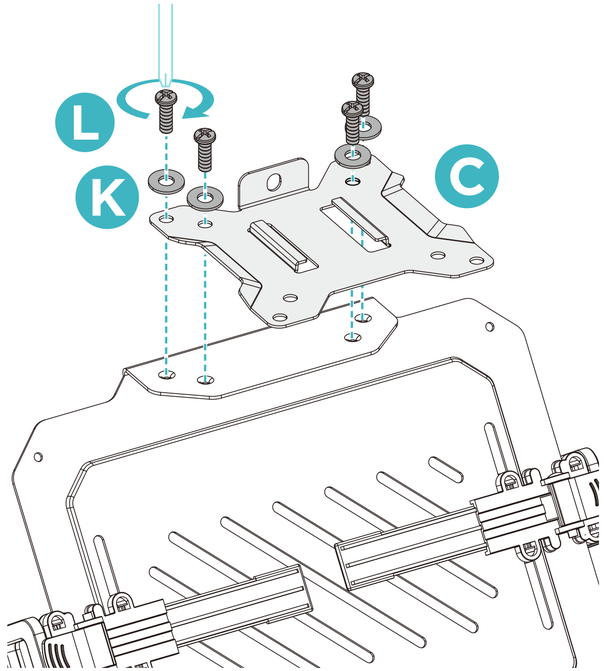

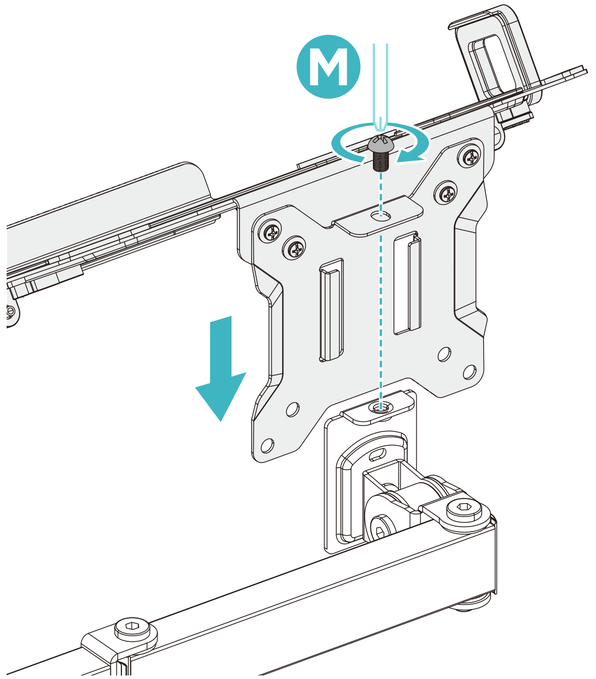


Installation

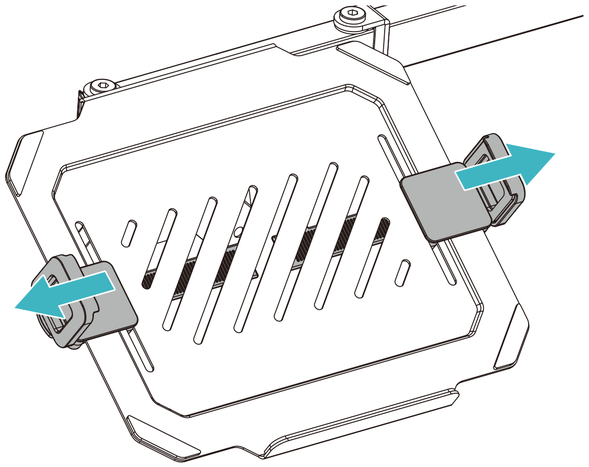





Installation


Note: If the display does not stop at your desired position, tighten the screws as shown.

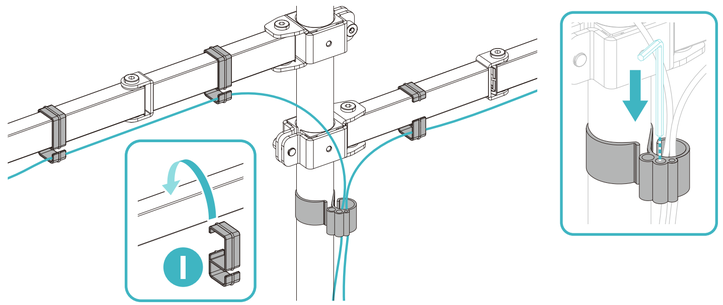


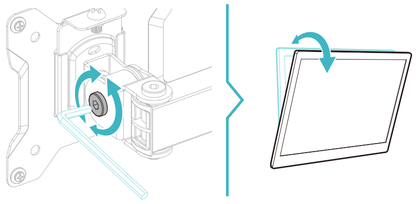

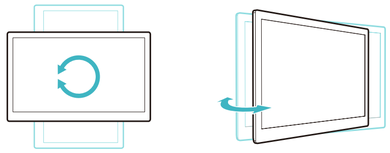

CAUTION: DO NOT rotate the monitor past rear edge of desk to avoid an unstable situation that may cause tipping.



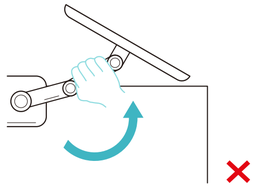

Warranty information

Since 1 January 2022, TooQ offers a 3-year warranty from the time of purchase, so it will always keep the purchase ticket or invoice containing the date of purchase. The distributor or retailer from whom you purchased the product will attend to your claim and offer technical service while the warranty is in force.

Out of warranty

The warranty does not cover damage or defects caused to the external enclosure due to:

- Not following the user manual.
- Modifications or alterations of any kind.
- High and low temperatures, humidity or contact with liquids.
- Worn and scratches caused by daily use.
- Use the product with any other device which is not the one indicated for its use. The warranty does not cover damage or defects caused to the hard drive by improper use of the hard drive or the external enclosure.

FAQ

You can consult the frequently asked questions from our website www.tooq.com on the product link. Products may be subject to variations due to stock changes, product improvements or printing errors. In case of doubt, please contact us.

Find out about all our news!

Follow us on social media

©2025 by TooQ Technology, S.L.
All Rights Reserved.
tooq.com