Dell Video Conferencing Room Solutions for Zoom Rooms - 2025

Setup Guide

July 2025
Rev. A01

DELL Technologies

Notes, cautions, and warnings

NOTE: A NOTE indicates important information that helps you make better use of your product.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2025 Dell Inc. All Rights Reserved. Dell Technologies, Dell, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

Chapter 1: Dell Video Conferencing Room Solutions..... 4

Chapter 2: Video Conferencing Rooms..... 5
Small Video Conferencing Room configuration..... 5
Medium Single Display Video Conferencing Room configuration..... 6
Medium Dual Display Video Conferencing Room configuration..... 8
Large Video Conferencing Room configuration..... 9

Chapter 3: Set up Zoom Rooms for Small, Medium or Large Video Conferencing Rooms..... 11
Small Video Conferencing Room setup..... 11
Medium Single Display Video Conferencing Room setup..... 14
Medium Dual Display Video Conferencing Room setup..... 18
Large Video Conferencing Room setup..... 22

Chapter 4: Configuring the operating system for Zoom Rooms..... 27

Chapter 5: Troubleshooting..... 30
No CEC control option in Zoom Rooms Setting..... 30
Volume slider status on Zoom Meeting does not sync with Logitech MeetUp or Rally remote control 30
The Whiteboard feature is not displayed on multiple touchscreen-enabled displays for Zoom Rooms when used with the Logitech Tap controller..... 30

Chapter 6: Getting help..... 31
Contacting Dell..... 31

Chapter 7: Revision history..... 32

1

Dell Video Conferencing Room Solutions

Dell Video Conferencing Room Solutions are a complete group collaboration ecosystem that includes Dell's smallest, most powerful commercial desktop – the OptiPlex Micro, enabled with the unmatched screen performance of Dell Large Format Monitors, Logitech Room Solutions, and the world class video conferencing solutions of Zoom Rooms. Dell Video Conferencing Room Solutions are designed and optimized to fit any room, for use as collaborative spaces, in presentations and information sharing, or for conferencing and training.

Dell Video Conferencing Room Solutions offer the following advantages:

- Simple and validated solution for ease of setup and operation.
- Smart and secure integration of computing power, software, and hardware.
- Start meetings on time with one-touch join, instantly projecting to the display in the room and sharing to remote participants.
- Diverse meeting spaces ranging from small huddle areas to extra large conferencing rooms with a rich, collaborative experience that is simple to use, deploy, and manage.

Dell offers the following Video Conferencing Room Solutions to meet your needs

- Small Video Conferencing configuration: Huddle spaces, team rooms, ideal for up to 6 people collaboration.
- Medium Single Display Video Conferencing configuration: Whiteboard sessions, tiger team, and staff meetings for up to 12 people.
- Medium Dual Display Video Conferencing configuration: Whiteboard sessions, tiger team, and staff meetings for up to 12 people.
- Large Video Conferencing configuration: Executive conferences, learning spaces, ideal for collaboration meetings for up to 20 people.

2

Video Conferencing Rooms

Small Video Conferencing Room configuration

This section lists the hardware and software configuration of your Small Video Conferencing Room.

Dell Video Conferencing Room Solutions > Small Video Conferencing Room configuration > Small Video Conferencing Room setup

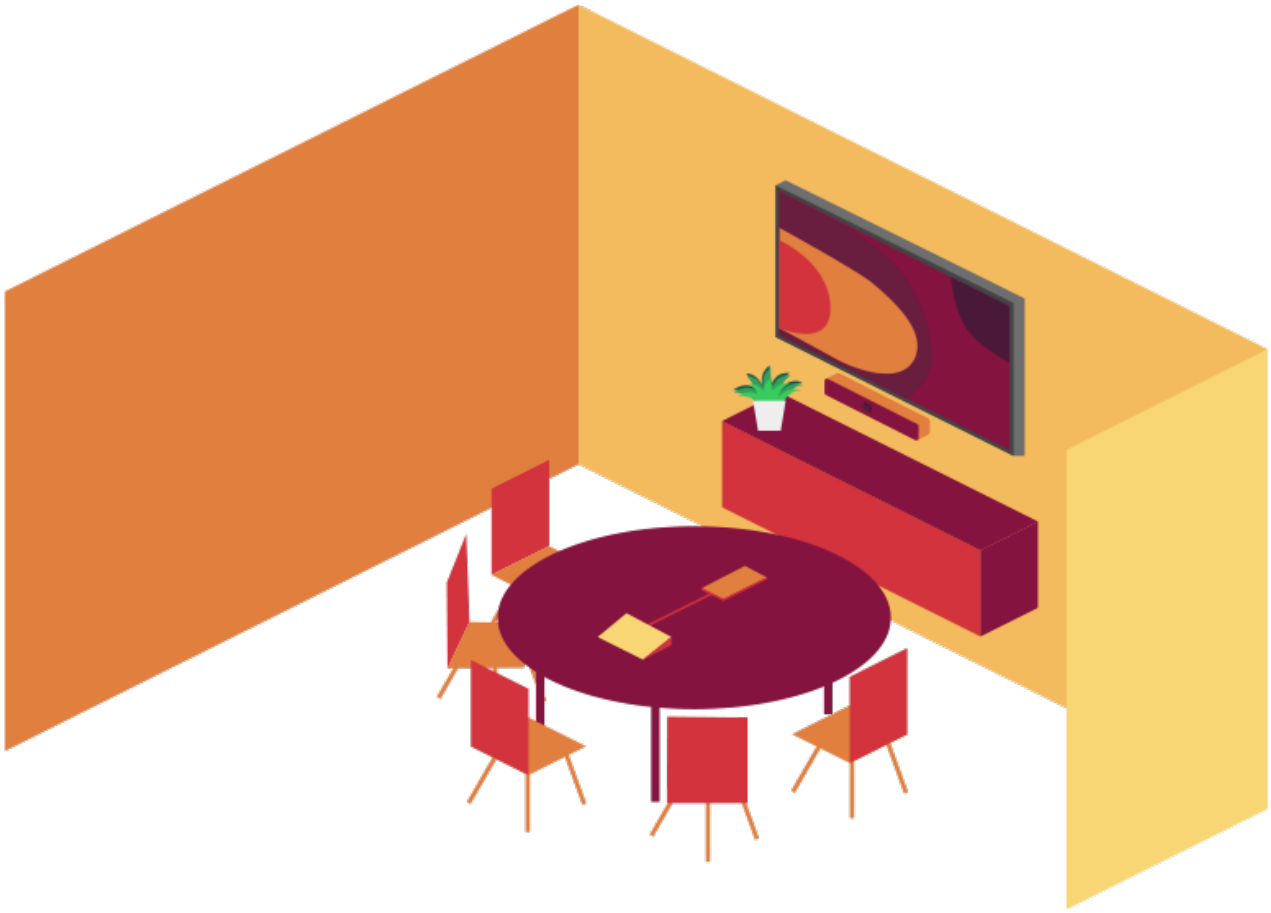


Figure 1. Small Video Conferencing Room configuration

Table 1. Hardware and software configuration of the Small Video Conferencing Room

Components	Products
Computer	One Dell OptiPlex 7000 XE Micro
Operating system	Windows 10 IoT Enterprise LTSC

Table 1. Hardware and software configuration of the Small Video Conferencing Room (continued)

Components	Products
Display	One Dell P5525QC
Meeting room controller	One Logitech Tap
Video bar	One Logitech MeetUp 2
Services **NOTE:** Services are only available for Fixed Room Configuration purchases.	**Default** • ProSupport for Solutions - Video Conferencing (3-Yr) • Logitech Select for Small Room (3-Yr) **Optional** • ProSupport for Solutions - Video Conferencing (4-Yr or 5-Yr) • Logitech Select for Small Room (4-Yr or 5-Yr)

Medium Single Display Video Conferencing Room configuration

This section lists the hardware and software configuration of your Medium Single Display Video Conferencing Room.

Dell Video Conferencing Room Solutions > Medium Single Display Video Conferencing Room configuration > Medium Single Display Video Conferencing Room setup

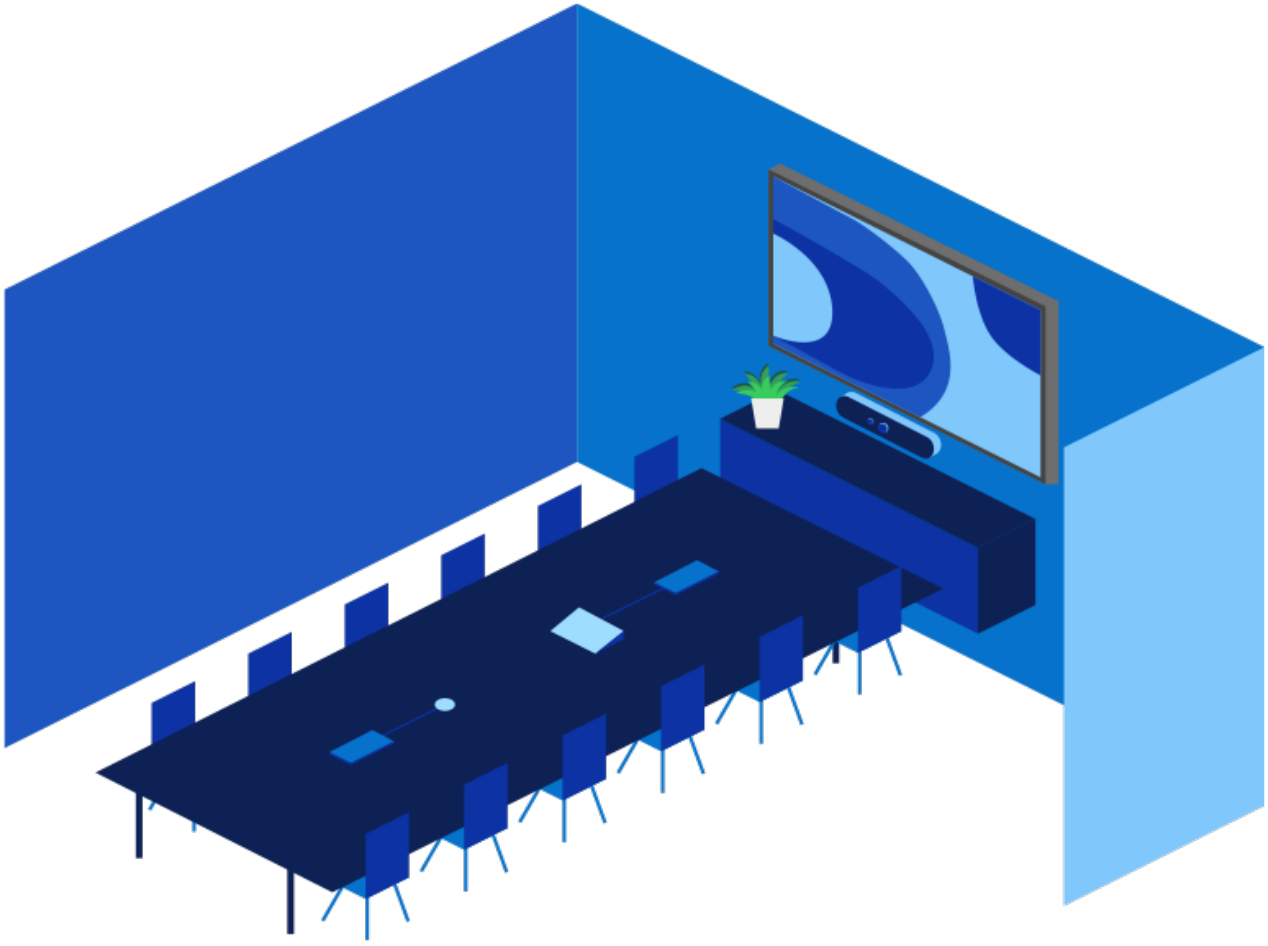


Figure 2. Medium Single Display Video Conferencing Room configuration

Table 2. Hardware and software configuration of the Medium Single Display Video Conferencing Room

Components	Products
Computer	One Dell OptiPlex 7000 XE Micro
Operating system	Windows 10 IoT Enterprise LTSC
Display	One Dell P6524QT
Meeting room controller	One Logitech Tap
Video bar	One Logitech Rally Bar Mini
Microphone	One Logitech Rally Mic Pod
Services **NOTE:** Services are only available for Fixed Room Configuration purchases.	**Default** • ProSupport for Solutions - Video Conferencing (3-Yr) • Logitech Select for Medium/Large Rooms (3-Yr) **Optional** • ProSupport for Solutions - Video Conferencing (4-Yr or 5-Yr) • Logitech Select for Medium/Large Rooms (4-Yr or 5-Yr)

Medium Dual Display Video Conferencing Room configuration

This section lists the hardware and software configuration of your Medium Dual Display Video Conferencing Room.

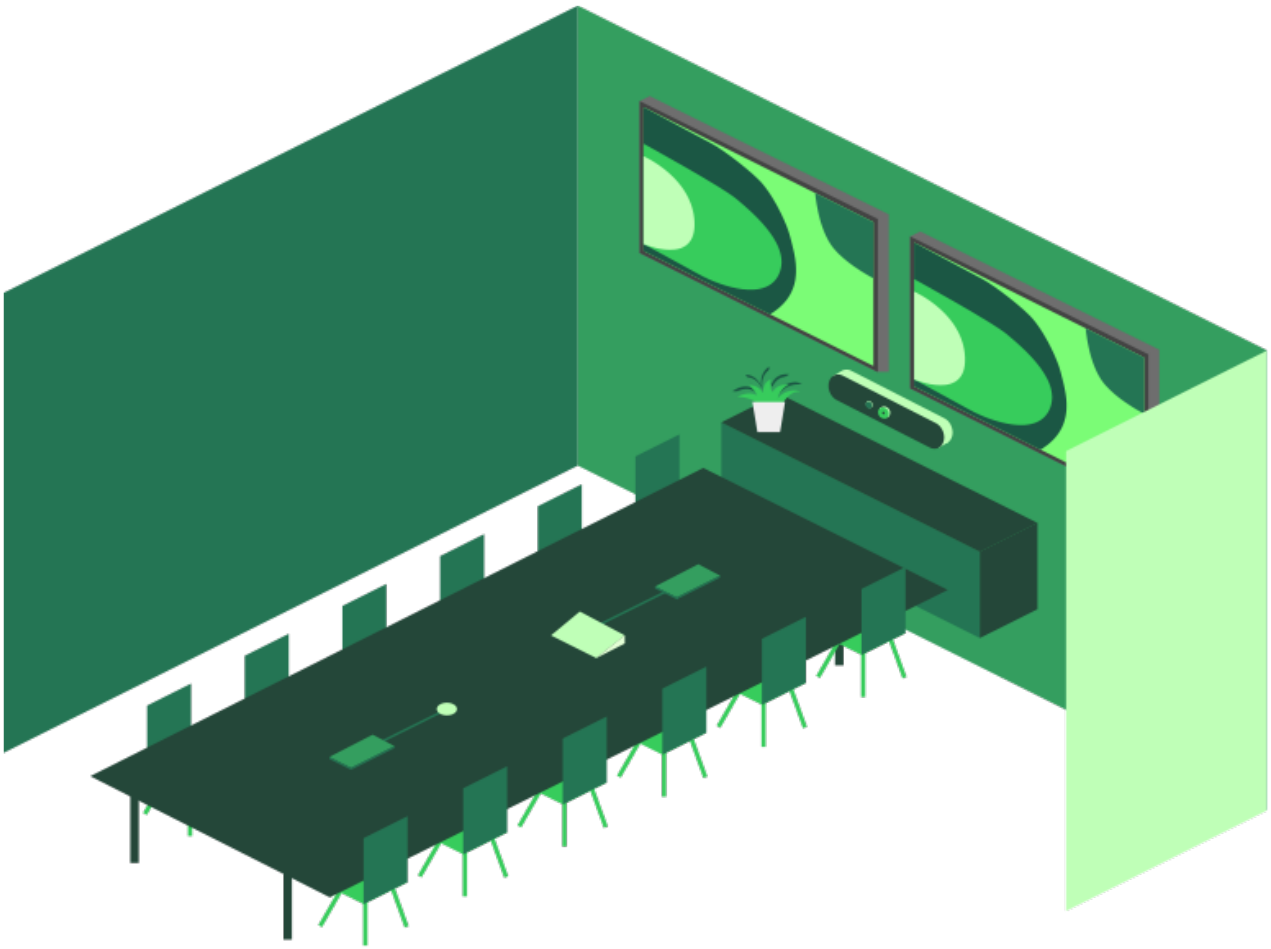


Figure 3. Medium Dual Display Video Conferencing Room configuration

Table 3. Hardware and software configuration of the Medium Dual Display Video Conferencing Room

Components	Products
Computer	One Dell OptiPlex 7000 XE Micro
Operating system	Windows 10 IoT Enterprise LTSC
Display	Two Dell P5525QC
Meeting room controller	One Logitech Tap
Video bar	One Logitech Rally Bar Mini
Microphone	One Logitech Rally Mic Pod

Table 3. Hardware and software configuration of the Medium Dual Display Video Conferencing Room (continued)

Components	Products
Services **NOTE:** Services are only available for Fixed Room Configuration purchases.	**Default** • ProSupport for Solutions - Video Conferencing (3-Yr) • Logitech Select for Medium/Large Rooms (3-Yr) **Optional** • ProSupport for Solutions - Video Conferencing (4-Yr or 5-Yr) • Logitech Select for Medium/Large Rooms (4-Yr or 5-Yr)

Large Video Conferencing Room configuration

This section lists the hardware and software configuration of your Large Video Conferencing Room.

Dell Video Conferencing Room Solutions > Large Video Conferencing Room configuration > Large Video Conferencing Room setup

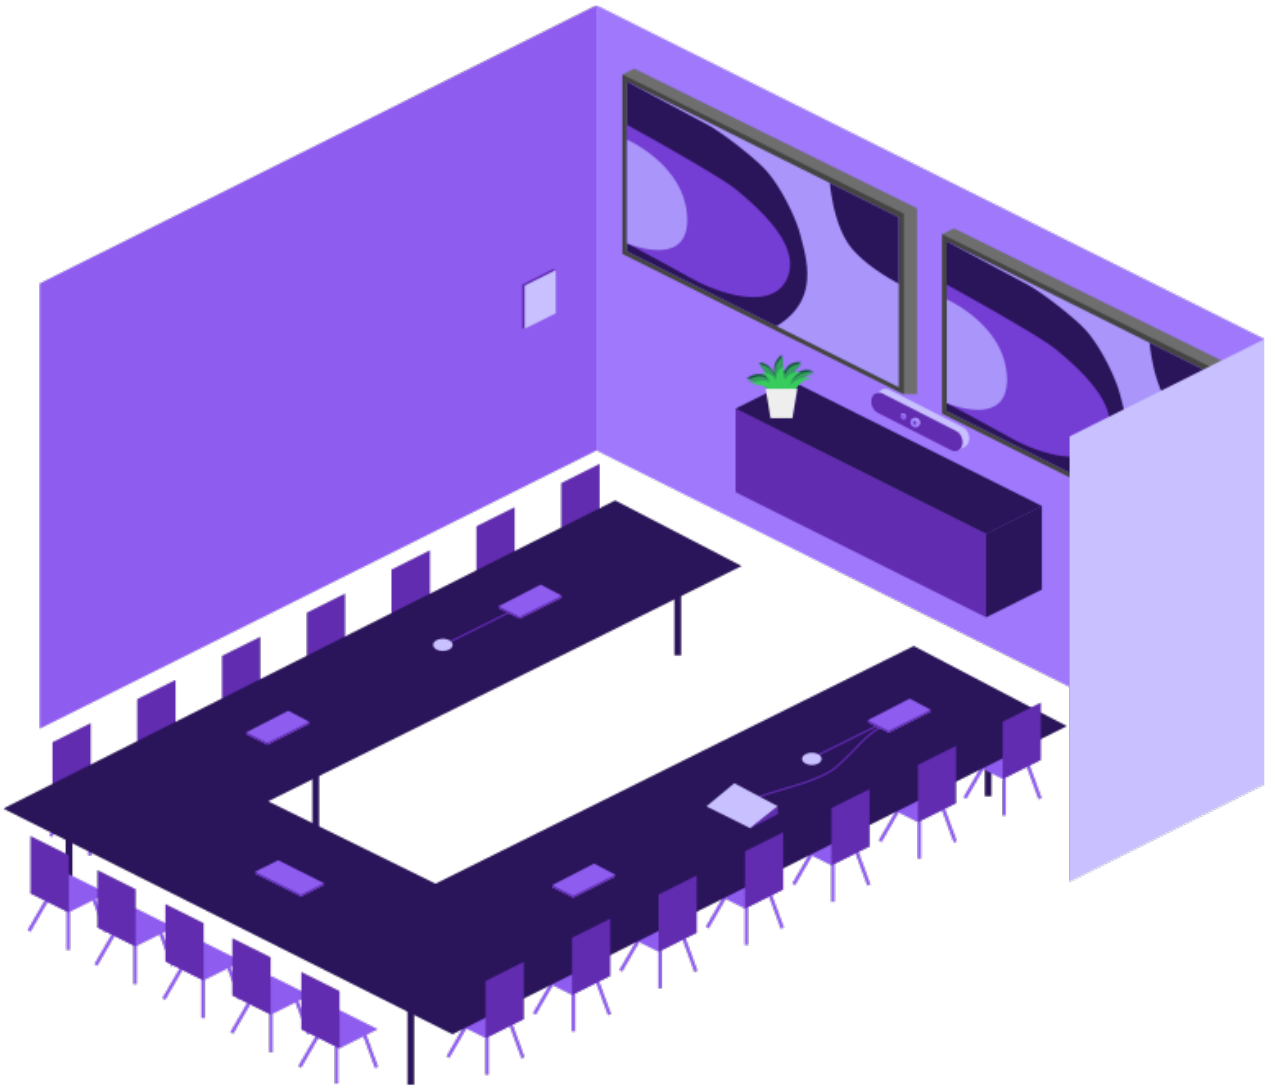


Figure 4. Large Video Conferencing Rooms configuration

Table 4. Hardware and software configuration of the Large Video Conferencing Room

Components	Products
Computer	One Dell OptiPlex 7000 XE Micro
Operating system	Windows 10 IoT Enterprise LTSC
Display	Two Dell P7525QT
Meeting room controller	One Logitech Tap
Video bar	One Logitech Rally Bar
Microphone	Two Logitech Rally Mic Pod
Services **NOTE:** Services are only available for Fixed Room Configuration purchases.	**Default** ● ProSupport for Solutions - Video Conferencing (3-Yr) ● Logitech Select for Medium/Large Rooms (3-Yr) **Optional** ● ProSupport for Solutions - Video Conferencing (4-Yr or 5-Yr) ● Logitech Select for Medium/Large Rooms (4-Yr or 5-Yr)

3

Set up Zoom Rooms for Small, Medium or Large Video Conferencing Rooms

Small Video Conferencing Room setup

Dell Video Conferencing Room Solutions > Small Video Conferencing Room configuration > Small Video Conferencing Room setup

Prerequisites

Ensure that the following pre-requisite steps have been met before setting up your Small Video Conferencing Room:

- You have Zoom Rooms credentials or the activation code for the meeting room.
- You have a Small Video Conferencing Room configuration.
- The room has the necessary four power sockets and one Ethernet socket to be able to connect your devices.

NOTE: Dell Technologies recommends mounting the OptiPlex 7000 XE Micro, behind the display. When your OptiPlex 7000 XE Micro is mounted behind the display, power to the computer is provided through a power connection on the display. For more information about how to set up or mount the computer behind the display, go to Dell Documentation and search for the display setup guide.

About this task

The following image shows a representation of the Small Video Conferencing Room configuration and an overview of the necessary connections to complete this setup.

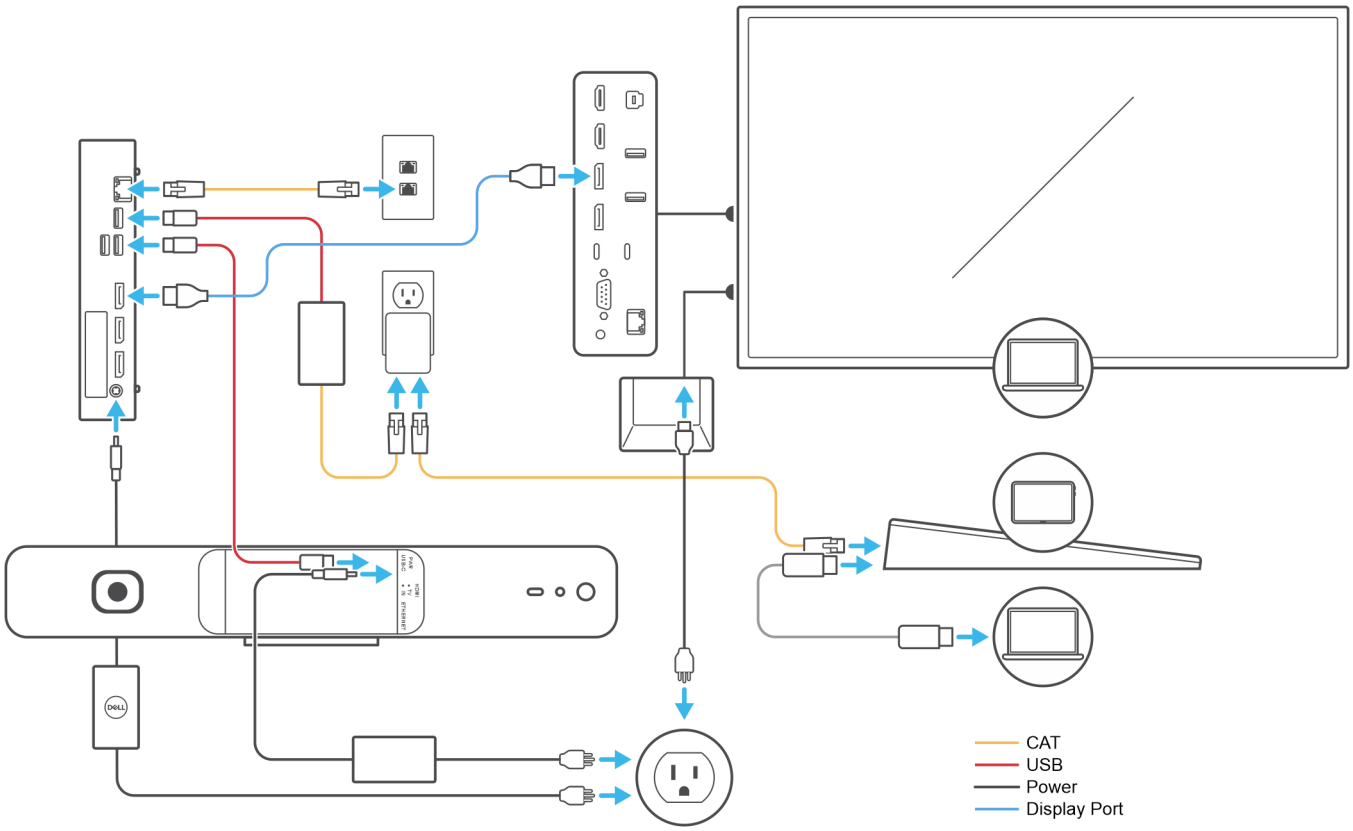


Figure 5. Connection diagram overview

Steps

1. Perform the procedures that are provided on the relevant power connection diagram.

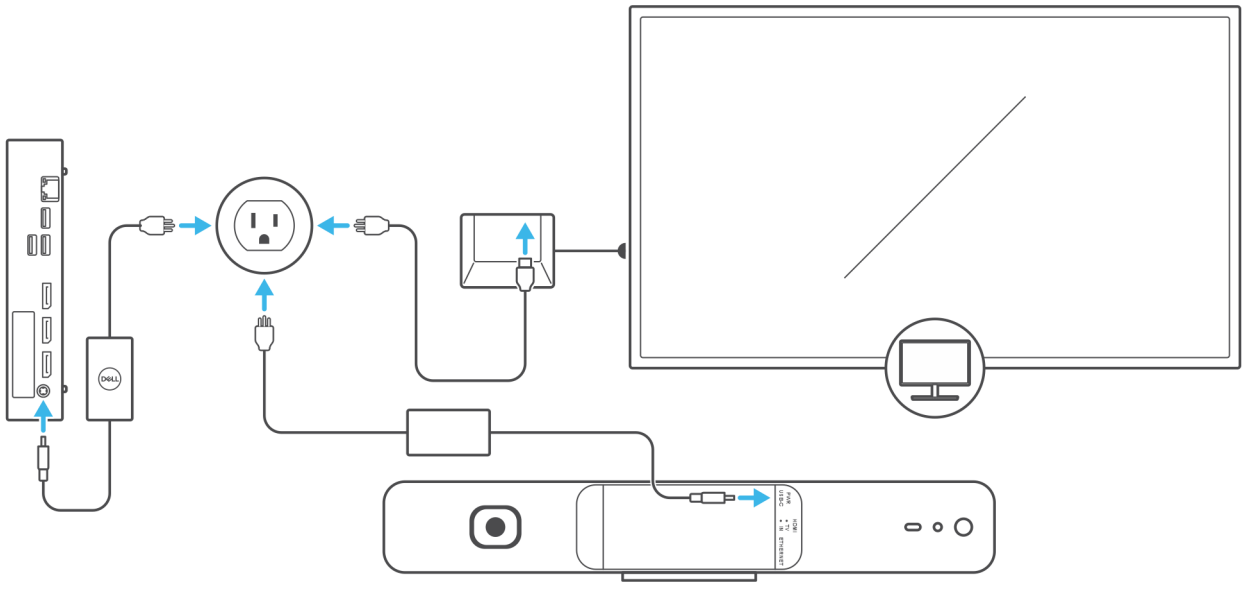


Figure 6. Power connection diagram

   a. Plug in the power adapters to the power sockets.
   b. Connect the power adapters to your display, OptiPlex 7000 XE Micro, and Logitech MeetUp 2.
2. Perform the procedures that are provided on the DisplayPort connection diagram.

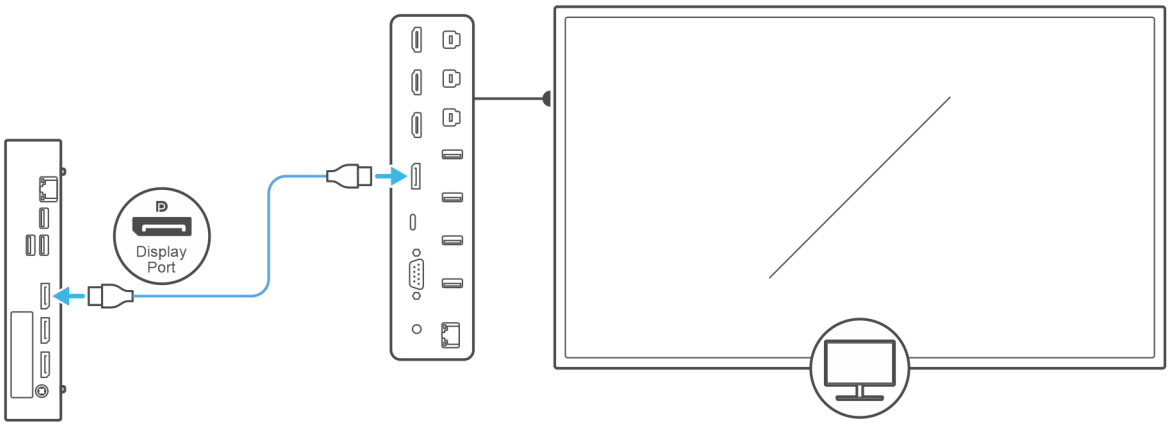


Figure 7. DisplayPort connection diagram

a. Connect one end of the DisplayPort cable to your OptiPlex 7000 XE Micro.
b. Connect the other end of the DisplayPort cable to your display.

3. Perform the procedures that are provided on the Ethernet, HDMI, and Logitech Cat5e kit connection diagram.

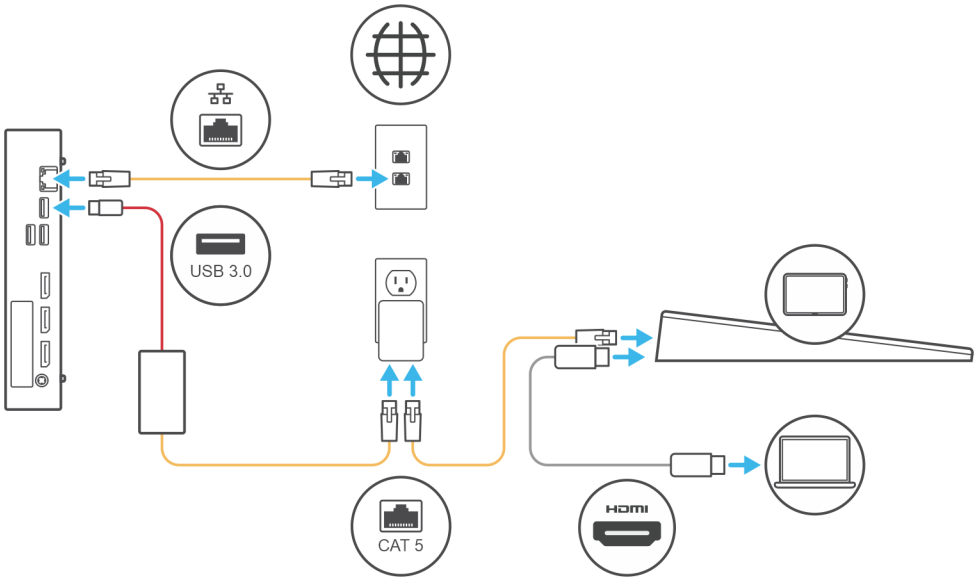


Figure 8. Ethernet, HDMI, and Logitech Cat5e kit connection diagram

a. Connect one end of an Ethernet cable to your OptiPlex 7000 XE Micro.
b. Connect the other end of the Ethernet cable to an Ethernet wall socket.
c. Set up the Cat5e kit for your Logitech Tap.

NOTE: The Cat5e kit provides data and power to your Logitech Tap, see the documentation that is with your Logitech Cat5e kit for instructions on how to set up your Cat5e kit.

d. Connect a HDMI cable to your Logitech Tap.

NOTE: A laptop is shown in the connection to illustrate that the other end of HDMI connection is meant for a direct connection to a laptop during meetings. The laptop connection is not required during setup.

4. Perform the procedures that are provided on the relevant USB connection diagram.

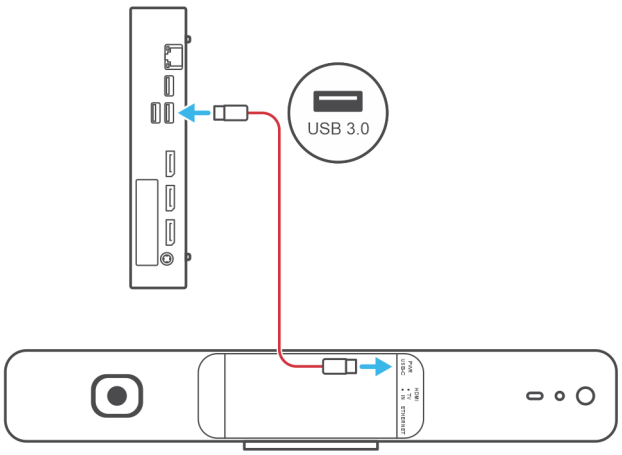


Figure 9. USB connection diagram

a. Take the USB-C cable and connect one end of the cable to your OptiPlex 7000 XE Micro.
b. Connect the other end of the USB-C cable to your Logitech MeetUp 2.

5. Connect a USB keyboard and mouse to your OptiPlex 7000 XE Micro to facilitate software setup.
6. Power on the OptiPlex 7000 XE Micro. You may have to restart the computer more than once as updates are downloaded and installed. Leave the computer on during this process.
7. Perform the procedure in Configuring the operating system for Zoom Rooms.
8. When the Microsoft Windows Setup is complete, the Zoom Rooms Setup screen is displayed. Follow the instructions displayed on the screen to complete the configuration. For more information about setting up Zoom Rooms, see Zoom Rooms User Guide.

   NOTE: For additional information for Logitech solutions for Zoom Rooms, see Logitech Solutions for Zoom Rooms.

9. Disconnect the USB keyboard and mouse from the OptiPlex 7000 XE Micro.

Medium Single Display Video Conferencing Room setup

Dell Video Conferencing Room Solutions > Medium Single Display Video Conferencing Room configuration > Medium Single Display Video Conferencing Room setup

Prerequisites

Ensure that the following pre-requisite steps have been met before setting up your Medium Single Display Video Conferencing Room:

- You have Zoom Rooms credentials or the activation code for the meeting room.
- You have a Medium Single Display Video Conferencing Room configuration.
- The room has the necessary three power sockets and one Ethernet socket to be able to connect your devices.

NOTE: Dell Technologies recommends mounting the OptiPlex 7000 XE Micro, behind the display. When your OptiPlex 7000 XE Micro is mounted behind the display, power to the computer is provided through a power connection on the display. For more information about how to set up or mount the computer behind the display, go to Dell Documentation and search for the display setup guide.

About this task

The following image shows a representation of the Medium Single Display Video Conferencing Room configuration and an overview of the necessary connections to complete this setup.

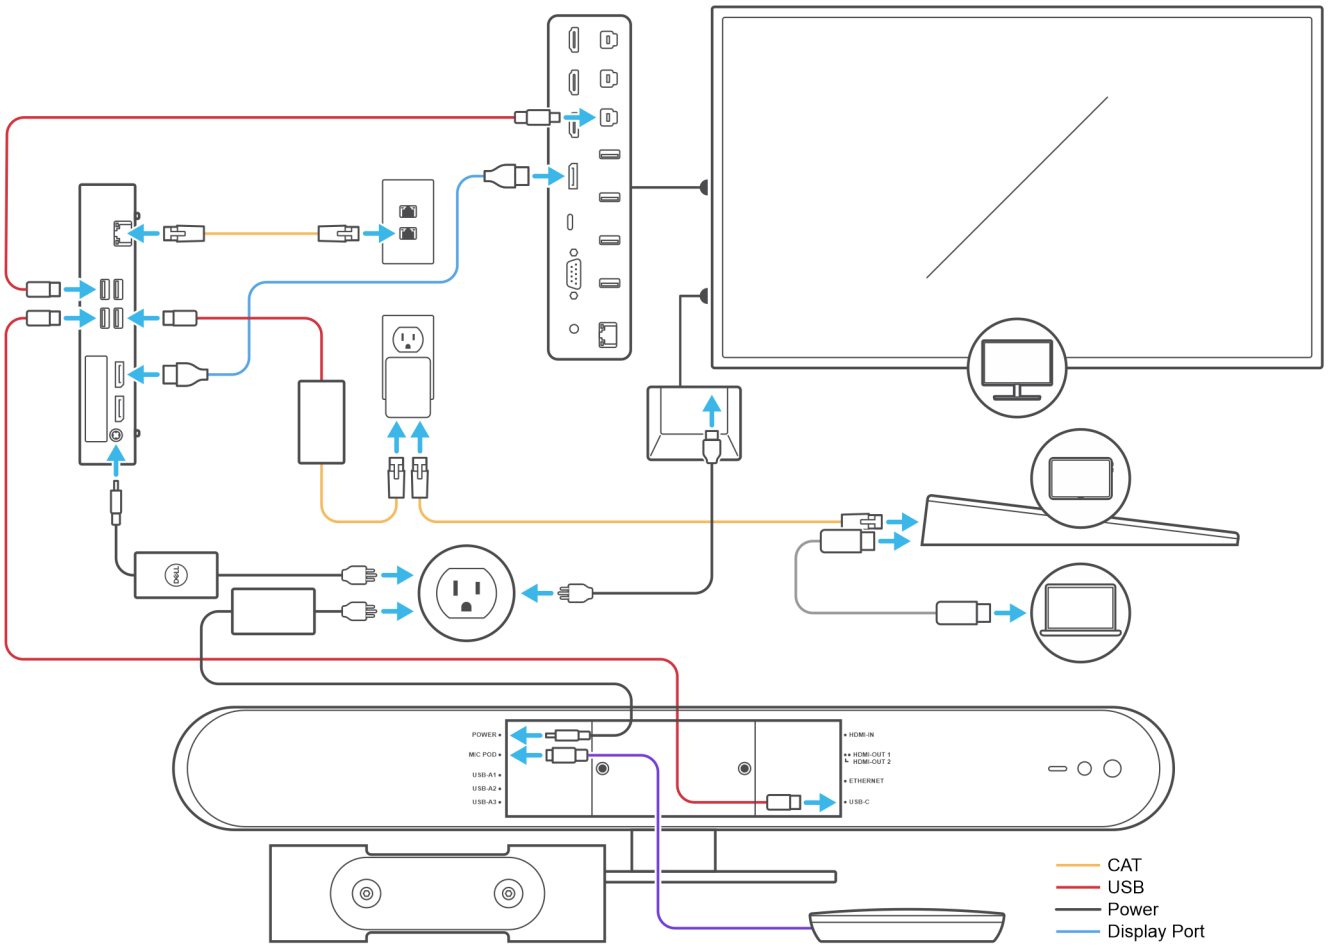


Figure 10. Connection diagram overview

Steps

1. Perform the procedures that are provided on the power connection diagram.

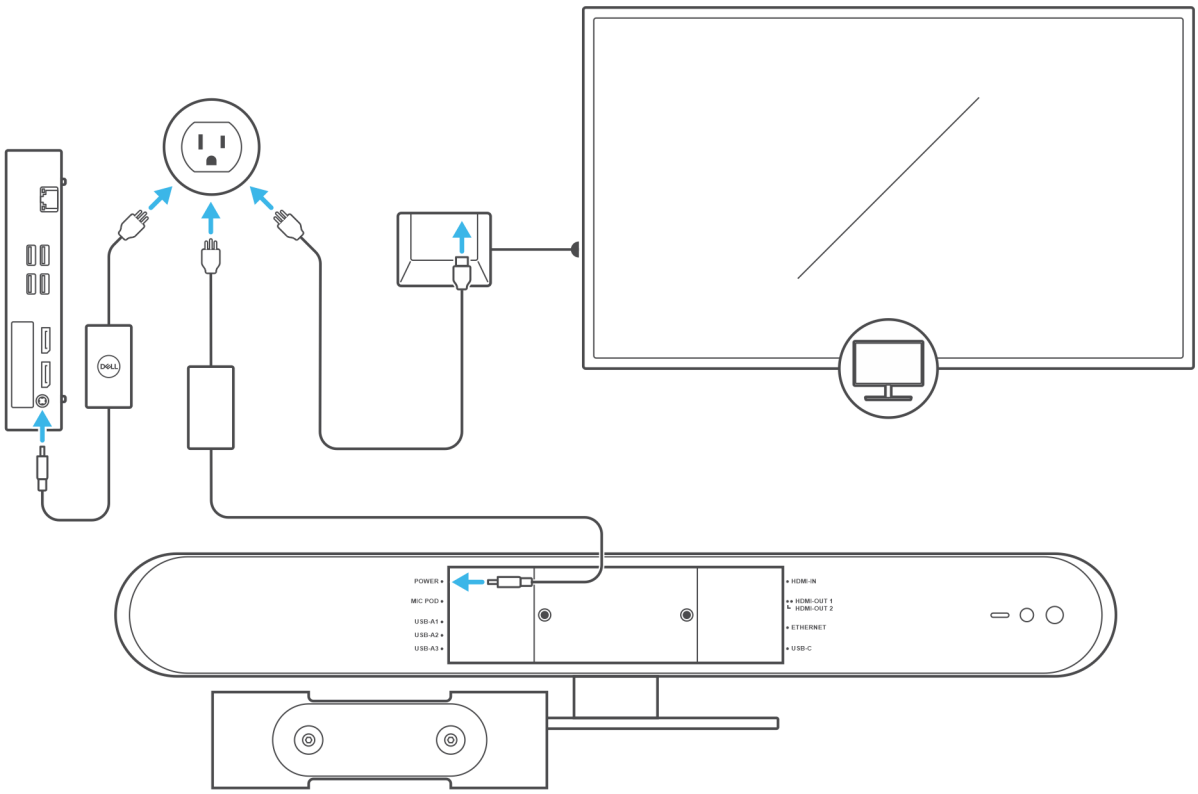


Figure 11. Power connection diagram

a. Plug in the power adapters to the power sockets.
b. Connect the power adapters to your displays, OptiPlex 7000 XE Micro, and Logitech Rally Bar Mini.

2. Perform the procedures that are provided on the DisplayPort connection diagram.

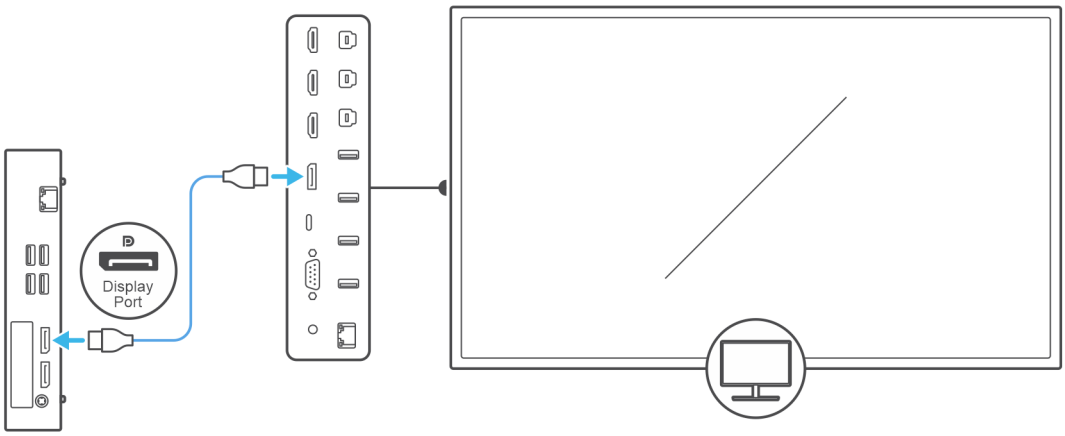


Figure 12. DisplayPort connection diagram

a. Connect one end of the DisplayPort cable to your OptiPlex 7000 XE Micro.
b. Connect the other end of the DisplayPort cable to your display.

3. Perform the procedures that are provided on the Ethernet, HDMI, and Logitech Cat5e kit connection diagram.

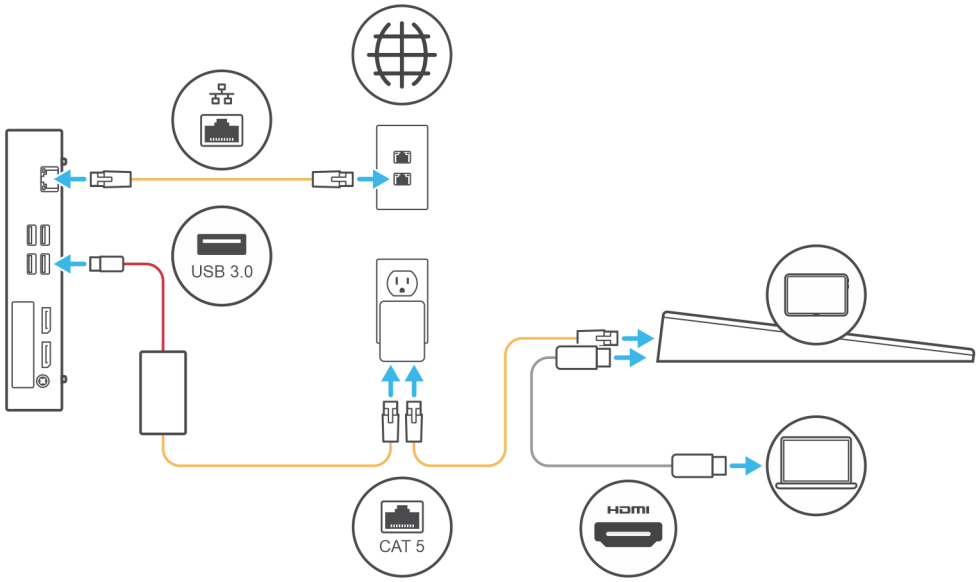


Figure 13. Ethernet, HDMI, and Logitech Cat5e kit connection diagram

a. Connect one end of an Ethernet cable to your OptiPlex 7000 XE Micro.
b. Connect the other end of the Ethernet cable to an Ethernet wall socket.
c. Set up the Cat5e kit for your Logitech Tap.

NOTE: The Cat5e kit provides data and power to your Logitech Tap, see the documentation that is shipped with your Logitech Cat5e kit for instructions on how to set up your Cat5e kit.

d. Connect a HDMI cable to your Logitech Tap.

NOTE: A laptop is shown in the connection to illustrate that the other end of HDMI connection is meant for a direct connection to a laptop during meetings. The laptop connection is not required during setup.

4. Perform the procedures that are provided on the USB and microphone connection diagram.

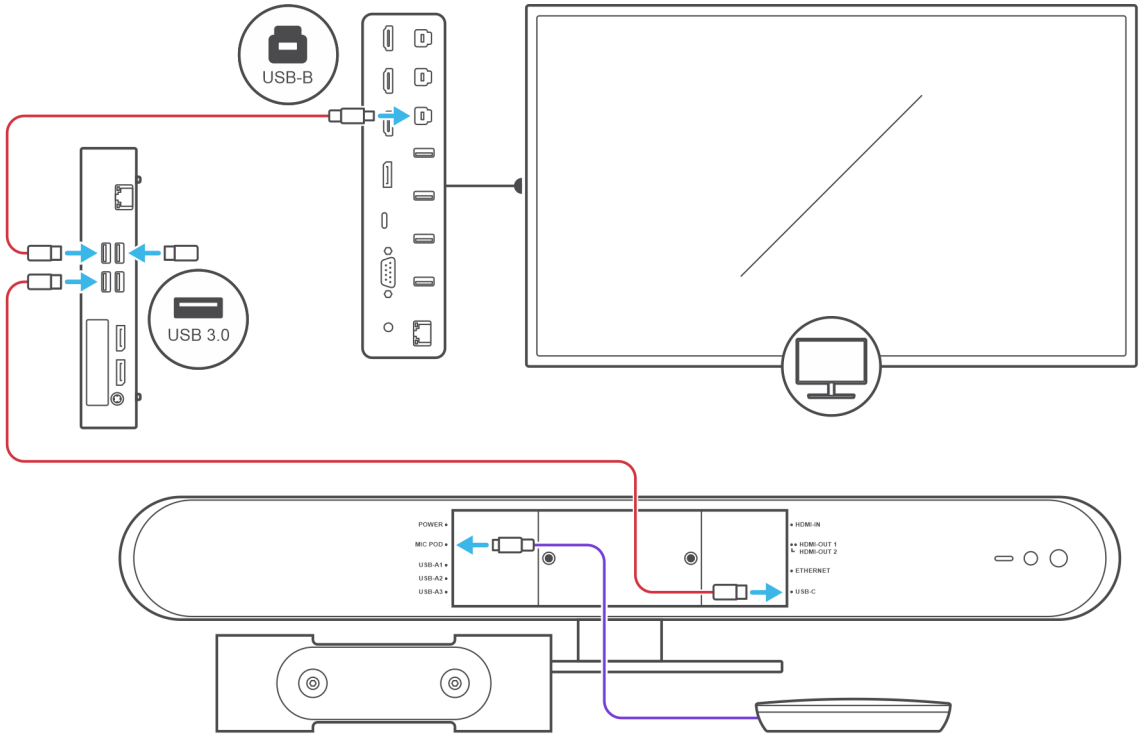


Figure 14. USB and microphone connection diagram

a. Take the USB-A to USB-B adapter cable and connect the USB-A connector to your OptiPlex 7000 XE Micro.
b. Connect the USB-B connector of the USB-A to USB-B adapter cable to a touchscreen-enabled display to enable touchscreen functionality.
c. Take the USB-A to USB-C adapter cable and connect the USB-A connector to your OptiPlex 7000 XE Micro.
d. Connect the USB-C connector of the USB-A to USB-C adapter cable to your Logitech Rally Bar Mini.
e. Connect the 12-pin captive cable connector of your Logitech Rally Mic Pod to your Logitech Rally Bar Mini.

5. Connect a USB keyboard and mouse to your OptiPlex 7000 XE Micro to facilitate software setup.
6. Power on the OptiPlex 7000 XE Micro. You may have to restart the computer more than once as updates are downloaded and installed. Leave the computer on during this process.
7. Perform the procedure in Configuring the operating system for Zoom Rooms.
8. When the Microsoft Windows Setup is complete, the Zoom Rooms Setup screen is displayed. Follow the instructions displayed on the screen to complete the configuration. For more information about setting up Zoom Rooms, see Zoom Rooms User Guide.

   NOTE: For additional information for Logitech solutions for Zoom Rooms, see Logitech Solutions for Zoom Rooms.

9. Disconnect the USB keyboard and mouse from the OptiPlex 7000 XE Micro.

Medium Dual Display Video Conferencing Room setup

Dell Video Conferencing Room Solutions > Medium Dual Display Video Conferencing Room configuration > Medium Dual Display Video Conferencing Room setup

Prerequisites

Ensure that the following pre-requisite steps have been met before setting up your Medium Dual Display Video Conferencing Room:

- You have Zoom Rooms credentials or the activation code for the meeting room.
- You have an Medium Dual Display Video Conferencing Room configuration.

- The room has the necessary six power sockets and one Ethernet socket to be able to connect your devices.

NOTE: Dell Technologies recommends mounting the OptiPlex 7000 XE Micro, behind the display. When your OptiPlex 7000 XE Micro is mounted behind the display, power to the computer is provided through a power connection on the display. For more information about how to set up or mount the computer behind the display, go to Dell Documentation and search for the display setup guide.

About this task

The following image shows a representation of the Medium Dual Display Video Conferencing Room configuration and an overview of the necessary connections to complete this setup.

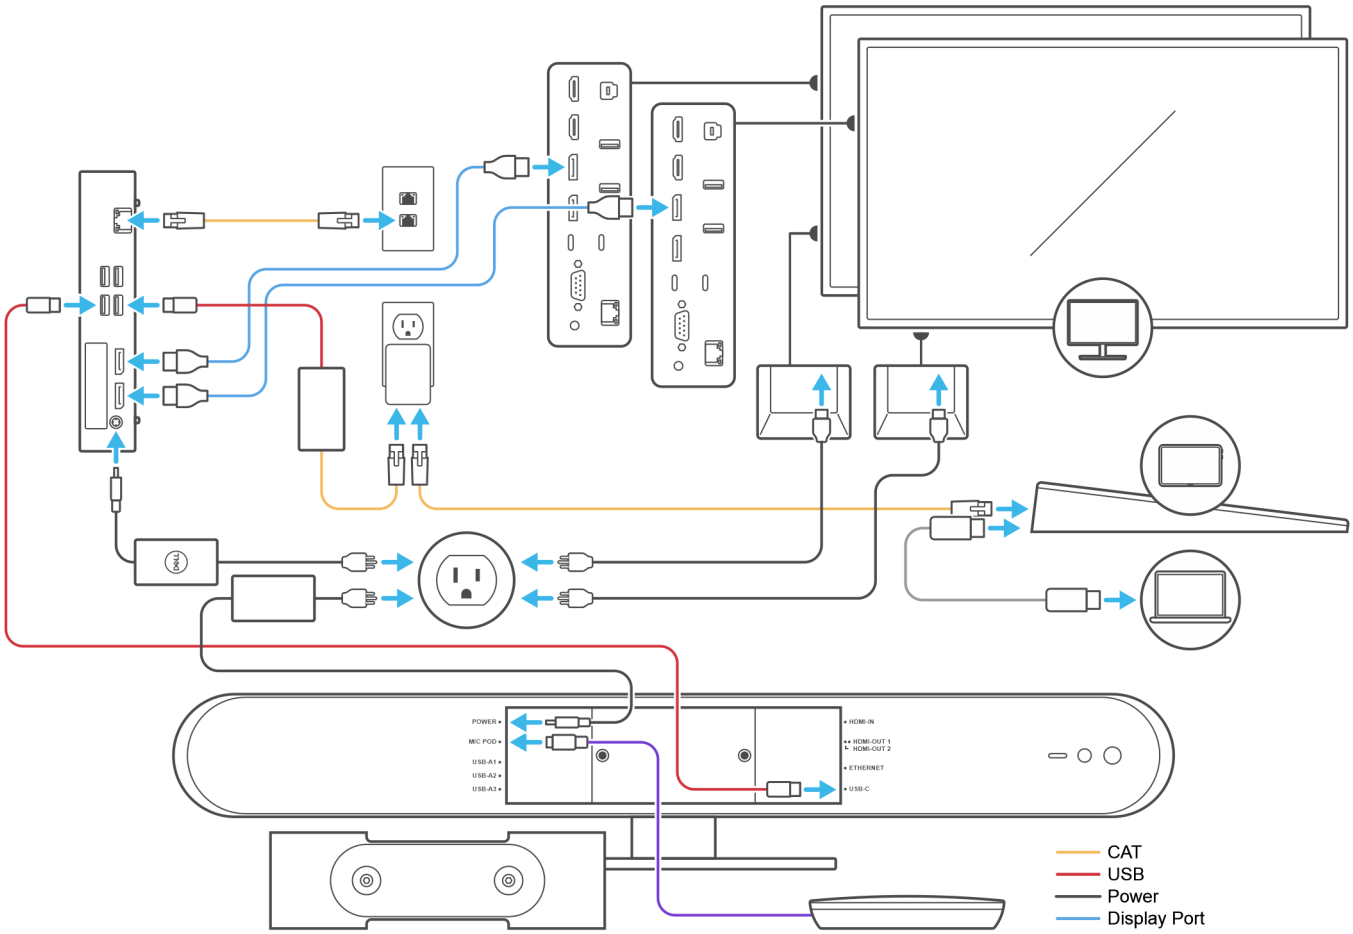


Figure 15. Connection diagram overview

Steps

1. Perform the procedures that are provided on the power connection diagram.

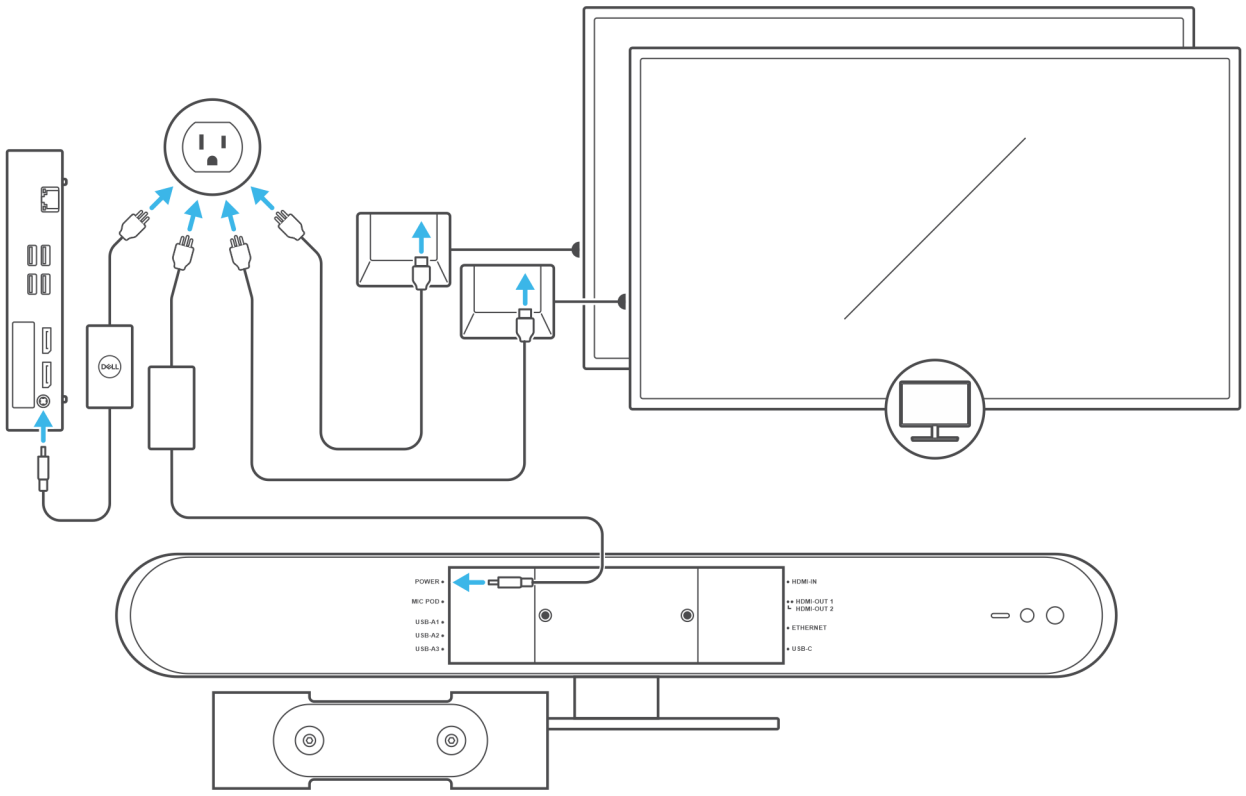


Figure 16. Power connection diagram

a. Plug in the power adapters to the power sockets.
b. Connect the power adapters to your displays, OptiPlex 7000 XE Micro, and Logitech Rally Bar Mini.

2. Perform the procedures that are provided on the DisplayPort connection diagram.

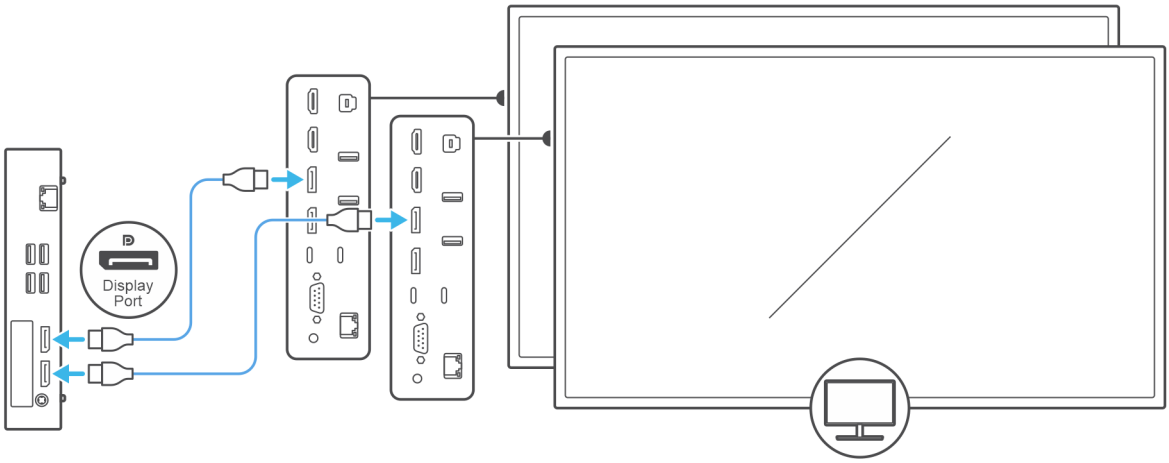


Figure 17. DisplayPort connection diagram

a. Connect one end of both DisplayPort cables to your computer.
b. Connect the other ends of both DisplayPort cables to each of your displays.

3. Perform the procedures that are provided on the Ethernet, HDMI, and Logitech Cat5e kit connection diagram.

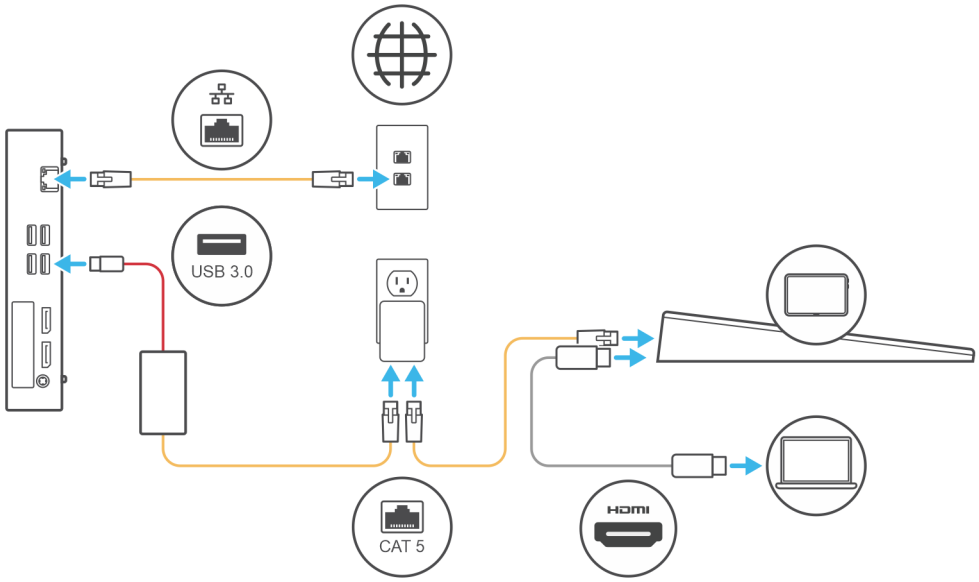


Figure 18. Ethernet, HDMI, and Logitech Cat5e kit connection diagram

a. Connect one end of an Ethernet cable to your OptiPlex 7000 XE Micro.
b. Connect the other end of the Ethernet cable to an Ethernet wall socket.
c. Set up the Cat5e kit for your Logitech Tap.

NOTE: The Cat5e kit provides data and power to your Logitech Tap, see the documentation that is shipped with your Logitech Cat5e kit for instructions on how to set up your Cat5e kit.

d. Connect a HDMI cable to your Logitech Tap.

NOTE: A laptop is shown in the connection to illustrate that the other end of HDMI connection is meant for a direct connection to a laptop during meetings. The laptop connection is not required during setup.

4. Perform the procedures that are provided on the USB and microphone connection diagram.

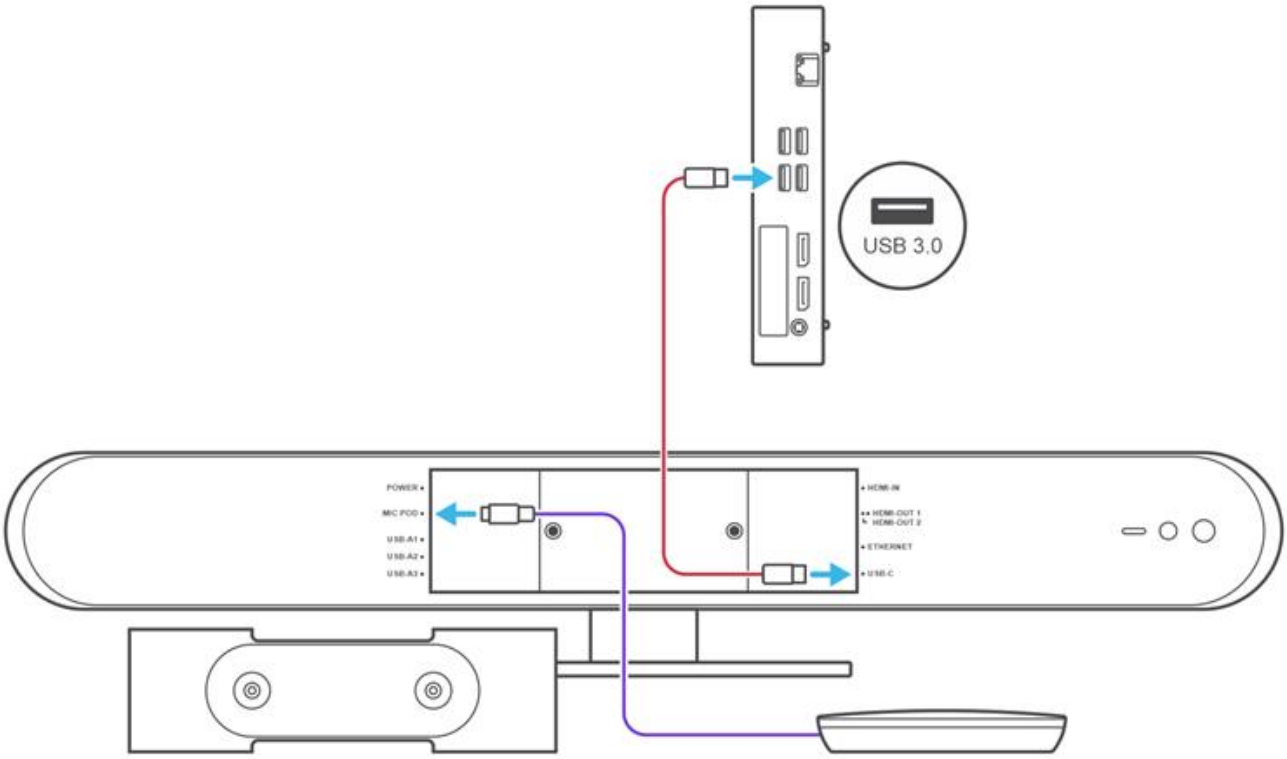


Figure 19. USB and microphone connection diagram

a. Take the USB-A to USB-C adapter cable and connect the USB-A connector to your OptiPlex 7000 XE Micro.
b. Connect the USB-C connector of the USB-A to USB-C adapter cable to your Logitech Rally Bar Mini.
c. Connect the 12-pin captive cable connector of your Logitech Rally Mic Pod to your Logitech Rally Bar Mini.

5. Connect a USB keyboard and mouse to your OptiPlex 7000 XE Micro to facilitate software setup.
6. Power on the OptiPlex 7000 XE Micro. You may have to restart the computer more than once as updates are downloaded and installed. Leave the computer on during this process.
7. Perform the procedure in Configuring the operating system for Zoom Rooms.
8. When the Microsoft Windows Setup is complete, the Zoom Rooms Setup screen is displayed. Follow the instructions displayed on the screen to complete the configuration. For more information about setting up Zoom Rooms, see Zoom Rooms User Guide.

   NOTE: For additional information for Logitech solutions for Zoom Rooms, see Logitech Solutions for Zoom Rooms.

9. Disconnect the USB keyboard and mouse from the OptiPlex 7000 XE Micro.

Large Video Conferencing Room setup

Dell Video Conferencing Room Solutions > Large Video Conferencing Room configuration > Large Video Conferencing Room setup

Prerequisites

Ensure that the following pre-requisite steps have been met before setting up your Large Video Conferencing Room:

- You have Zoom Rooms credentials or the activation code for the meeting room.
- You have a Large Video Conferencing Room configuration.
- The room has the necessary five power sockets and one Ethernet socket to be able to connect your devices.

NOTE: Dell Technologies recommends mounting the OptiPlex 7000 XE Micro, behind the display. When your OptiPlex 7000 XE Micro is mounted behind the display, power to the computer is provided through a power connection on the display. For more information about how to set up or mount the computer behind the display, go to Dell Documentation and search for the display setup guide.

About this task

The following image shows a representation of the Large Video Conferencing Room configuration and an overview of the necessary connections to complete this setup.

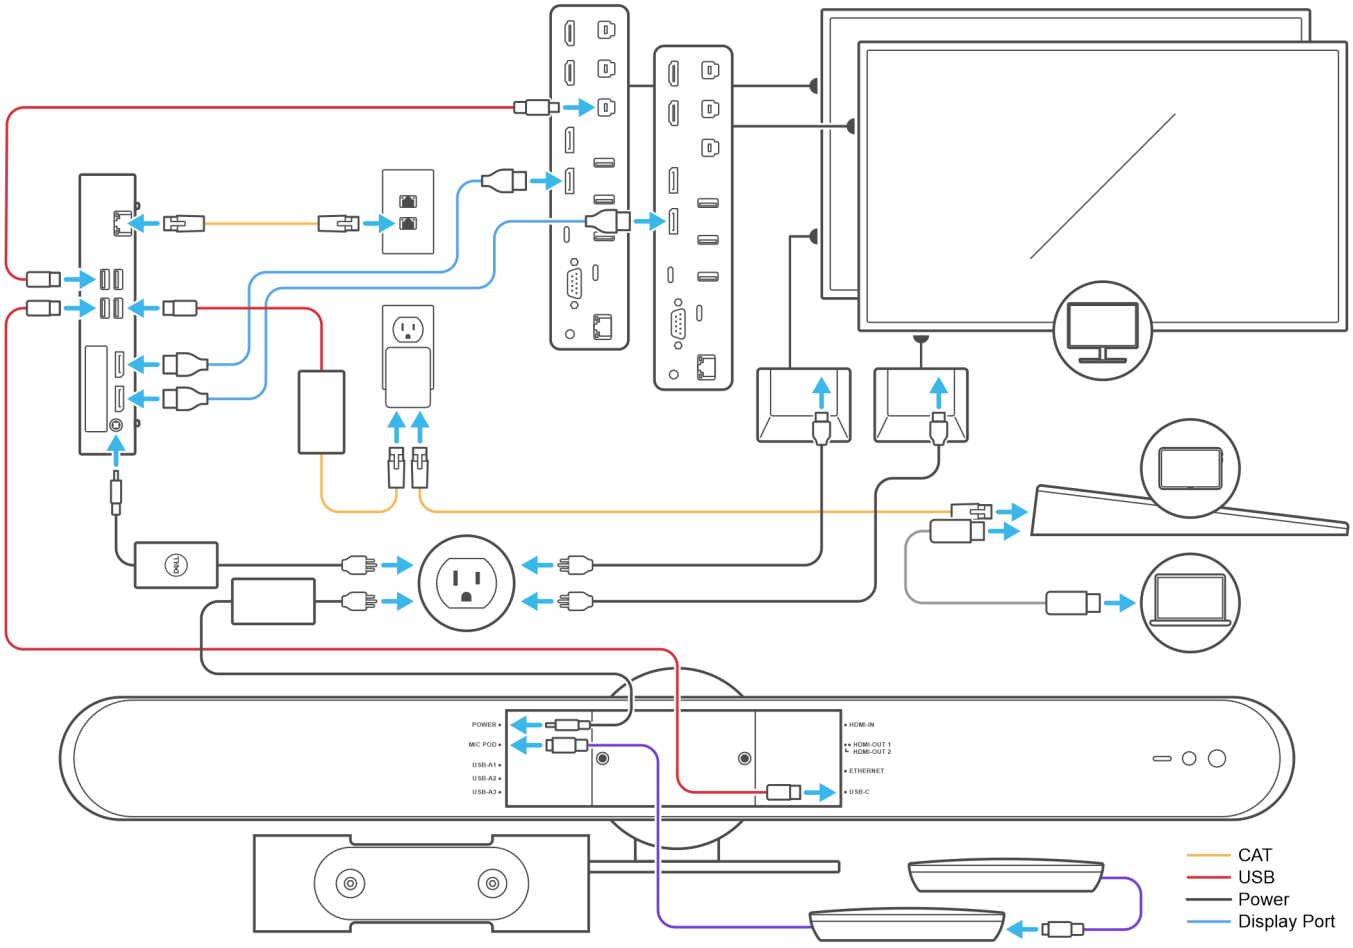


Figure 20. Connection diagram overview

Steps

1. Perform the procedures that are provided on the power connection diagram.

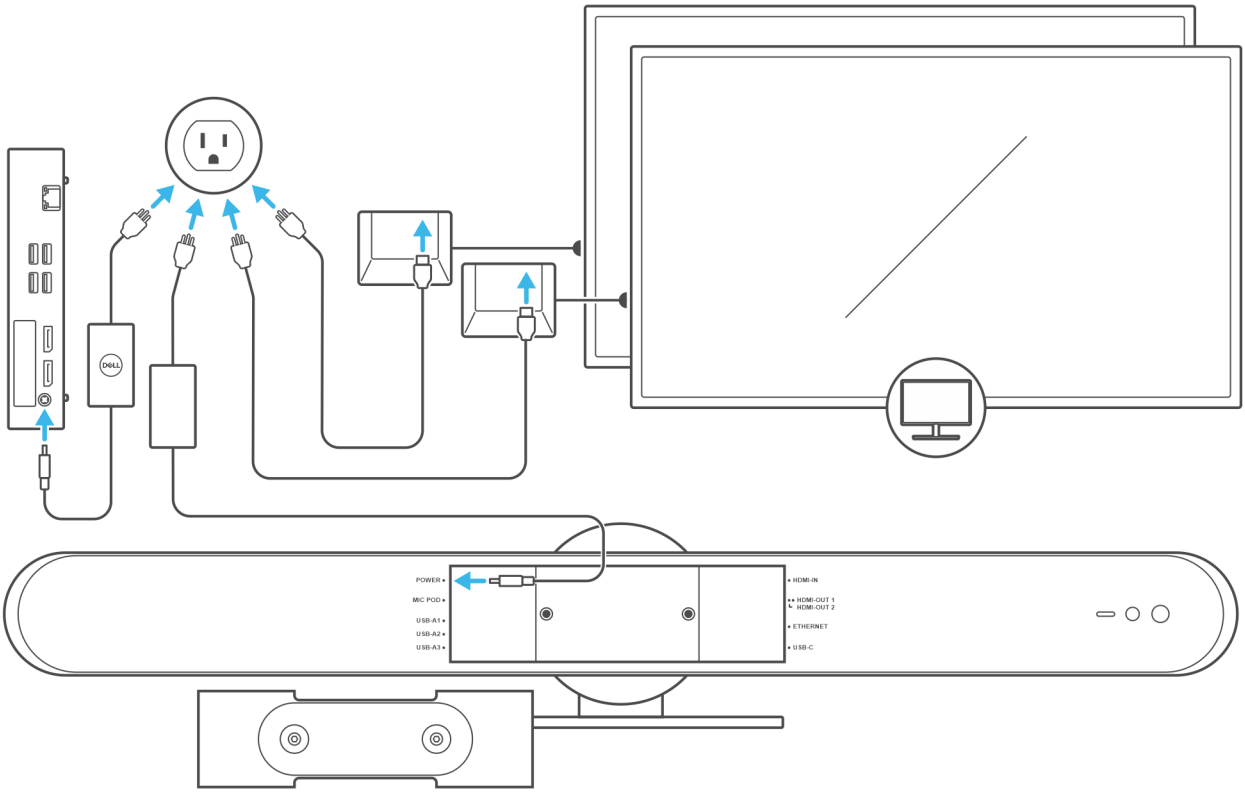


Figure 21. Power connection diagram

a. Plug in the power adapters to the power sockets.
b. Connect the power adapters to your displays, OptiPlex 7000 XE Micro, and Logitech Rally Bar.

2. Perform the procedures that are provided on the DisplayPort connection diagram.

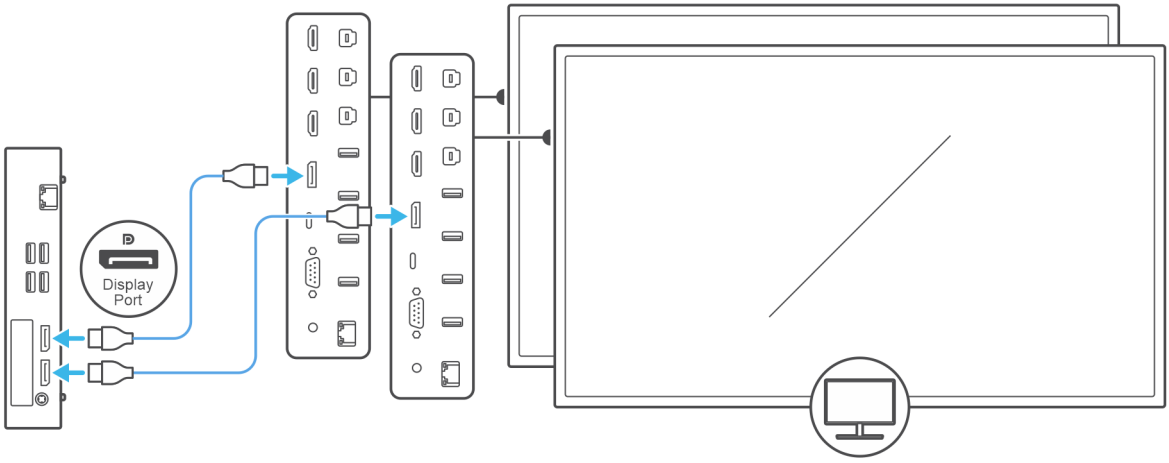


Figure 22. DisplayPort connection diagram

a. Connect one end of both DisplayPort cables to your OptiPlex 7000 XE Micro.
b. Connect the other ends of both DisplayPort cables to each of your displays.

3. Perform the procedures that are provided on the Ethernet, HDMI, and Logitech Cat5e kit connection diagram.

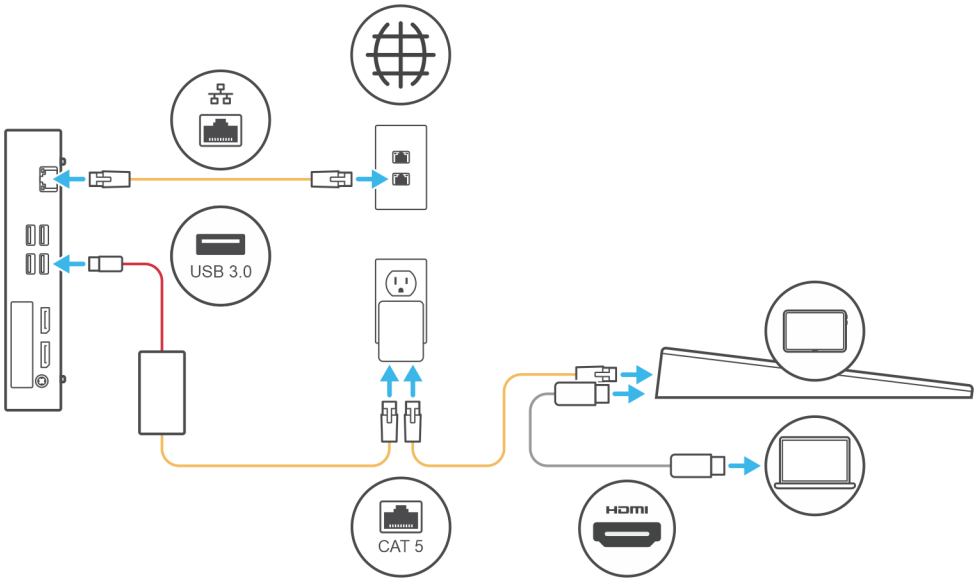


Figure 23. Ethernet, HDMI, and Logitech Cat5e kit connection diagram

a. Connect one end of an Ethernet cable to your OptiPlex 7000 XE Micro.
b. Connect the other end of the Ethernet cable to an Ethernet wall socket.
c. Set up the Cat5e kit for your Logitech Tap.

NOTE: The Cat5e kit provides data and power to your Logitech Tap, see the documentation that is shipped with your Logitech Cat5e kit for instructions on how to set up your Cat5e kit.

d. Connect a HDMI cable to your Logitech Tap.

NOTE: A laptop is shown in the connection to illustrate that the other end of HDMI connection is meant for a direct connection to a laptop during meetings. The laptop connection is not required during setup.

4. Perform the procedures that are provided on the USB and microphone connection diagram.

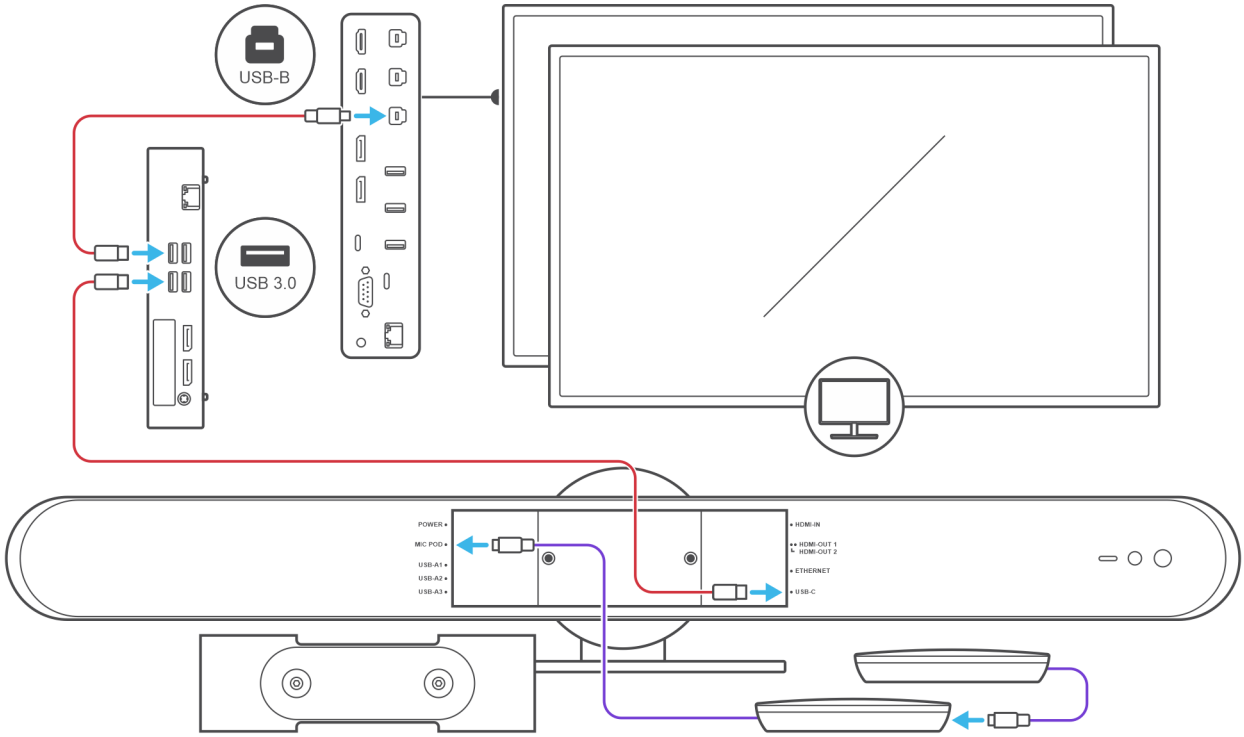


Figure 24. USB and microphone connection diagram

a. Take the USB-A to USB-B adapter cable and connect the USB-A connector to your OptiPlex 7000 XE Micro.
b. Connect the USB-B connector of the USB-A to USB-B adapter cable to a touchscreen-enabled display to enable touchscreen functionality.
c. Take the USB-A to USB-C adapter cable and connect the USB-A connector to your OptiPlex 7000 XE Micro.
d. Connect the USB-C connector of the USB-A to USB-C adapter cable to your Logitech Rally Bar.
e. Connect the 12-pin captive cable connector of one Logitech Rally Mic Pod to a second Logitech Rally Mic Pod.
f. Connect the 12-pin captive cable connector of the second Logitech Rally Mic Pod to your Logitech Rally Bar Mini.

5. Connect a USB keyboard and mouse to your OptiPlex 7000 XE Micro to facilitate software setup.
6. Power on the OptiPlex 7000 XE Micro. You may have to restart the computer more than once as updates are downloaded and installed. Leave the computer on during this process.
7. Perform the procedure in Configuring the operating system for Zoom Rooms.
8. When the Microsoft Windows Setup is complete, the Zoom Rooms Setup screen is displayed. Follow the instructions displayed on the screen to complete the configuration. For more information about setting up Zoom Rooms, see Zoom Rooms User Guide.

   NOTE: For additional information for Logitech solutions for Zoom Rooms, see Logitech Solutions for Zoom Rooms.

9. Disconnect the USB keyboard and mouse from the OptiPlex 7000 XE Micro.

4

Configuring the operating system for Zoom Rooms

Prerequisites

Before you begin:

- Ensure that your computer has a stable Internet connection.
- Ensure that you have completed all the procedures in setting up the hardware connections for the relevant Video Conferencing Room solution.


To configure the operating system to use Zoom Rooms, perform the following procedure:

Steps


1. Turn on the computer and ensure that you are connected to your local network with Internet connectivity.

   NOTE: The screenshots that are shown in the following section for the Zoom Rooms configuration may appear differently for you depending on the operating system that is installed on your computer.


2. Select the region from the drop-down list, and click **Yes**.

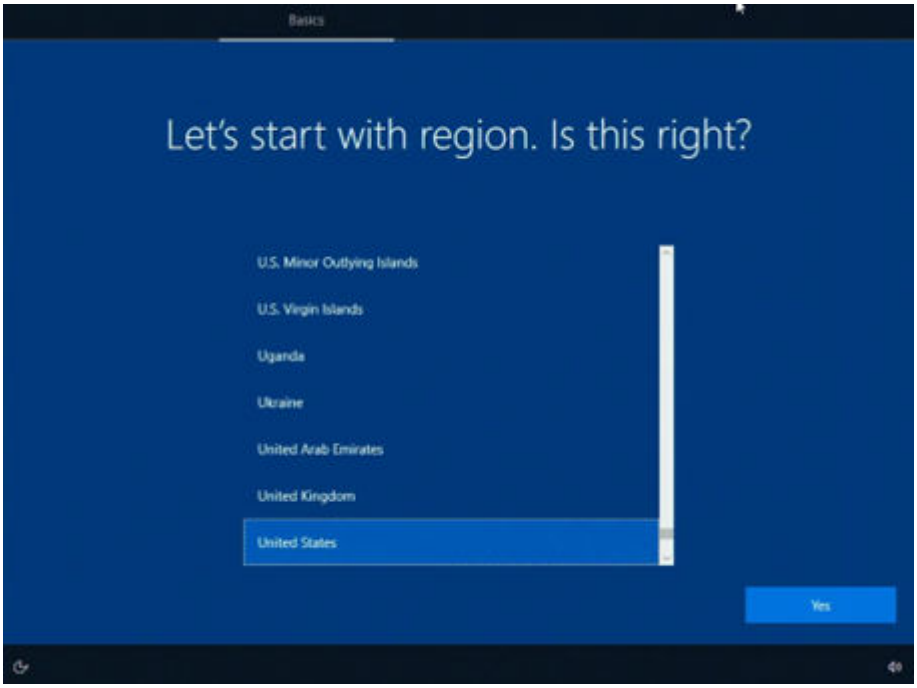

3. Select the keyboard layout that you want to use and click **Yes**.

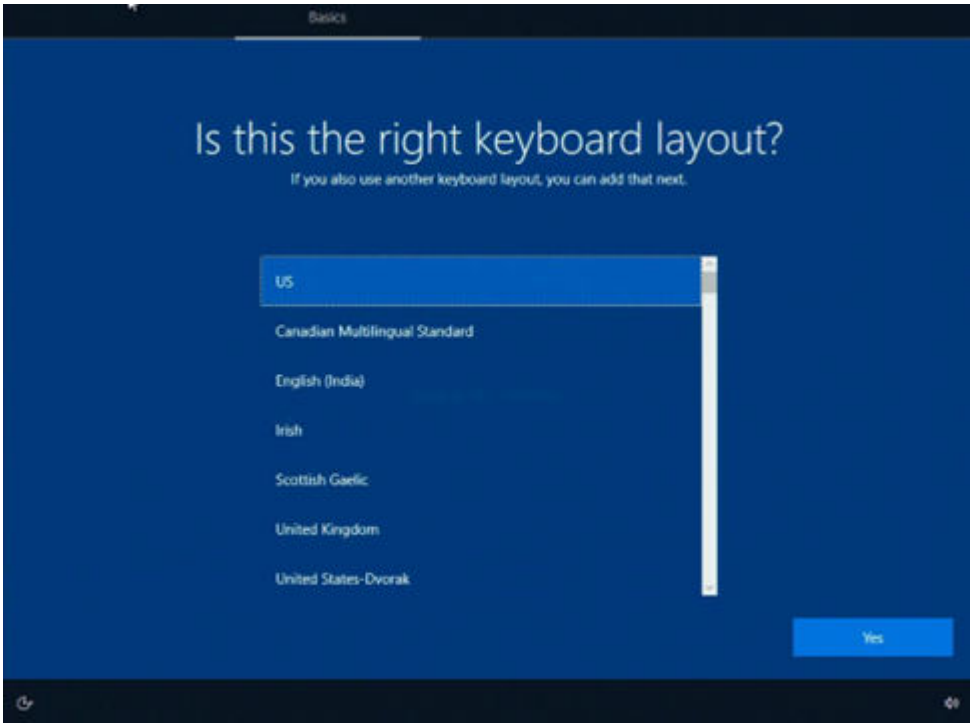

4. Select a second keyboard layout if required and click **Add Layout**. Else, click **Skip** to proceed with the configuration.

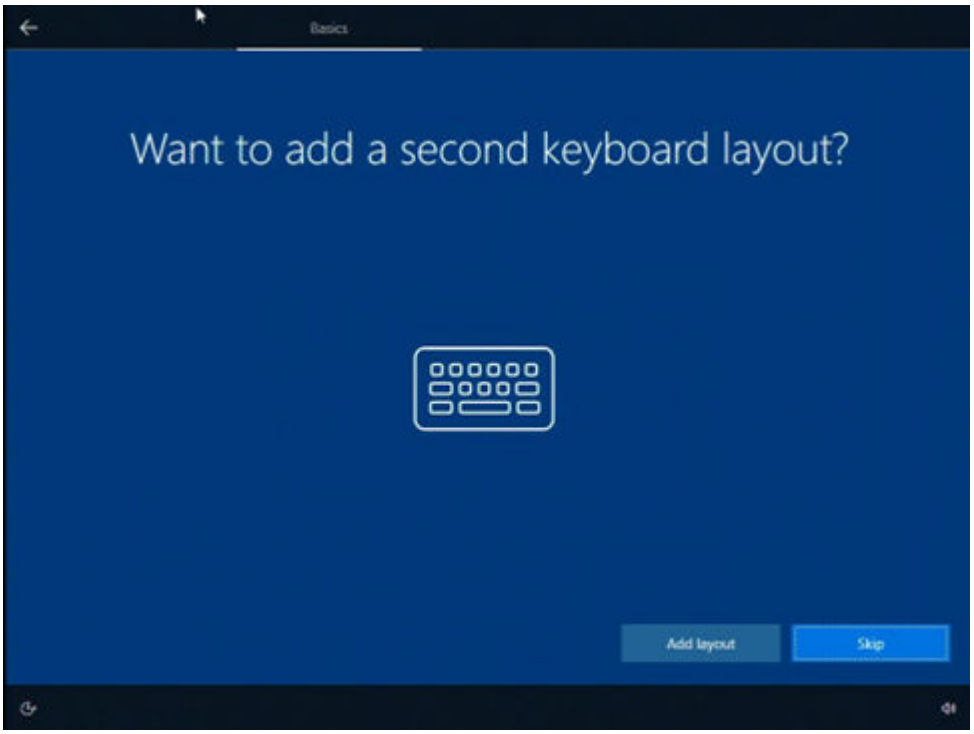

5. When the Logitech Tap controller is connected, the pairing screen is not displayed and the Zoom Rooms **Welcome** screen is displayed. Select **Sign In** or **Start a Meeting** to proceed.
6. The password prompt by default on a Kiosk-mode computer cannot be disabled. The Zoom Rooms user is created in the image and is required for the Zoom Rooms solution.

   NOTE: You must note down the Administrator password during initial setup of the Zoom Rooms in Kiosk-mode as you cannot log in as an administrator again if you forget the password.

7. Zoom Rooms is launched automatically whenever the computer boots. You must press the Microsoft Windows key five times in quick succession to be able to see the ability to switch to a preconfigured Administrator account.
8. You can perform the following tasks with Administrator privileges:

- Power management settings
- Check for Windows updates
- Set timing for screen timeout

5

Troubleshooting

No CEC control option in Zoom Rooms Setting

The **Display Screen, CEC** option does not appear in the Zoom Rooms Settings user interface preventing you from configuring the display with **Power On** or **Power Off** options using CEC control.

A CEC adapter is required to enable CEC control. The Dell Video Conferencing Room Solutions for Zoom Rooms bundle does not ship with a CEC adapter in this release. You can use **Dark Mode** and **Operation time** to put the display into dark mode instead of using a CEC control.

NOTE: For more information about configuring your display, see Zoom Rooms TV On / Off Configurations .

Volume slider status on Zoom Meeting does not sync with Logitech MeetUp or Rally remote control

When you use your Logitech Meet Up or Rally remote control to adjust the volume, the volume of the speakers is adjusted, but the volume slider status in Zoom meeting remains unchanged. The slider bar displayed on the screen does not move even though the volume is increased.

You can adjust the volume by touching the volume slider on the Logitech Tap controller.

NOTE: Use the **Logitech Tap Controller** to adjust the volume instead of the **Logitech remote control**.

NOTE: For more information about in-meeting controls, see In-meeting Controls.

NOTE: For more information about video conferencing with the with your Logitech device, see Logitech Video Conferencing Resource Center.

NOTE: For more information about the Logitech Tap Controller, see Logitech Tap Controller.

The Whiteboard feature is not displayed on multiple touchscreen-enabled displays for Zoom Rooms when used with the Logitech Tap controller

To find more information about using the Whiteboard feature in Zoom Rooms, see Using the Whiteboard in Zoom Rooms for Touch.

NOTE: In this release, Zoom Rooms does not support multiple touchscreen-enabled displays or touchscreen-enabled devices, and the Dell Video Conferencing Room Solutions for Zoom Rooms bundle does not include multiple touchscreen-enabled displays for this release.

NOTE: For more information about a single touch screen display, see Zoom Rooms support one touch screen display.

6

Getting help

Contacting Dell

NOTE: For Logitech support and warranty, go to Logitech Support for Zoom Rooms.

NOTE: For Zoom Rooms help, support, and warranty, go to Zoom Rooms Support Site.

About this task

Dell Technologies has a support team who helps to resolve your issues, and create a plan of action to regain normal operation of your Dell Video Conferencing Room Solutions, for up to 90 days from the date of purchase.

Dell Technologies provides several online and telephone-based support and service options. Availability varies by country or region and product, and some services may not be available in your area. To contact Dell Technologies for sales, technical support, or customer service issues, perform the following procedure:

NOTE: Dell ProSupport for Video Conferencing Room Solutions is only available for Fixed Room Configuration purchases.

Steps

1. **Locate the Service Tag**: Customers should find their seven-digit service tag, which is located on the Dell OptiPlex or in the BIOS.
2. **Contact Dell Support**: Reach out to Dell Support at Contact Us and describe the issue to an agent. The agent logs the case, assigns a case number, and begins remote diagnosis. If the issue is traced to Dell parts, the agent will guide the next steps.
3. **Contact Logitech (if needed)**: If Logitech parts are identified as the issue, the customer is directed to contact Logitech. Since *Dell ProSupport for Video Conferencing Room Solutions* includes Logitech Select, the Dell agent provides a digital transfer link for the customer to complete the Logitech Select Support onboarding process.

7

Revision history

Tracks all updates that are made to the document. It typically includes the date of change, version number, and a brief description of the modification. This log helps maintain transparency, accountability, and a clear timeline of progress.

Table 5. Revision history

Revision	Date	Description
A00	05-06-2025	Original publish date.
A01	07-01-2025	Refined touchscreen support for each room type.