ACC-DTLSK, ACC-DTRSK



Fully assembled sidekick shown

NOTE: Read entire instruction sheet before you start installation and assembly.

⚠ WARNING

- Do not begin to install your Peerless product until you have read and understood the instructions and warnings contained in this Installation Sheet. If you have any questions regarding any of the instructions or warnings, for US customers please call Peerless customer care at 1-800-865-2112, for all international customers, please contact your local distributor.
- This product should only be installed by someone of good mechanical aptitude, has experience with basic building construction, and fully understands these instructions.
- Make sure that the supporting surface will safely support the combined load of the equipment and all attached hardware and components.
- Always use an assistant or mechanical lifting equipment to safely lift and position equipment.
- Tighten screws firmly, but do not overtighten. Overtightening can damage the items, greatly reducing their holding power.



Tools Needed for Assembly

- 1/2" socket
- Ratchet
- 3/4" combination wrench
- 3/4" "stubby" combination ratchet wrench

Before you begin, make sure all parts shown are included with your product.

Parts List

	Description	Qty	Part # ACC-DTLSK	Part # ACC-DTRSK
A	sidekick	1	150-T1294	150-T1296
B	gusset	2	150-T1304	150-T1304
C	5/16" - 18 nut	6	530-0090	530-0090
D	5/16" sealing washer	6	540-0663	540-0663

Parts may appear slightly different than illustrated.

A (1)
sidekick

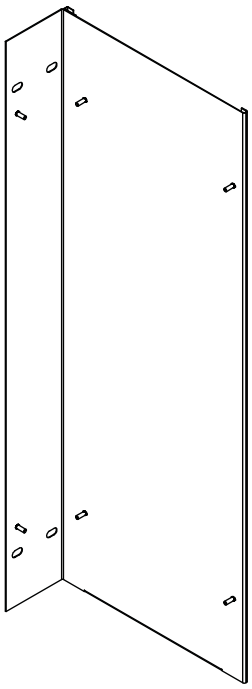

B (2)
gusset

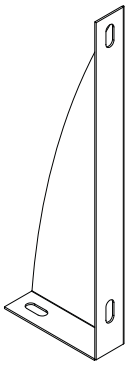

C (6
5/16" nut

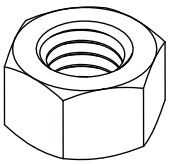

D (6)
5/16" washer

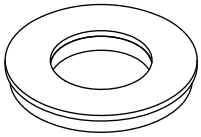

1 Install sidekick (A)

Remove the (4) ½" bolts and (4) ½" sealing washers from the side of the existing cabinet. Place the sidekick against the cabinet side, line up all (4) holes and bolt together using the existing (4) ½" bolts and (4) ½"sealing washers. Use the ¾" combination wrench on the outside of the cabinet and use the ¾" stubby combination ratchet wrench on the inside of the cabinet. See **Illustration "A"**.

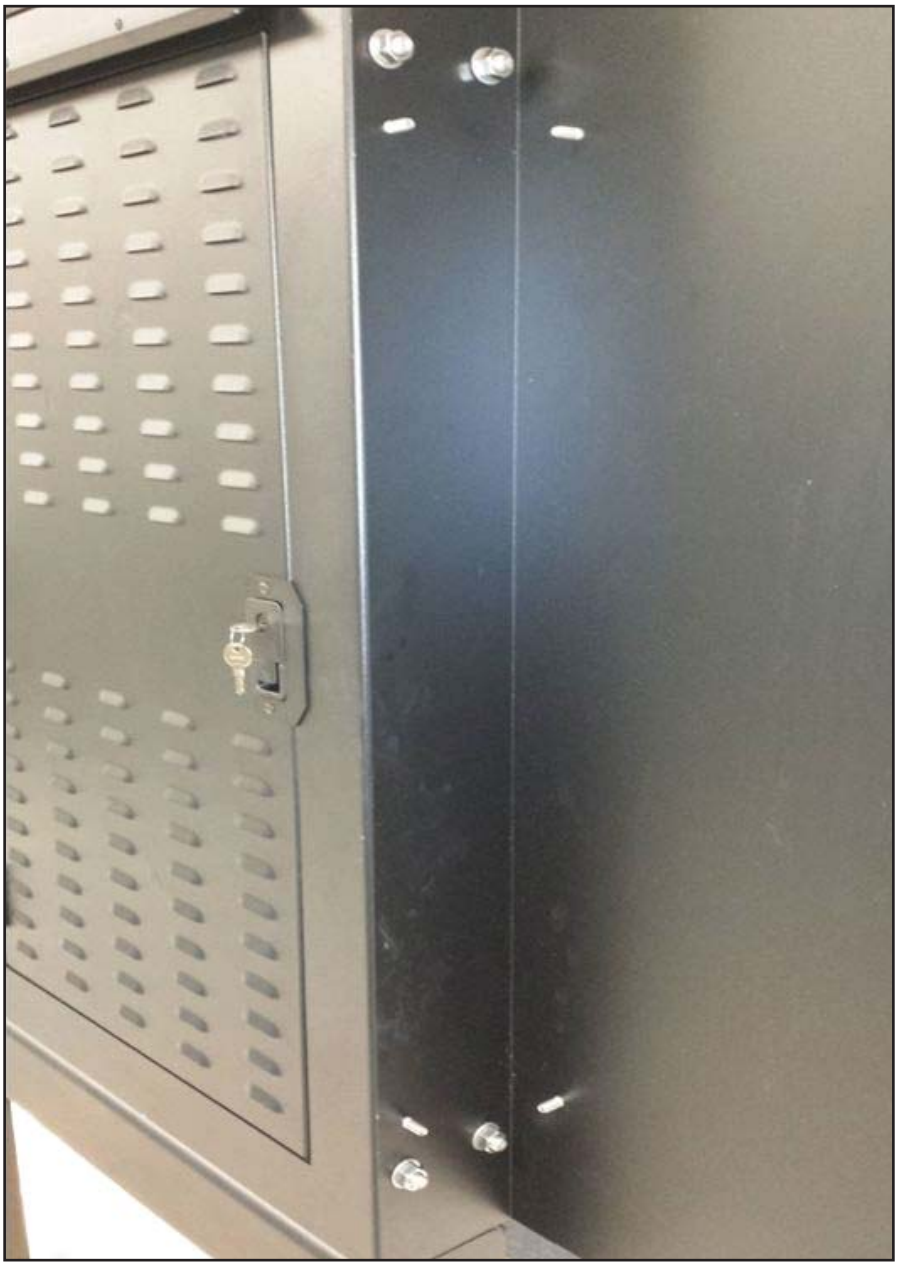

Illustration "A"

2 Install sidekick gussets (B)

Install the (2) sidekick gussets by starting from either the top or bottom ends. Push the back of the sidekick forward to make room for the slots in the gusset. Slide the gusset over the (3) 5/16” threaded studs mounted on the sidekick and loosely secure using 5/16” nuts and washers (see illustration “B”). Once both gussets are in place tighten the 5/16” nuts securely using the ½” socket and ratchet. See **Illustrations “B” and “C”**.



Illustration "B"



Illustration "C"

The installation is complete. Repeat these instructions to install the opposite sidekick if applicable.

Peerless-AV
2300 White Oak Circle
Aurora, IL 60502
Email: tech@peerlessmounts.com
Ph: (800) 865-2112
Fax: (800) 359-6500
www.peerless-av.com

© 2016, Peerless Industries, Inc.

Peerless-AV Europe
Unit 3 Watford Interchange,
Colonial Way, Watford, Herts,
WD24 4WP, United Kingdom
Customer Care
44 (0) 1923 200 100
www.peerless-av.com

© 2016, Peerless Industries, Inc.

Peerless-AV de Mexico
Ave de las Industrias 413
Parque Industrial Escobedo
Escobedo N.L Mexico 66050
Servicio al Cliente
01-800-849-65-77
www.peerless-av.com

© 2016, Peerless Industries, Inc.